 


USER OPERATION INSTRUCTIONS

USER'S MANUAL

<DRAFT>

KEY

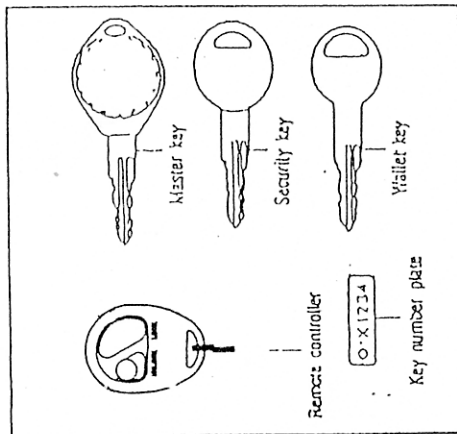 


The master key and wallet key can be used for all the locks. The security key cannot be used for the trunk lid or glove box locks. To protect belongings when you leave a key with someone, give them the security key only. Never leave this key in the vehicle.

Record the key number on the plate and keep it in a safe place, **NOT IN THE CAR**. A key number plate is supplied with your key. Keep the plate in a safe place. If you lose your keys or remote controller, see your **INFINITI** dealer for duplicates by using the key number. In case of emergency, see Section 5.

DOOR LOCKS

Locking: front doors with key

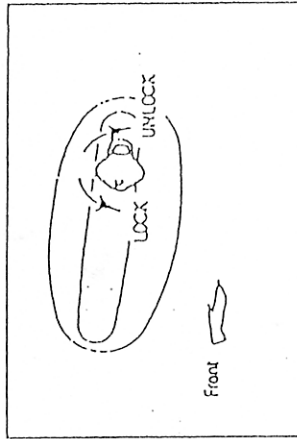


To lock the door, turn the key toward the front of the vehicle.

To unlock, turn it toward the rear.

Locking the front door will simultaneously lock the other doors.

 Locking the doors without key

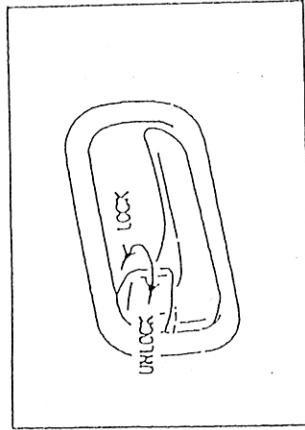


To lock from the outside without a key, move the inside lock knob to the "LOCK" position. Then close the door.

When locking the door this way, be certain not to leave the key inside the vehicle.

CAUTION:

- Always have the doors locked while driving. Along with the use of seat belts, this provides greater safety in keeping children and others from unintentionally opening the doors, and will help keep out intruders.
- Befer opening any door, always look for and avoid oncoming traffic.

 CHILD SAFETY REAR DOOR LOCK

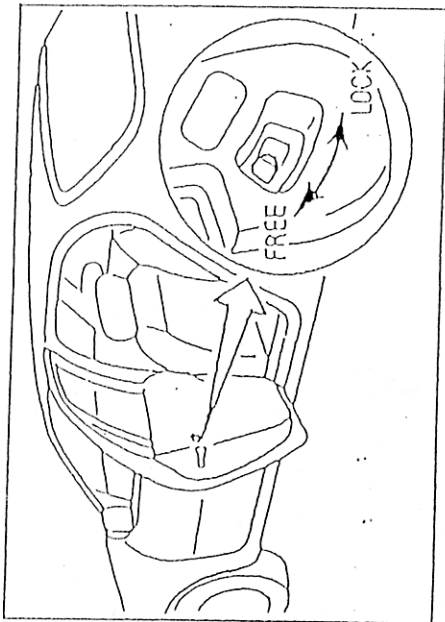


Child safety locking helps prevent doors from being opened accidentally, especially when small children are in the vehicle.

When the lever is in the lock position, the rear door can be opened only from the outside.

POWER DOOR LOCK

 The power door lock system allows you to lock all doors simultaneously.

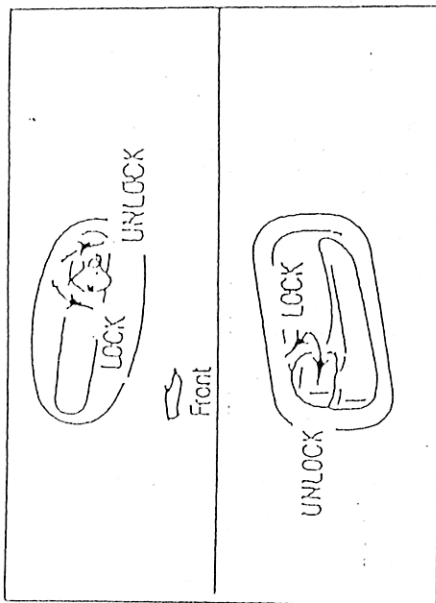


• Turning the front door key to the front of the vehicle will lock all doors.

• Turning the front door key one time to the rear of the vehicle will unlock the door, then releasing the key and turning it to the rear again will unlock all doors.

- Pushing the front door lock knob in will lock all doors.

 If the front doors are open with the key in the ignition when the inside lock knob is set to the lock position, all door knobs will unlock. When the open front door is closed, all the knobs will lock then quickly unlock automatically.

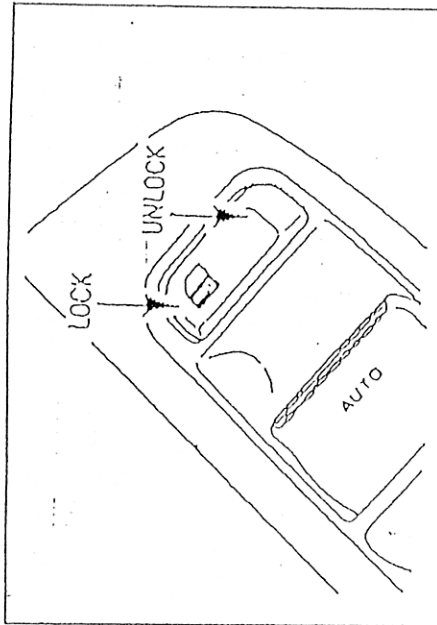

- Operating the lock-unlock switch will lock or unlock all doors.

 
**HOW TO USE REMOTE
CONTROLLER WITH IGNITION
KEY REMOVED**

Locking doors

1. Close all doors.
2. Push the lock button on the remote controller.
3. All doors will lock.

Unlocking doors

1. Push the unlock button on the remote controller.
2. All doors will unlock.

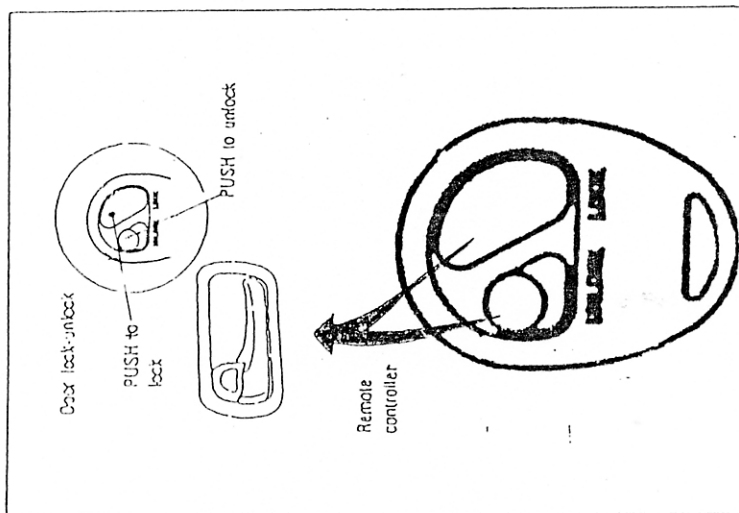

1. Open the lid using a suitable tool.
2. Replace the battery with a new one.
Recommended battery: Sanyo CR1620 or equivalent
3. Close the lid securely.
4. Press the key button two or three times to check its operation.

If the battery is removed for any reason other than replacement, perform step 4 above.

- An improperly disposed battery can hurt the environment. Always confirm local regulations for battery disposal.
- The remote controller is water-proof; however, if it does get wet, immediately wipe completely dry.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Notice:

Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Regulation and the Standard RSS-210 of Industry Canada.

Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.