

USER MANUAL

OPENING AND CLOSING THE VEHICLE KEYLESS GO SYSTEM

(EDITION C, 01/02)

Controls in detail

Opening and closing

You will find detailed information about your vehicle's functions in the "Controls in detail" section. You will find this section most useful if you are already familiar with the basic functions of your vehicle.

If you are not yet familiar with the basic functions, the "Getting started" section will provide you with more information. You will find the reference to the appropriate page no. at the start of each section.

Opening and closing


Key

The vehicle's equipment includes two keys. Emergency key element release catches **4** have different colours to help distinguish between the two keys.




The key allows you to unlock the vehicle from some distance. Only use the key in the immediate vicinity of the vehicle, to prevent theft.

The key locks and unlocks the following centrally:

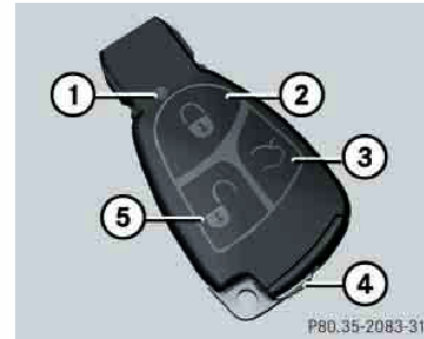- the doors
- the boot lid
- the fuel filler flap



Key

- 1 Battery check lamp
- 2  Locking button
- 3  Boot unlocking button
- 4 Emergency key element release catch
- 5  Unlocking button



Do not expose the key to high levels of electromagnetic radiation. Doing so may cause it to function erratically.

Factory setting

Unlocking the vehicle centrally

- ▶ Press the  button.

The turn signals flash once.

The anti-theft alarm system* (EDW) is switched off.

If you do not open either a door or the boot lid after you have unlocked your vehicle, it will relock itself after approximately 40 seconds.

Locking the vehicle centrally

- ▶ Press the  button.

The turn signals flash three times if the doors and boot are closed.

The active drive authorisation system and the anti-theft alarm system* (ATA) are activated.

Risk of accident




Do not leave children alone in the vehicle. They could open a door from the inside and thereby endanger themselves or others.





Controls in detail

Opening and closing

Individual settings

If you frequently drive alone, you may wish to change the function of the key. Pressing the  button will then only unlock the driver's door and the fuel filler flap.

- ▶ Press both the  and  buttons simultaneously for about 6 seconds until battery check lamp 1 flashes twice.

The key will then function as follows:

Unlocking the driver's door

- ▶ Press the  button once.



Unlocking the vehicle centrally

- ▶ Press the  button twice.

Locking the vehicle centrally

- ▶ Press the  button.

Restoring the factory setting

- ▶ Press both the  and  buttons simultaneously for about 6 seconds until battery check lamp 1 flashes twice.


Checking the battery

- ▶ Press the  or  button.

The battery check lamp lights up briefly if the battery is sufficiently charged. If the battery is not sufficiently charged, problem-free key operation can no longer be guaranteed. Change the batteries immediately (▷ page 402).

Unlocking the boot lid

You can unlock the boot separately.

- ▶ Press and hold the  button until the boot unlocks.



The boot lid automatically swings upwards. Always ensure that there is sufficient clearance.



If the vehicle was previously locked centrally, it is only necessary to close the boot lid again. It will then be locked automatically.

Opening the boot lid

The handle is located in the recess for the rear licence plate.



- ▶ Lift up the boot lid.

The vehicle must be unlocked.



Do not place the key in the open boot. There is a risk of being locked out.

Controls in detail

Opening and closing

Locking the boot separately

- ▶ Close the boot lid.
- ▶ Remove the emergency key element from the key (▷ page 400).
- ▶ Insert the emergency key element in the boot lock.



- 1 To unlock
- 2 To lock

- ▶ Turn the key clockwise to position **2**.

The boot remains locked, even if the vehicle is unlocked centrally.




If the boot has been locked separately, it is only possible to unlock it using the emergency key element.

Summer opening / convenience closing feature

Summer opening:

The sliding / tilting sunroof* or the panorama sliding sunroof* and the side windows are opened and the ventilation* for the driver's seat is switched on.


- ▶ Point the tip of the key at the driver's door handle.
- ▶ Unlock the vehicle and hold down the  button until the side windows and the sliding / tilting sunroof* are opened to the required position.



The summer opening function can only be operated using the key's infra-red connection.

Convenience closing feature

The sliding / tilting sunroof* or the panorama sliding sunroof* and the side windows are closed.

- ▶ Lock the vehicle and hold down the  button until the side windows and the sliding /tilting sunroof* are completely closed.

Or using KEYLESS GO*:

- ▶ Lock the vehicle.
- ▶ Press and hold the locking button on the door handle until the side windows and the sliding /tilting sunroof* are completely closed.

Before leaving the vehicle, ensure that all the side windows and the sliding /tilting sunroof* are properly closed.

Risk of injury

Monitor the closing procedure to ensure that nobody can become trapped.

KEYLESS GO*

When you touch the door handle, your vehicle checks whether the key you have is the correct one for your vehicle.

If the key is the correct one, your vehicle unlocks

- the doors
- the boot lid
- the fuel filler flap

Risk of accident

Do not leave children alone in the vehicle. They could open a door from the inside and thereby endanger themselves or others.



Do not expose the KEYLESS GO key to high levels of electromagnetic radiation. Doing so may cause it to function erratically.

Points to bear in mind

- Always carry the KEYLESS GO key on your person.
- Never store the KEYLESS GO key together with
 - electronic equipment such as a mobile phone or another KEYLESS GO key,
 - metallic objects such as coins or foil,

since this could impair its effectiveness.

Controls in detail

Opening and closing

- To lock or unlock the vehicle from the outside using the KEYLESS GO key, the key must be up to a metre away from the door or boot.
- To start the engine with the KEYLESS GO button,
 - the KEYLESS GO key must be in the vehicle and
 - all the doors must be closed.
- If you have started the engine using the KEYLESS GO button, it is only possible to stop the engine in the same way, even if you have inserted the key into the ignition lock in the meantime.
- This does not apply if the selector lever is still in position **P** after the engine has started. The key then has priority over the KEYLESS GO function and the vehicle electronics will be set in accordance with the key position. This means that the engine may be stopped.
- If the KEYLESS GO key is removed from the vehicle (in luggage or an article of clothing, for instance), it will no longer be possible to lock or start the vehicle.
- If the KEYLESS GO key is removed from the vehicle while the ignition is on and a door is open, i.e. if the passenger leaves the vehicle with the KEYLESS GO key, the following message will appear in the multi-function display as you pull away: `Key not recognised!`
- If the KEYLESS GO key is in the vehicle, the vehicle can be started at any time. If you have forgotten the KEYLESS GO key, you will see the following message in the multi-function display when you lock the vehicle: `Key recognised in vehicle!`

Factory setting

Unlocking the vehicle centrally


- ▶ Pull the door handle.

Locking the vehicle centrally

- ▶ Press the locking button on the door handle or the boot.

Unlocking the boot lid

You can unlock the boot separately.

- ▶ Press and hold the  button until the boot unlocks.



The boot lid automatically swings upwards. Always ensure that there is sufficient clearance.



If the vehicle was previously locked centrally, it is only necessary to close the boot lid again. It will then be locked automatically.

If you have left the KEYLESS GO key in the vehicle, the boot will not close.

Controls in detail

Opening and closing

Locking the vehicle



1 Boot locking button

Press the locking button on the door (▷ page 51) or on the boot lid.

Closing the side windows and the sliding sunroof

- ▶ Press and hold either the locking button on the door (▷ page 51) or on the boot lid until the side windows and the sliding sunroof are closed.

Risk of injury




Make sure that nobody can be trapped as you close the side windows or the sliding sunroof.

Proceed as follows if there is a risk of somebody becoming trapped:

- Release the locking button.
- Pull the door handle and hold it firmly. The side windows open.

Opening the doors from the inside

You can open a door from the inside at any time, even if it has been locked.

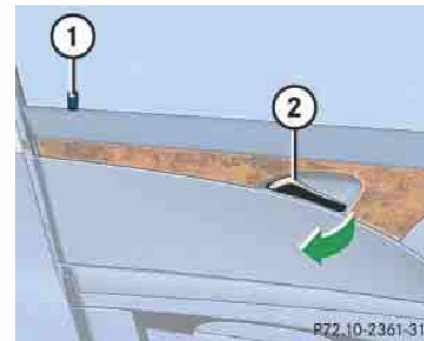

- 1 Locking knob
- 2 Inside door handle

- ▶ Pull door handle 2.

If the door was locked, locking knob 1 rises.

Opening the boot from the inside

Boot lid remote opening

The boot remote opening switch is located on the driver's door.



1 Remote opening switch

Opening the boot lid

- ▶ Pull switch 1.

The indicator lamp in the button lights up. It remains lit until you close the boot again.



The boot lid automatically swings upwards. Always ensure that there is sufficient clearance.

If the boot lid does not open, it is because it has been locked separately (▷ page 86).

Boot lid remote control*

The boot lid remote control switch is located on the driver's door.



1 Remote control switch

Controls in detail

Opening and closing

Opening the boot lid

- ▶ Pull remote control switch **1** until the boot starts to open.

The boot lid opens automatically.

The indicator lamp in the button lights up. It remains lit until you close the boot again.



The boot lid swings upwards. Always ensure that there is sufficient clearance. Pull or press the remote control switch to stop the opening procedure.

If the boot lid does not open, it is because it has been locked separately (▷ page 86).

Boot lid opening limiter

If you activate the boot lid opening limiter, the boot lid will only open level with the height of the roof



1 Boot closing switch

- ▶ Press and hold boot closing switch **1** in the boot lid for approximately 5 seconds.

The opening limiter is activated.

- ▶ Press and hold boot closing switch **1** in the boot lid again for approximately 5 seconds.

The opening limiter is deactivated.

Closing the boot lid



1 Recess

- ▶ Pull the boot lid down firmly using recess 1.

If necessary, push the boot lid shut from the outside, pressing down on the edges.

Vehicles with boot remote control*

Closing from the inside

- ▶ Press and hold the remote control switch until the indicator light in the switch goes out and the boot lid is closed.

If the boot lid touches an object at the top of its range of movement, e.g. luggage which is piled too high, the closing procedure is interrupted and the boot re-opens slightly.

Risk of injury



Monitor the closing procedure to ensure that nobody can become trapped. Release the boot remote control switch to stop the closing procedure.

Controls in detail

Opening and closing

Closing from the outside



1 Boot closing switch


- ▶ Press closing switch **1** briefly.

The boot lid closes automatically.

If the boot lid touches an object at the top of its range of movement, e.g. luggage which is piled too high, the closing procedure is interrupted and the boot re-opens slightly.

Risk of injury



Monitor the closing procedure to ensure that nobody can become trapped. Press the boot lid remote control switch of the  button on the key to stop the closing procedure.



Do not place the key in the open boot. There is a risk of being locked out.

If a KEYLESS GO key* has been left in the vehicle, the boot lid will not close.

Automatic locking

The doors and the boot lid lock automatically after the vehicle has pulled away.

You can open a door from the inside at any time, even if it has been locked.



The doors unlock automatically in an accident if the force of the impact exceeds a predetermined level.

The vehicle is locked automatically when the ignition is switched on and the vehicle is moving.

You may switch off the automatic locking function using the operating system (▷ page 144).

Locking and unlocking the vehicle from the inside

You can lock or unlock the vehicle centrally from inside using the central locking button.



You can open a door from the inside at any time, even if it has been locked.

If the vehicle was locked using the key or the KEYLESS GO function, the central locking button does not work.

The central locking button is on the centre console.



Central locking button

- 1 To lock
- 2 Indicator lamp
- 3 To unlock

Controls in detail

Opening and closing

Locking the vehicle

- ▶ Press central locking button **1**.
The vehicle locks if all the doors are closed.

To unlock

- ▶ Press central locking button **3**.
The vehicle unlocks.



The vehicle will not unlock if you have previously locked it centrally from the outside.

Risk of accident



Never leave children unsupervised in the vehicle. They could open a door from the inside and thereby endanger themselves or others.

Locking the vehicle from the boot*

You can lock vehicles with the boot lid remote control feature* and KEYLESS GO* centrally using a switch in the boot lid.



1 Central locking switch

- ▶ Press button **1**.
The vehicle locks centrally.