

***EXHIBIT C***

***User Manual***

# WIRELESS MICROPHONE

## FEATURES

1. High Sensitivity cardioid capsule for your professional use.
2. Special noise absorption parts inside the barrels, which eliminate switch shock noise and handling noise.
3. Frequency with quartz locked controlled.
4. Easy-opening battery cover for quick battery replacements.
5. Low battery LED indicator.
6. The Lavalier microphone is easy for use clip on the belt & very light.
7. The Lavalier microphone could be used with headset mic w/3.5mm screw type plug easily.


## SPECIFICATIONS

- \*Carrier Frequency Range : UHF band
- \*Tone Signal : 32KHz(For tone squelch control)
- \*RF power output : 30 mW Max. (FCC Regulation).
- \*Service Area : 80 Meters.
- \*Spurious Emission : Less than -43dB below carrier frequency.
- \*Frequency Stability : Within 0.005% with quartz controlled.
- \*Pre-Emphasis : 50µS.
- \*Antenna : Built in.
- \*AF Response : 40Hz to 20KHz(±3dB)
- \*Maximum Deviation : 15KHz with limiting compressor.
- \*Signal to Noise Ratio : 60 dB(A-Weighted).
- \*Microphone capsule : Uni-directional electret condenser type.
- \*Operating voltage : DC 1.5V x 2 (UM-3 type).
- \*Current Consumption : 25 mA(Max.)
- \*Battery Life : Approx. 8 Hours continuous operation.
- \*LED Indicator : Power On-OFF and low battery.
- \*Dimensions : Handheld Mic.: 52φmm x 247mm
- \*Weight : Handheld Mic.: Approx. 234 Grams(w/Battery)

## OPERATION :

1. Open the battery cover and insert battery into the battery house according to polarity (+) and (-) indication marked on the battery house.
2. Fit battery cover back.
3. Push the power switch on, the LED indicator will flash to indicate the carrier frequency is sending out. The microphone is ready for use.
4. Switch the power "ON", the LED indicator is flashing that means power supply is normal. If the LED indicator is still on light that means the battery is in need of replacement. If no flashing, it must be no battery in there or battery is not properly inserted.
5. Push the power button to "OFF" when mic is not used. And take out the battery in microphone if not used for a long time, this will prevent any damage a defective "LEAKING" battery may cause.
6. Using Tie Clip microphone, please screw the 3.5mm plug of lavalier mic on the 3.5mm jack of the transmitter.
7. The lavalier microphone wire is the transmit antenna. Do not roll up, coil or shorten during use. This wire must be kept as straight as possible.

## HANDHELD MICROPHONE

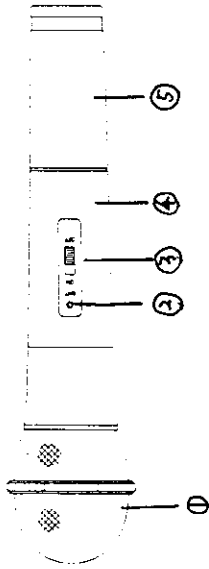

1. SCREEN HEAD
2. LOW BATTERY LED INDICATOR
3. ON/OFF SWITCH
4. MIC HOUSING
5. BATTERY COVER

## NOTE :

THE WIRELESS HANDHELD OR LAVALIER MICROPHONE, TWO OR ABOVE WIRELESS MICROPHONES WHICH TRANSMIT AT THE SAME FREQUENCY CAN NOT BE USED AT THE SAME TIME & AREA.

## TROUBLE SHOOTING:

Please take the time to read this manual, before asking after service and checking followup points. If there is any unusual things, please contact with purchasing store. We are sincerely to serve for you.

1. Before connecting and operating the unit, check the voltage setting conforms to the voltage available in your area.
2. If the LED indicator is still on light that means power supply is in need of replacement. Please replace new battery and be sure the polarity (+/-) of battery is connected properly.
3. Signal dropout and noise may be suddenly encountered by interruption from outside, too long distance between microphone and receiver or battery in low power. In such a case, adjust receiver antenna or change new battery.
4. Do not drop the microphone on a hard concrete floor, nor strike the microphone head front with a fist or fingers, nor blow a breath strongly into the microphone head front.
5. Take out the battery in microphone if not used for a long time. This will prevent any damage a defective "LEAKING" battery may cause.