
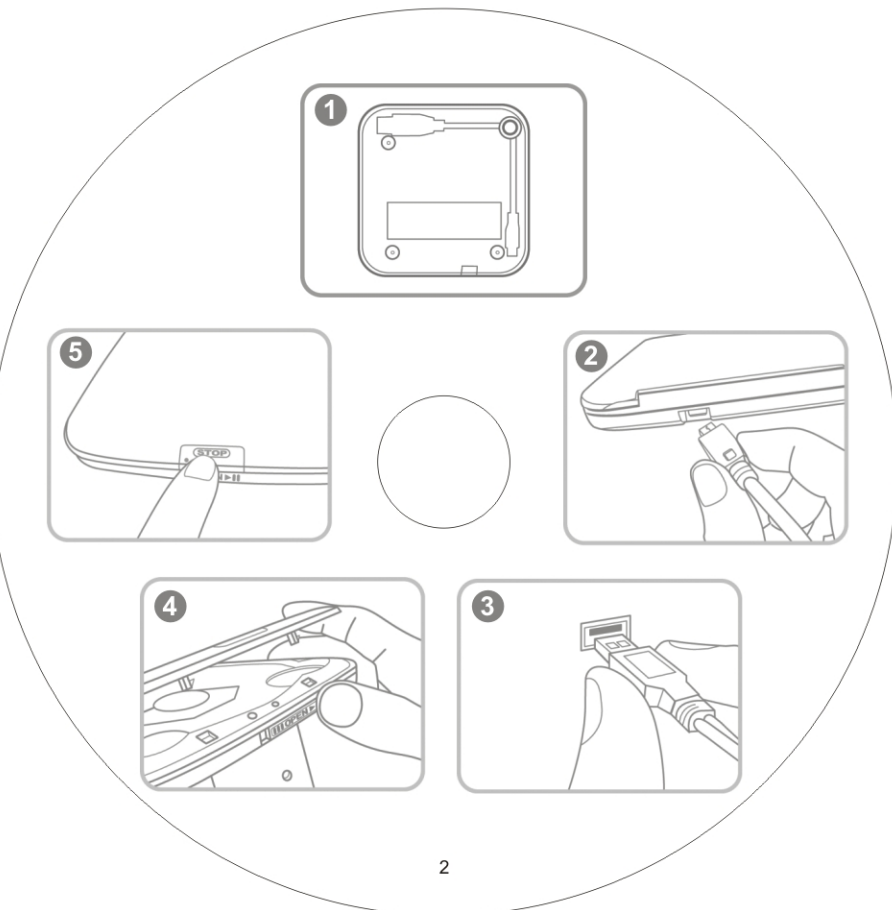


0~5	~100	~150			
±0.05	±0.1	±0.15	±0.2	±	±
COMMON TOLERANCE LIMITS					

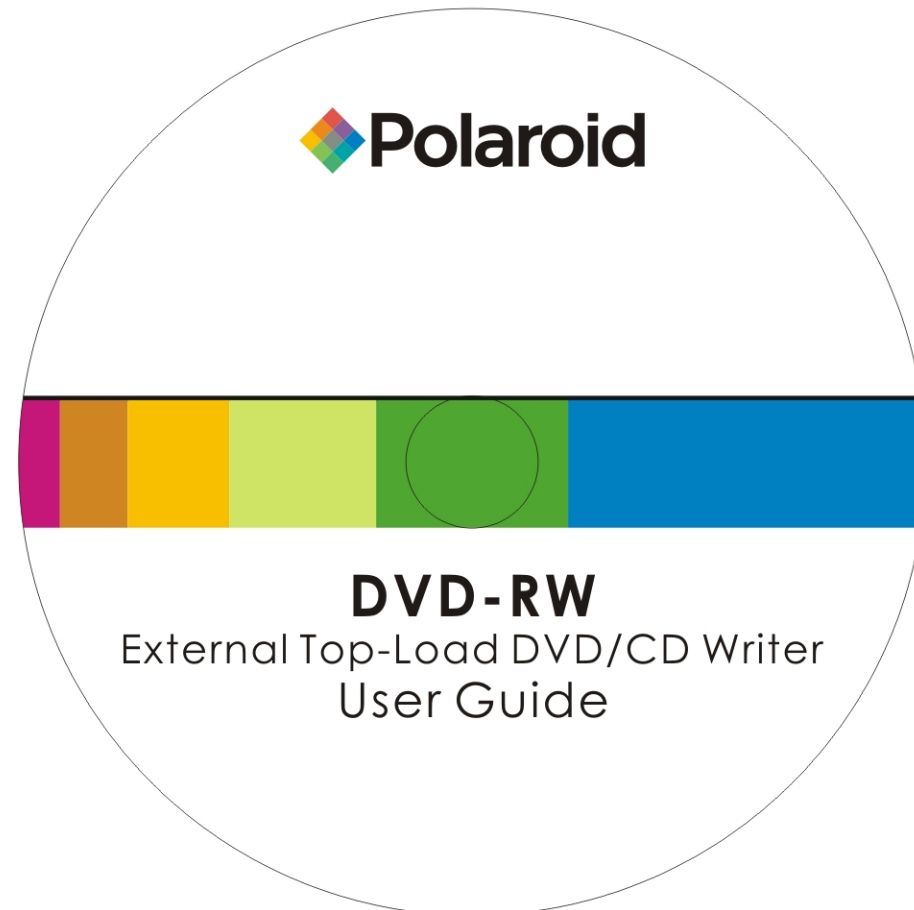

English

- 1.Remove the USB cable from the bottom of the drive.
- 2.Plug the USB cable into the drive.
- 3.Connect the other end of the USB cable to your computer.
- 4.To load a disc,slide the OPEN latch to the right to release the top cover and insert a disc.
- 5.To remove a disc,slide OPEN latch to the right to release the top cover and wait for the disc to stop spinning.Lift the disc off the pivot and remove.

Español

1. Remover el cable de USB del fondo de la conducir.
2. Enchufar el cable de USB en la conducir.
3. Conectar el otro puerto del cable de USB con su ordenador.
4. Para cargar un disco, desliza el pestillo de ENCENDER a la derecha para liberar la cubierta superior e inserta un disco.
5. Para remover un disco, desliza el pestillo de ENCENDER a la derecha para liberar la cubierta superior y espera a que el disco deje de girar. Levanta el disco fuera del eje y lo remove.

Français

1. Enlevez le câble USB sur le bas du lecteur.
2. Branchez le câble USB sur le lecteur.
3. Branchez l'autre côté du câble USB sur votre ordinateur.
4. Afin de charger un disque, veuillez glisser le loquet OPEN à droite pour ouvrir le couvercle en haut et insérer un disque.
5. Afin d'enlever le disque, veuillez glisser le loquet OPEN à droite pour ouvrir le couvercle en haut et attendre que le disque arrête de tourner. Enlevez le disque du pivot et le retirez.

3

FCC Notice
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 2: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support. This product is manufactured, distributed and sold by Matsunichi Digital Holdings Limited, located at 16F, International Chamber of Commerce Tower, Fuhua Rd3 CBD, Shenzhen, China.
Disc-burning software is not included. You maybe need to purchase it separately based on your Operation System.

MADE IN CHINA

Deutsch

1. Nehmen Sie das USB-Kabel von Laufwerk ab.
2. Schließen Sie das USB-Kabel an das Laufwerk an.
3. Schließen Sie dann das andere Ende des USB-Kabels an den Computer an.
4. Beim Laden von Discs soll die Sperrklinke OPED nach rechts geschoben werden, um obere Abdeckung zu öffnen. Dann setzen Sie Disc ein.
5. Beim Auswerfen von Discs soll die Sperrklinke OPEN nach rechts geschoben werden, um obere Abdeckung zu öffnen. Warten Sie, bis die Disc anhält. Danach nehmen Sie die Disc ab.

Italiano

1. Togliere il cavo di USB posto sotto il Drive.
2. Inserire un'estremità del cavo di USB al Drive.
3. Inserire un'altra estremità al computer.
4. Quando caricare il disco, muovere il bottone OPEN verso la destra alto, e poi inserire il disco.
5. Quando scaricare il disco, muovere il bottone OPEN verso la destra alto, e poi togliere il disco dall'asse della rotazione.

简体中文

1. 将USB线从光驱底部取下。
2. 将USB线插到光驱上。
3. 将USB线的另一端插到电脑上。
4. 放入光盘时, 将OPEN锁扣滑向右侧, 打开顶盖, 然后放入光盘。
5. 取出光盘时, 将OPEN锁扣滑向右侧, 打开顶盖, 等光盘停止旋转后, 将光盘从转轴上取下, 然后取出。

4

繁體中文

1. 將USB線從光驅底部取下。
2. 將USB線插到光驅上。
3. 將USB線的另一端插到電腦上。
4. 載入光碟時, 將OPEN鎖扣滑向右側, 釋放頂蓋, 然後插入光碟。
5. 取出光碟時, 將OPEN鎖扣滑向右側, 釋放頂蓋, 等光碟停止旋轉後, 將光碟從轉軸上取下, 然後取出。

日本語

1. USBケーブルをドライバーの下から取り出す。
2. USBケーブルをドライバーに差し込む。
3. USBケーブルの残りの一端をパソコンに差し込む。
4. ディスクをロードする場合、OPENラッチを右側に動かすことによってトップカバーを解放して、ディスクを差し込む。
5. ディスクを取り出す場合、OPENラッチを右側に動かすことによって、ディスクの回転が止まるまで待つてからディスクを回転軸から取って取り出す。

한글

1. 드라이버 하부로부터 USB 코드를 제거합니다.
2. USB 코드를 드라이버에 연결합니다.
3. USB 코드의 다른 끝을 당신의 컴퓨터와 연결합니다.
4. 디스크를 넣기 위하여 우측에 있는 OPEN 손잡이를 당기면 상부 커버가 열리며 디스크를 삽입합니다.
5. 디스크를 제거하기 위하여 우측에 있는 OPEN 손잡이를 당기면 상부 커버가 열리며 디스크가 회전하지 않을때 디스크를 축으로부터 뽑아 냅니다.

5

松日通讯控股研发(深圳)有限公司

比例1:1

设计:		版本号:	V1.0
电子:		材质:	100克书纸
品质:		工艺:	
业务管理:		批准:	
日期: 2010.05.11			