

 
0~5	~100	~150			
±0.05	±0.1	±0.15	±0.2	±	±
COMMON TOLERANCE LIMITS					

封面



感谢您购买本公司的产品。在使用本产品前，请认真阅读本说明书。

1.基本按键介绍

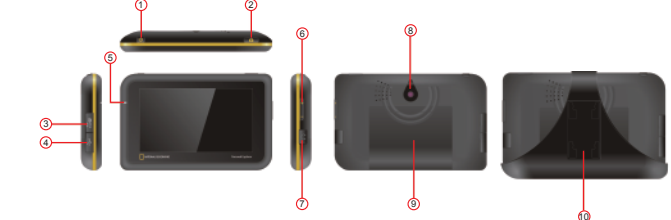


- ① 开机键
- ② 拍照键
- ③ Mini-SD接口
- ④ Mini-USB接口
- ⑤ 指示灯
- ⑥ 声音控制键
- ⑦ 3.5mm耳机接口
- ⑧ 摄像头
- ⑨ 电池盖
- ⑩ GPS支架

2.功能说明

2.1 开机/关机
开机：在关机状态下，按住电源开关3-5秒即可开机。开机时会显示松日LOGO。如下图：



 休眠/关机：在开机状态下，按住电源键3-5秒，屏幕会出现休眠/关机确认画面，如下图：

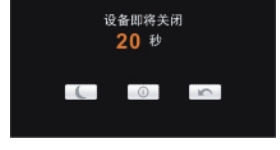

在此界面下，点击[]按钮可进入休眠状态，点击[]按钮可关机，点击[]按钮退出此界面返回到正常操作状态。
休眠/关机：在休眠状态下，按一下机身上的电源键可退出休眠界面返回到正常操作状态。

2.2 系统主界面
开机后，在系统主界面下，点击屏幕下方的小图标即可切换到该功能的页面，点击右下角的箭头图标可以翻页查看，翻页时屏幕中会有动画效果。

2



 
2.3 二级界面-系统设置
在此界面下，点击屏幕上的图标即可进入对应的功能，点击右下角的箭头图标可以翻页查看，翻页时会有动画效果。



3.充电器的使用

3.1 USB充电器
先将充电器插入220V的交流电插座，再将另一头插入本机USB接口

3.2 汽车充电器
先将汽车充电器的一头插入点烟器插孔内，再将另一头插入本机的USB接口（如下图）。

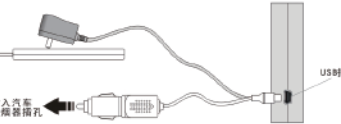

4.简单故障排除

序号	故障	原因分析	解决办法
1	无法开机	1.电池电量耗尽（按电源键时，屏幕没有显示） 2.在启动界面出现后，长时间停止不动。	请使用充电器为本机充电。 取出电池，然后再次装入电池后正常开机使用。
2	死机	屏幕不显示，或者有显示但显示不变且无任何键无效。	取出电池，然后再次装入电池后正常开机使用。
3	无法充电	在充电时，本机的绿色指示灯没有亮或屏幕没有显示充电符号。	1.充电器是否插入正确或通电。 2.充电器损坏。 3.电池损坏或电池已充满电。

A

B

C

D

E

A

B

C

 
D

E

4

3

封面

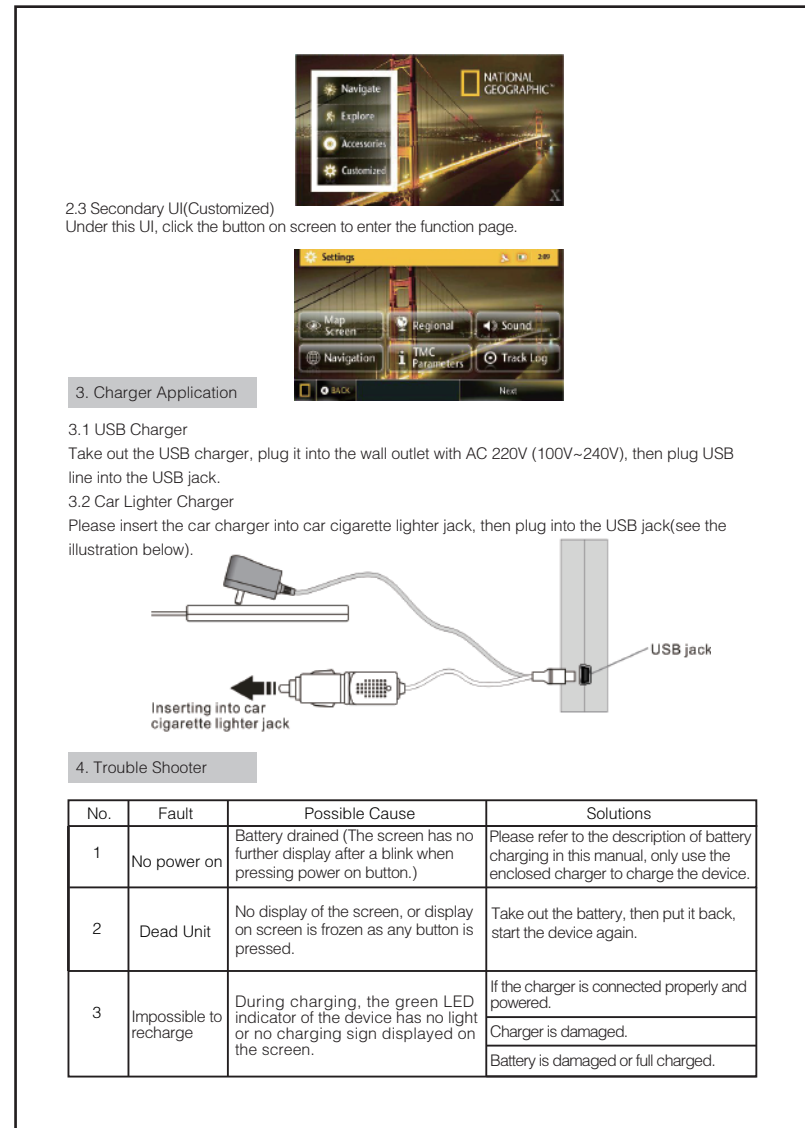

感谢您购买本公司的产品。在使用本产品前，请认真阅读本说明书。

1. Key Introduction



 
- ① Power On/Off
- ② Camera Key
- ③ Mini-SD Jack
- ④ Mini-USB Jack
- ⑤ Indicator
- ⑥ Volume Control Button
- ⑦ 3.5mm Earphone Jack
- ⑧ Camera
- ⑨ Battery Cap
- ⑩ GPS Stand

2. Function Introduction

2.1 Power On/Off
Power On: In power off status, press the power button for 3-5 seconds to turn on the device, then the "NATIONAL GEOGRAPHIC" LOGO will be displayed on screen.



Sleeping&Power Off: In power-on mode, press the power button on the device for 3-5 seconds then the sleeping mode or confirmation for power-off screen will display as follows:

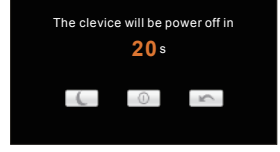

In this UI click the button [] will be in sleeping mode, click the button [] will power off; click the button [] to exit the UI and back to normal operation.

Waking-up from the sleeping: When in sleeping mode, a short press on the power-on button of the device will wake up the system. When in sleeping mode, all the procedure in operation will pause but will back to normal status after waking up.

2.2 System UI
After power on, under this UI, click icon on the left screen to enter the function page.

FCC NOTE:
THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



松日通讯控股研发(深圳)有限公司

比例1:1

设计:	景艳丽	版本号:	ver.1
审核:		日期:	2010.06.01
电子:		材质:	120g铜版纸
软体:		工艺:	彩色双面印刷
品质:			
业务管理:		批准:	

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.