

INSIGNIA flex™

9.7" Flex™ Android Tablet NS-13T001 QUICK SETUP GUIDE



 
WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the ? icon on your tablet. You can also go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the *Product Search* field, then click **Search**.



In the box


- QUICK SETUP GUIDE
- Important Information
- USB power adapter
- 30-pin to USB cable

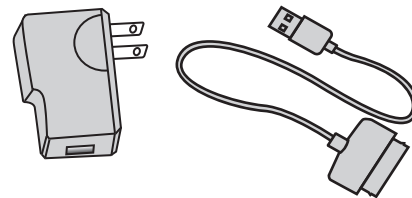


Features



 Camera
Ambient light sensor

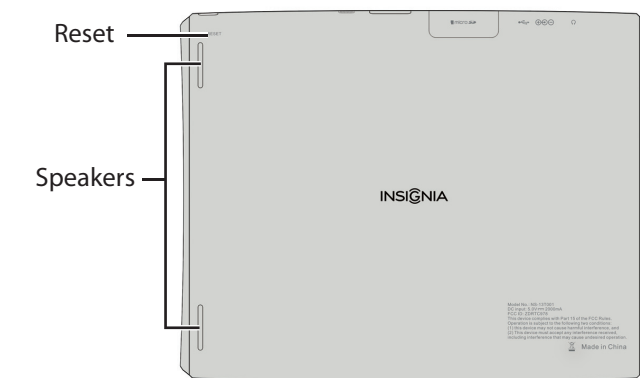

Reset
Speakers

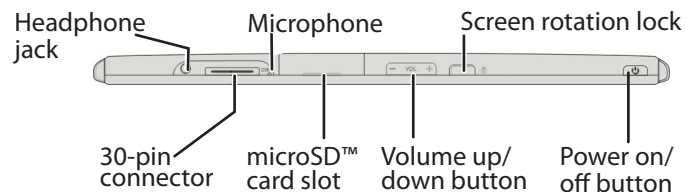 


Headphone jack
Microphone
Screen rotation lock
30-pin connector
microSD™ card slot
Volume up/down button
Power on/off button

Charging the battery

Before using your tablet for the first time, you need to charge the battery for a minimum of eight hours.

 - 1 Insert the 30-Pin connector into your tablet's charger port.
- 2 Insert the USB connector into the USB power adapter (wall charger), then plug the USB power adapter into a power outlet to start charging the battery. When fully charged the tablet provides approximately 6-8 hours of battery life (or 7 hours video playback) depending on usage type.

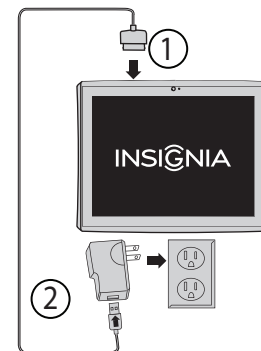

Turning on your tablet



Press the (power) button on the top, right side of your tablet. When you turn on the tablet for the first time, you will be prompted to sign in to your Google account. Follow the instructions displayed on your tablet.


Turning on Wi-Fi and connecting to a Wi-Fi access point

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

- 1 Touch the (applications) icon.
- 2 Touch the (settings) icon.
- 3 Touch **Wi-Fi** to access the list of available networks.
- 4 Select the Wi-Fi network you want to connect to. If you are prompted to enter a password, touch the password field.
- 5 When the on-screen keyboard opens, touch the keys to enter the password, then touch **Enter**.
- 6 Touch **Connect** to connect to the wireless access point. If the connection is successful, the connected icon appears.



To open an application:

- 1 Touch the  icon.
- 2 Touch the application you want to open.




For additional help, see your User Guide:

 
- Touch the **Help** icon. Your User Guide opens.



To turn off your tablet:



 
- 1 Press and hold the  (power) button until the options menu opens.

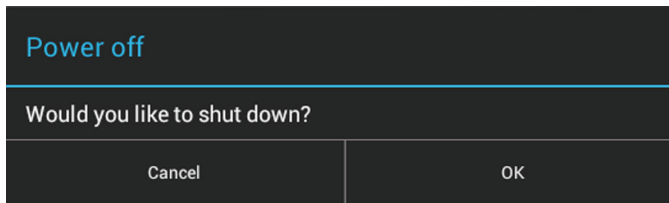





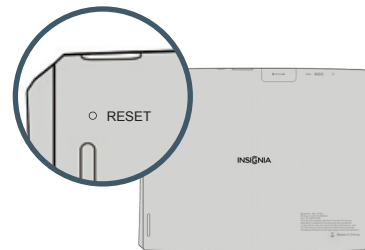


- 2 Touch **OK** to turn off your tablet.

Caution: Use only the included power adapter to charge your tablet's battery. Even if a different brand of power adapter has the same type USB port, using it may damage your tablet.










Note: If the battery does not charge using the included power adapter, use a small tool (like a straightened paperclip) to press the RESET button on the back of your tablet.



Using gestures to navigate

Touch		Touch application or other item with your finger to open or select it.
Touch and hold		Touch an item with your finger and do not release it until your tablet responds.
Drag		Touch and hold an item with your finger, then move your finger to the position where you want the item.
Flick		Quickly slide your finger either vertically or horizontally across the screen.
Double-touch		Quickly touch the screen twice.
Pinch		Pinch your fingers together or move them apart.
Rotate		To change the screen orientation from portrait to landscape (or from landscape to portrait) turn your tablet sideways. When entering text, you can turn the tablet sideways to switch to landscape mode and make the keyboard bigger.

Function buttons

Key	Icon	Function
Text search		Search on Google.
Voice search		Voice search on Google.
Return		Return to the previous screen.
Home		Return to the Home screen.
Multi-task		Open the list of recently used applications and running applications.
APPS		View all applications installed on the tablet.
Option		Open an options menu.
Close		Close the keyboard.
Drop – down		Open a drop-down menu.

One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your **Online User Guide!** This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the ? icon on your tablet. You can also go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the *Product Search* field, then click **Search**.

Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia Tablet owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA
55423-3645

© 2012 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types NS-13T001 (FCC ID: ZDRTC978) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at when properly worn on the body is 0.406W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.