


Part Number	CX-WT0260A	Product Specification	
-------------	------------	-----------------------	--

Locator Function

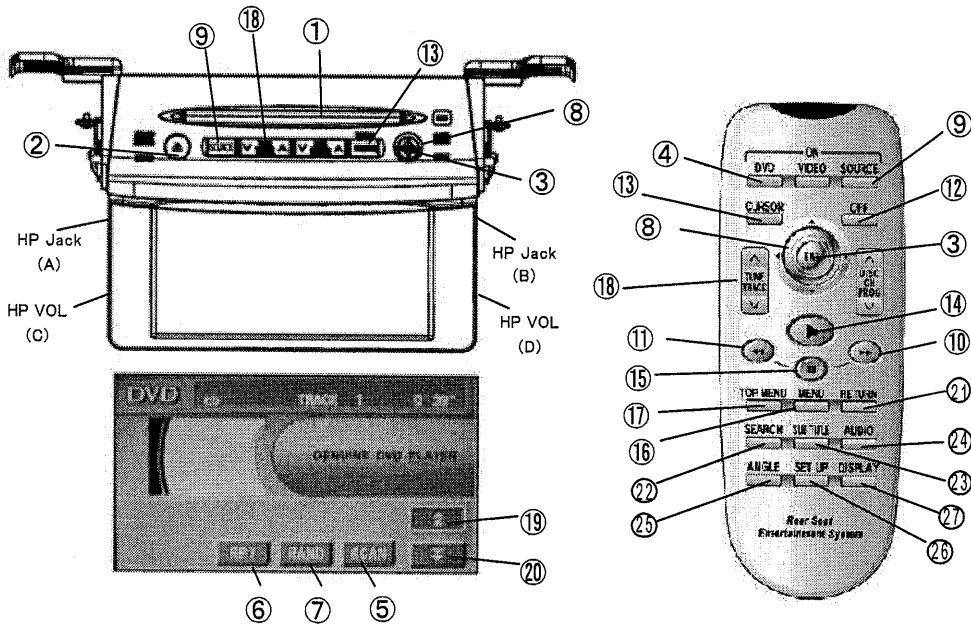

Item	Function	ESC/button Display	Operation Specification	Display Specification
1	Remote Control Detection	CURSOL	To start electric wave output for Remote Control Detection, press ⑬CURSOR (main body) for more than 0.8 seconds during ACC ON. (Automatic output OFF within 5 seconds) After detecting electric wave output from main body and reading the code, Remote Control will emit buzzer.	Screen Display ON/OFF Display Open/Close Available on any condition.
2	Stop Remote Control Detection Noise	Remote Control Buttons	To stop the noise, press any button on the Remote Control. (In case the button is not pressed, the noise will automatically stop in about 15 seconds)	
△		△	△	△
△		△	△	△

LOCATING THE CONTROLLER

If you lose sight of the controller, push and hold the "CURSOR (LOCATE)" button on the DVD player unit until you hear a beep. A buzzer sounds from the controller to let you know where it is.

To stop the buzzer, push any button of the controller.

FCC Information

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Label Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.