 



## QUICK TIPS

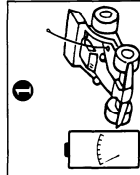


1 When your vehicle starts to lose power, it may lose functions or performance. It's time for a recharge! Your vehicle's running time may change depending on your driving style.



 
2 Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings or CB radios. Try to stay away from these!

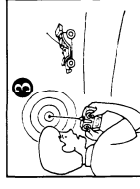

 3 Point your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.

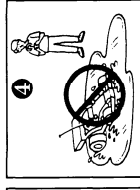

 4 Don't drive your vehicle in sand or through water or snow.

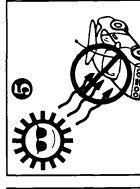

5 Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

## TROUBLESHOOTING - PROBLEM? - SOLUTIONS

### SYMPTOM

Vehicle runs slowly or will not run.

### PROBABLE CAUSE

- Loose battery connection or vehicle switch not ON.
- Weak or uncharged rechargeable NiCd battery.
- Weak AA batteries (Power Clip) or transmitter battery.

Power indicator light on transmitter does not light.

Erratic operation or only short range possible.

Vehicle doesn't work after going through water or snow.

### CORRECTION

- Check battery connections and replace battery if required.
- Charge battery or replace.
- Replace with fresh alkaline battery.
- Check connections and replace battery if required.
- Change location - see Point 2, "Quick Tips."
- Vehicle will take several hours to dry. Allow to dry thoroughly overnight before trying again.
- Avoid driving in water or snow.

## 90 DAY LIMITED WARRANTY - TYCO® R/C PRODUCTS

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will replace the product in the event of such a defect within the warranty period. In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement and return shipment will be free of charge.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty.

Mattel's liability for defects in material and workmanship under this warranty shall be limited to replacement, and in no event shall we be responsible for incidental, consequential or punitive damages. This limitation does not apply to states that do not restrict or exempt manufacturers from such limitations. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you. Which vary from state to state. Some states do not allow toll-free numbers. Please be patient and keep trying the toll-free number. ADDRESS FOR RETURNS: CONSUMER RELATIONS, 636 BIRAD AVENUE, EAST AURORA, NY 14052

## COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY - VALUABLE AUX E-U. SEULEMENT)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Mattel, Inc.  
333 Continental Blvd.  
El Segundo, CA  
(310) 252-2400

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



# BLORP! R/C

## CONTENTS

 
 
 
 
- Vehicle
- Transmitter
- 6.0V Jet Turbo™ Battery Pack
- 6.0V Jet Turbo™ Charger

## CHASSIS

Your vehicle's chassis will look like A, B, C, or D below, depending on the vehicles' design.


Refer to label on transmitter and vehicle for frequency. Do not race vehicles with the same frequency.

- 1 ON/OFF Switch
- 2 Battery Latch
- 3 Steering Adjuster
- 4 Gear Selector (Chassis C & D)

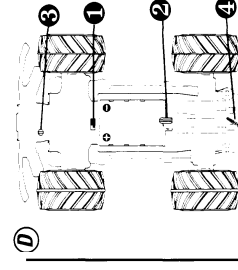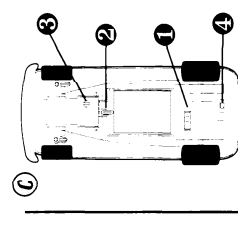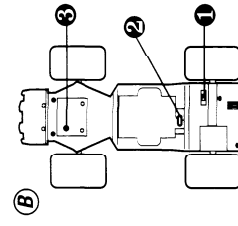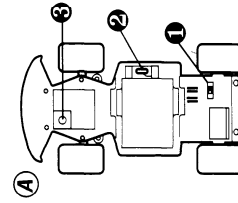


## VEHICLE OPERATION

 
### FORWARD

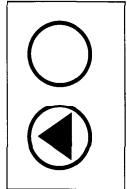


### REVERSE

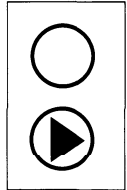 

### LEFT

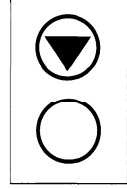 

### RIGHT

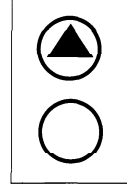 

**CAUTION - ELECTRIC TOY - NOT RECOMMENDED FOR CHILDREN UNDER 14 YEARS OF AGE.** AS WITH ALL ELECTRIC TOYS, CHILDREN SHOULD BE SUPERVISED DURING HANDLING AND USE TO PREVENT ELECTRICAL SHOCK.

MATTEL TOYLINE, 72000, 800A, 700A, 8000P, 6300C, 2300A, 7000A, 8100A, 8100P, 72000, 800A, 700A, 8000P, 6300C, 2300A, 7000A, 7000A

**TYCO® R/C SUPPORT REGISTER YOUR VEHICLE 2 WAYS!**  
Online...or toll-free!

1-888-552-TYCO (8926)

tyco.com

If you have questions or problems with your vehicle, DON'T RETURN IT TO THE STORE... get help from the EXPERTS! Just click or call.

Keep these instructions for future reference; they contain important information. **IMPORTANT:** Please read all "Consumer Information" (last page) before operating your vehicle.

**CAUTION:** Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

## POWER SYSTEMS

Please follow the specific instructions on the next page for detailed information regarding NiCd vehicle battery charging and safety.

 
 
 
 
 
 
### VEHICLE BATTERY INSTALLATION

1. Rotate battery latch to open position.
2. Insert battery pack into battery compartment and slide it away from latch.
3. Make sure battery pack snaps securely in place and rotate latch to locked position.
4. To remove battery pack: turn latch, slide battery pack toward latch and lift out.

### TRANSMITTER BATTERY INSTALLATION

Your vehicle will use one of the 5 transmitters shown. All these transmitters use a 9V(6LR6) battery, and are equipped with a special automatic-on battery saving feature. Just turn your vehicle ON. Then push either control and you will be able to run and control your vehicle.


1. Open battery door, as shown.
2. Install one 9V battery with polarity (+/-) as shown inside battery compartment.
3. Close battery door.

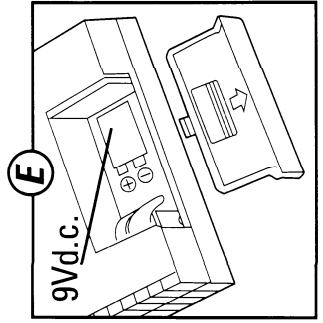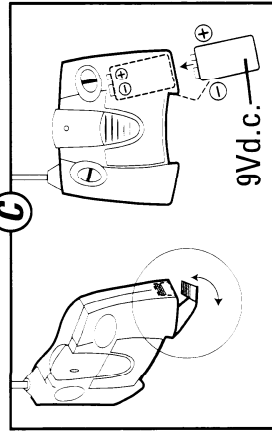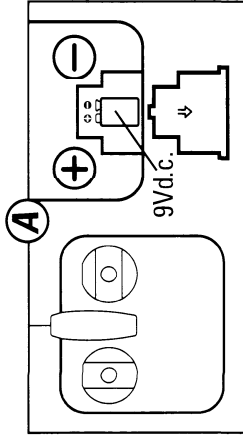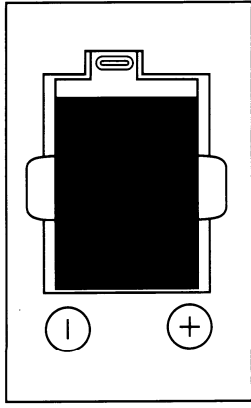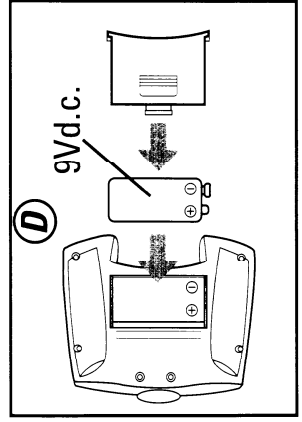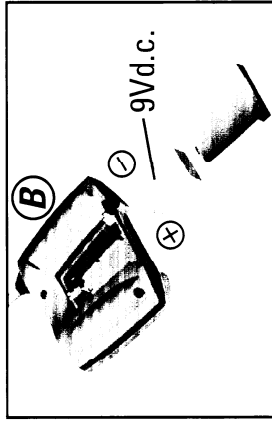

## NiCd BATTERY INFORMATION

Please follow these instructions regarding NiCd battery charging and safety.

 - BATTERY CHARGING/CARE – 6.0V JET TURBO™ BATTERY**
1. Plug wall pack charger into standard wall outlet.
  2. Click the battery pack into the charger. Make certain the battery pack is secure in charger.
  3. To disconnect, push the red button on the side of charger and simultaneously slide battery pack out.
  4. After charging, the battery will feel warm. This condition is normal for fully charged batteries.
  5. New battery packs must be charged for 10 hours the first two times charged. Subsequent charges will require 6 hours. Charging the battery pack for more than 6 hours will not give you a longer running time. 6 hours is all that is required for a fully charged battery pack.
  6. Unlike alkaline batteries, where the power loss is gradual, a NiCd (Nickel-Cadmium) battery will run for its normal running time and then lose most of its power at once. It is time to recharge the battery pack.
  7. After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools before recharging. Recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged.

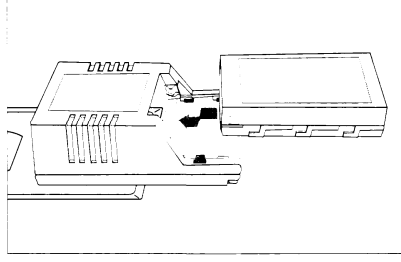

### RECHARGEABLE BATTERY INFORMATION:

- ✗ DO NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- ✗ DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- ✗ DO NOT DISASSEMBLE THE BATTERY PACK. THE BATTERY PACK IS A SEALED RECHARGEABLE NICKEL-CADMIUM BATTERY.
- ✗ DO NOT DISPOSE OF THE BATTERY PACK IN FIRE.
- ✗ EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- ✗ IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE CHARGING.
- ✗ DO NOT RECHARGE NON-RECHARGEABLE BATTERIES.

### Note to Adults:

- Remove rechargeable batteries before recharging. Recharge batteries only under adult supervision.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the transformer until the damage has been repaired.
- This toy is not intended for children under 6 years old. The transformer is not a toy.



THIS PRODUCT USES A NICKEL-CADMIUM RECHARGEABLE BATTERY PACK. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES OR THEIR DISPOSAL PLEASE CALL 1-888-557-TYCO.

## CONSUMER INFORMATION:

### IMPORTANT:

Please read before operating your vehicle.

### SAFETY INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

### Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.

**CAUTION:** To prevent entanglement, keep hair away from wheels.

### BATTERY SAFETY INFORMATION

- Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product) before charging.
- To avoid battery leakage:
  - Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
  - Insert batteries as indicated inside the battery compartment.
  - Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.

### Battery Performance Note:

For best performance use alkaline batteries (where disposable batteries are called for). If your vehicle is supplied with standard (carbon-zinc) batteries for initial use and/or demonstration purposes, we recommend replacing them with alkaline batteries when necessary. Battery life may vary depending on battery brand.