


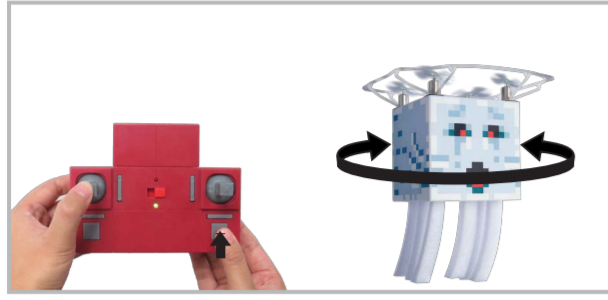
4. STUNTS

The Ghost can perform two auto stunts which can be activated at the touch of a button!

 
CIRCULAR FLIGHT!

1. Hold the throttle joystick still to keep the Ghost in the air and maintain its altitude.
2. Press the circular flight button ().
3. Keep holding the throttle joystick still and the Ghost will fly in a circle at the maintained altitude for a few seconds before it returns to normal operation.
4. Press the circular flight button again to repeat the circular flight stunt.

NOTE: Ghost will still ascend or descend as you adjust the flight altitude with the throttle joystick.



AUTO LAND!

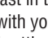1. Hold the throttle joystick still to keep the Ghost in the air and maintain its altitude.
2. Press and hold the auto land button () with your other hand.
3. Keep holding the auto land button and the throttle joystick still and the Ghost will slowly descend and land on the ground.
4. Release the auto land button.

IMPORTANT: DO NOT release the auto land button and throttle joystick while the Ghost is slowly descending.







6

5. PERFORMANCE TIPS

REPLACING THE PROPELLERS

The Ghost comes with 1 extra set of replacement propellers (2 "A" propellers and 2 "B" propellers). If any of the Ghost's propellers break off or become damaged, determine whether if it is the "A" propeller or "B" propeller that has to be replaced and replace them by following the steps below.

1. Use a coin (not included) to pry off the old propeller.
 
2. Select the required propeller and match it to the rail with the same letter. The propellers with the same letter (A or B) on them MUST be diagonally across from each other.
 
3. Align the pin to the hole of the propeller. Make sure the molded letter (A or B) on the propeller is facing the shaft.
 
4. Use the coin to gently push the propeller onto the pin. The coin will prevent the pin from poking your finger.
 

TROUBLESHOOTING

- Q:** The Ghost is not responding to the controller.
- Try recharging the Ghost or install new batteries in the controller.
 - Turn off the Ghost and controller and pair them again.
 - Radio interference can affect the Ghost's performance. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings, WiFi or Bluetooth. If you experience interference, turn off the ghost and controller and relocate to a different area.

- Q:** The propellers are spinning but the Ghost does not takeoff.
- Check if the propellers are properly installed and match the correct A/B locations.
 - Check the propellers for damage and replace any broken propellers with the spare set included.
 - Increase the Ghost's throttle by pressing the up button on the throttle trim controls.

- Q:** The Ghost is flying out of control and drifting towards wrong directions.
- Adjust the FORWARD/BACKWARD or SIDEWAYS TRIM.
 - For better control, make small, smooth and slow movements on the throttle and steering joysticks.

REPAIR & MAINTENANCE

- Use clear household tape to repair tears, creases or cracks. Use sparingly as added weight will affect performance.
- Dirt or mud on the Ghost can affect its operation. Use a clean, dry cloth to remove any dirt immediately. If the Ghost gets wet, turn it off and allow it to dry completely overnight.

7

CONTROLLER BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries must be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries must be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FOR PRODUCT SOLD IN CANADA • POUR LES PRODUITS VENDUS AU CANADA

THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENCE-EXEMPT RSS-210. CE DISPOSITIF EST CONFORME À LA NORME CNR-210 D'INDUSTRIE CANADA APPLICABLE AUX APPAREILS RADIO EXEMPTS DE LICENCE. CET APPAREIL EXEMPT DE LICENCE EST CONFORME AU CNR-210 D'INDUSTRIE CANADA.

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

©2015 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vauxhall Business Park, Maidenhead SL6 4UB, Hplpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121 Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Dimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

8

FLYING GHOST INSTRUCTIONS

8+

CONTENTS



INDOOR USE RECOMMENDED. ADULT ASSEMBLY REQUIRED.

This product is not recommended for use on loose dirt or wet surfaces. Do not immerse in water.

Keep these instructions for future reference as they contain important information. Adult supervision is recommended when the Ghost is being operated.

IMPORTANT: Please read all instructions before operating your vehicle.

CAUTION:

To prevent entanglement, keep all hair away from moving parts. Surfaces may become hot and cause burns if electronics get wet.




DNM77-0970 XXXXXXXX-4LB

service.mattel.com




1

1. FEATURES CONTROLLER

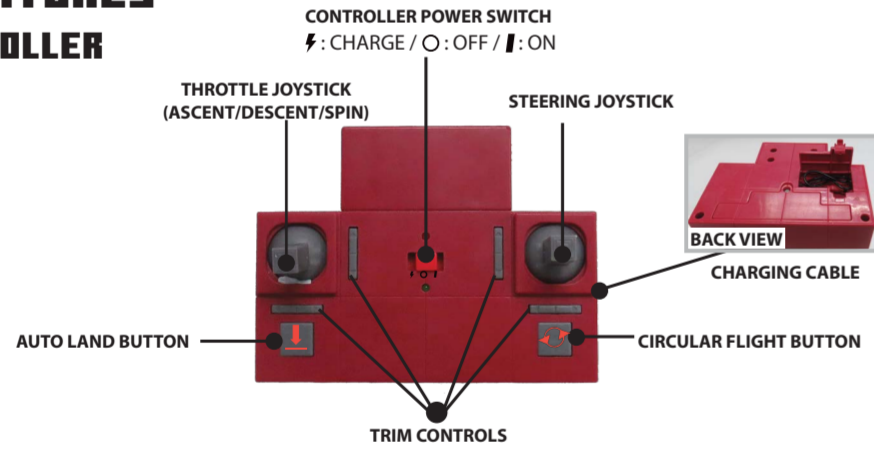

GHOST

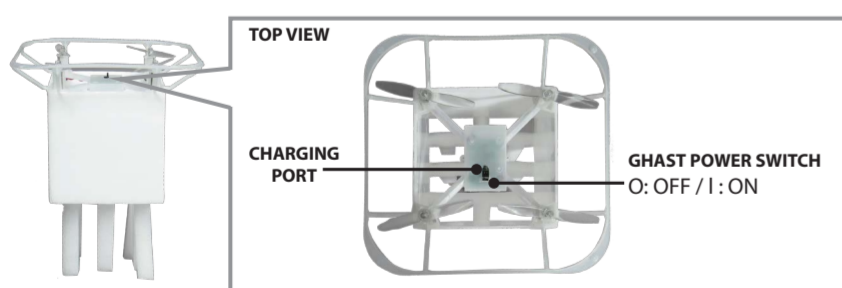

SAFETY INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.


- The toy is not intended for children under 8 years old.
- Keep fingers, hair and loose clothing away from the propellers while the Ghost is switched ON.
- Stay at least 3 to 6 feet away from the Ghost. That goes for anyone watching as well.
- Always keep an eye on the Ghost. If it looks like it's going to crash into you, your friends or anything else, release the throttle joystick and step out of the way.
- Never disassemble or attempt to modify the Ghost.
- When not in use, turn off controller and the Ghost. To avoid accidental operation, remove batteries in controller.
- Operating range of controller is 25 ft. (7.6m).

2. SET UP

CONTROLLER BATTERY INSTALLATION

1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 3 new AAA (LR03) alkaline batteries (not included) in the orientation shown.
3. Replace battery cover and tighten screw.
4. Replace batteries in the controller if the Ghost does not respond after a recharge or if you see a green light flashing in the controller power switch.



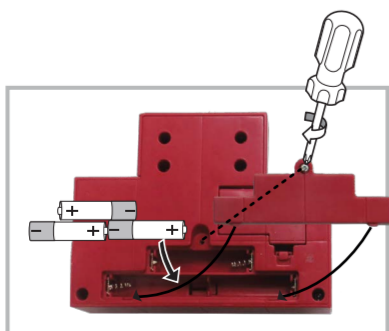


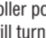 
NOTE: For longer life, use alkaline batteries. Dispose of batteries safely.




2

CHARGING THE GHOST

GHOST MUST BE FULLY CHARGED BEFORE FIRST USE. THE RED LIGHT WILL TURN OFF WHEN CHARGING IS COMPLETE.



1. Open the cover on the bottom side of the controller and take out the charging cable (see ).
2. Plug the charging cable firmly into the charging port on top of the Ghost (see ).
3. Connect the controller to a powered USB port with the supplied USB cable (see ).
4. To begin charging, flip the controller power switch from OFF () to CHARGE ().
 - A red light in the power switch will turn on. This indicates the Ghost is charging. (see ).
 - The red light will turn off when charging is complete.
 - Hold the charging plug and gently pull it out of the port when charge is complete. NEVER pull on the cable as this may cause the cable to break.
5. Replace the charging cable into the controller and close the cover.
6. Disconnect USB cable from the controller before play.

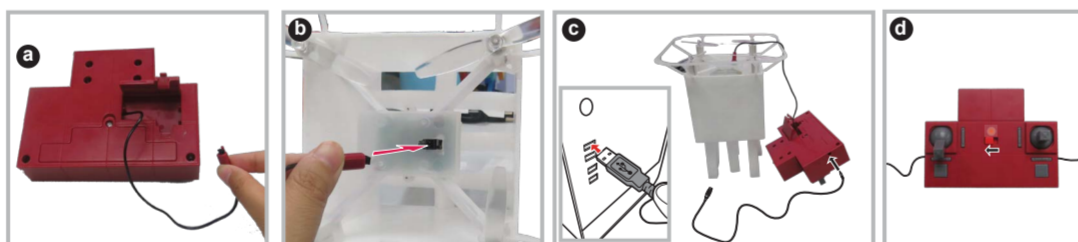

LiPo (LITHIUM POLYMER) BATTERY INFORMATION

- FULLY CHARGE THE BATTERY BEFORE STORING FOR AN EXTENDED PERIOD OF TIME (6 MONTHS OR LONGER). PERIODIC CHARGING EVERY FEW MONTHS IS RECOMMENDED TO EXTEND BATTERY LIFE WHEN NOT IN USE. DO NOT STORE NEAR HEAT OR IN DIRECT SUNLIGHT.
- DO NOT DISASSEMBLE THE GHOST'S PERMANENTLY INSTALLED LiPo (Lithium Polymer) BATTERY. IT IS A SEALED LiPo BATTERY. TO PROPERLY RECYCLE, FOLLOW LOCAL LITHIUM POLYMER BATTERY RECYCLING GUIDELINES.
- DO NOT RECHARGE THE GHOST IF IT FEELS HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- GHOST IS ONLY TO BE CHARGED USING THE CONTROLLER/CHARGER SUPPLIED.
- DO NOT CHARGE THE LiPo BATTERY IN ANY OTHER BATTERY CHARGER.
- DO NOT ATTEMPT TO USE OR CHARGE THE GHOST IF IT SHOWS SIGNS OF LEAKAGE OR CORROSION.
- IF THE GHOST AND/OR CONTROLLER ARE WET, THOROUGHLY DRY BEFORE USING OR CHARGING.
- REGULARLY EXAMINE ALL WIRES AND CONNECTORS. IN THE EVENT OF DAMAGE, DISCONTINUE USE.

 PAIRING THE GHOST WITH THE CONTROLLER

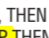You must pair the controller with the Ghost before you can control it. FIRST SWITCH ON THE GHOST. THEN IMMEDIATELY FLIP THE CONTROLLER POWER SWITCH TO ON (). WAIT FOR A FEW SECONDS AND PUSH THE THROTTLE JOYSTICK () THEN BACK DOWN. The controller power switch will change from a flashing green light to a solid green light when pairing is complete. If the green light does not stop flashing after a few seconds, switch off the controller and Ghost and try again.



3

FLYING CORRECTLY: TRIM CONTROLS

Before you start flying your Ghost, it is recommended that you check if any trim adjustments are required to keep it flying correctly. Slowly push the throttle joystick up until Ghost is off the ground. If it is drifting in various directions, you can fine-tune your Ghost by adjusting the 4 TRIM CONTROLS:


FORWARD/BACKWARD TRIM

If the Ghost drifts forward or backward when the steering joystick is not pushed, press the DOWN trim button until it stops drifting forward or press the UP trim button until it stops drifting backward.



SIDEWAYS TRIM

If the Ghost drifts left or right when the steering joystick is not pushed, press the RIGHT trim button until it stops drifting left or press the LEFT trim button until it stops drifting right.

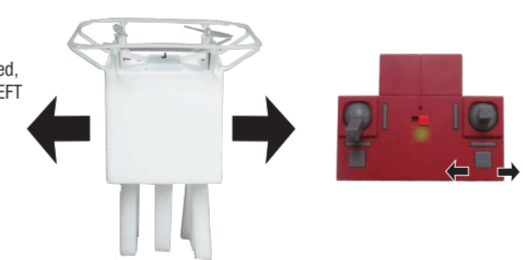


THROTTLE TRIM

Push the DOWN throttle trim button to decrease the throttle power and push the UP throttle trim button to increase the power.




SPIN TRIM

If the Ghost spins left or right when the throttle joystick is not pushed towards the sides, press the spin trim button that is opposite the direction from the side that the Ghost is rotating towards until the spinning stops.

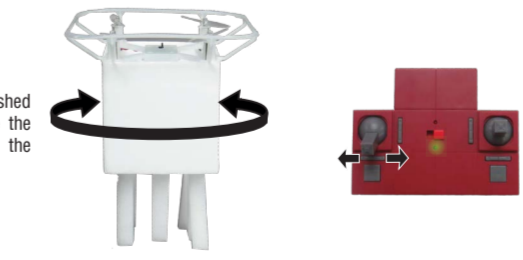

RESETTING TRIM CONTROLS

To reset trim controls, hold both the throttle and steering joysticks diagonally outwards when the Ghost is grounded. A red light on the Ghost will begin flashing, trim controls reset is complete once the red light stops flashing. **NOTE:** Do not release throttle and steering joysticks until the red light stops flashing.

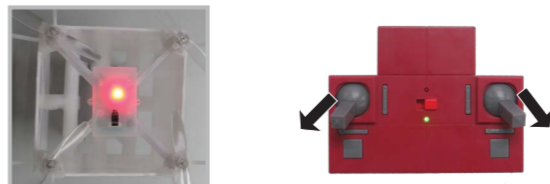


4


PRE-FLIGHT CHECK

1. The Ghost is designed for INDOOR use, DO NOT fly outdoors.
2. Give yourself plenty of flying room. Make sure there are no objects that may obstruct your flight path.
3. PLAY SAFELY – Watch out for people, animals and obstacles.


3. FLYING THE GHOST

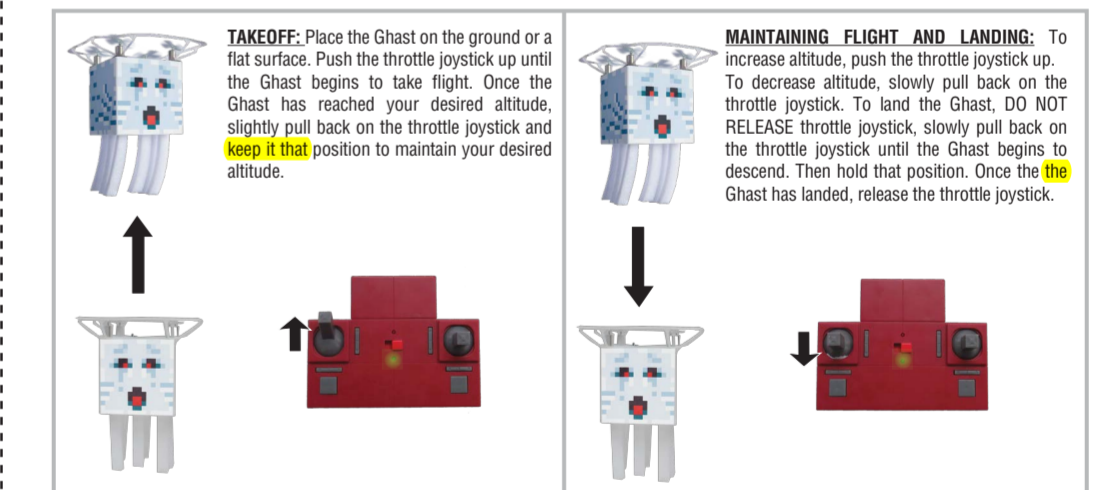

SPINS: Keep the throttle joystick still to maintain the Ghost's altitude, then slowly push the throttle joystick left or right to spin Ghost.

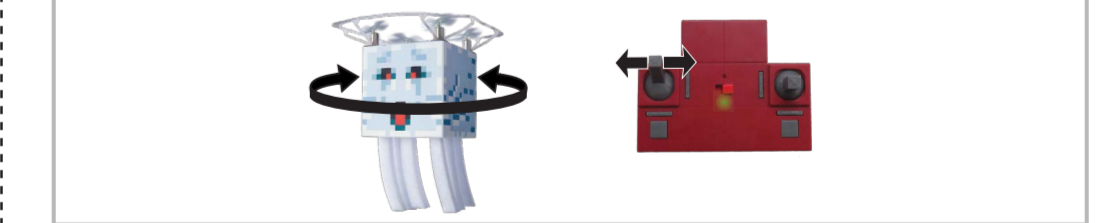

STEERING: With the Ghost's face facing you, keep the throttle joystick still and slowly push the steering joystick. The Ghost can fly in the following directions:

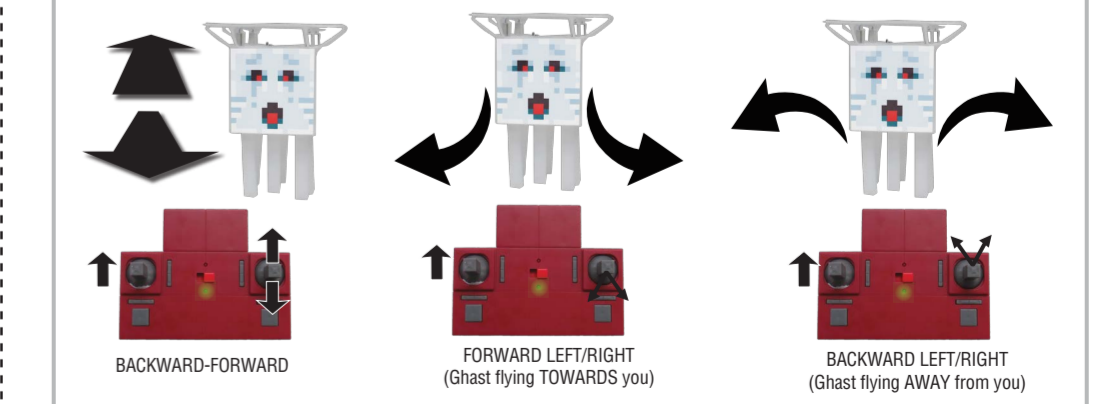

5