

FKM40 instruction Sheet

Size: A5x5/2 side Color: 4C 4 folding flyer

7. BATMOBILE™ FEATURES

Once your smart device is connected to the BATMOBILE™, follow the app's on-screen instructions to activate these features!



LIGHTS & SOUNDS



ROTATING MACHINE GUNS



EXHAUST SMOKE



 
TILTING CANNON



HYDRAULICS



MOVING STEERING WHEEL

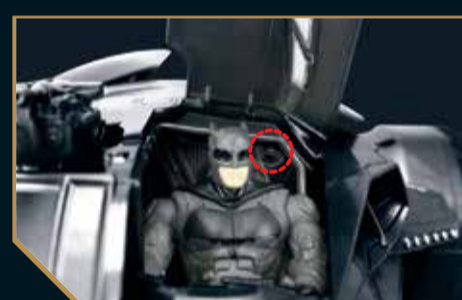

BATMAN™ POV



MOVES UP TO 5.5 MILES PER HOUR

8. CONSUMER INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

- NEVER drive your vehicle on streets! Streets are for real cars!
- DO NOT pick up the vehicle while it is in motion.
- The toy is not intended for children under 14 years old.
- Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched ON.
- Never disassemble or attempt to modify the vehicle.
- Operating range is up to 85 feet (20 meters).
- When not in use, turn off the vehicle. To avoid accidental operation, remove all batteries.
- If the vehicle is wet, thoroughly dry before next use.
- Regularly examine all wires and connectors. In the event of damage, do not use.

QUICK TIPS

- (1) When your vehicle starts to lose power, it may lose functionality or performance. It's time for a recharge. Your vehicle's running time may change depending on your driving style and driving environment.
- (2) Radio interference can affect your vehicle's performance. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings and other Wi-Fi sources. Try to stay away from these!
- (3) Point your smart device up, not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- (4) Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- (5) Don't drive your vehicle in sand or through water or snow. Do not immerse in water. If your vehicle does get wet, wipe it with a towel, remove batteries, and allow to dry completely overnight.
- (6) When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries. This should reset your vehicle and let you resume normal operation.



SAFETY TIPS

RECHARGEABLE BATTERY SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the product. Carrying the product with your finger on the switch or energizing product that have the switch on invites accidents.
- Disconnect the battery pack from the product before making any adjustments, changing accessories, or storing product. Such preventive safety measures reduce the risk of starting the product accidentally.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use products only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or product to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the product or the battery pack (as applicable) except as indicated in the instructions for use and care.

RECHARGEABLE BATTERY INFORMATION

 
- Do not recharge the battery pack if it is hot. Allow it to cool before recharging.
- Do not attempt to use or charge the battery pack if it shows signs of leakage or corrosion.
- Do not disassemble the battery pack.
- Exercise caution in handling a hot battery pack.
- If battery pack and/or charger are wet, thoroughly dry before charging.
- Do not recharge non-rechargeable batteries.
- Do not dispose of the battery pack in a fire.

NOTE TO ADULTS

- Rechargeable battery pack should only be charged by an adult.
- Periodically examine this product for damage to the plug, housing, or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.
- The battery charger is not a toy.
- This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- Periodically examine this battery charger for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the battery charger is damaged, do not use it.

BATTERY DISPOSAL

Unlike NiCd (Nickel-Cadmium) rechargeable batteries, your SUPER SPEED (Li-Ion) battery pack requires no special procedures or precautions for disposal. However, as with all products, you should dispose of your battery pack in an environmentally responsible and considerate manner.



FOR PRODUCT SOLD IN USA

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

To maintain the compliance with the RF exposure guideline, place the unit at least 20 cm from nearby persons.

©2017 Mattel. All Rights Reserved. "and" designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Brand Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-9887. Mattel U.K. Ltd., Vauxhall Business Park, Maidenhead SL6 4UB, Helpline 01228 500303. Mattel Australia Pty. Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78003817, Fax: 03-78003817. ©2017 Mattel. All Rights Reserved. "and" designate U.S. trademarks of Mattel, except as noted.

DC JUSTICE LEAGUE and all related characters and elements © DC Comics and Warner Bros. Entertainment Inc. (677) www.MattelShop.com 1101510764-00M

JUSTICE LEAGUE

ULTIMATE JUSTICE LEAGUE™ BATMOBILE™

1/10 SCALE COLLECTIBLE

INSTRUCTIONS

Keep these instructions for future reference as they contain important information. IMPORTANT: Please read all instructions before operating your vehicle. Colors and decorations may vary.

CAUTION: Surfaces may become hot and cause burns if electronics get wet. To prevent entanglement, keep all hair away from the wheels.

 
2.4GHz

1. CONTENTS



SUPER SPEED CHARGER SUPER SPEED RECHARGEABLE BATTERY ULTIMATE DRIVER BATMAN™ SMOKE SOLUTION

2. ASSEMBLY

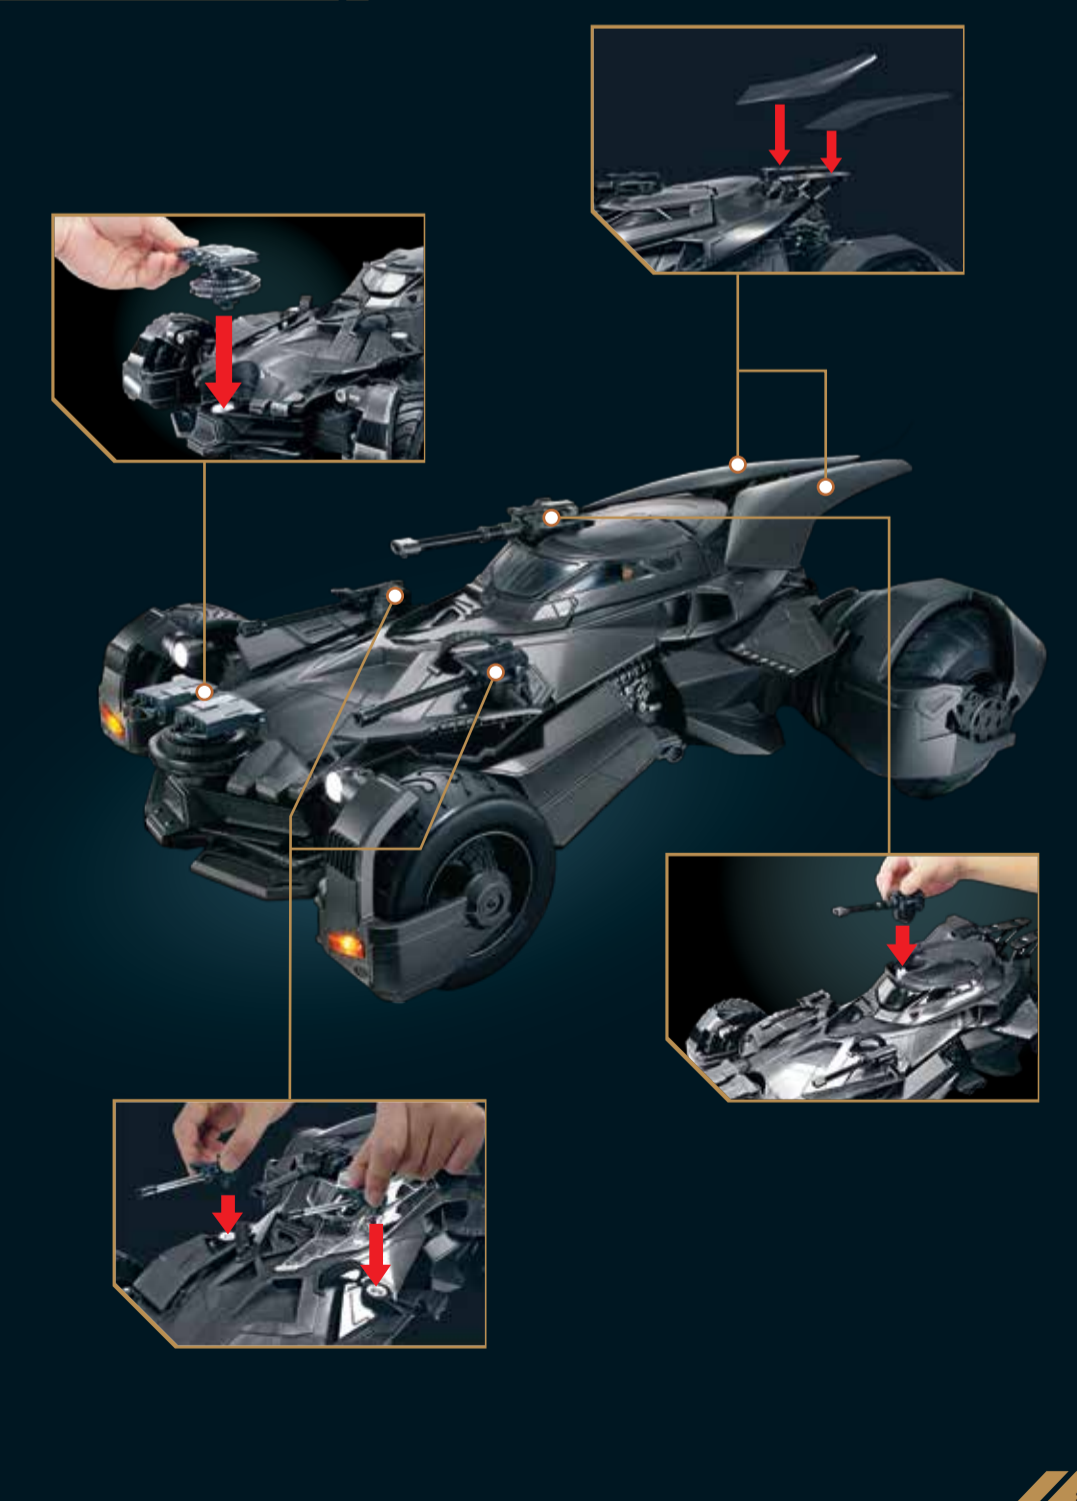

3. CHARGE BATTERY

Before first use, you MUST charge the 9.9V SUPER SPEED battery with the 9.9V SUPER SPEED charger.

Please follow the instructions below:

CAUTION: Use only the charger supplied with this toy. Do not use any other charging source.

1. Plug the charger into standard wall outlet.
2. Connect the wires leading from the battery to the charger. Make sure the two connectors are tightly snapped together.
3. A red LED will light up to indicate the battery is charging.
4. The battery can be charged in 30 minutes. Charging time may vary.
5. A green LED will light up to indicate the charging is complete.
6. After charging, the battery will feel warm. This condition is normal for fully charged batteries.
7. Charging the battery for more than what is recommended will not give you a longer running time.
8. To disconnect wires, push down on the connector clip and pull apart.
9. Unlike alkaline batteries, where the power loss is gradual, a Li-ion battery will run for its normal running time, depending on your particular vehicle, and then lose most of its power at once. It is now time to recharge the battery.
10. After use, the battery will be hot! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery will greatly reduce the number of times your battery can be recharged.

Charging temperature range: 0 ~ 45°C
Operating temperature range: -20 ~ 60°C
Battery Storage temperature range: 25 ± 5°C



4. BATTERY INSTALLATION

 
1. Access the battery storage slot from the left side of the vehicle.
 2. Unscrew the battery cover with a Phillips head screwdriver (not included).
 3. Hold the SUPER SPEED battery with the labels facing up as shown. Connect the wires leading from the battery to the vehicle. Make sure the two connectors are tightly snapped together.
 4. Insert the wires and the connected SUPER SPEED battery into the battery storage slot.
 5. Replace the battery cover and tighten screw.
 6. Recharge the SUPER SPEED battery if vehicle stops running or vehicle does not respond well.
- NOTE:** If vehicle malfunctions, remove and re-install the battery. This should reset your vehicle and let you resume normal operation.



5. DOWNLOAD APP

To control the BATMOBILE™, search and download the Batmobile™ R/C Controller app on your smart device (not included) from the App Store or Google Play.

MINIMUM REQUIREMENTS
iPhone, iPad or iPod touch with a rear-facing camera and OS 10.0 and above.
Android™ devices with a rear-facing camera running Android 6.0 or above.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.
Android, Google Play, and the Google Play logo are trademarks of Google Inc.
*App is available for download at no cost; if available, some activities may require in-app purchases. Requires an iTunes or Google account. Subject to applicable terms, privacy policies and availability.

Compatible software/hardware and internet/wi-fi/mobile data connection required (data fees may apply). Parent permission required.
App may not be available in all languages.
We reserve the right to terminate these services after 09/01/2018.

6. PREPARE BATMOBILE™

1. Place figure on the driver's seat. Attach left hand to the steering wheel. Fits most 6" figures.
 2. Locate the smoke chamber above the exhaust. Lift lid and fill chamber with smoke solution*. Close the lid once chamber is filled.
 3. Slide BATMOBILE™ power switch to ON (I).
 4. Start the Batmobile™ R/C Controller app and follow the on-screen instructions to connect your device and vehicle via Wi-Fi.
 5. Drive with or without the cockpit door. Lift or remove door to recreate scenes from the movie!
- IMPORTANT:** If vehicle veers towards left or right when it is supposed to run straight, follow the in-app instructions to adjust and correct the steering.
- *Additional non-toxic water-based fog fluid may be purchased online or at hobby stores. Please follow the appropriate instructions; product performance may vary.