

(3) Point your remote controller up, not down toward your vehicle. If your vehicle gets too far away, it won't work

(4) Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for (5) Don't drive your vehicle in sand or through water or snow. Do not immerse in water. If your vehicle or remote

controller does get wet, wipe it with a towel, remove controller's batteries, and allow to dry completely overnight. Replace with fresh batteries before next use.

(6) When the controller's light(s) keep flashing even it is successfully paired with the vehicle, the product may malfunction. Switch off both controller and vehicle. To resume normal operation of the vehicle, follow the instructions in TROUBLESHOOTING TIPS. To resume normal operation of the controller, remove and reinstall

TROUBLESHOOTING TIPS

When the controller's light(s) keep flashing even it is successfully paired with the vehicle, the product may malfunction. Please follow the instructions below to resume normal operation of the

. When the red light is flashing, the connection is unstable. Switch off both controller and vehicle. After a few seconds, switch them on again to reset. Get closer to control the vehicle, or stay away from any radio interference sources.

2. When both lights are flashing together, the vehicle malfunctions due to overcurrent. Switch off both controller and vehicle. Wait until the vehicle cools, check its axles and clear the dirt around them. 3. When the green light is flashing, the vehicle is getting too hot. Switch off both controller and vehicle. Wait for 1

hour until the vehicle cools and recharge the battery. 4. When both lights are alternating flashing, the vehicle's battery runs low. Switch off both controller and vehicle. Wait until the vehicle cools and recharge the battery.

SAFETY TIPS

RECHARGEABLE BATTERY SAFETY INFORMATION WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

(a) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or

carrying the product. Carrying the product with your finger on the switch or energizing product that have the switch on

(b) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack

(c) Under abusive conditions, liquid may be ejected from the battery pack or truck; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may

(d) Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

(e) Do not expose a battery pack or product to fire or excessive temperature. Exposure to fire or temperature above 130°C

(f) Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire

(g) Do not recharge the battery pack if the truck is hot. Allow it to cool before recharging.

(h) Do not attempt to use or charge the battery pack if it shows signs of leakage or corrosion.

(i) Do not crush or disassemble the truck. (j) Exercise caution in handling a hot truck.

(k) If the truck and/or charger are wet, thoroughly dry before charging.

(I) Do not recharge non-rechargeable batteries.

NOTE TO ADULTS

Rechargeable battery pack should only be charged by an adult.

· Periodically examine this product for damage to the plug, housing, or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it. The battery charger is not a toy.

• This battery charger is intended to be correctly oriented in a vertical or floor mount position.

fire, electric shock or injury. If the battery charger is damaged, do not use it.

BATTERY DISPOSAL

Before disposal in the waste stream, the batteries must be removed by a qualified professional and disposed of separately according to local regulations on battery. collection and recycling.

FOR ADDITIONAL HELP, VISIT WWW.HOTWHEELS.COM

018 Mattel. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.

eep these instructions for future reference as they contain important information.

CAUTION: The battery charger is not intended to be used by children. Only adults should charge batteries **A** CAUTION:

Surfaces may become hot and cause burns if electronics get wet.

CONSUMER INFORMATION

instructions and safety rules with your child

• DO NOT pick up the vehicle while it is in motion.

• Never disassemble or attempt to modify the vehicle.

• The toy is not intended for children under 8 years old.

• NEVER drive your vehicle on streets! Streets are for real cars!

• Operating range of remote controller is around 65 feet (20 meters).

• If the vehicle and/or remote controller are wet, thoroughly dry before next use.

• Regularly examine all wires and connectors. In the event of damage, do not use.

O = OFF

→ BATTERY COVER

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating

• Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched ON.

I = ON



THROTTLE



Your TRICK TRUCK is equipped with a SUPER SPEED (Li-ion) battery. Now you can spend less time waiting and enjoy more time racing! Before first use, you MUST charge the 9.9V SUPER SPEED (Li-ion) battery with the 9.9V SUPER SPEED charger. Please follow the instructions below ▲ CAUTION: Use only the charger supplied with this toy. Do not use any other charging source.

1. Turn the vehicle upside down as shown. Unlock and open the battery cover.

. To disconnect wires, push down on the connector clip and pull apart. 3. Connect one side of the wires leading from the vehicle to the charger. Make sure the two connectors are tightly snapped together. 4. Plug the charger into standard wall outlet.

5. A red light will light up to indicate the battery is charging. 6. The battery can be charged in 30 minutes. Charging time may vary. 7. A green light will light up to indicate the charging is complete.

8. After charging, the battery and the truck will be warm. This condition is normal when the battery is fully charged. 9. Charging the battery for more than what is recommended will not give you a longer running time. 10. To disconnect wires, push down on the connector clip and pull apart.

11. Reconnect two sides of the wires in the vehicle. Make sure the two connectors are tightly snapped together. 12. Replace and lock the battery cover. 13. Recharge the SUPER SPEED battery if vehicle runs slowly or vehicle does not respond well to remote. 14. Unlike alkaline batteries, where the power loss is gradual, a Li-ion battery will run for its normal running time, depending on your particular

vehicle, and then lose most of its power at once. It is now time to recharge the battery. 15. After use, the battery will be hot! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery will greatly reduce the number of times your battery can be recharged.

Charging temperature range: 0 ~ 45°C Operating temperature range: -20 ~ 60°C Battery Storage temperature range: 25 ± 5°C

REMOTE CONTROLLER

1. Unscrew the battery cover with a Phillips head screwdriver 2. Install 3 new AA (LR6) alkaline batteries (not included) in the


orientation (+/-) shown. 3. Replace the battery cover and tighten screw.

4. Replace batteries if lights dim or both lights keep flashing • When not in use, turn off the vehicle and remote controller. To avoid accidental operation, remove all controller's batteries. even it is successfully paired with the vehicle. Dispose of batteries safely.

6. For longer life, use alkaline batteries.

PAIR CONTROLLER AND VEHICLE ONLY ADULTS SHOULD CHARGE BATTERIES.

You must pair the remote controller with the vehicle before you can control it. FIRST SWITCH ON THE VEHICLE (a), THEN IMMEDIATELY SWITCH ON THE REMOTE CONTROLLER () The controller's red light will stop flashing and stay ON when pairing is complete. If the red light does not stop flashing after around 10 seconds, switch off the controller and

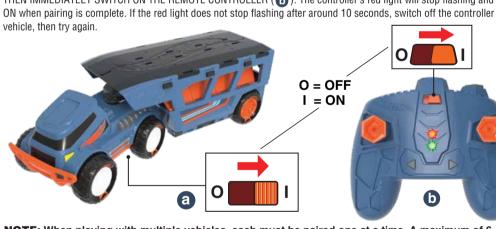

NOTE: When playing with multiple vehicles, each must be paired one at a time. A maximum of 6 vehicles can be paired in one location.

How To Connect Trailer





CONTROLLER OPERATION




DRIVE AND DRIFT

PUSH THROTTLE TO START YOUR ENGINE. CONTROL DIRECTION WITH STEERING STICK.




ADVANCED PLAY

PLAY 1 DRIVE AROUND OBSTACLE TO PERFORM DOUGHNUT!

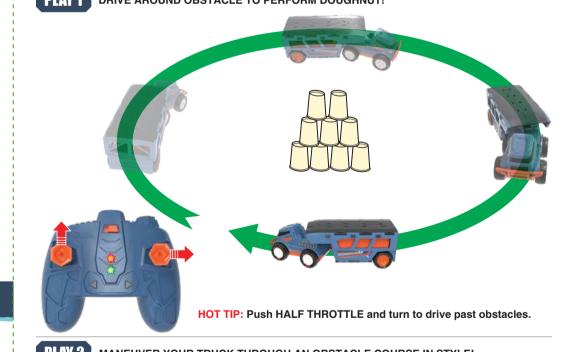

PLAY 2 MANEUVER YOUR TRUCK THROUGH AN OBSTACLE COURSE IN STYLE!

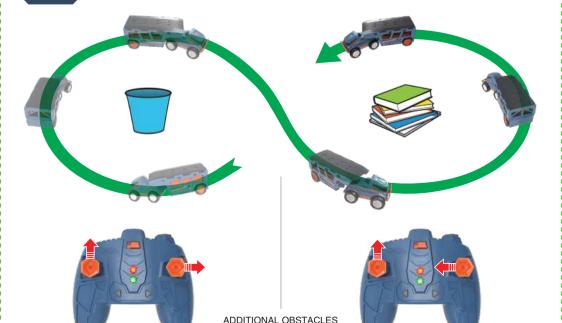

SHOWN NOT INCLUDED.

TRANSFORM

A. THE TRAILER POPS OPEN AND TURNS INTO A STUNT PARK!



B. THE TRUCK DETACHES AND MOVES FORWARD AUTOMATICALLY.



NOTE: Only RED light is on when the trailer is disconnected.

PRESS AND HOLD THE TRANSFORM BUTTON.



· Periodically examine this battery charger for damage to the cord, housing or other parts that may result in the risk of The SUPER SPEED (Li-ion) battery pack inside the truck are not intended to be replaced or removed by consumers.

A STATE OF STREET, STR

INCLUDES A RECHARGEABLE 9.9V LITHIUM ION (LI-ION) BATTERY PACK FOR THE TRUCK. NON-REPLACEABLE BATTERY INCLUDED REQUIRES 3 AA (LR6) ALKALINE BATTERIES (NO I INCLUDED) FOR THE REMOTE CONTROLLER ISPOSE OF BATTERIES SAFELY.

COLORS AND DECORATIONS MAY VARY