



3+



Y3154-0920

Keep these instructions for future reference as they contain important information. **IMPORTANT:** Please read all instructions before operating your vehicle.


**CAUTION:** To prevent entanglement, keep all hair away from the wheels.

**CAUTION:** Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.


## I. CONTENTS/ FEATURES

This set includes: 1 plane, 1 right wing transmitter, 1 left wing.


- 1 Head button
- 2 Thumb button / Forward
- 3 Battery cover
- 4 ON(I) / OFF(O)
- 5 Steering adjuster - Adjust, if necessary, to keep the plane running straight

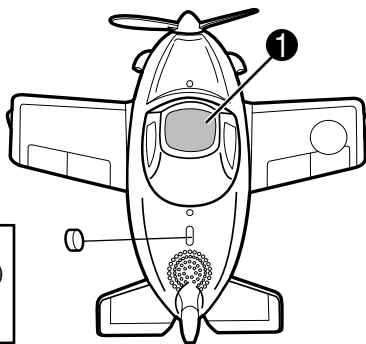


**NOTE:** The toy has an automatic power off feature to extend battery life. If the PLANE no longer responds, turn the power switch OFF (O) and then back ON (I). If the RIGHT WING TRANSMITTER no longer responds, press the FORWARD button.

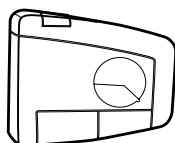


Right Wing Transmitter

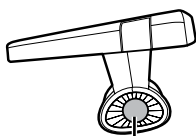




2

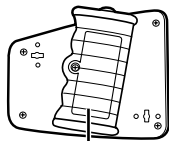

3

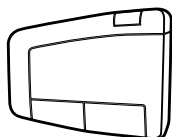

Left Wing

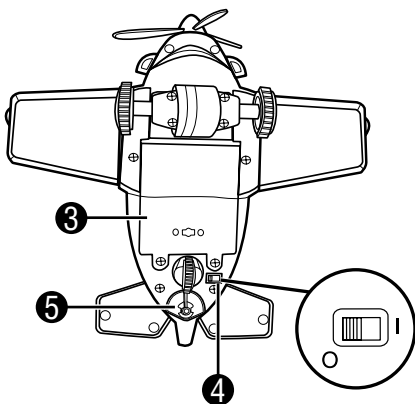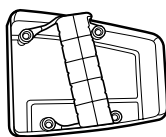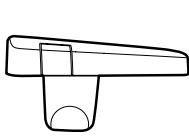


## II. BATTERY INSTALLATION

Requires 4 AA alkaline batteries for the plane and 2 AAA alkaline batteries for the transmitter. Batteries not included.


### Plane

1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Your plane requires 4 AA alkaline batteries. Install with polarity (+/-) as shown inside the battery compartment.
3. Replace battery cover and tighten screws.

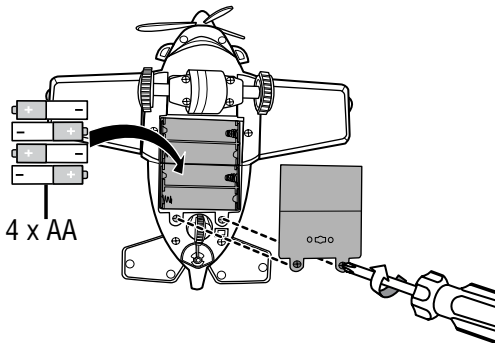

### Transmitter

1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Transmitter requires 2 AAA alkaline batteries. Install with polarity (+/-) as shown inside the battery compartment.
3. Replace battery cover and tighten screw.

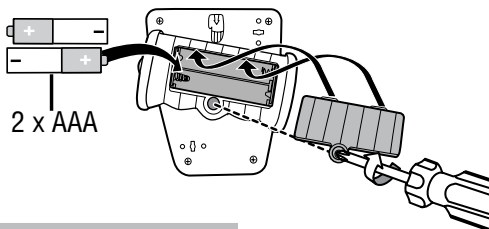

**NOTE:** Once the batteries are installed the transmitter will always be "ON" and will work automatically the moment you use it.


## III. OPERATION

Switch Dusty ON (I) and put him down on an open floor space free of obstacles.

**NOTE:** To conserve battery life, Dusty goes to sleep when left idle for a few minutes. Wake him up by turning the power OFF (O) and then ON (I) again.

### A. PRE-PROGRAMMED FLIGHT MOVES


1. Dusty knows three awesome flight moves. To see them, put him down in a wide open area.
2. Simply push Dusty's head button and he will take off on his own.
3. When Dusty stops, push his head button again to see his next move.

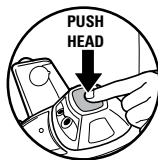

**IMPORTANT:** For best performance, make sure the plane runs forward in a straight line before pressing the head button. If necessary, use the steering adjuster to make the plane run straight.

### B. RC TRANSMITTER

1. Hold the right wing transmitter in your right hand and the other wing in your left hand.
2. Stand behind Dusty and hold your arms out horizontally.
3. Press the thumb button to make Dusty move forward.
4. Follow Dusty and tilt your arms left or right to make him turn left or right.

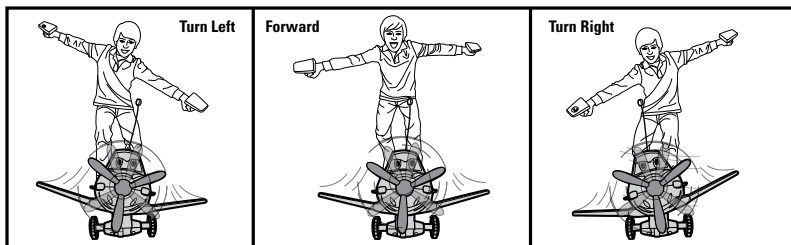

## IV. QUICK TIPS

- 1 When your vehicle starts to lose power, it may lose functionality or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- 2 Radio interference can affect your vehicle's performance. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings or CB radios. Try to stay away from these!
- 3 If your vehicle gets too far away, it won't work properly.
- 4 Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe it with a towel and allow to dry completely overnight.
- 5 Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- 6 If the vehicle malfunctions, please turn the vehicle's power switch OFF and ON again. This should reset your vehicle and let you resume normal operation.


## V. BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

### Battery Performance Note:

For best performance use regular or high-performance alkaline batteries (where disposable batteries are called for). If your vehicle is supplied with standard (carbon-zinc) batteries for initial use and/or demonstration purposes, we recommend replacing them with alkaline batteries when necessary. Battery life may vary depending on battery brand.

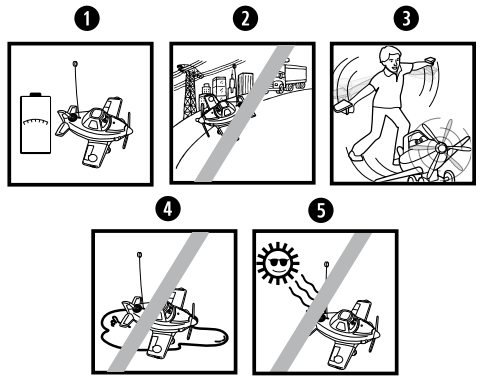

## VI. CONSUMER INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

### Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up the vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

©2013 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

[service.mattel.com](http://service.mattel.com)

© Disney

**This device complies with Part 15 of the FCC Rules.**

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.