# OPERATING YOUR VEHICLE

### Quick Start

- Start with fresh batteries (or a full charge).
   Turn wehicle switch ON. Press transmitter controls to run and control your vehicle.
   When you're done driving, turn vehicle switch OFF. Remove all batteries for storage.

### Safery Precautions

Adults, this toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

- Caution
- NEVER drive your vehicle on streets! They're for real card
  DO NOT pick up vehicle while in motion.
  Neep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.

 
Quick Tips











property.

Don't drive your vehicle in sand or through water or snow.

Don't drive your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for









## TROUBLESHOOTING

PROBLEM? - SOLUTIONS

Steering Adjuster

ON BEL

Gear Selector Switch (Fast/Slow)

Battery Compartment

ON/OFF Switch

Battery Latch

WOI ON	PROBABILE EALISE  Loose battery connection or vehicle switch not ON.	Check battery connector and vehicle switch.
	battery.  Weak AA batteries (Power Clip) or 9-volt transmitter battery	Replace with fresh alkaline battery.
	<ul> <li>Transmitter battery weak or not connected.</li> </ul>	<ul> <li>Check connections and replace battery if required.</li> </ul>
	- Radio interference likely.	Change location (see point 2 - Quick Tips).
All Property and P	- Battery not fully charged.	Recharge vehicle battery.
	• Water in the electronics area.	Vehicle will take several hours to dry. Allow to dry overnight before trying again.     Avoid driving in water and snow.

 
C 1999 Mattel, Inc., Mr. Laurel, NJ 08054 U.S.A. PRINTED IN CHINA. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

depain tris address for future independe.
Mettel U.K., Lid., Meriddan West, Liesber i E.3.2WT.
Mettel Australia Phy., Lut., Richimbord, Wictoria 3121 Consumer Advisory Service.
1800 800 812 (vialdi ordy in Australia).
Mettel Ezst, Asia Limited, 930 Ocean Contre, Harbour

### TRANSMITTER

Refer to label on transmitter and wehicle for frequency. Do not 13ce wehicles with the same frequency

NOTE: Your cransmitter is equipped with a special automatic ON battery-saving feature. List turn your vehicle ON Then push either cransmitter stack and you will be able to run and control your vehicle.



INSTRUCTION OF THE PART IS CONTINUED TO THE CENTRE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

11 THE CROCK, WAN PAIL CLUST, INVESTIGATION TO THE CENTRE OF THE FOLLOWING TWO CONDITIONS:

11 THE CROCK, WAN PAIL CLUST, INVESTIGATION TO THE CENTRE OF THE FOLLOWING THE PAIR INVESTIGATION OF THE PAIR INVEST

CONTENTS TYOO'R'C CONSUMER AFFAIRS WE CARE! ou have questions or difficulty operating this vehicle.

DO NOT RETURN IT TO THE STORE!

Call Toll-Free 1-804-827-1700 (1-804-827-926)

for EUPSET technical help and RAPED parts This vehicle can operate on 2 different power systems: the included 6V DP" Power Clip, which 33309 0920

■ (1) 6V DP<sup>TM</sup> Power Clip

(1) Transmitter ■ 6V Dual Power<sup>TM</sup> Vehicle

uses 4 AA batteries (not included); and the 6.0V Jet Turbo\* rechargeable NiCd battery pack. You'll find

detailed instructions about both systems in this

Owner's Manual.


CHASSIS Range up to 65'/20m


Your chassis may look slightly different, depending on your vehicle.

# PUNER OF TON ONE - 6V UP POR
  
## (4 AA BATTERIES NOT INCLUDED)

- 1. Unscrew Power Clip cover polarity (+/-) as shown Insert 4 AA batteries, with inside Power Clip. Replace
- Release battery compartment





- 3. Insert Power Clip into battery compartment and slide Power Clip away from latch.

# IMPORTANT BATTERY INFORMATION

5. To remove Power Clip, turn latch, slide Power Clip toward latch and lift out.

- Insure that battery polarity is
- Do not mix old and new batteries. Use only batteries of the type
- Do not mix alkaline, standard ■ For best performance use alkaline batteries. Battery life may vary depending on battery brand. Toy performance rnay decrease as vehicle will not be used for a long
  - Remove used-up batteries if immediately. Remove batteries if ■ Do not short-circuit terminals ■ Do not recharge
- Recharge batteries only under adult supervision. Dispose of batteries safely. before recharging.

Remove rechargeable batteries

battery pack will run at a sustained high power level for virtually its entire run time. NOTE: The batteries used in the 6V DP Power Clip will gradually lose power over their lifetime. You will notice a decrease in performance as this occurs. The 6.0V Jet Turbo rechargeable NICd



 
- Bent or dirty contacts may result Battery Contacts in loss of power.
- If battery does not fit correctly, gently bend back metal contact as shown in diagram.



 
## RECHARGEABLE NICH BATTERY PACK POWER OPTION TWO - 6.0V JET TURBO

 
Please read Battery Charging/Care

- Insert battery pack into battery compartment and slide battery pack away from latch. 1. Release battery compartment latch.
- 3. Make sure battery pack snaps securely in place, turn battery compartment latch and lock battery pack in place.
- 4. To remove battery pack, turn latch, slide battery pack toward latch and lift out









### (BATTERIES AND CHARGER NOT INCLUDED) This vehicle uses a Nickel-Cadmium rechargeable battery pack. Must be recycled Rechargeable up to 1000 times! Click the battery pack into the charger. Make certain the battery pack is secure Plug wall pack charger into standard wall outlet. This economical system is the only rechargeable NiCd battery pack and charger made to power your TYCO® R/C vehicle.

or disposed of properly.

in charger.

17/10/2012/11/20







To disconnect, push the red button on the side of charger and simultaneously slide

- 4. After charging for 4 hours, the battery will feel warm. This condition battery pack out
- New battery packs must be charged for  $5^{1/2}$  hours the first two times normal for fully charged batteries.
- battery pack for more than 4 hours will not give you a longer running time charged. Subsequent charges will require only 4 hours. Charging the thours is all that is required for a fully charged battery pack
- Unlike alkaline batteries, where the power loss is gradual, a NiCd (Nickel-Cadmium) battery will run for its normal running time and then lose most of its power at once. It is now time to recharge the battery pack. After use, the battery pack will be hod Wait at least 20 minutes until the battery pack coals before recharging. Rechanging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged
- NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
  DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
  DO NOT DISASSEMBLE THE BATTERY PACK THIS PACK IS A SEALED RECHARGEABLE
  NICKEL-CADMUM BATTERY
  DO NOT DISPOSE OF THE BATTERY PACK IN FIRE.
  DO NOT DISPOSE OF THE BATTERY PACK TO ATTERY ON TO THE PACK IS A SEALED RECHARGEABLE NICKEL-CADMUM BATTERY.
- DO NOT DISPOSE OF THE BATTERY PACK. IN PIERE.
  EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
  EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
  EBATTERY PACK ANDOR CHARCER ARE WET. THOROUGHLY DRY BEFORE CHARGING.
  DO NOT RECHARGE NOW RECHARGEABLE BATTERES.
  DO NOT USE THE 6V DP POWER CLIP WITH THE 6 0V JET TURBO CHARGER.
- SPECIAL NOTE TO ADULTS:
   Remove rechargeable batteries before rec


- Remove exhangeable batteries before rechanging. Rechange batteries only under adult supervision.

  Regularly ocamine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used withhe transformer until the
- damage has been repaired. This toy is not intended for children under 3 years old. The transformer is not a toy



# SPECIAL CONTROLS & DRIVING MODES

Your vehicle may vary

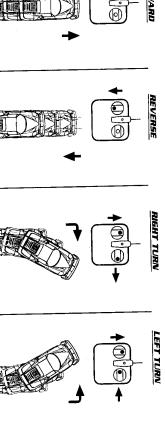

### TRANSMITTER

- Slide battery door open.
- 2. Install one 9-volt (6LR61) battery with polarity (+/-) as shown inside battery compartment.
- 3. Replace battery door