







© 1999 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A. PRINTED IN CHINA. All Rights Reserved. ● and ™ designate U.S. trademarks of Mattel, Inc.

maris of Mattel, Inc.
Retain this address for future reference: Mattel U.K., Ltd., Meridian West. Leicaster US
2WT. Mattel Australia Pty., Ltd., Richmond,
Victoria 3121 - Consumer Advisory Service:
1800 800 812 (veilid only in Australia). Mattel
East Asia Limited, 930 Ocean Centre, Harbour
City, HK, China.

COMPLIANCE WITH FCC REGULATIONS THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES, OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDI-

TIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY HARM-FUL INTERFERENCE THAT MAY CAUSE UNDE-SIRED OPERATION.

This device generates and uses radio fre-

quency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to compty with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

CAUTION: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to counte the equipment.

to operate the equipment.



 
(Vehicle & Transmitter)

Push battery doors open in direction of arrow.

- Vehicle requires 2 AA alkaline batteries. Install with polarity (+/-) as shown inside battery compartment.
- Transmitter requires 1 9V alkaline battery. Install with polarity (+/-) as shown inside battery compartment.

Close battery doors.

- Your vehicle starts with a key, just like a real carl Just insert the key and turn it clockwise to the ON position. Remove the key - your vehicle will run backward and to the left.
- Your transmitter is the "remote" on your keychain. It has an automatic ON feature. Just press the button to steer straight ahead.
- Release the button to back up and turn. Press it again to go forward when the vehicle is facing the direction you want.
- Insert the key and turn it counterclockwise to the OFF position after use. Remove the key for storage.

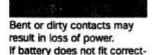

ly, gently bend back metal

contact as shown in diagram.

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- For best performance use alkaline batteries (where disposable batteries are called for). Battery life may vary depending on battery brand.
- Do not recharge nonrechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable batteries before recharging.
 Recharge batteries only under adult supervision.
- Dispose of batteries safely.

17 4 15

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries. Your vehicle's running time may change. depending on your driving style.
- Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical

- wires; large buildings; or CB radios. Try to stay away from thesel
- Point your transmitter up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe with a towel and allow to dry completely.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

SAFETY PRECAUTIONS

Adults, this toy is recommended for children 3 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended during operation of this vehicle.
- To avoid accidental operation, remove batterles when not in use.
- DO NOT operate your vehicle on streets! They're for real cars.

EXCLUSIVE SOUND FEATURE

 
Your vehicle features an exclusive sound feature for extra driving fun! Turn the sound switch to the ON position: your *remote* will make cool driving sounds as you operate your vehicle.


Your 'remote' operates on two different kinds of batteries: 1 9-volt battery for the transmitter function (not included), and 3 button cell batteries (included and pre-installed) for the sound feature. You can drive your vehicle with the sound feature turned off: just leave the sound switch in the OFF position and drive your vehicle normally.

If the sound feature stops working, you'll need to replace these batteries as follows:

- Open upper battery door, using a Philips screwdriver (not included). Remove battery door.
- Remove old batteries, Install 3 fresh AG13/LR44 button cell batteries, with polarity (+/-) as shown.
- 3. Replace battery door and tighten screw.



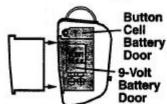

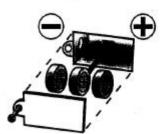



Please discard used-up batteries immediately, being careful to keep them away from young children at all times.



Please refer to your Owner's Manual for detailed information about the operation of your vehicle; installation of the 9-volt transmitter battery; and other important battery safety information.

@2000 Mattel, Inc. CHINA 92182-0924