

92649-0920

STREET GRINDER






**TYCO® R/C
CONSUMER AFFAIRS
WE CARE!**

If you have questions about this vehicle,
DO NOT RETURN IT TO THE STORE!
Call Toll-Free 1-800-822-TYCO (1-800-822-0286) for EXPERT
technical help and RRP® parts and service assistance.

www.tycorc.com



Keep these instructions for future reference: they contain important information.

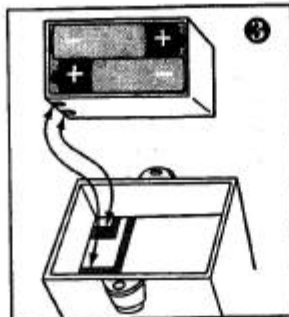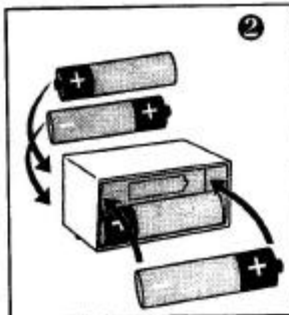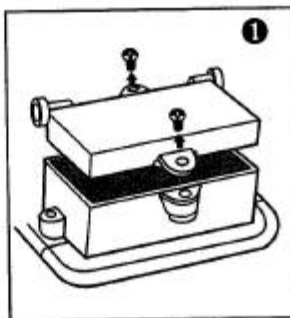

GET READY!


INSTALLING BATTERIES IN SKATEBOARD

- 1 Use a Phillips screwdriver (not included) to unscrew vehicle battery cover.
- 2 Lift out battery case. Insert 4 AA alkaline batteries with polarity as shown inside battery case.
- 3 Re-insert battery case. Make sure the contacts on the case touch the contacts in the battery compartment. Close battery cover and tighten screws.

INSTALLING BATTERIES IN TRANSMITTER

- 1 Push transmitter battery door open.
- 2 Insert 1 9V alkaline battery as shown. Replace battery door.


NOTE: Your vehicle and transmitter operate on the 27MHz frequency.

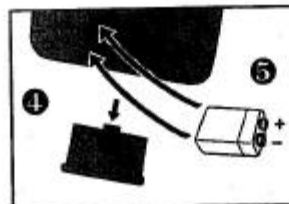

MATTEL WHEELS®

GET SET!

Attach the skateboarder figure: slip his feet onto the pegs on the skateboard.

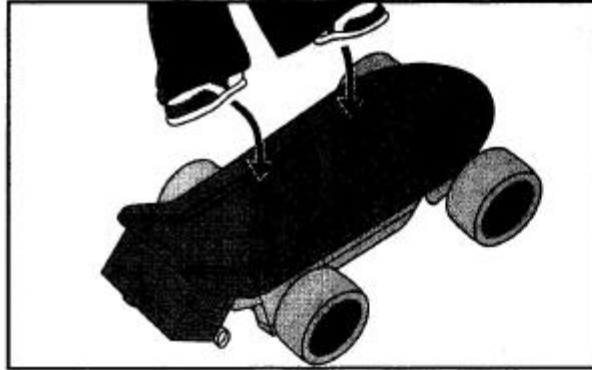**GO!**

Turn skateboard power switch ON. Push either transmitter stick to activate.

You can make the skateboarder move just like a REAL skateboarder! The figure's body and arms swivel as the skateboard moves. Try these tricks and stunts...then make up your own!



FORWARD



REVERSE



LEFT TURN




RIGHT TURN

COOL 360° SPINS!

Push the left stick back to reverse. When you hit full speed, quickly jam the left stick all the way forward. The skateboard will lift in front and do a wild 360° spin!

**WACKED-OUT WHEELIES!**

For a totally wacked-out wheelie, press the special stunt button. The skateboard will pop into a full-bore wheelie and then go into a thrashin' 360° tailspin. To go back to normal driving, release the stunt button.

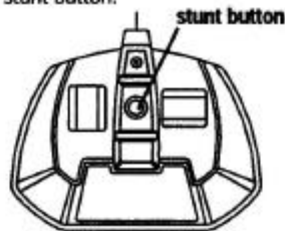


If your vehicle starts to veer right or left, use a screwdriver (not included) to turn the steering adjuster dial.



QUICK TIPS

- ❶ When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style.
- ❷ Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires; large buildings; or CB radios. Try to stay away from these!
- ❸ Point your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly. Your maximum range should be about 30/9m.
- ❹ Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe with a towel and allow to dry completely.
- ❺ Don't store your vehicle near heat or in direct sunlight. Always turn switch OFF and remove all batteries for storage.

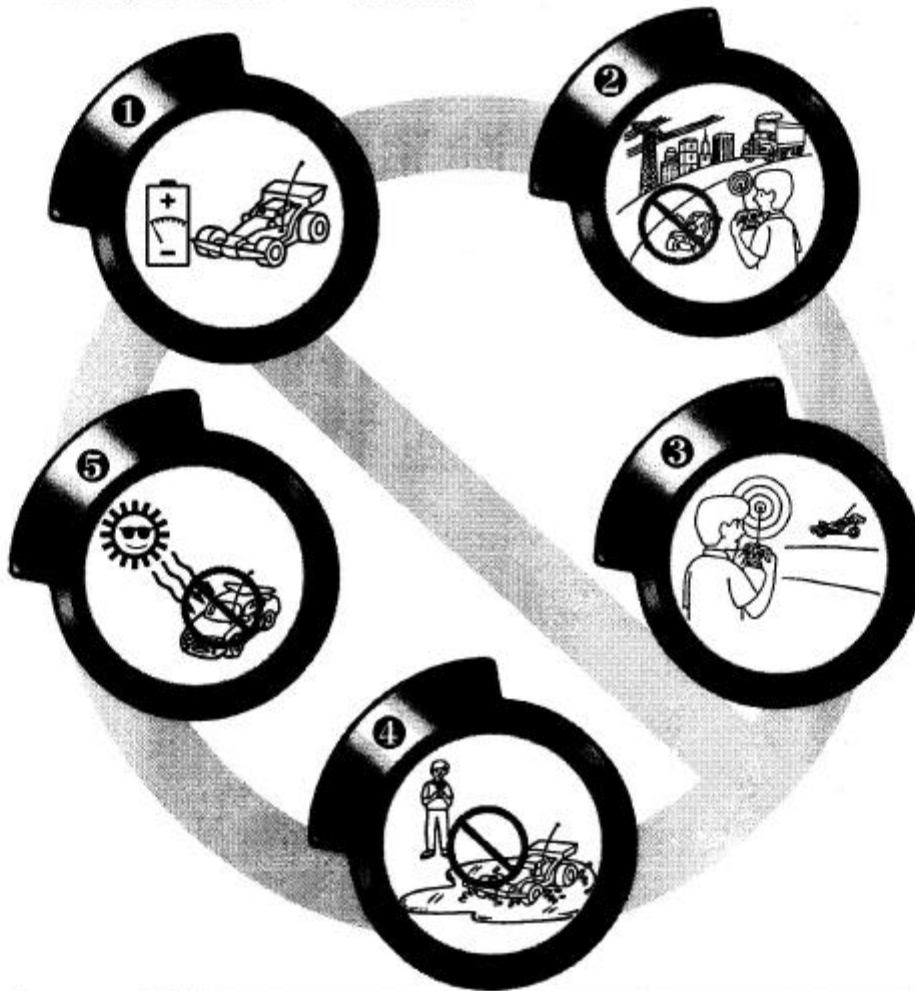

Safety Precautions

- Adults, this toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with your child.

Caution

- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched ON or the transmitter is in operation.
- If this toy is being operated in the presence of children under 6 years of age, adult supervision is recommended.
- To avoid accidental operation, remove all batteries when not in use.
- DO NOT operate your vehicle on streets! They are for real cars.

IMPORTANT BATTERY INFORMATION

- ✓ Insure that battery polarity is correct.
- ✓ Use only batteries of the type recommended (or equivalent).
- ✓ Do not mix old and new batteries.
- ✓ Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- ✓ Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- ✓ For best performance use alkaline batteries (where disposable batteries are called for). Battery life may vary depending on battery brand.
- ✓ Do not recharge non-rechargeable batteries.
- ✓ Do not short-circuit terminals.
- ✓ Remove rechargeable batteries before recharging. Recharge batteries only under adult supervision.
- ✓ Dispose of batteries safely.

© 2000 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A. PRINTED IN CHINA. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Retain this address for future reference: **Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.** Mattel Australia Pty. Ltd., Richmond, Victoria 3121 - Consumer Advisory Service: 1800 800 812 (valid only in Australia). Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.

COMPLIANCE WITH FCC REGULATIONS

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

CAUTION: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.