

Important Battery Information

When the product does not respond, slows down, or loses range, replace the batteries. If the vehicle malfunctions, check for proper battery installation.

- ✓ Insure that battery polarity is correct.
- ✓ Use only batteries of the type recommended (or equivalent).
- ✓ Do not mix old and new batteries.
- ✓ Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- ✓ Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- ✓ For best results and for longer life, use only alkaline batteries. Battery life may vary depending on battery brand.
- ✓ Do not recharge non-rechargeable batteries.
- ✓ Do not short-circuit terminals.
- ✓ Remove rechargeable batteries before recharging.
- ✓ Recharge batteries only under adult supervision.
- ✓ Dispose of batteries safely.

VI. TIPS & HINTS

- Operate your car in a dry, open area; avoid sand, loose dirt, wet, and snow. These can damage electronic assemblies.
- Hold the transmitter antenna up for best performance. The maximum range for operation should be 35 feet (10 meters).
- Do not store the car or transmitter near heat or in direct sunlight. To avoid deepness, do not leave the car or transmitter outside overnight. If moisture does get inside your car or transmitter, remove the batteries and thoroughly dry the connectors. Allow the car or transmitter to dry for several hours, or overnight, and install new batteries before operating.
- When you are through playing, turn the vehicle OFF. If you do not intend to play again, remove the batteries from the car and the transmitter. When the batteries start to weaken, the car may not function properly. The vehicle will NOT be defective, but it will be time to change the batteries.
- When your vehicle runs erratically, the problem is usually the result of interference caused by high-tension wires, large buildings, CB radios, or nearby R/C vehicles which are running on the same frequency as yours. When interference occurs, you may need to move to another location. DO NOT HAVE VEHICLES WHICH OPERATE ON YOUR FREQUENCY (45MHz).
- Anyone can learn to drive the Rescue Net™ police car well, but you will need a little practice.

95189-0920

MATCHBOX

MATCHBOX HELP!

If you have questions or problems with your vehicle, DON'T RETURN IT TO THE STORE... get help from the EXPERTS! Just click or call.

matchbox.com
1 (800) 524-TOYS

RESCUE NET™ Deluxe R/C Police Car

CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

Keep these instructions for future reference; they contain important information!

 
I. CONTENTS

- Rescue Net™ Deluxe R/C Police Car
- Transmitter


II. VEHICLE

Battery Installation


- Use a Philips screwdriver (not included) to unscrew the vehicle's battery cover.

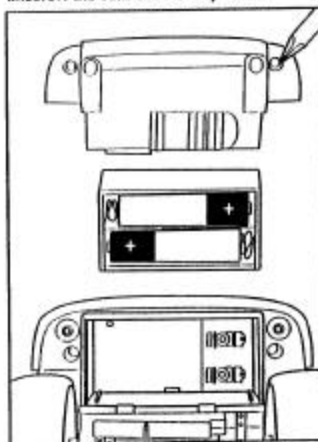

 - Lift out the battery case. Install 4 AA-size (LR6) alkaline batteries inside the case (with polarity (+/-) as indicated).

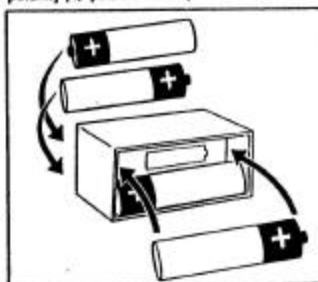

 - Re-insert the battery case. Make sure the contacts on the case touch the contacts in the battery compartment. Replace the battery cover and tighten the screws.

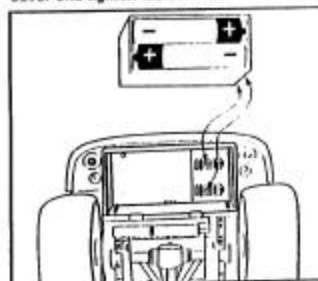

90-DAY LIMITED WARRANTY

Match, Inc., warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Match will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Exclude your name, address, dated sales receipt, and a brief explanation of the defect. Repair or replacement, and return shipment, will be free of charge. Please return only the defective part or unit, packed securely.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty.

Match's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages. Except in those states that do not allow this exclusion or limitation. This warranty is exclusive, and is made in lieu of any express or implied warranty. Valid only in U.S.A. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-524-TOYS (valid only in U.S.A.)
Hours: 8:30 a.m. - 5:00 p.m. PST; 11:00 a.m. - 8:00 p.m. EST; Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep using the toll-free number.

ADDRESS FOR RETURNS: CONSUMER RELATIONS, 636 GRAND AVENUE, EAST AURORA, NY 14054

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

 
This device generates and uses radio frequency energy and it may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

© 2001 Match, Inc., NY, Laurel, NJ 08054 U.S.A. PRINTED IN CHINA. All Rights Reserved. TM and ® designate U.S. trademarks of Match, Inc.

Match U.K. Ltd., Vauxhall Business Park, Manly Road, S11 4HE, Mansel Australia Pty. Ltd., Richmond, Victoria 3125 • Consumer Advisory Service: 1800 800 812 (valid only in Australia) Match East Asia (Incorporated), 500 Ocean Centre, Harbour City, HK, China

Battery Contacts


- Bent or dirty contacts may result in loss of power.

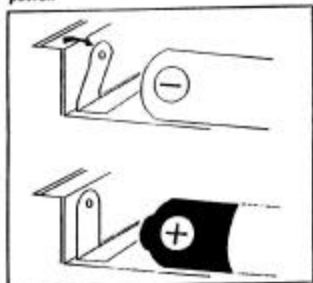

III. TRANSMITTER

Battery Installation

 
- Remove the screw and the battery door.
- Install one 9-volt (6F61) battery with polarity (+/-) as shown inside the battery compartment.
- Replace the battery cover and the screw.

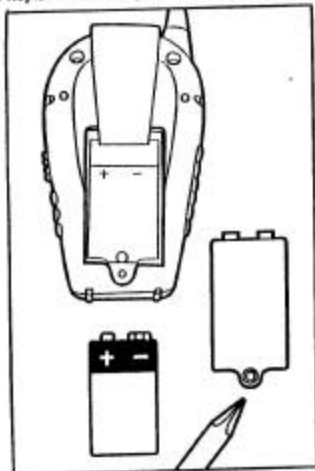


The transmitter turns itself on and off automatically. It has no ON/OFF switch.

IV. VEHICLE OPERATION

 - Switch the vehicle ON. You may choose to operate the vehicle with or without its siren sound effects.

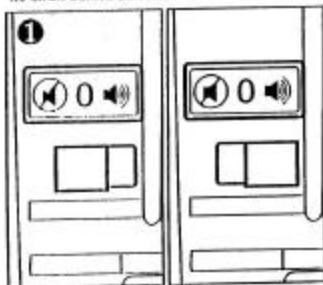

 
- Push the button on the transmitter to drive the car forward. The siren will sound for five seconds (if turned on), and the light bar will flash for ten seconds. To stop the car, release the button.

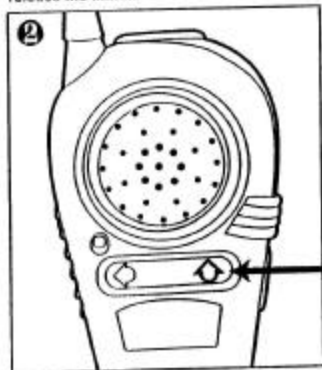

- Push the button to make the car spin.

To steer, release the button when the car is facing the desired direction.

 
Push the button again to go forward.

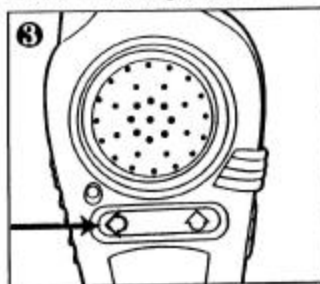


- You can make the top of the car pop up by

holding down the button until the car has spun around approximately three times.

 
To close the roof, push it down with your fingers until it clicks.

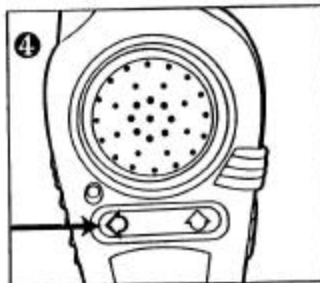

 - To transmit your voice, push the button and speak into the microphone. When you release the button, both the light bar and the siren (if turned on) will operate for a few seconds.

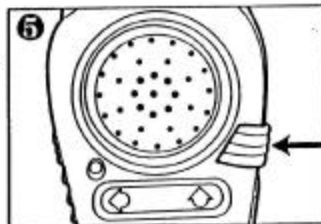

 - Turn the vehicle OFF when you are finished playing. If you forget, the car will turn itself off after 30 minutes; however, to play again, you will have to move the switch to OFF and then ON.

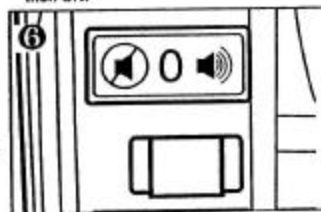

V. SAFETY INFORMATION

Adults, this toy is recommended for children 3 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

CAUTION: To prevent entanglement, keep hair away from wheels.

- DO NOT pick up the vehicle while it is in motion.
- Keep fingers, hair, and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended during operation of this vehicle.
- To avoid accidental operation, remove the batteries when not in use.
- Play Safely! - Do not drive your vehicle in the street!

