

IMPORTANT!

Please follow these Assembly and Setup supplemental instructions after completing Assembly and Setup step 1 on page 18 in the original Owner's Manual. Then, after completing step 6 in this supplemental instruction sheet, please proceed to Assembly and Setup step 7 on page 22 in the original Owner's Manual.

The Fisher-Price logo is displayed in white text on a black background. The text "Fisher-Price" is in a bold, sans-serif font, with a registered trademark symbol (®) to the right of "Price". The logo is contained within a black rectangular box with rounded, wavy bottom edges.

Fisher-Price®

Assembly and Setup


Note: Please complete Assembly and Setup step 1 on page 18 in the original Owner's Manual.

- 2** Remove your child from the shell. From the front of the car seat, press the button on the buckle and remove **one** of the shoulder strap latch plates from the buckle.
- 3** Turn the shell over. Feed the lap strap end back through the slot in the bottom of the shell.



Assembly and Setup


- 4 Fit the shoulder strap latch plate and lap strap end back through the slot in the shell.

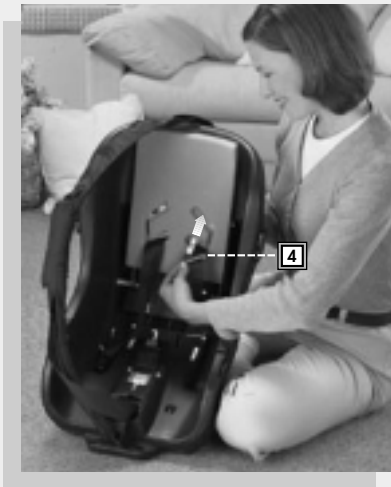

Assembly and Setup

- 5** From the back of the shell, fit the lap strap end and shoulder strap latch plate through the upper slot in the shell. **Make sure the strap is not twisted.**
- 6** Repeat steps 2-5 to re-position the other shoulder strap in the upper slot in the shell.

To complete assembly and setup, please proceed to Assembly and Setup step 7 on page 22 in the original Owner's Manual.

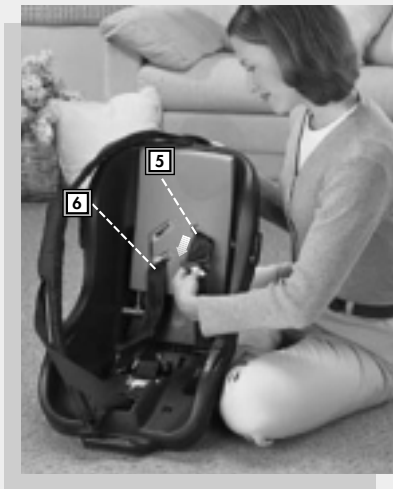

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

©2000 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.