




Keep these instructions for future reference as they contain important information

What's Included 🦠

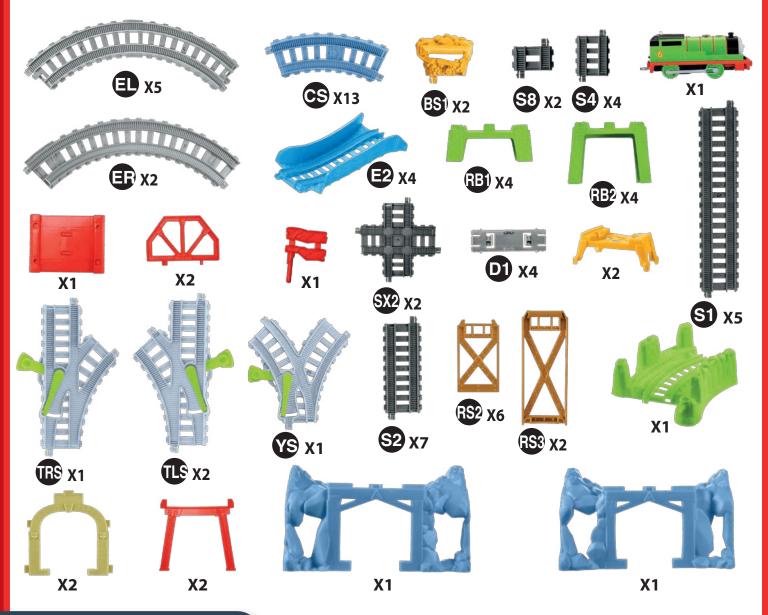

Helpful Hints 🥠




Track marking codes are found on the bottom of tracks and risers.

Note: Some engines may not work on this track set.


Some track sections (ER, EL) are intentionally curved, they are not damaged.

Adult assembly required. No tools needed.


Assembly 🦠

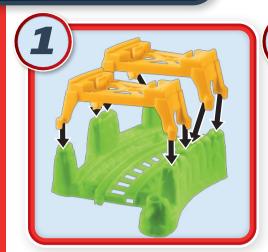





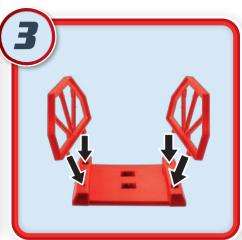





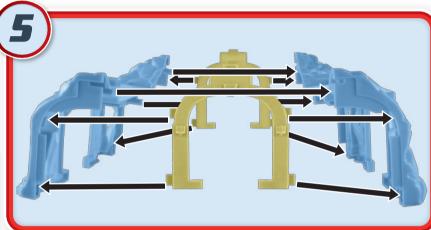


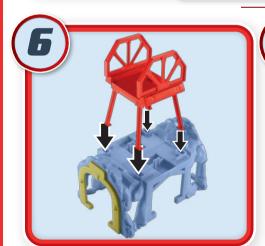


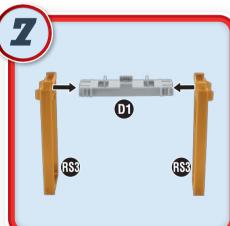


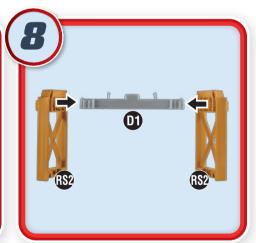


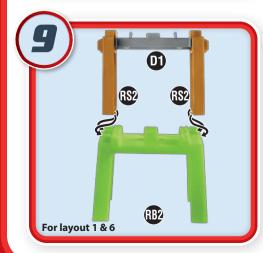


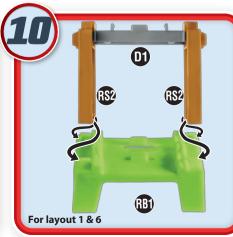


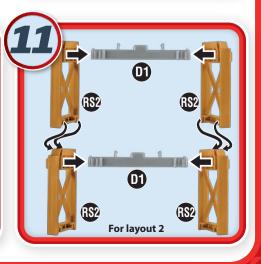

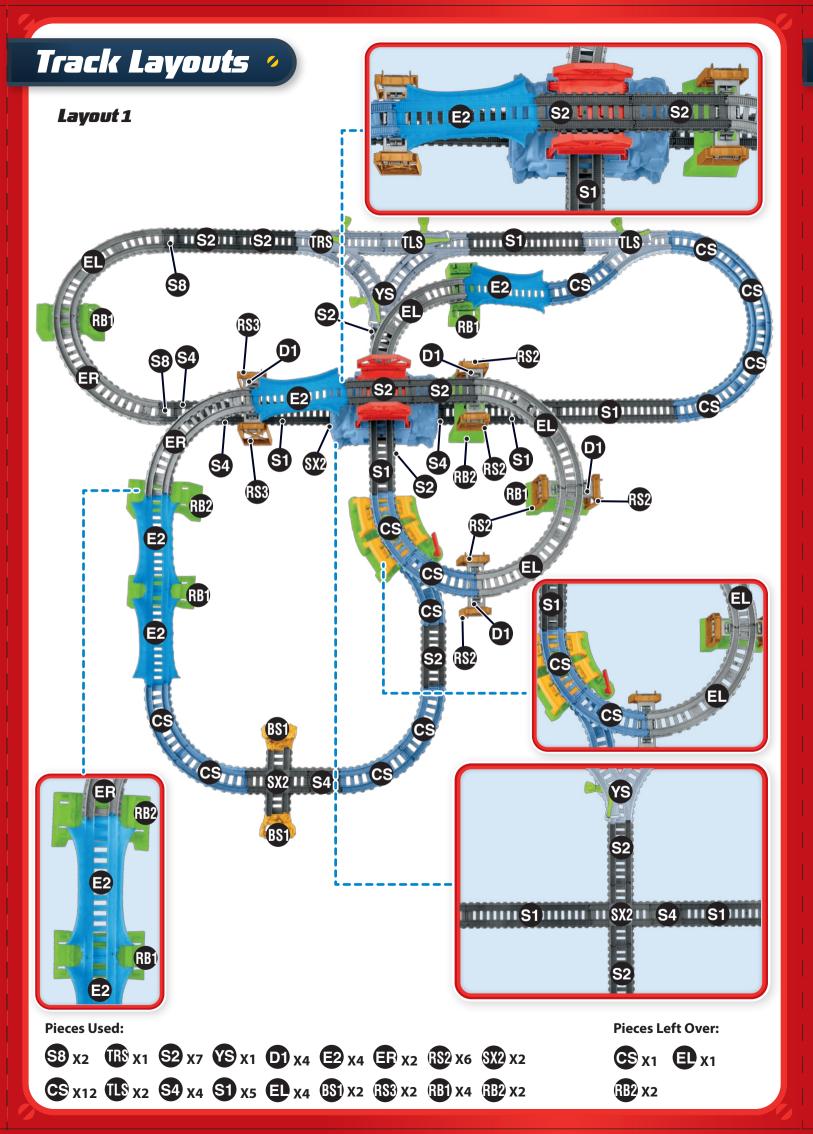

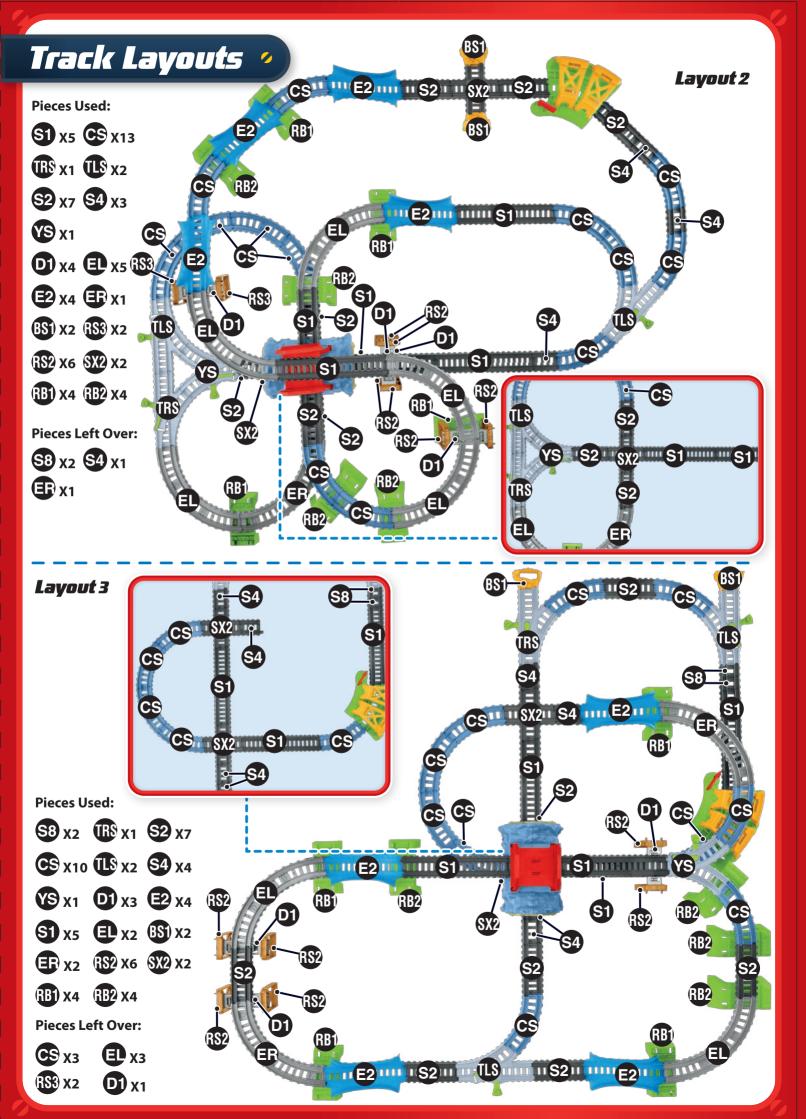

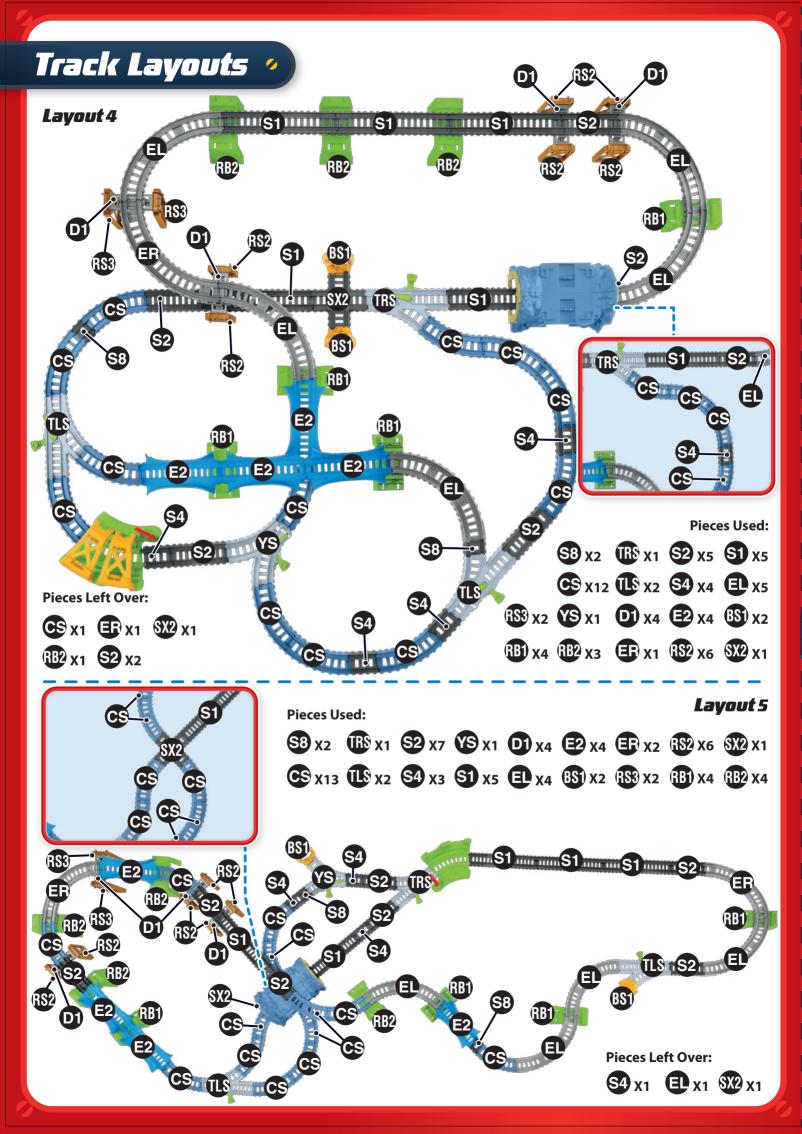

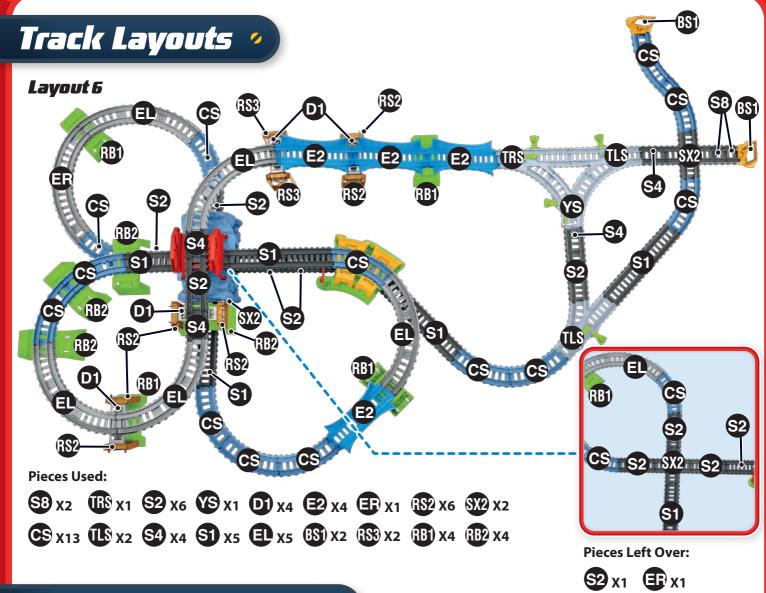


Battery Information 🦠

Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and

replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries. For longer life use only alkaline batteries.

1,5V x 2 "AAA" (LR03)

 Required tool: Phillips screwdriver (not included)



In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

· Non-rechargeable batteries are not to be recharged.

• Rechargeable batteries are to be removed from the product before being charged.

• Rechargeable batteries are only to be charged under adult supervision. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

Do not mix old and new batteries.

• Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the product.

• The supply terminals are not to be short-circuited. • Dispose of batteries safely.

• Do not dispose of this product in a fire. The batteries inside may explode or leak.



Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario LSR 3W2; www.service.mattel.com. Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive Albany 1331, Auckland.

South Africa: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

Thomas the Tank Engine & Friends™

CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry. ©2018 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.

©2018 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2018 Mattel. $^{\circ}$ and $^{\top}$ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

GBN45-0970 1101325183-DOM



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



To prevent entanglement, keep hair away from wheels.

GBN45



