

**maycom MP-2000**

---

## USER'S GUIDE



 **maycom Co., Ltd.**

#### Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Warning**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CONTENTS

<b>1. Introduction .....</b>	<b>1</b>
<b>2. Getting Started .....</b>	<b>2</b>
2.1 System Requirements .....	2
2.2 Unpacking .....	3
2.3 System Overview .....	4
2.3.1 Button Controls .....	4
2.3.2 LCD Display .....	6
2.3.3 Inserting and Removing Flash Memory Cards .....	7
2.3.4 Connecting the Player to the PC .....	7
2.4 Charging the Battery .....	8
2.4.1 Charging the Player .....	8
2.4.2 Battery Level Indication During Operation .....	8
<b>3. How to Use the Special Edition MP-2000 .....</b>	<b>9</b>
3.1 Power ON/OFF .....	9
3.1.1 Power ON .....	9
3.1.2 Power OFF .....	10
3.2 Modes of Operation .....	11
3.2.1 Music Mode .....	11
3.3 Music Mode Functions .....	12
3.3.1 Selecting Music from Memory Card .....	12
3.3.2 Play/Pause .....	12
3.3.3 Cue/Review .....	12
3.3.4 Stopping Play .....	13
3.3.5 Volume Control .....	13
3.3.6 Intro Scan/Repeat One/Repeat All/Random .....	14
3.3.7 A-B Sampling .....	15
3.3.8 Preset Equalizer Settings .....	16
3.3.9 Changing LCD Display .....	17
3.3.10 Hold Function .....	17
<b>4. Troubleshooting.....</b>	<b>18</b>

## 1. INTRODUCTION

Your new Special Edition MP-2000 is an easy-to-use, pocket-sized, state-of-the-art digital music player. Your favorite digital music is combined in this small-but-powerful personal stereo system. Wherever you take the MP-2000, you can enjoy CD-quality, stereo sound.

With the user-friendly MP-2000 and your PC, you can customize a mix of your favorite audio tracks, and store custom music selections on the solid-state, removable, reusable, 32MB CompactFlash™ memory cartridge included in this package. MP-2000 connects to your PC through a USB cable so you can upload audio from the Internet or from your personal audio collection. The unit will recognize and play audio files in four popular compression formats: AAC, ePAC, WMA and MP3.

The unit is powered by a built-in, rechargeable NiMH battery, allowing up to four continuous hours of stereo music playback. Connecting the external battery pack (included) gives you up to 10 hours of continuous playback time. The full-featured system will repeat whatever you choose: a whole collection of tracks, one track, or a selected passage of any length. You can tell your MP-2000 to play tracks in either a set order or random order.

The liquid crystal display (LCD) screen displays the name of the song and the artist and also lets you choose from five different equalizer settings to maximize your personal audio experience. It displays the length of each song and shows all the currently-selected settings and functions.

We hope you will enjoy the flexibility of selecting, downloading, storing, and playing your favorite audio tracks using the MP-2000. This User's Guide will help you get the most from the digital audio product that puts you in control.

### **Copyright Laws**

Intellectual property, including music, is protected worldwide by copyright laws. It is permitted to make one copy of legally acquired music (from your personal CD or tape collection, for example) for your personal use. It is not permitted to sell or give these copies to third parties. Take care when downloading MP3 files from the Internet. Check that files offered are properly licensed, and that the seller has proper rights to distribute the tracks being offered.

## 2. Getting Started

### 2.1 System Requirements

The following system is recommended:

- Microsoft Windows 98/2000
- Pentium 133MHz or faster
- 16MB RAM or higher
- 30MB minimum free hard disc space
- CD-ROM drive (8x or better recommended)
- 1 USB Port
- Internet Explorer 4.0 (or newer)

## 2.2 Unpacking

Your MP-2000 came with 8 components. Please take a moment to ensure the following items came in your box:



MP-2000 Digital Music Player  
w/ Internal Rechargeable Battery



Direct USB Interface Cable



Stereo Earphone



Installation Software



Neck Strap



D.C. Wall Adapter




32MB CompactFlash™  
Memory Card

 


External Battery Pack  
1x "AA"

## 2.3 System Overview


### 2.3.1 Button Controls

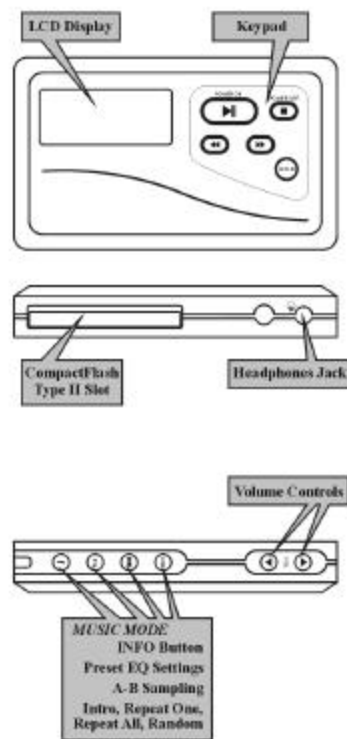

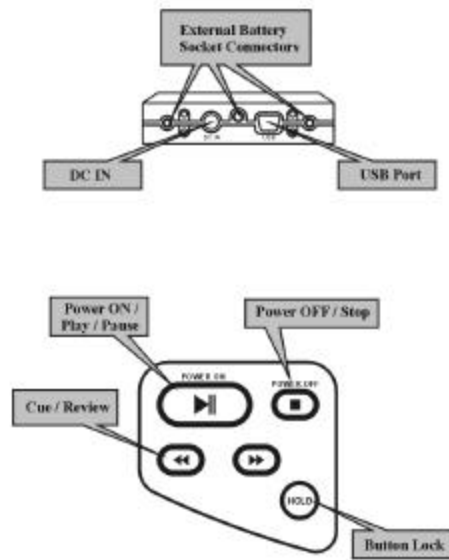




### 2.3.2 LCD Display

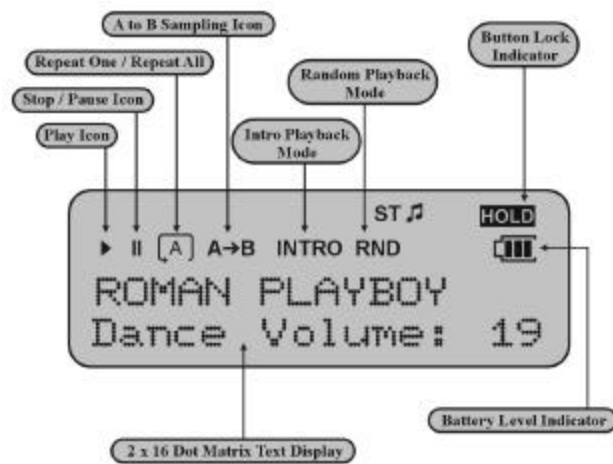

### 2.3.3 Inserting and Removing Flash Memory Cards

1. Turn player off.
2. Ensure the card is in the correct position.
3. Insert the card into the player, press firmly until you feel the card lock in place.
4. To remove the card, firmly grasp the card and slide the card out of the player.

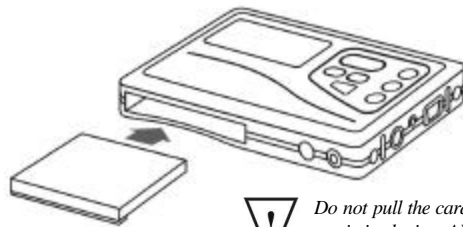

*Do not pull the card out while music is playing. Always turn the player off before inserting or removing flash memory cards.*

### 2.3.4 Connecting the Player to the PC

To enjoying digital music away from your computer, you must first connect your MP-2000 to your computer via USB and download your songs onto the player's removable flash memory card.

1. Turn player off.
2. Connect the square connector of the USB cable to the player's USB port located on the side.
3. Connect the rectangular connector of the USB cable to the back of your computer.
4. Turn player on.
5. When the player is properly connected, the LCD displays "USB Connect".
6. Refer to your MVP software manual for specific instructions on downloading music to the player.



## 2.4 Charging the Battery

A built-in rechargeable NiMH Battery powers your MP-2000. Attaching the external battery pack (1xAA external battery holder) will extend playback time up to 10 hours.


### 2.4.1 Charging The Player

1. Turn the player off.
2. Remove the external battery pack if attached.
3. Connect the AC power adapter to the slot labeled DC IN located on the right side of the player and to the wall outlet.
4. Allow the player to charge overnight (12 hours if using the player for the first time) before turning on the player.



### 2.4.2 Battery Level Indication During Operation

The BATTERY LEVEL icon will be continuously displayed while the player is on. The icon will change to indicate:

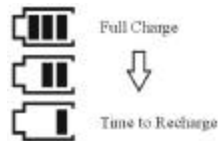

*If using the player for the first time, charge the battery for at least 15 hours.*

Note : As the external battery pack provides different voltage than internal rechargeable battery, Battery Level Indication for external battery pack is not accurate.

## 3. How use the Special Edition MP-2000

### 3.1 Power ON/OFF

#### 3.1.1 Power ON

1. Hold down the (▶) button for 2 seconds.
2. The LCD display will show model number and installed software version for 4 seconds.



3. The player will start in either MUSIC mode, depending on the last shutdown.

*Music Mode Display*



### 3.1.2 Power OFF

Hold down the STOP (■) button for 2 seconds. While holding down the STOP button, the LCD will display 'Powering Off'.

LCD DISPLAY DURING POWER OFF



To turn the player off during music playback, press the STOP (■) button once to stop music play, then press and hold the STOP button to power off.




Hold the ■ button down until the "Powering Off" message disappears.




In MUSIC mode only, the player will automatically power off after 1 minute of inactivity.

## 3.2 Modes of Operation

### 3.2.1 Music Mode

Press the  button on the keypad to start MUSIC mode.

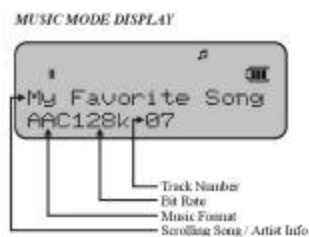

*Types of Music Formats:*

AAC = Dolby

EPAC = Enhanced Perceptual Audio Coder

WMA = Windows media

MP3 = MP3


### 3.3 Music Mode Functions

This section describes the features available to you while enjoying music from your CompactFlash™ memory card.



*A memory card must be inserted before using the player in MUSIC mode*


#### 3.3.1 Selecting Music From Memory Card

- Ensure player is in MUSIC mode by pressing the  button.
- Press the (◀) or (▶) buttons to scan forward/backward to select a song.
- For each song, the LCD display will scroll the song's title and artist information, and show the music format and song track number.

#### 3.3.2 Play / Pause (▶ ||)

- Press the (▶) button to play the selected track.
- Press the (▶) button again to pause
- During pause, the pause icon (▶||) appears.
- During playback, song title/artist, EQ setting, track number, and time elapsed appear.

LCD DISPLAY DURING MUSIC PLAYBACK

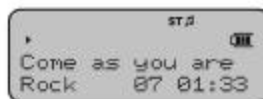

#### 3.3.3 Cue / Review (◀, ▶)

- During music playback, press the (◀) or (▶) once to select the previous or next track.
- Hold down the (◀) or (▶) buttons to scan backward/forward within a song.

### 3.3.4 Stopping Play ( ■ )

Press the ( ■ ) button once to stop music playback.



*If you hold down the ( ■ ) button for more than two seconds, the player will shut off.*

### 3.3.5 Volume Control


- Press the volume controls on the top side of the player to increase/decrease volume during playback.
- When you use the volume controls, the LCD will display the volume level, ranging from 00 to 30.






**3.3.6 Intro Scan/Repeat One/Repeat All/Random**


Press (⏮) once for INTRO playback.  
The INTRO icon will appear. The player will play the first 10 seconds of each song.

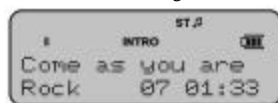


Pressing (⏮) twice will only repeat the currently selected song. The REPEAT ONE icon will appear.

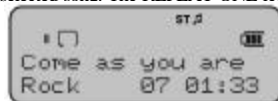

Press (⏮) again to repeat all songs stored on the memory card. The REPEAT ALL icon will appear.

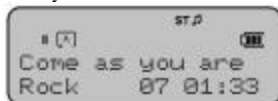


Press (⏮) a fourth time to play all songs in a random order. The RANDOM icon will appear.

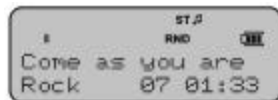


**3.3.7 A-B Sampling**

During music playback, press the (⏮) button once to set the start point of the song segment you want to repeat.

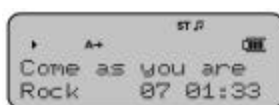

Press the (⏭) button again to set the end point of the song segment. The player will repeat the song segment from point A to B.

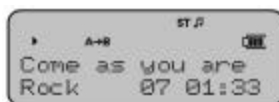

Press the (⏮) button a third time to return to normal playback.



*The A-B Sampling function only works during music playback.*

### 3.3.8 Preset Equalizer Settings


The MP-2000 has the following preset equalizer settings:

- Rock
- Jazz
- Dance
- Latin
- Flat


To change the equalizer setting, press the (EQ) button repeatedly until you reach your desired setting.




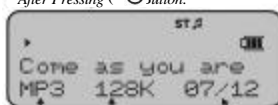
### 3.3.9 Changing LCD Display

During music playback, you can change the information displayed in the LCD by pressing the (  ) button.

Main Music Playback LCD Display

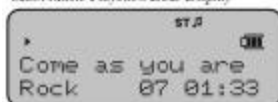

After Pressing (  ) button:



Bit Rate

Music Format


Song # out of total songs stored on memory card



This additional information will be displayed for 5 seconds.

### 3.3.10 Hold Function

To lock the player button controls, press the HOLD button on the keypad.

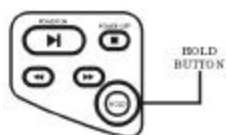

The word "HOLD" will be displayed in the LCD.  
To unlock, press the HOLD button a second time.

## 4. Troubleshooting

Problem	Cause / Remedy
When I press the "ON" button, nothing happens.	Battery may need charging, insert the DC power adapter.
I pressed the PLAY button, but I can't hear any music.	Ensure player is on.  Check the headphones to see if they are properly inserted into the player.  Check the volume level.  Check to see if the flash memory card has been properly inserted.
The LCD display reads "No Media".	Turn off the player and insert a flash memory card. Turn the player back on.
My computer doesn't recognize the player when it's connected.	Check the USB connection.  Check to see if the driver was properly installed on your computer. In Windows, go to Start > Settings > Control Panel > System. Click the Device Manager tab, scroll down to Universal Serial Bus Controller and click the (+) plus sign. MP-2000 must be listed.

**4.0 Troubleshooting (continued)**

<b>Problem</b>	<b>Remedy</b>
Some songs will scroll the artist and song title while other songs only display the filename.	This is not a problem associated with the player. Refer to your PC jukebox software for editing song information.
None of the buttons are working.	Check to see if the HOLD button has been pressed. You will see the HOLD icon appear in the LCD. To deactivate this locking feature, press the HOLD button again.
"USB Connect" does not appear when I connect the player to the computer.	Check the USB connection.  Ensure the drivers have been properly loaded into your computer.



Maycom B/D, 280-5, Seoksu 2-Dong, Manan-Gu, Anyang-City,  
Kyoungki -Do, Korea  
Office) Tel : 82 31 470-7700 Fax : 82 31 470-7799  
Factory) Tel : 82 31 470-7740 Fax : 82 31 470-7798  
<http://www.maycomcoltd.com>  
e-mail : [maycom@maycomcoltd.com](mailto:maycom@maycomcoltd.com)

Printed in Korea

*MP-2000 User's Guide*