 
 
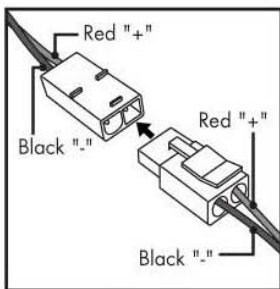 
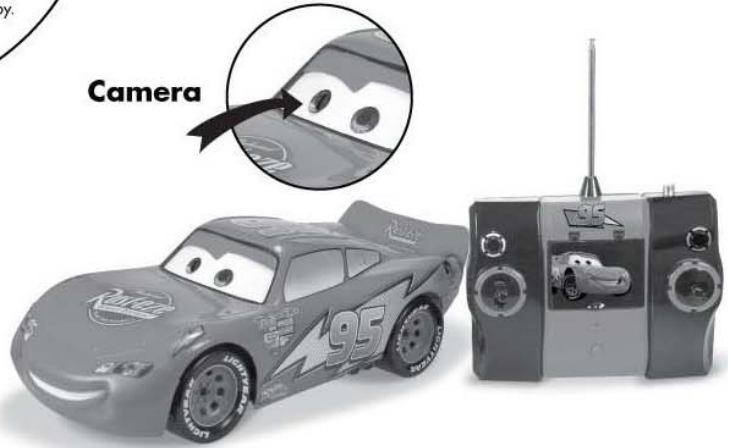 


Live video feed from camera built inside remote control vehicle.
 You see what the camera sees!
 Watch live camera feed on controller screen
 Watch live camera feed on your TV
 Control vehicle forward and reverse, left and right
 Control camera angle up and down.

 
Disney · PIXAR **6+**
Remote Control Video Camera Car
Caméra vidéo télécommandée

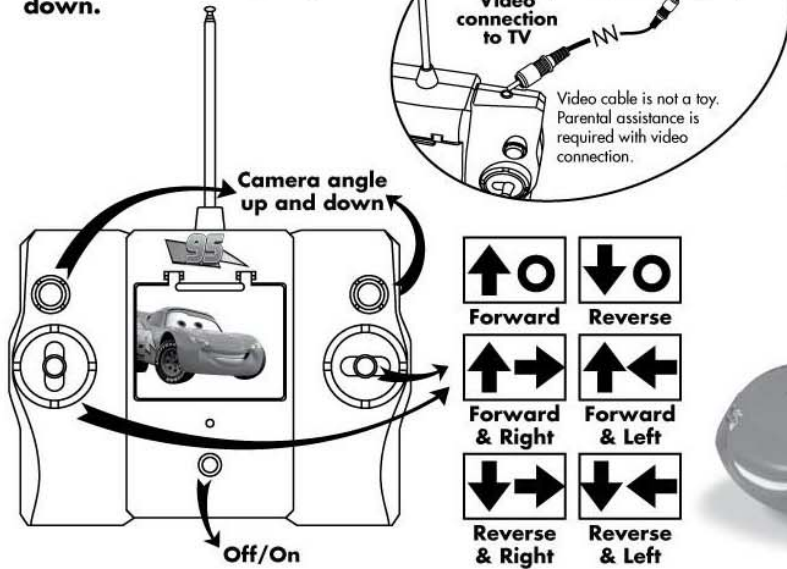


(normally Red for "+" and Black for "-")

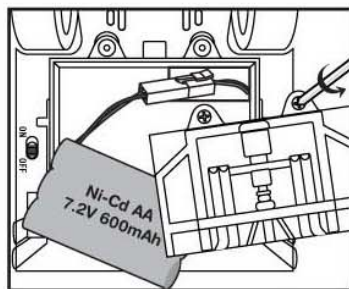

Requires 1 x 7.2V 600mAh, AA Ni-Cd batteries (included)
 Fonctionne avec 7.2V 600mAh piles AA Ni-Cd (fournies)

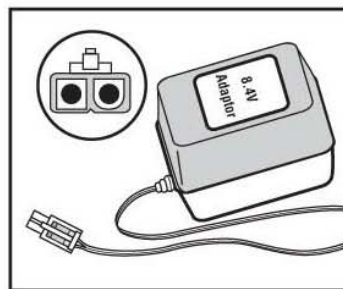

 Charger :
 Input 120V AC ~ 60 Hz 35mA
 Output 8.4V, DC 300mA

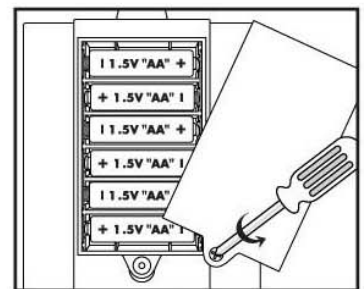

Requires 6 x AA batteries (included)
 Fonctionne avec 6 piles AA (fournies)

CAUTION: ELECTRICALLY OPERATED PRODUCT

NOT RECOMMENDED FOR CHILDREN UNDER 6 YEARS OF AGE.
 AS WITH ALL ELECTRIC PRODUCTS,
 PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND
 USE TO PREVENT ELECTRIC SHOCK.

Remove batteries when not in use or discharged
 Enlever la batterie quand n'en opération ou décharger pas

For best results use on a smooth surface or short pile carpet.
 Pour un meilleur résultat, utiliser sur une surface lisse ou un tapis aigüilleté.

Requires 6 x AA(Included), 1 x rechargeable 7.2V AA 600mAh Ni-Cd/1 x Adaptor(Input:AC 120V 60Hz 35mA, Output:DC 8.4V 300mA)(Included)
 Fonctionne avec 6 piles AA(Fournies), 1 piles rechargeable 7.2V AA 600mAh Ni-Cd/1 piles adaptor(Input:AC 120V 60Hz 35mA, Output:DC 8.4V 300mA)(Fournies)

Please retain this information for future reference.
 Garder l'emballage pour référence ultérieure

Battery charging:

1. NiCd battery pack must be fully charged prior to use.
2. Plug wall pack charger into standard AC 120 Volt wall outlet.
3. Plug the wire connector from the wall pack charger into the wire connector on the battery pack by securely clipping the two pieces together.
4. Charge the battery pack for 4 hours minimum - 6 hours maximum. After charging for 4 hours, the battery pack will feel warm to the touch. This condition is normal for fully charging batteries. (Charging the battery pack for more than 4 hours will not provide longer running time. Four hours is all that is required for a fully charged battery pack.)
5. To disconnect connectors, push down on the connectors clip and gently pull apart.
6. After use, the battery pack will be hot to the touch. Wait at least 20 minutes until the battery pack cools down before recharging. Recharging a warm or a hot battery pack will greatly reduce the number of times the battery pack can be recharged.

Cautions:

1. Note the polarity of the battery pack with the connectors and that the markings on the battery compartment match with the battery before installation.
2. Do not charge a battery pack that is wet, hot or shows signs of leakage or corrosion.
3. Battery pack should be unplugged if unused for several days.
4. Wall pack charger should be unplugged when not in use.
5. Do not dispose of battery pack in fire. Battery pack may explode and cause personal injury.
6. Nickel Cadmium cells - must be disposed of properly.
7. Do not attempt to disassemble the battery pack.
8. Always remove the battery pack from the radio control vehicle before recharging.
9. Do not use wall pack charger for any use other than charging rechargeable 7.2V NiCd battery pack.
10. Hair entanglement may result if child's hair comes in contact with moving parts of toys. Adult supervision is required.

Warning:

The toy must only be used with the recommended transformer;
 The transformer is not a toy;
 Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning.

ATTENTION PARENTS:

The battery charger and battery pack need to be periodically examined for potential hazards, such as damage to the cable or cord, plug, enclosure or other parts. In the event of such damage, the toy must not be used until that damage has been properly repaired.

The charger be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the product should not be proerly repaired.

The battery charger and the battery pack require parent's supervision.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment