 


MEGATEK

Portable CD Player CP27BR

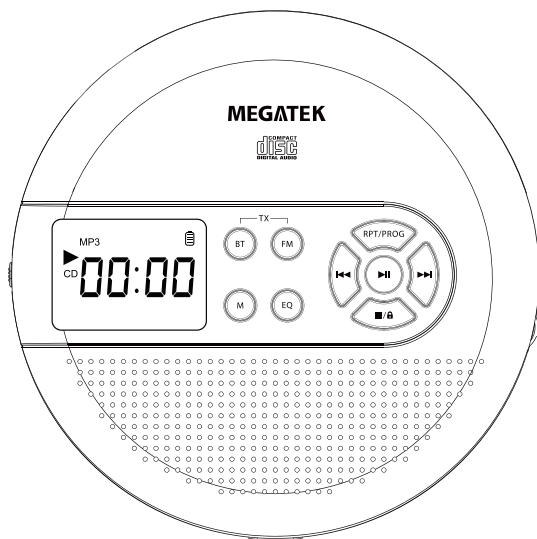

USER'S MANUAL

One (1) Year Replacement for Defective Product.

Questions or Problems? Contact Us:

✉ service@megatekelec.com

 Amazon Buyer-Seller Messaging

Contents

Contents 01

Welcome 02

Safety information 02

Your portable CD player 03

Charge the battery 08

Using your CD Player 08

Troubleshooting 14

Maintaining your CD Player 15

Specifications 16

Legal notices 17

12 months warranty 18

Welcome

Congratulations on your purchase of a high-quality Megatek product. Your MEGATEK CP27BR is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

Safety information

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.



- INVISIBLE LASER RADIATION WHEN OPEN
- DONOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

Lens

Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.

Discs

Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

Placement

Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.

Water

Do not let water splash or drip onto your CD Player.

Power sources

When you are not using the CD player for a long time, disconnect all power sources from the CD player

Your portable CD player

 
Features

- Features CD player, USB player, Bluetooth/FM transmitter, and 3.5 mm headphone jack/line out
- Large LCD display with blue backlight
- Built-in stereo speakers
- Compatible with CD-R, CD-RW and MP3 CDs
- Portable and light weight design
- Battery playtime:
CD player: up to 6 hours
USB player: up to 8 hours


NOTES: Playtime varies with volume, and music contents, etc.

What's in the box


Check and identify the contents of your package:

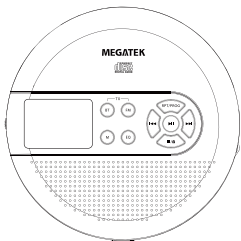


CD Player

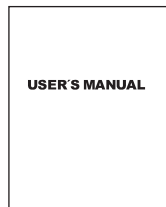 

User's Manual

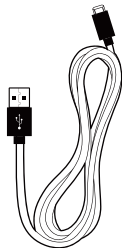 


USB-C Charging Cable

 


Headphones

 Overview of the CD player

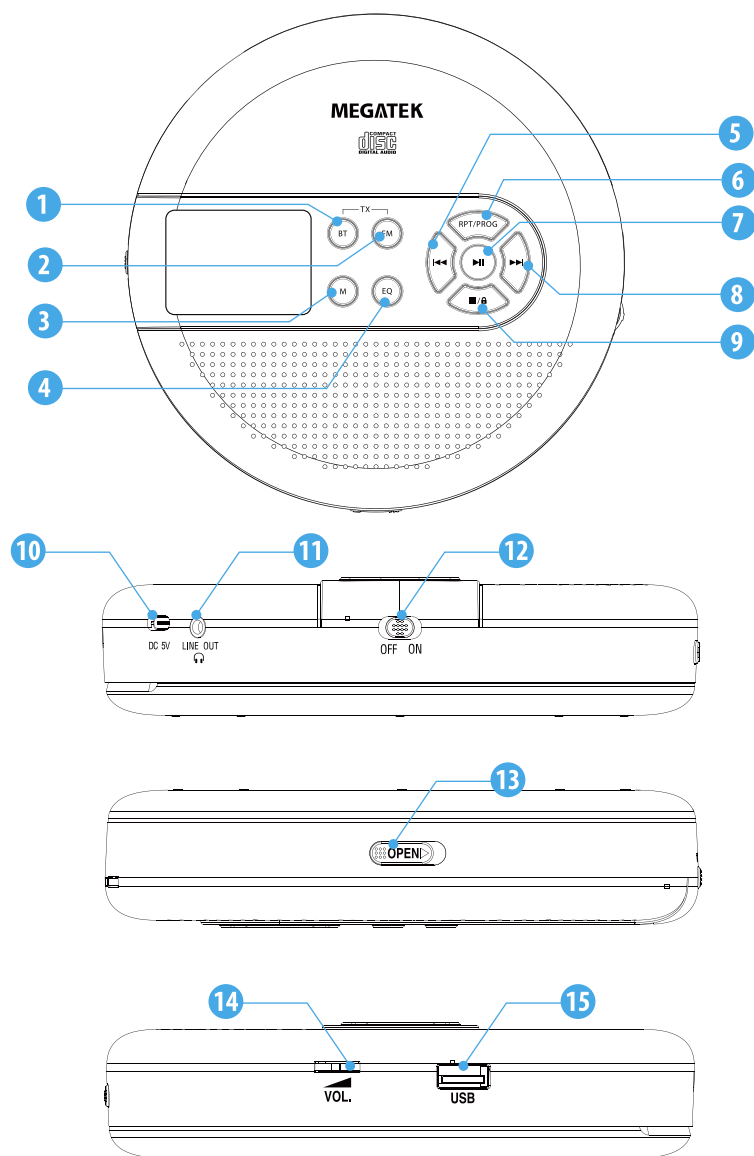

| # | ITEM | DESCRIPTION |
|----|--------------------------------------|--|
| 1 | Bluetooth TX (Transmitter) | Press to turn on/off Bluetooth transmitter. |
| 2 | FM | Press to turn on/off FM |
| 3 | M (Mode) | Press to select playback modes between CD player and USB player. |
| 4 | EQ (Equalizer) | Press to select a specific sound field (equalization). Selections include Flat, Pop, Jazz, Rock, Classic. <i>FL E PDP JAZZ ROC CLA</i> |
| 5 | ⏮ (Previous) | Press to skip to the previous track, or press and hold to search backward. |
| 6 | REP/PROG | <p>Press repeatedly to toggle between different playback options: repeat one, repeat all, repeat all in current folder, random playback, INTRO (introductory) playback, and repeat off.</p> <p>When CD or USB playback is stopped by pressing ■/⏹ button, press this button to program the player to play up to 99 tracks in your favorite order.</p> |
| 7 | ▶/⏸ (Play/Pause) | Press to start, pause or resume play. |
| 8 | ⏭ (Next) | Press to skip to the next track, or press and hold to search forward. |
| 9 | ■/⏹ (Stop/Lock) | <p>Press ■/⏹ once to stop play, the playback will start from where you stopped when you start playing again (Resume Play). If you want to start playback from the first track/file, press ■/⏹ twice to stop play, and then press ⏭.</p> <p>Press and hold to lock the controls to prevent accidental button presses. Press and hold again to unlock the controls.</p> |
| 10 | DC 5V | DC 5V Charging Port. |
| 11 | LINE OUT 🎧 | Headphone/Line out jack. |
| 12 | OFF /ON | Switches on/off CD player. |
| 13 | OPEN | Slide to open the disc compartment lid. |
| 14 | ◀ VOL. | Turn the dial to increase or decrease volume. |
| 15 | USB | Connect a USB flash drive to play audio tracks. |

 Display on the CD player

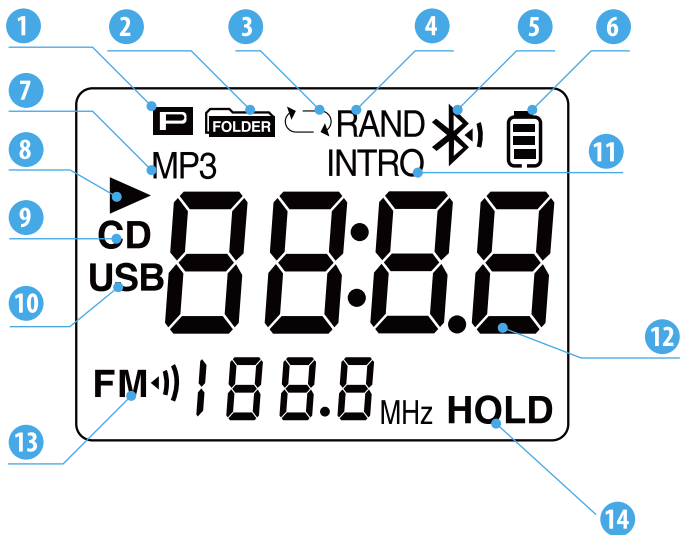


| # | ITEM | DESCRIPTION |
|---|-------------|--|
| 1 | | Programming playback. |
| 2 | | Repeat all tracks in current folder. |
| 3 | | Flashing - Repeat current track. Solid - Repeat all tracks. |
| 4 | RAND | Random playback mode. |
| 5 | | Bluetooth transmitter is turned on. Flashing - Bluetooth pairing mode. Solid - Paired to a Bluetooth receiving device. |
| 6 | | Battery indicator. |
| 7 | MP3 | Playing a MP3 audio track. |
| 8 | | Flashing - Playback is paused. Solid - Playing. |

| | | |
|----|---------------------|--|
| 9 | CD | CD player. |
| 10 | USB | USB player. |
| 11 | INTRO | Introductory playback mode. |
| 12 | 88.88 | Elapsed time, track number, selected playback options, or "nod" when no compatible disc is inserted or detected. |
| 13 | FM 101.1 MHz | FM is turned on. Flashing - FM transmission frequency adjustment status. |
| 14 | HOLD | Control keys are locked. |

Charge the battery

 - 1 Slide the power **ON/OFF** switch to OFF position.
- 2 Connect the supplied USB charging cable to the player and to the USB DC 5V charging port.

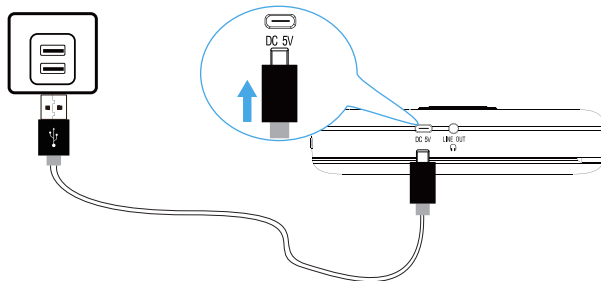

- ↳ The Battery icon on the display switches from low to high level repeatedly. It takes about 4 hours to fully charge the battery.
- ↳ When the battery is fully charged, the Battery icon on the display stop switching and display full charge level.


NOTES:

- If the Battery icon on the display is empty and flashing, it means the battery is running low and needs to be recharged soon.
- Disconnect your CD Player from charger when fully charged. Do not charge your CD Player for extended periods.

Using your CD Player

Basic operations

 Turning on/off the CD player

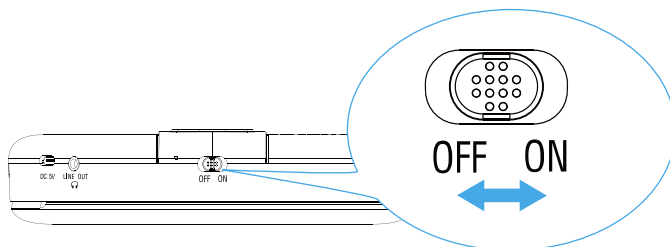

Slide the **OFF/ON** switch to **ON** position to power on the player, slide back to **OFF** position to power off.

NOTES: After the player is turned off, please wait for 2-3 second to turn it on again.

Selecting playback modes

Press **M** button to select different playback modes between CD player and USB player.


TIPS: The player changes to CD player mode whenever the player is powered on.

Adjusting the volume

Turn the  **VOL.** dial to increases or decrease volume.

TIPS: The unit will save volume adjustment, unless the power supply has been cut off. In the case that the power supply has been cut off, it will reset the volume to original factory settings.

Using headphones

You can connect the supplied headphones to the **LINE OUT**  jack for private listening.

NOTES:

- Always turn down the volume before connecting your headphones.
- When using headphones/earphones, the built-in speakers of the player will automatically be muted.
- Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears reduce volume or discontinue use.



 
Selecting sound effect (EQ) presets

Press **EQ** button repeatedly to select your desired sound effect (EQ) preset. Selections include **Flat, Pop, Jazz, Rock, Classic**.

Selecting repeat playback modes

- 1 During CD or USB playback, press **REP/PROG** button to cycle through the playback modes.

The following appears on the display:

-  Flashing —Repeat current track
-  Solid —Repeat all tracks
-  **FOLDER** —Repeat all tracks in current folder (MP3 CDs or USB sticks only)
- **RAND** —Random playback
- **INTRO** —Introductory playback

Tips: When **INTRO** playback mode is selected, the cd player will play only a short portion of each track as an introduction, allowing you to preview the beginning of each song. Once the intro portion of a track is finished, the player moves on to the next track, and the process continues until all tracks have been previewed.

- 2 To cancel repeat mode, press **REP/PROG** until the **INTRO** icon disappears on the display.

Playing CDs

You can play standard and 3" audio CDs, CD-Rs, and CD-RWs.

CAUTION: Do not try to play DVDs or VCDs. You may damage your unit.

- 1 Slide the power **OFF/ON** switch to **ON** position.
- 2 Press **M** button to select **CD** player mode. The display shows "**CD**".
- 3 Slide **OPEN** to open the lid.
- 4 Place the CD on the tray and close the lid.
 - ↳ Play starts automatically. If not, press **▶▶**.
 - To pause, press **▶▶**. Press again to resume play.
 - To stop, press **■/⏏**.
 - To select the next/previous item, press **▶▶** (next) or **◀◀** (previous).
 - To start search within audio, press and hold **▶▶** (next) or **◀◀** (previous).

NOTES:

- This product is designed to play back discs that conform to the Compact Disc (CD) standard.
- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on

the quality of the disc and the condition of the recording device.

- A disc with insufficient storage capacity may not playback properly.
- If a CD is inserted incorrectly, is dirty, or is damaged, or is not present at all, "**nod**" appears on the display.
- To prevent damage to the CD, never open the lid while the CD is rotating and never touch the lens.

Playing USB flash drives

MP3/WMA/WAV files recorded on a USB flash drive can be played with the unit.

- 1 Slide the power **OFF/ON** switch to **ON** position.
- 2 Press **M** button to select **USB** player mode. The display shows "**USB**".
- 3 Connect the USB flash drive to the USB port. Make sure that you insert your USB drive all the way into the USB port.
- 4 ↳ Play starts automatically. If not, press **▶▶**.
 - To pause, press **▶▶**. Press again to resume play.
 - To stop, press **■/🔒**.
 - To select the next/previous item, press **▶▶** (next) or **◀◀** (previous).
 - To start search within audio, press and hold **▶▶** (next) or **◀◀** (previous).

NOTES:

- Not all USB flash drives are supported.
- Supports USB flash drives of a maximum capacity of up to 128GB.
- FAT32 file systems are supported (NTFS not supported).
- Supports MP3/WMA/WAV audio files only.
- USB hubs are not supported.
- Do not connect the unit's USB port to a USB port on your computer.
- The USB flash drives will only fit in one direction.

Programming playback

You can program the player to play up to 99 tracks in your favorite order.

- 1 During CD or USB playback, press **■/🔒** to stop .
- 2 Press the **REP/PROG** Button. "PROG 1 --" will appear on the display and blink.
- 3 Select the first specific track to be programmed by pressing the **▶▶** or **◀◀** buttons repeatedly.
- 4 Press the **REP/PROG** Button to store the selected track into the memory.

- 5 Repeat steps 2 and 3 to select the tracks in your favorite order.
- 6 Press the **▶||** to start program playback. The program indicator "**PROG**" will stop blinking.
- 7 To stop playback, press the **■/🔒**.
- 8 To erase the program, press the **■/🔒** again in stop mode. The program indicator will disappear on the display.

Using Bluetooth transmitter

You can use the Bluetooth transmitter feature to transmit audio wirelessly via Bluetooth to a Bluetooth-enabled receiving device, such as a Bluetooth wireless headphones or speaker.

- 1 During CD or USB playback, press **BT TX** button to turn on Bluetooth transmitter.
"📶" appears and flashes on the display, indicating that Bluetooth transmitter is turned on and in pairing mode.
- 2 Set your Bluetooth headphones or speaker to Bluetooth pairing mode, and make sure they are not connected to any other Bluetooth device.
- 3 Move the Bluetooth device as close as possible to the CD player, they will automatically establish Bluetooth connection.

NOTE: The built-in speakers are automatically muted when Bluetooth connection is established.


- 4 Press **BT TX** button again to turn off Bluetooth transmitter. If no connection is established and no operation is done to the player within 1 minute, the Bluetooth transmitter will automatically be turned off.
"📶" disappears on the display.
The built-in speakers resume playback.




NOTE:

- For the pairing procedure on the Bluetooth headphones or speaker, refer to your headphones or speaker's instruction manual.
- If you are trying to pair an Apple AirPods, reset it before pairing.
- Before pairing, try to turn off the Bluetooth function of other device(s) nearby which you are not intended to connect.
- The Bluetooth transmitter works with Bluetooth receiving devices only, not with transmitting devices such as phones, tablets, laptops, or computers.
- Not all Bluetooth car stereos are supported due to some compatibility issues.

Troubleshooting

CAUTION: Do not try to repair the CD player yourself. Doing so will invalidate your warranty.

| Problem | Solution |
|--|--|
| The CD player will not turn on. | <ul style="list-style-type: none"> • Ensure that both ends of the USB charging cable are properly connected. • Ensure that there is power at the USB DC 5V outlet. • Check if the built-in battery is drained. |
| "HOLD" appears on the display, the CD player does not response when you press a button. | The buttons are locked. Press and hold  to unlock. |
| The CD does not play or "nod" appears in the display when a CD is placed in the CD player. | <ul style="list-style-type: none"> • Make sure that you have put a CD in the CD compartment. • Make sure that the CD is inserted label side up. • Try a different CD. • Make sure that the CD player is not paused. • Make sure that the CD mode is selected. • Make sure that you are using a compatible CD. Your CD player can play standard and 3" audio CDs, CD-Rs, and CD-RWs. • The CD-R/RW is blank. • There is a problem with the quality of the CD-R/RW, recording device, or application software. |
| A CD skips while playing. | <ul style="list-style-type: none"> • Wipe the CD with a cloth to clean it. See Cleaning discs on page 15. • Try a different CD. • Make sure that the CD is not warped, scratched, or damaged. |
| The USB does not play when a USB flash drive is inserted. | <ul style="list-style-type: none"> • Check if the USB connection is loose or faulty. • Check if the USB capacity exceeds 128 GB. • Check if the USB drive is not formatted using the FAT32 file system. • Check if the audio file formats are not MP3, WMA, or WAV. |

 
| | |
|---|--|
| No sound is heard from the built-in speakers. | <ul style="list-style-type: none"> • Increase the volume. • Check if the LINE OUT  jack is connected to headphones or external stereo system. • Check if the Bluetooth or FM transmitter is turned on. • Check if the playback is paused or stopped. |
| When using with a connected stereo system, the sound is distorted or noisy. | Adjust the volume of the CD player and the connected device |
| Playback starts from the point you stopped. (resume function) | The resume function is working. To start play from the first track press  /  button twice during playback. |
| When closing the lid of the CD player, the CD starts to rotate. | The CD player is reading the information on the CD. The player is not malfunctioning. |

Maintaining your CD Player

Care and handling of discs

Handling discs

 Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

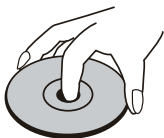

Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning discs

Fingerprints and dust on the disc can cause poor sound quality and distortion.

Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Cleaning the CD lens

If your CD lens gets dirty it can cause poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the literature accompanying the lens cleaner.

Cleaning your CD Player

To prevent fire or shock hazard, disconnect your CD Player from the AC power source when cleaning.

The finish on your CD Player may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

Specifications

| | |
|------------------------------|--|
| Speakers output power | 2 x 1.5W |
| Frequency response | 70Hz – 20KHz |
| Signal-to-noise ratio | >85dB |
| Battery type | Lithium-ion polymer (3.7V 2000mAh) |
| Battery charge power | DC 5V / 1A |
| Battery charge time | 3-4 hours @ 5V / 1A |
| Music playing time | CD 6 hours USB 8 hours (varies by volume level and audio content) |
| Dimensions | 146 x 146 x 33.5 (mm) |
| Weight | 309g |

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

12 months warranty

Thank you for choosing Megatek.

Megatek Electronics warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

Megatek will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period.

Megatek will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

Email: service@megatekelec.com

Amazon Buyer-Seller Messages: Go to Your Orders then find your order in the list, open the order and on the order page click **Get help** button.

One (1) Year Replacement for Defective Product.

Questions or Problems? Contact Us:



service@megatekelec.com



Amazon Buyer-Seller Messaging