



T4 bluetooth speaker

T4 bluetooth speaker

User Manual

---

Please read me before using

ENJOY THE MUSIC

## SAFETY INFORMATION

- \*Please read and keep this Manual, and pay attention to the below warnings.
- \*Please put this speaker in a stable place, to avoid any damage caused by accident dropping.
- \*Please keep this speaker away from any liquid or fire.
- \*Please don't leave this speaker in high temperature, or high moist environment for long time.
- \*Please don't insolate this speaker
- \*The charging voltage is 5V. The speaker's internal chip will be burned out and couldn't work normally if using higher charger

Note: The material is crystal acrylic. It's fragile, pls handle with care.

## PACKING LIST

Pls make sure the purchased item is with the correct Model No.  
If the item model number doesn't match with that of the package, pls  
try to contact the agents .

T4 bluetooth speaker

- ☒ 1 pcs charging cable
- ☒ 1 pcs speaker
- ☒ 1 pcs manual



SPEAKER \*1



 
POWER CABLE \*1



MANUAL \*1

## OPERATION INSTRUCTION

### 1 BUTTONS



Short Press: Pause/Play  
Long press: On/Off  
Double clicks: Turn on TWS pair connection, Turn off TWS pair connection



Short press : previous song  
Long press: volume down  
double clicks: lighting shift ( 6 lightings optional)



Short Press: next song  
Long Press: volume up  
Double clicks: turn off the lighting

### 2 STOT



1 MIC

2 TF SLOT


3 DC SLOT

4 LED INDICATOR



## OPERATION INSTRUCTION

### Turn on/off the speaker

Long Press  for 3 seconds to turn on the speaker, then long press to turn off the speaker.

### How to connect the cell phone by Bluetooth?

1. Turn on the speaker, the indicator light will be on blue and flash slowly
2. Turn on the Bluetooth of mobile phone and search C7, and then match the speaker to the mobile phone. (There is a memory function with the Bluetooth speaker. Turn off the Bluetooth of the previous mobile phone, before connecting it to another mobile phone)


### How to use Micro SD/TF Card?

Insert the Micro SD/TF Card into the TF slot of speaker, there will be a prompt sound, and then play the audio files in the card.

It supports following format file: MP3 WMA WAV


It support maximum 32GB TF card

### True Wireless Stereo ( Pair connection)

1. Turn on two sets of T4 speaker, double clicks the  button of any one speaker of the two.

The clicked speakers will search the other one automatically. There will be a prompt sound, and the indicator light of the both will be on blue after pairing succeeds. The two speakers will turn into left and right channels automatically.

2. Connect the speakers and cell phone via Bluetooth (see above step *How to connect the mobile phone by Bluetooth*). There will be a voice prompt after connection succeeds. Then the two speakers can play music together stereo in the cell phone.

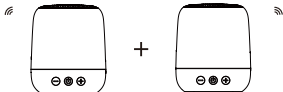

Note: 1. TWS need two speakers both on to work.

2. Speaker hasn't connected to any other device before TWS pairing.

3. In the TWS mode, double click the  button any one of the speakers could turn off the TWS pairing.

4. There is a memory function for the TWS status. It will connect the other paired speaker automatically when it turns on.

5. Turn off any one of the two speakers, the other one will be off synchronously

### **How to charge?**

#### **Important Tips**

Pls don't use the adaptor without CCC certification

The power input voltage is DC 5V, pls charge the speaker with DC 5V adaptor with CCC certification.

The speaker will be damaged if it's charged by an adaptor offering power higher than DC 5V.

1. The Speaker will make a prompt sound and turn off automatically when the battery is low. Insert one end of the cable to the charging slot of speaker, the USB plug to the computer or the mobile charger (5V 1A). The side indicator light on red indicates it's charging, the indicator light off indicates it's fully charged.


2. Charging time and playing time.

Normal Version: 2 hours charging time, about 4 hours play

(maximum volume), about 6~8 hours play (medium volume)

High-end Version: 3 hours charging time, about 5 hours play (maximum volume), about 8~10 hours play (medium volume)

## FAQ

1. It cannot be matched with the devices by Bluetooth: (1) turn off the speaker and mobile phone, and then turn on both, rematch. (2) Too many Bluetooth devices surround, turn off the other Bluetooth devices.
2. Sound too small or distortion too much: (1) may be battery runs out. Please charge it. (2) Turn up the volume of the mobile phone.
3. Sound off and on: please check if the range between the speaker and the device is more than 10 meters. Or check if there are any barrier between the speaker and the device.
4. Speaker got stuck: Long press  for 10 seconds to reset the speaker.
5. In TWS mode, the sub speaker will turn off alone when it runs out of battery. Pls charge it and then play.

### Specification ( Normal Version )

Model number:	<b>T4</b>	Power output:	3W
Bluetooth version:	5.0	Bluetooth range:	≤10 meter
Battery:	3.7V 600mAh	Power input:	DC5V==2A

### Specification ( High-end Version )

Model number:	<b>T4</b>	Power output:	5W
Bluetooth version:	5.0	Bluetooth range:	≤10 meter
Battery:	3.7V 1000mAh	Power input:	DC5V==2A

# WARRANTY CARD

Model No

---

Purchasing Date

---

User Name

---

Telephone No

---

☐ Repair by this card

☐ please keep it



## Warranty Terms:

1. Customer could get a new same item within half month since the purchasing date, if found the purchased item with function problems. The defective item should be returned with undamaged package and without any human damage.
2. Warranty service only could be in effect under that the customer uses this item in correct way.
3. All human damage, self disassemble and self assemble, abnormal usage of this item, are out the cover range of warranty. To door service and free of shipping cost are not available for this item.
4. The warranty service may be not available if this Warranty Card got lost or damaged. Seller has the final explanation right for the warranty terms.

## Warranty Records.

No.	Purchasing Date
Repair Time	Defect
Repair Result	Operator

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.