

MONITOR / TV OSD MENU FUNCTION



SETUP

Controls and select the OSD position, OSD time and OSD language of the display.

OSD POSITION	▶ 3
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
INPUT SOURCE	▶ PC
CAPTION	▶ OFF
V-CHIP	▶
EXIT	

OSD POSITION : Adjusts the position of the OSD window.

OSD TIME : Adjusts the waiting time the OSD fades away.

Can adjust the waiting time up to 60 seconds the OSD fades away if you do not input the OSD button.

LANGUAGE : Adjusts the language of the OSD window.
(ENGLISH, FRANÇAIS, DEUTSCH, ITALIANO, ESPAÑOL)

INPUT SOURCE : Selects the input source according to the display device you connected.

- PC : Selects when connect the VGA cable to the VGA connector of the computer.

- TV : Selects when connected with TV. (Possible to use when TV line is installed)

- VIDEO : Selects when connect the VIDEO cable to the VIDEO jack of the camcorder.

- S-VIDEO : Selects when connect the S-VIDEO cable to the S-VIDEO connector of the camcorder.

CAPTION : You can select four channels each for CAPTION and Text.

V-CHIP : Enters V-CHIP menu(Refer to pages 15).

NOTE

OSD POSITION Function

Procedure SETUP ▶ OSD POSITION ▶ Select

OSD POSITION	▶ 0
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
SOURCE	▶ ANALOG
EXIT	

OSD POSITION	▶ 0
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
SOURCE	▶ ANALOG
EXIT	

OSD POSITION	▶ 0
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
SOURCE	▶ ANALOG
EXIT	

OSD POSITION	▶ 0
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
SOURCE	▶ ANALOG
EXIT	

OSD POSITION	▶ 0
OSD TIME	▶ 20 SEC
LANGUAGE	▶ ENGLISH
SOURCE	▶ ANALOG
EXIT	

TV MENU OSD



► **The OSD menu when connect the TV line.**

The OSD menu window appears with pressing **MENU** button after connecting the TV line.



COLOR



- **SHARPNESS :**
Adjusts the level of display sharpness.(0 ~ 4)
- **COLOR :**
Adjusts the amount of RGB(Red, Green, Blue) color from white color in the display.(0 ~ 100)
- **TINT :**
Adjusts the tint of the display color.(0 ~ 100)



CHANNEL



AIR/CATV

- AIR : Selects when watching the air TV.
- CATV : Selects when watching the CATV.

AUTO CHANNEL : Automatically memorize all the active TV or CABLE channels.

- START : Starts detecting the active channels.
- STOP : Stops detecting the active channels.

MENUAL CHANNEL : Manually memorize or erase the TV or CABLE channel.

FINE TUNE : Fine tuning. Adjust when the display color is blur or unfocused.(-50 ~ +50)

TV MENU OSD

NOTE

► The OSD menu when connect S-VIDEO connector



► The OSD menu when connect VIDEO jack



For more details, please refer to 'Selecting and Adjusting the OSD (On Screen Display) Combined Monitor / TV OSD Menu Function' in this chapter.

The COLOR submenu of the VIDEO and S-VIDEO OSD MENU is same as the COLOR submenu of the TV

V-CHIP OSD MENU

◎MAIN MENU

OSD POSITION	▶	3
OSD TIME	▶	20 SEC
LANGUAGE	▶	ENGLISH
INPUT SOURCE	▶	TV
CAPTION	▶	OFF
V-CHIP	▶	
EXIT		


NOTE

The V-CHIP initial
PIN is set at '0000.'

▶CAPTION

OFF <-> CC1 <-> CC2
<-> CC3 <-> CC4 <->
TEXT1 <-> TEXT2
<-> TEXT3 <->
TEXT4 <-> OFF

 ◎V-CHIP Selection

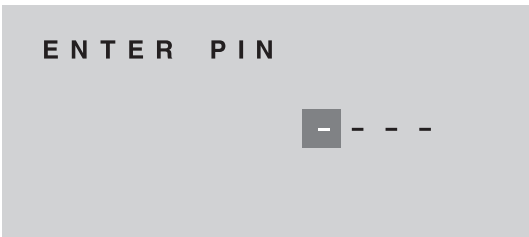

◎Enter ENTER PIN

V - CHIP		
V - CHIP LOCK	▶	YES
TV GUIDELINES	▶	
MPAA RATING	▶	
CHANGE PIN	▶	
EXIT		

If you select "Yes" in the V-CHIP LOCK,
the LOCK function of the screen
and voice is operated.

V - CHIP		
V - CHIP LOCK	▶	NO
TV GUIDELINES	▶	
MPAA RATING	▶	
CHANGE PIN	▶	
EXIT		

If you select "No" in the V-CHIP LOCK,
the LOCK function of the screen and
voice is removed.

V-CHIP OSD MENU

◎TV GUIDELINES

T V - Y	-	F V	V	S	L	D
T V - Y 7	U	U				
T V - G	U					
T V - P G	U		U	U	U	
T V - 1 4	U		U	U	U	U
T V - M A	U		U	U	U	U
E X I T						

◎MPAA RATING

G	U N B L O C K
P G	U N B L O C K
P G - 1 3	U N B L O C K
R	U N B L O C K
N C - 1 7	U N B L O C K
X	U N B L O C K
N R	U N B L O C K
E X I T	

NOTE

- U : UNBLOCK - B : BLOCK

NOTE

-> TV GUIDELINES

TV-Y (ALL Children)
TV-Y7(Direct to Older Children)
TV-G(General Audience)
TV-PG(Parental Guidance Suggested)
TV-14(Parents Strongly Cautioned)
TV-MA(Mature Audience Only)

-> CONTENT


FV(Fantasy Violence)
V(Violence)
S(Sexual Situation)
L(Adult Language)
D(Sexually Suggestive Dialog)

-> MPAA RATING


G	GENERAL AUDIENCES All ages admitted
PG	PARENTAL GUIDANCE SUGGESTED Some material may not be suitable for children
PG-13	PARENTAL STRONGLY CAUTIONED Some material may be inappropriate for children under 13
R	RESTRICTED Under 17 requires accompanying parent or adult guardian
NC-17	NO ONE 17 AND UNDER ADMITTED
X	X is older rating that is unified with NC-17 but may be encoded in the data of Older movies

V-CHIP OSD MENU

 ◎ CHANNEL PIN Selection

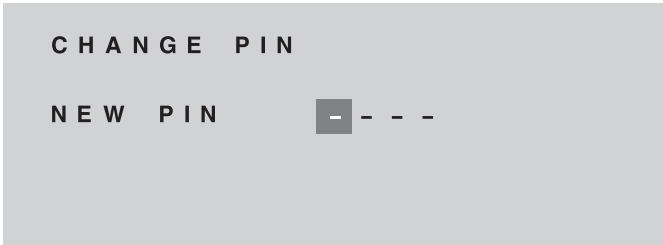

 ► To change the PIN number, select CHANGE PIN and enter NEW PIN

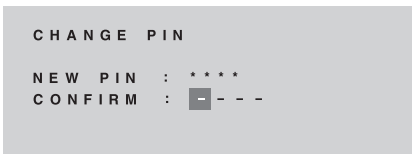


NOTE

V-CHIP Initialize function

Procedure

 1. Press the POWER button. (POWER OFF)
2. First Press the MENU button and POWER button press for 2 seconds.
3. Press the POWER button. (POWER ON)
 - You will see FOCTORY OPTION window

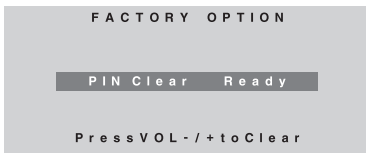

4. Press the VOL ► button to modify the current value.

