ganunanui un u

1:64 SCALE R/C RACER 0330 WSLY Manua


FIGURE 4

START

Press the release buttons on each side of the base and pull up on the clear cover to remove. (see Fig. 1) Side the car forward to remove from pedestal, tree Fig. 2). Side the antenna forward to remove from antenna holder, (see Fig. 3)

Press the charger release button to eject the charger from the base. (see Fig. 3) Unacrew and remove the battery cover located on the charger, (see Fig. 4) Insert two "AA" (1.5V) alkaline batteries into the battery compartment as indicated.

 Replace the battery cover and tighten screw securely,



Make sure the charger is completely inserted into the controller. Make sure the batteries are inserted properly into the charger. Replace old batteries with new alkaline batteries.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If t his equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Recrient or relocate the receiving antenna

Increase the separation between the equipment and receiver

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected ·Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Changes or modifications to this unit not expressly approved by the part responsible for compliance could wid the user's authority to operate the equipment.

SAFETY

Do not operate during thunderstorms.

Avoid water, sand, and snow when operating your racer. In addition, do not submerge your racer or controller in water.

Always select a safe place to play. Never drive your racer on populated streets.
Keep fingers, hair, and loose clothing away from the tires, gears, and motor white the racer is running.
This product contains small parts- not suitable for children under 3 years of age.

BATTERY PRECAUTIONS

Batteries should be inserted with the correct polarity.

Do not short circuit battery contacts. Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

When not in use for an extended time, remove batteries to prevent possible leakage.

Exhausted batteries should be removed from the charger.

Do not dispose batteries in a fire - batteries may teak or explode.

Only batteries of the same or equivalent type as recommended are to be used.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are only to be charged under adult supervision.

Please keep this instruction sheet for future reference as it contains important information.

AN UP INTERNATIONAL INC. CONTROL TH 37812 125-586-6300

limits and printed in China

