 
 


## SET-UP

 
1. Remove the battery cover on the bottom of the transmitter and connect the 9V battery to the wire plug. Insert battery into compartment and replace the battery cover.

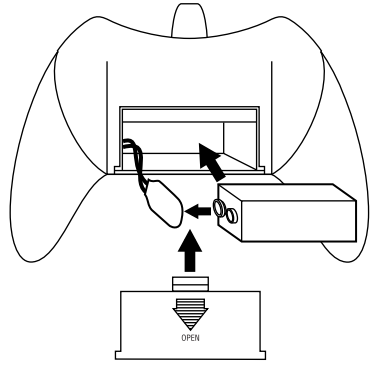

2. Remove the battery cover on the bottom of the car. Install the battery pack by connecting the wire plug from the car to the wire plug on the battery pack. Insert the battery pack into the bottom of the car and replace the battery cover.
3. Move the power switch on the bottom of the car to the ON position

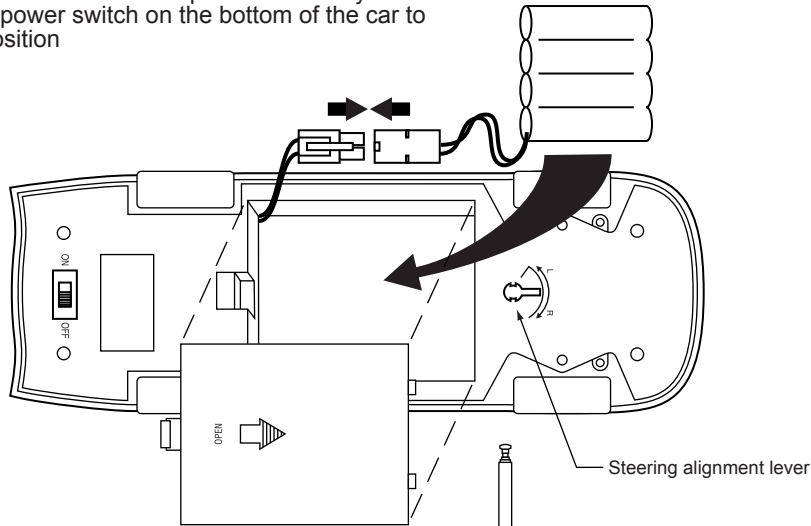


4. Insert the antenna into the top of the transmitter and screw in tightly.
5. Move the power switch on the transmitter to the ON position.

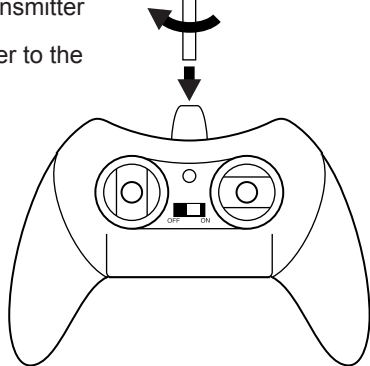

## RACE

1. Place car on smooth, flat surface and extend antenna fully.
2. To move car forward and backward in a straight line, move the left lever up and down.
3. To turn left or right while moving forward, move the right lever side to side while holding the left lever up.
4. To turn left or right while moving backward, move the right lever side to side while holding the left lever down.

 NOTE: For maximum performance, hold the transmitter upright so the antenna points up (do not point the antenna at the car- this will reduce the signal range).

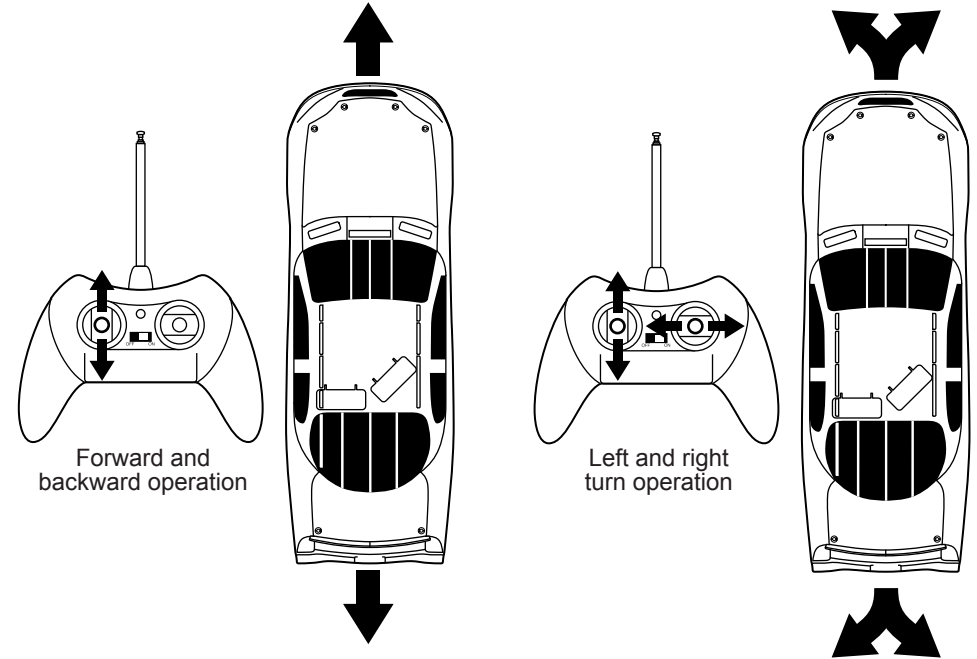

5. Adjust the steering alignment lever located on the bottom of the car if the car does not run straight when moving forward (refer to drawing on opposite page for location of steering alignment lever).

## TROUBLESHOOTING

PROBLEM	PROBABLE SOLUTIONS
Car does not move or runs slowly	<ul style="list-style-type: none"> <li>•Make sure power switch on vehicle and transmitter are in the ON position</li> <li>•Make sure the batteries in the vehicle and transmitter are installed properly</li> <li>•Recharge vehicle's NiCd battery pack or replace if necessary</li> <li>•Replace 9V battery in transmitter with fresh alkaline battery</li> </ul>
Car moves erratically or transmitter range is short	<ul style="list-style-type: none"> <li>•There is radio interference in the area- change locations</li> <li>•There is another R/C vehicle operating on the same frequency near by- move away from any other vehicle operating on the same frequency</li> <li>•Make sure antenna in transmitter is screwed in tight and fully extended</li> <li>•Make sure transmitter battery connections are in good condition and replace battery</li> </ul>
Car does not work after going through water or snow	<ul style="list-style-type: none"> <li>•Allow car to dry thoroughly overnight</li> <li>•Avoid driving in water or snow</li> </ul>