

MEISIDA THUNDER EAGLE BRAND STUNT CAR SERIES

Mini Rebounder Stunt Car

MSD0388



Operation Manual

(Please read this manual carefully before operation)



For Age Group 6+

Warnings:

- Improper use of battery may lead to dangers such as heat, breakage or leakage.
- Leakage from the battery may hurt skin, cleanse the skin contaminated.
- Do not drop the battery into water or fire or even dissolve the battery.
- Keep off fire, heat and wet places for operation, charge or storage.
- Switch off upon the end of play and take out the batteries of the transmitter.



Cautions:

- The age under 6 are forbidden to play or dismantle the toy.
- Don't distort the antenna or the twist may injure people. Shouldn't the antenna distorted, Please be sure to change it due to it's dangerous.
- Don't play the car on roads to avoid the accident., Don't operate the car on soil or fine sand. Don't stop the wheels by force while it is in motion.

Loading & Unloading of the battery for the transmitter(See Illustration)

1. Unscrew the battery cover by a screwdriver, open the battery cover. Install 4 1.5V "AA" batteries after checking the positive and negative poles, close the battery cover and tighten the screw.
2. Suggest use the brand high quality alkaline batteries.



Charging The Car


1. Push the battery cover of the transmitter open as per the directed arrow., pull out the charge plug.
2. Insert the charge plug into the charge jack on the car body for charge. The indicator light on the transmitter turns green during charge. After about 2 minutes, The green indicator light turns off after fully charged. Pull off the charge plug.



Cautions: Switch "OFF" the car during charge.



Power Switch

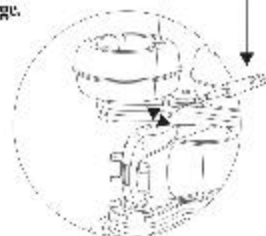


Charge Jack


Common Problems Solution

Conditions of the car	Reasons	Ways for inspection & adjustment
Stop Working	No battery in the remote controller Incorrect installation of the battery of the remote controller Low battery of the remote controller	Reinstalling the battery Reinstalling the battery Change for new battery
Out Of Control	Low battery of the car Low battery of the remote controller Radio Interference Operation of radio control car at the same frequency nearby	Recharging Changing for new battery Changing for new place Changing for new place

The car actions illustrations for each button on the transmitter

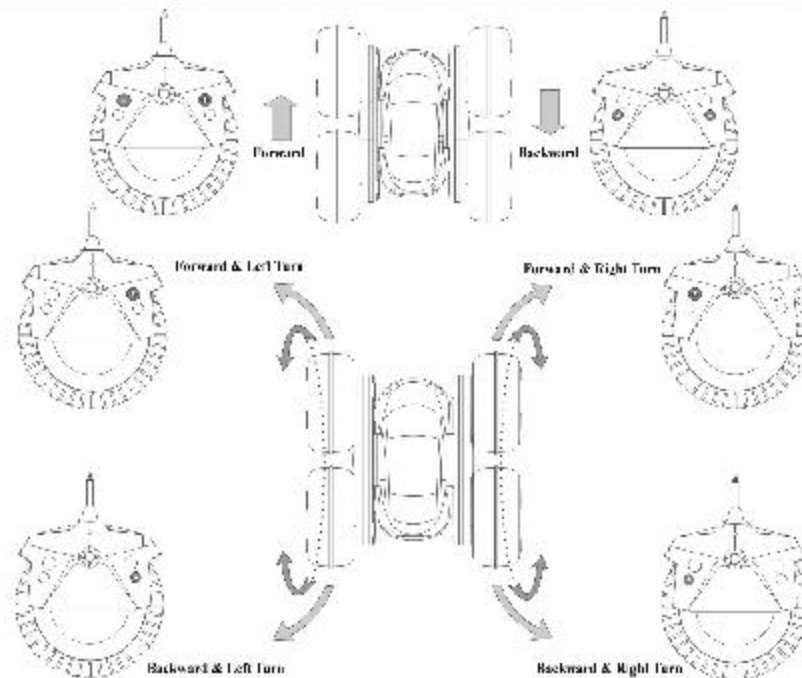

Stunt actions buttons on the transmitter

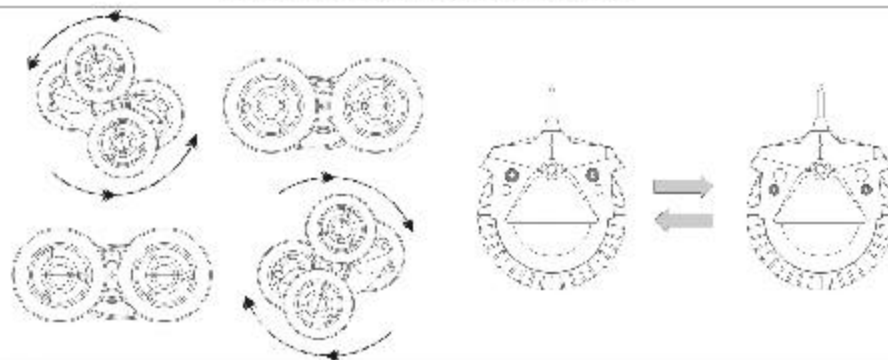

Operation Method: While the car is running forward or backward speedily, Press one reverse button on the transmitter. The single side arm of the car will flip over, Press both reverse buttons together, The entire car will flip over.

1. This manual is the property of MEISIDA. It is not to be reproduced without the written permission of MEISIDA.
2. MEISIDA is not responsible for any damage or loss of property caused by the use of this product.
3. MEISIDA is not responsible for any damage or loss of property caused by the use of this product.
4. MEISIDA is not responsible for any damage or loss of property caused by the use of this product.
5. MEISIDA is not responsible for any damage or loss of property caused by the use of this product.

Tel: No.906278088 P.O. : 021011 Cante: 0083
Email: meisidatoy@meisida.com meisida@public.com.hk
CCCing Standards: GB6675-86, GB2296.5-1995