 
 


Loading & unloading of the battery for remote controller:

1. Push the battery cover on the back of the remote controller in the direction of " OPEN " and remove the cover.(Keep button in " OFF")
2. See the following illustration. Inst all 9V laminated battery after checking the positive and negative poles and cover the battery case.
3. Push the button in " ON " .If lighting it can work. Otherwise it need re-install the battery.
4. The duration for continuous operation of the remote controller is 8 hours.

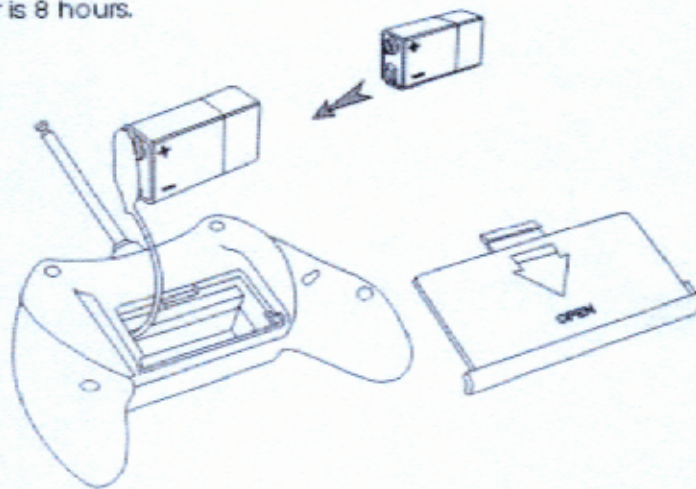


Loading & unloading the battery pack of the toy car:

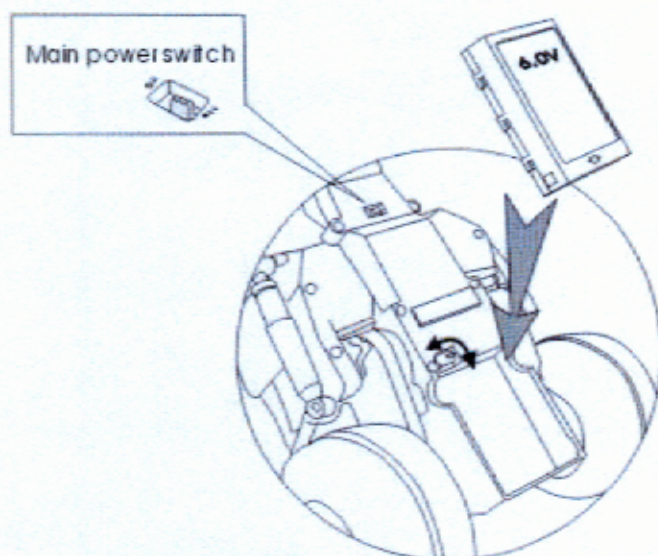


1. Push the button of the car in " OFF "
2. As the following illustration, put the 6.0v battery pack which is full charged into the battery case of the toy car. Cover the battery case and fasten the lock to fix the battery.
3. If need re-charge it push the button of the car in " OFF ".Unlock the battery cover and take out the battery.

Operation for remote controller:

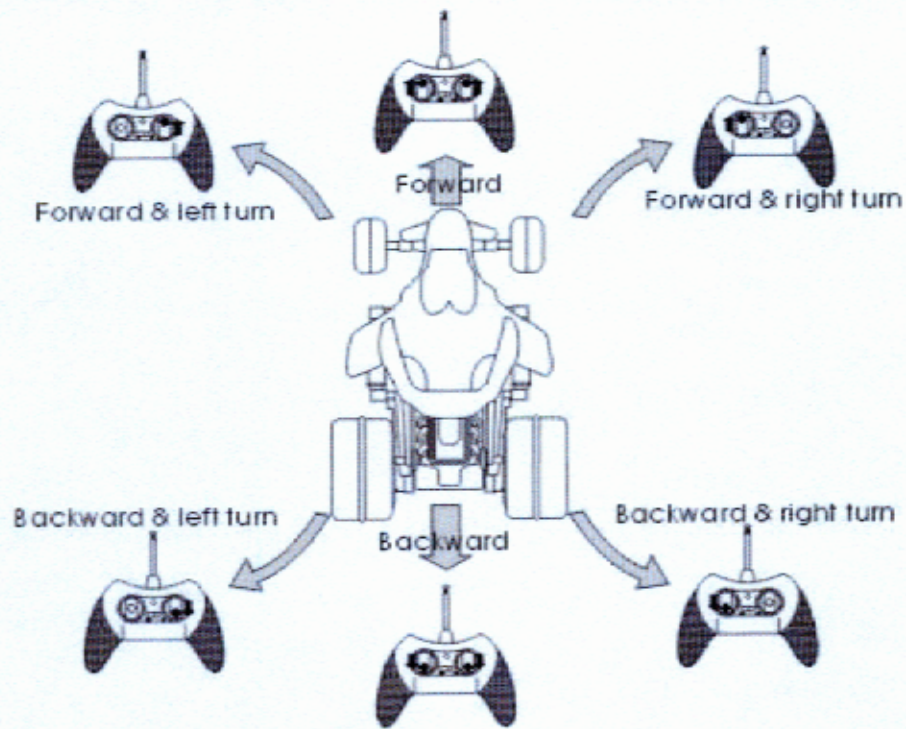

Operation for remote controller:

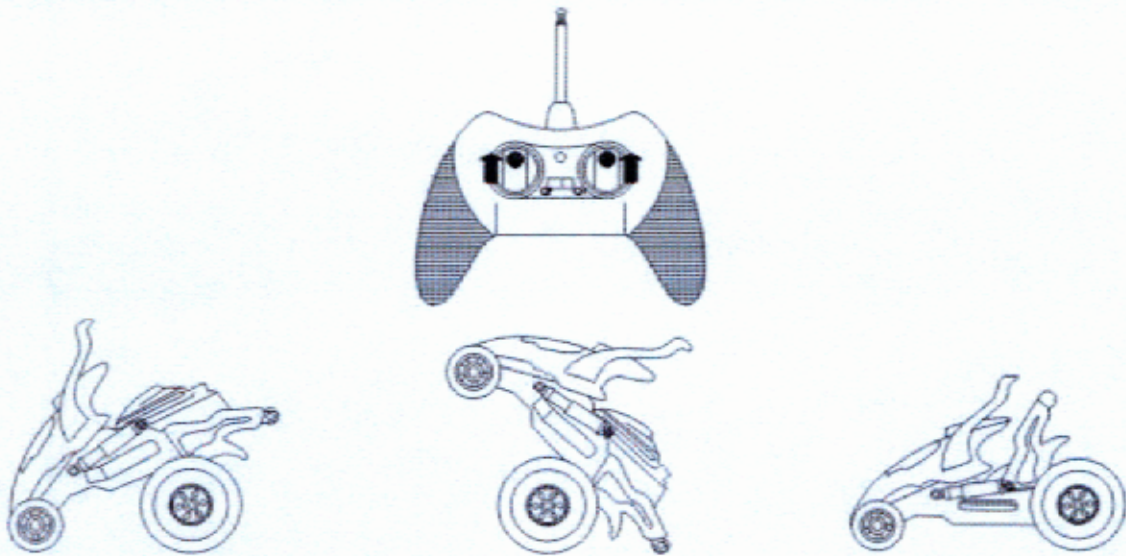

Skills of operation:

The front of car body will stand up highly if suddenly forward when keeping in backward position; While rear wheel and small wheel of supporting in empennage landed and forward.

Analysis of Breakdowns

Before sending out for repair, readjust the car because most of the breakdowns have been caused by low battery.

Conditions of the Car	Possible Reasons	Ways for Inspection & Adjustment	Relevant Pages
Stop Working or slowly working	1. No battery in the remote controller or the car	Reloading the battery	5, 6
	2. Incorrect installation of the battery of remote controller	Reinstalling the battery	5
	3. Low battery of the remote controller	Changing for new battery	5
	4. Low battery of the car	Recharging	6
Out of Control	5. Low battery of the remote controller	Changing for new battery	5
	6. Hindered by the electric wave	Changing for new place or wait for a few seconds	
	7. Interference by same frequency car used nearby	Changing for new place or wait for a few seconds	
Note: Except the reasons mentioned above, please send out for repair.			

Maintenance:

1. During its playing the toy should be avoid any man-made destroy of hitting, pressing, pricking, dropping etc.
2. Out of using the battery should be take out. The toy should be place in dry or toy cabinet after wiping.