

GIANT WHEELS

FORAGE GROUP 8+

MSD3009 Operation Manual

(Please read this manual carefully before operation)

Bentian Light Industry (Xiamen) Co., Ltd.

Add: No.99 Huizuo Road, Haicang Zone, Xiamen, Fujian, China

Tel: 86-592-6807700 Fax: 86-592-6059075 Zip Code: 361026

Website: http://www.xmbentian.com

Executing standards:

Mainland: GB6675, GB19865

European: CE, EN71, EN62115, EN300 220, EN301 489, PHTHALATE, ROHS

USA: ASTM, FCC



⚠ WARNING!

Caution in Batteries Usage:

- ▲ The supply terminals are not to be short-circuited.
- ▲ Crust-broken batteries or leaking-out batteries are not to be used.
- ▲ Do not drop the battery into water or fire or even dissolve the battery.
- ▲ Make sure to inspect the wire, pin, crust and other components termly, in case any broken, stop using until repaired well.
- ▲ The charger and battery are not toys.
- ▲ Rechargeable batteries are only to be charged under adult supervision.
- ▲ Only batteries of the same or equivalent type as recommended are to be used.
- ▲ Pull the charger off the socket after finish charging. Forbid to leave the charger on the socket for a long time.
- ▲ Exhausted batteries are to be removed from the toy.
- ▲ Do not use any liquid to clean the toy and its accessories.
- ▲ Non-rechargeable batteries are not to be recharged.
- ▲ Rechargeable batteries are to be removed from the toy before charged.
- ▲ Different types of batteries or new and used batteries are not to be mixed.
- ▲ Batteries are to be inserted with the correct polarity.

 
Caution in Operation:

- ▲ Do not play outdoors when thundering.
- ▲ Do not run the toy car on rainy day or wet surface, this shall lead to breakdown of the car.
- ▲ Do not play the toy car near the broadcasting station or television station or together with other same frequency car so as to avoid being interfered.
- ▲ The toy may has functional sharp-edges, small detachable parts which may cause potential danger to children, please operate the toy under adult supervision.
- ▲ Do not plug the antenna or other exposed wire into the socket.
- ▲ The toy is not intended for children under 3 years old.
- ▲ Toy must only be used with the recommended charger.



Material used: Plastic, Hardware, Electronic Components

Methods of Charging the Battery

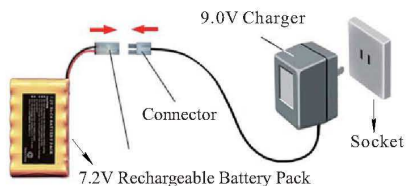


See illustration. Connect the charger and battery then plug into the socket. Charge duration is 4 hours. No charging is allowed after this. (First charge duration must be about 8 hours.)

⚠ Caution:

1. Enhance attention when charging, keep the battery away from the flammable materials.
2. In the course of charge, it is normal that temperatures of the charger and battery will be on the rise. But in case strange odor, smoking, noises occur in the course of charging, pull the charger off the socket immediately, stop using until repaired well.

 
Loading & Unloading of the Battery of the Car:

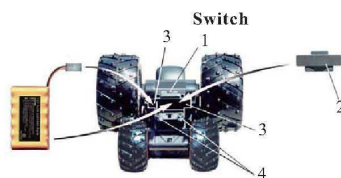

1. Turn to the vehicle bottom, turn the switch "OFF"
2. Push away the two lock buttons, take away the battery cover.
3. Plug the fully charged 7.2V battery into the vehicle connector. Put the battery inside the battery groove.
4. Close the battery cover and push back the lock buttons.
5. Turn the switch "ON" .

⚠ Caution:

 When the car switch is turned "ON", don't touch the wheels or insert the fingers into the gap between the wheels and vehicle to avoid accidentally injury, the children should be paid more attention.

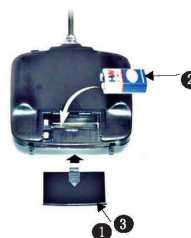


Loading & Unloading of the Battery of Controller

1. Turn "OFF" the switch. Push down the battery cover to open the battery box.
2. Use 9V laminated carbonic or alkaline battery. Install the 9V battery after checking the positive and negative polarity.
3. Push back the battery cover.

⚠ Caution:

Turn "ON" the switch and the indicated light on, that means the battery is installed correctly. Otherwise reinstall the battery.

 Operation for remote controller & Function

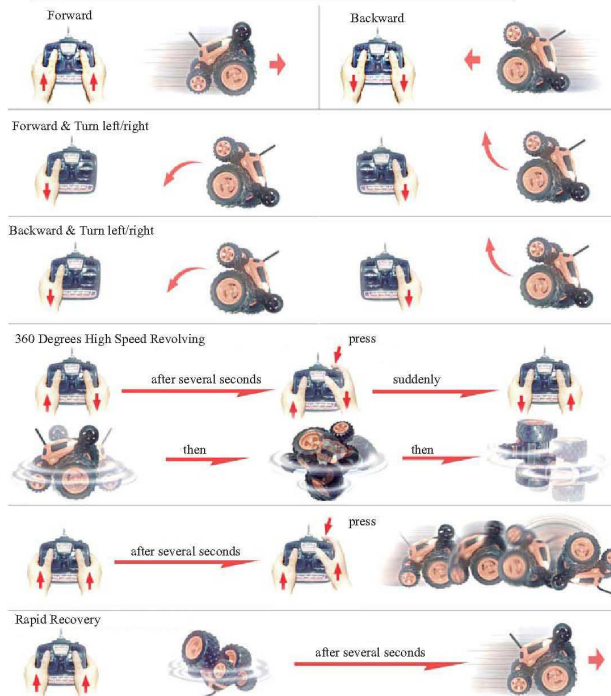

Analysis of Breakdowns:

Readjust the toy car before sending for repair, because the breakdown is largely caused by low battery.

Conditions of the car	Possible Reasons	Ways of Inspection & Adjustment
Stop Working or Work Slowly	No battery in the remote controller or the car	Reload the battery
	Incorrect installation of the battery of the remote controller or the car	Reinstall the battery
	Low battery of the remote controller	Change for new battery
Out of Control	Low battery of the car	Recharge the battery
	Low battery of the remote controller	Change for new battery
	Interfered by electric wave	Change for new place
	Same frequency car operated at the same time nearby	Change for new place

Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.