
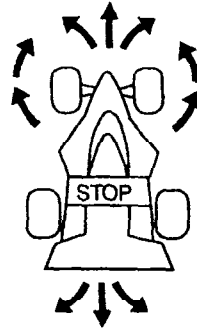


INSTRUCTION MANUALS

1. OUR PRODUCT, ITEM NO.MSD9810 THUNDER EAGLE MULTI - FUNCTIONED RADIO CONTROL RACE CAR , CONTAINS“ CAR BODY ”,“ TRANSMITTER ”,“ CHARGER ”, AND“ 6.0V PREMIUM BATTERY PACK ”.
2. PUT A 9.0V ALKALINE BATTERY INTO THE TRAMSMITTERAND A 6.0V PREMIUM BATTERY PACK INTO THE CAR BODY (MAKE SURE THE BATTERY PACK IS FULLY CHARGED) .
3. PULL OUT THE ANTENNA,AND TURN THE POWER SWITCH,THEN YOU CAN USE THE CONTROLLERS TO MOVE THE CAR.
4. SINGLE MOVEMENT: IF YOU PRESS THE LEFT SWITCH OF THE CONTROLLER TO “ GO ”, THE CAR GOES FORWARD ; AND TO “ BACK ”, THE CAR MOVES IN REVERSE. IF YOU PRESS THE SWITCH AT THE RIGHT TO “ STEERING ”AND MOVE IT TO TO THE LEFT OR TO THE RIGHT,THE CAR TURNS LEFT OR RIGHT.
5. ADVANCED MOVEMENT:
 - A. IF YOU PRESS THE LEFT SWITCH TO “ GO ”AN, AT THE SAME TIME, THE RIGHT SWITCH TO “ ROLL ” , THE CAR GOES FORWARD, ACCELERATING,ROLLING.OR THRNING LEFT OR RIGHT.
 - B. IF YOU PRESS THE LEFT SWITCH TO “ BACK ”, AND THE RIGHT SWITCH TO “ ROLL ” THE CAR REVERSES, ACCELERATING,ROLLING ,OR TURNING LEFT OR RIGHT.
6. THE CHARGER CAN BE USED FOR MORE THAN 20 MINUTES AFTER 4 OR 6 HOURS CHARGING. TO TAKE THE BATTERY OUT, PRESS THE RED BUTTON.

ATTENTION.

1. THE CAR CAN BE DISMANTLED.MAKE SURE THE CHILDREN DO NOT PUT THE PARTS IN THEIR MOUTHS.
2. FOR PROPER FUNCTIONING AND LONGER SERVICE LIFE OF THE CAR, YOU SHOULD USE THE BATTERY PACK PRODUCED ONLY BY OUR COMPANY.
3. CHARGE THE BATTERY TILL IT IS COLL, TAKE THE BATTERIIES OUT WHEN IT IS NOT IN USE .
4. IF THE BATTERY PACK RUSTS, DO NOT OPEN OR CHARGE IT.
5. DO NOT PLACE THE BATTERY NEAR FIRE OR HEAT.
6. KEEP THE PLASTIC PARTS BAGS AWAY FROM CHILDREN.
7. CAST THE PACKING IN THE DUSTBIN WHEN YOU UNDO IT.
8. THE BATTERY PACK INCLUDED SHOULD BE CHARGED BEFORE USE.
9. CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

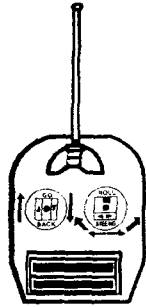

NINE CONTROL FUNCTIONS

