

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Safety Precaution

Always read and follow these basic safety precautions carefully when handling any piece of electronic component.

 
1. Keep this User Manual for future reference.
2. Keep this equipment away from humidity.
3. Lay this equipment on a reliable flat surface before setting it up.
4. The openings on the enclosure are for air convection hence protects the equipment from overheating.
5. All cautions and warnings on the equipment should be noted.
6. Never pour any liquid into the opening that could damage or cause electrical shock.
7. If any of the following situations arises, get the equipment checked by a service personnel:
 - ◆ Liquid has penetrated into the equipment
 - ◆ The equipment has been exposed to moisture
 - ◆ The equipment has not work well or you can not get it work according to User Manual
 - ◆ The equipment has dropped and damaged
 - ◆ If the equipment has obvious sign of breakage

Thank you for your purchase MS-5607. This device combines multiple functions of GPS, Hands-Free, photo viewer and music playback.

DestinAstor® 7 is embedded as Global Positioning System in MS-5607. Entire device is of user friendly interface, just one tap leads you to more information needed. Instructions for installing and configuring this product can be found in this manual. Before you begin to install and use this product, please read this manual carefully for fully exploiting the functions of this product.

For photos stored in SD card, no need to search for another storage device, just insert into MS-5607 for immediate photo sharing. Sharing moments take no time to wait.

Overview

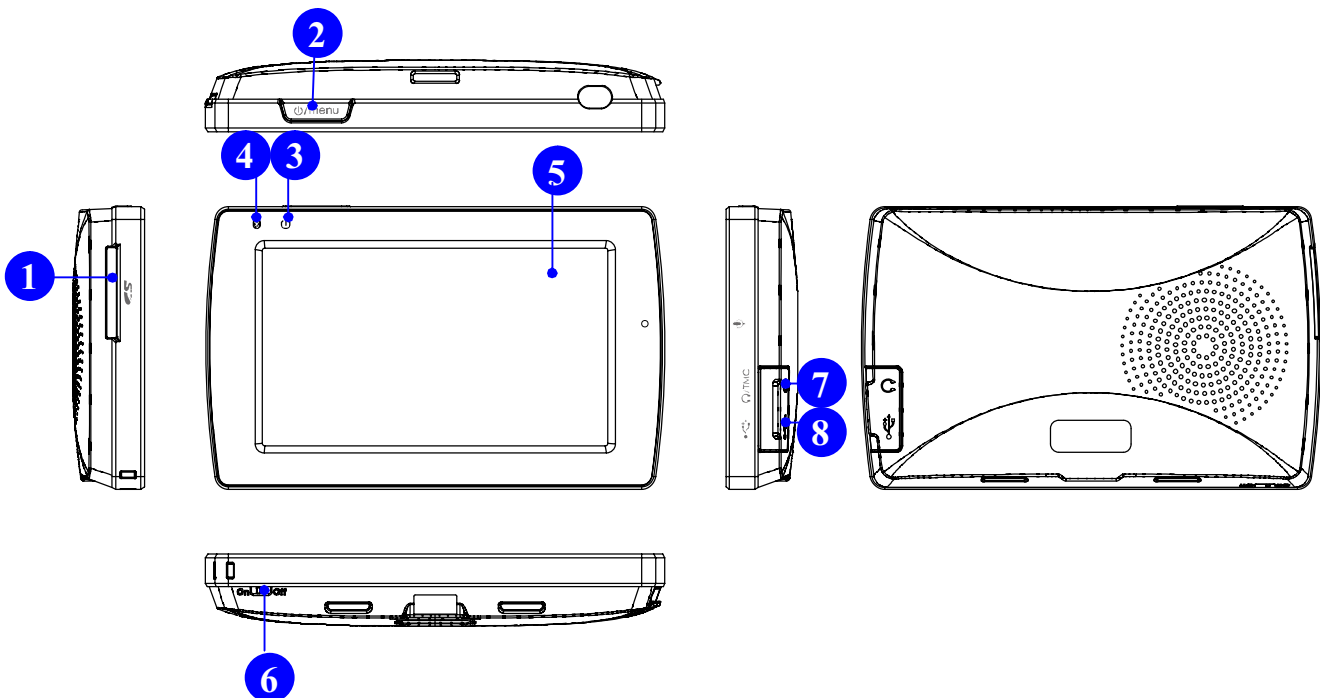

- | | |
|--------------------------|---|
| 1. SD Card slot | Insert SD memory card. |
| 2. Power/Menu | Press 3 seconds to Suspend/Resume and 1 second to Menu mode |
| 3. Power LED | Indicate power status. |
| 4. Bluetooth LED | Indicate Bluetooth status |
| 5. Display Window | Read status and information at this window. |
| 6. Battery On/Off | Power On/Off. |
| 7. Audio out/TMC | Insert Earphone/TMC Antenna here. |
| 8. Mini USB port | Connect to AC power adapter for charging. |

Below is the main menu one user powered on MS-5607. Four categories are available here to you to take full use of this device.



● Chapter 1 GPS(Global Positioning System)

 
✚ 1.1 How to locate destination

Following is suggested demonstration for user locates in Rue Monge in Paris and tries to find a route to Musee du Louvre without knowing the exact address. In this case, we will search by Point of Interests.

Once touch on the **GPS** icon, DestinAto[®] 7 shows. Arrows indicates activating status.



A warning message appears, user has to tap on **OK** to proceed.

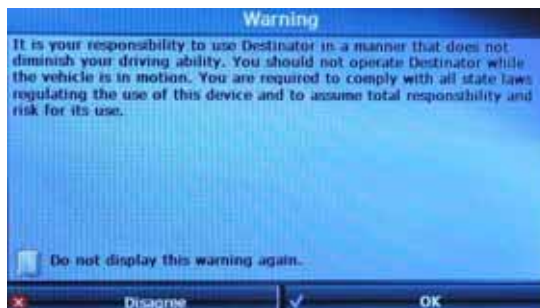

Destinator main menu in the right. Tap on **Go To**.



Since assuming not knowing the exact address of Museum of Louvre. Select **Points of Interest**.



Select **Browse** to see available Points of Interest.



There are six general categories, tap **More** for more options.



Select **Museum** category, and tap **OK**.



Search downwards to locate **Musee Du Louvre**. Select **OK** to proceed.



As Map shows Musee Du Louvre location, tap **Go**.




Map in the right shows route from Rue Monge to Musee Du Louvre as well as more museums in the neighborhood.



There you go, allow the GPS lead you to destination.

1.2 Route

To know route details, tap  icon on previous picture to back to Main Menu, and select **Route**.

 


1.2.1 Driving Directions

Driving Directions to know route Turn-by-Turn.



Picture indicates which street to turn and to turn in which direction.

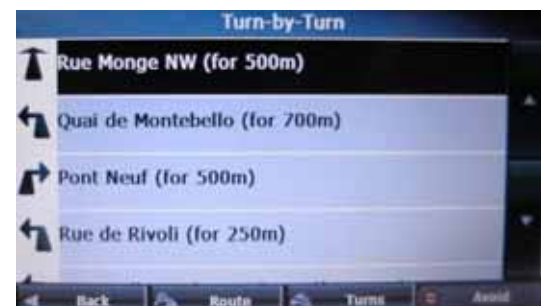

➤ **1.2.2 Route Overview**

This option is to know overall scheduled route.



Distance is also indicated in the right.



✚ **1.3 Options**

This section changes display mode and more settings.



Option Main Menu in the right.



➤ **Night Mode**



➤ **3D Mode**



➤ **Free Map Browsing**



➤ **Pedestrian Mode**



 **1.4 Extras**

More Extra settings available.



Tutorial



● Chapter 2: Hands-free

✚ 2.1 Bluetooth

 
Select **Hands-free** from Main Menu.



Select **Bluetooth** to able/ disable Bluetooth function.



One tap on **Bluetooth** bar, a passkey notice shall pop up. The passkey is: **0000**.

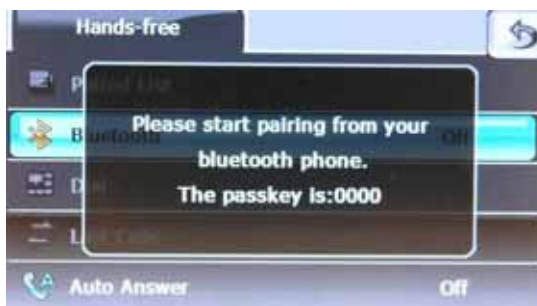

After entering the passkey, Bluetooth function is **On**.



➤ 2.1.1 How to pair and connect Bluetooth mobile phone to MS-5607

Make sure both Bluetooth mobile phone and MS-5607 have been paired and connected before user try to dial via MS-5607.

Following is the connecting/pairing procedure between Sony Ericsson mobile phone and MS-5607.

Note:

- To enable Bluetooth function of MS-5607, please refer to [2.1 Bluetooth](#). For mobile phone settings regarding Bluetooth activation, please refer to mobile phone manual for details.

Select **Settings** in main menu in this mobile phone.



Go to **Connectivity**, choose **Bluetooth/ Handsfree**.

 
 


Follow on-screen instructions to search available Handsfree devices.





Note: The Bluetooth menu in mobile phone might differ by different brands and models.


MS-5607 has been found, press **Select** and enter passcode: **0000**.

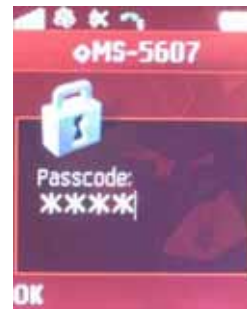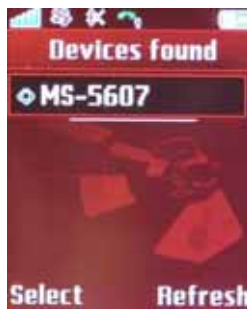

  Add to and then **Connect** to New handsfree.

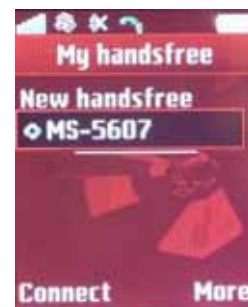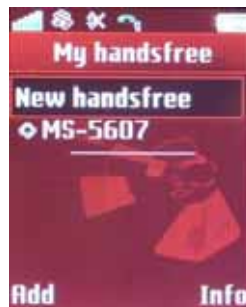


This picture shows MS-5607 has been successfully paired and connected to MS-5607. User may make phone calls via MS-5607 now.

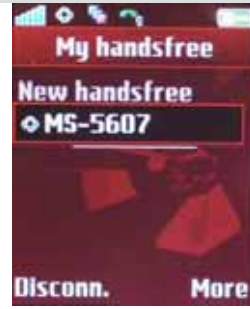 



2.2 Paired List

Only when MS-5607 has been paired would this selection be valid.



Shows mobile phone model used for demonstration. User may tap  icon to connect to mobile phone again.



User can delete paired list when no longer needed, just tap  icon. Tap  to confirm.




Paired device is no longer available in the paired list.




2.3 Dial

Select **Dial** from Main Menu.



Tap the number and tap  to make the call.

 


This picture indicates the call has been connected. User can adjust Volume in the right. Or hang up the phone by tapping  to end.



2.4 Last Calls

Select **Last Calls** to learn the number just dialed or answered.

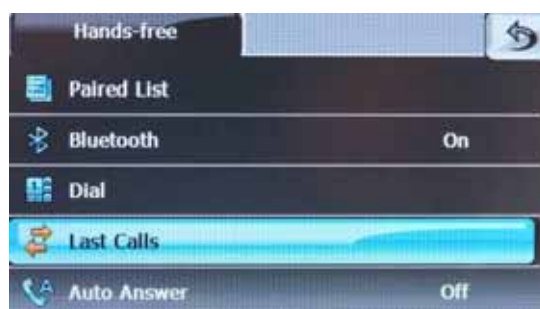

➤ 2.4.1 Dialed Number

Show the **Dialed Number** tab, user can tap icons in the right to call again or to delete call lists.



➤ 2.4.2 Answered Calls

Select **Answered Calls** tab to learn calls answered.




➤ 2.4.3 Missed Calls

Select **Missed Calls** tab to learn calls missed.




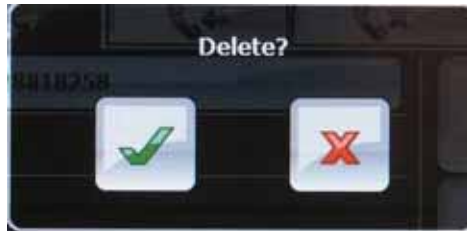 
➤ 2.4.4 Redial Call From Last Call Tabs

Choose the number user intend to redial, tap  icon

 


➤ 2.4.5 Delete Call From Last Call Tabs

Choose the number user intend to delete, just tap  icon.




A transparent window **Finished** shall show to remind user above process has been made.

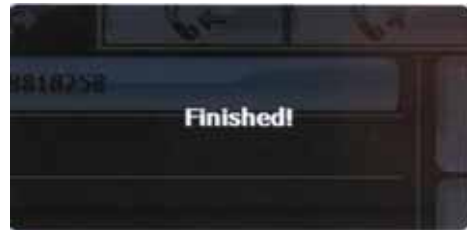

✚ 2.5 Auto Answer

 Set **On** to auto answer incoming calls, tap again to set to **Off**.

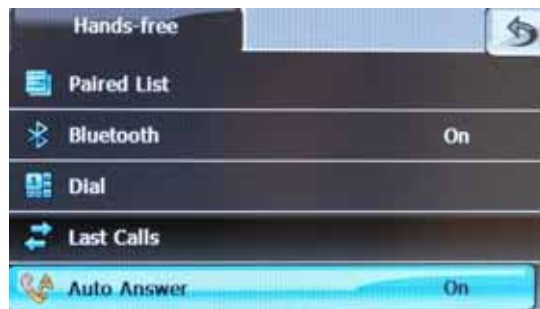

● Chapter 3: Travel Kit

Select **Travel Kit** from Main Menu.

 


✚ 3.1 Music

Select **Music**.



User may tap **Play All** to listen all music available or tap desired song as listed in the right.

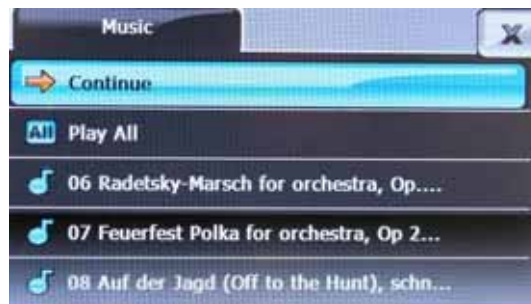

You may tap on the screen while playing, relative information such as **name of the song, the artist and the album** shall list accordingly.

The icon  indicates repeated all function.



Just one touch screen will show available option below. **Previous, next, pause, repeat mode.**

Picture in the right indicates under pause mode.

 


Picture in the right indicates under repeating mode.



3.2 Photo

Select **Photo**.

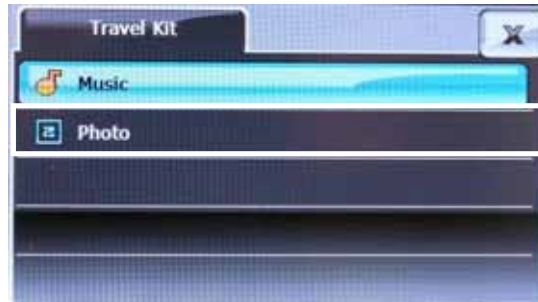

Choose first photo for instance.



Enlarge view for this photo. Only **Previous** and **Next** options are available here.



Tap again to find the selection icon in the bottom of the right side.



Tap the selection icon to bring up more selections. Selections from Left to right are **Slide show interval**, **rotate**, **zoom in/out**, **mute**, **broadcast**.



● Chapter 4: Settings

Tap on **Settings** in the main menu to proceed.

 


✚ 4.1 Volume

Tap **Volume** to adjust volume of this device.




Users may adjust either to increase volume or to decrease volume at by tapping icons below. If quiet operation is needed, tap **mute** icon in the right.

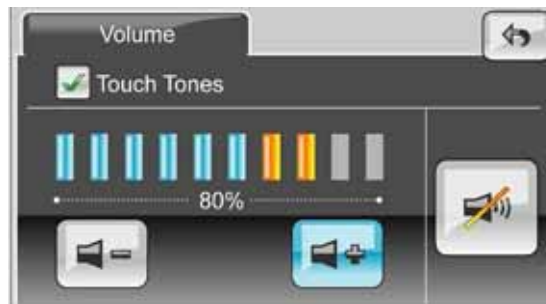


✚ 4.2 Lock

  Tap **Lock** to set lock screen.

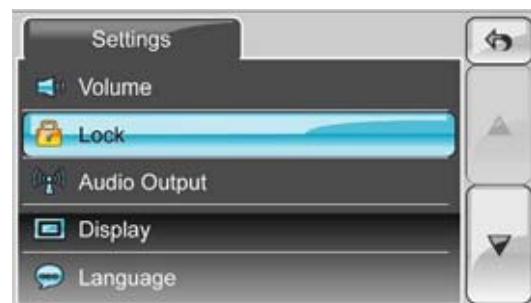

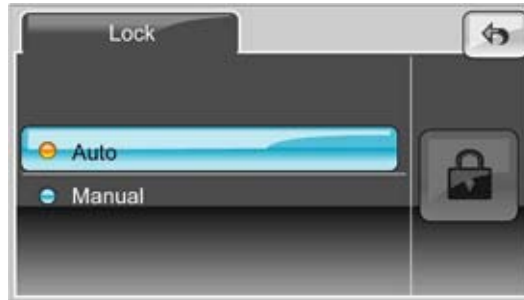

Users might like to select **Auto** or **Manual** at their preference.



Select **Auto**, the screen will pop **Locked** message when user left the device unused for a while. In this case, tapping **Unlock** icon to release.

 


A confirm message, tap to  unlock or  to remain locked screen.




4.3 Audio Output

Tap **Audio Output** under Settings.

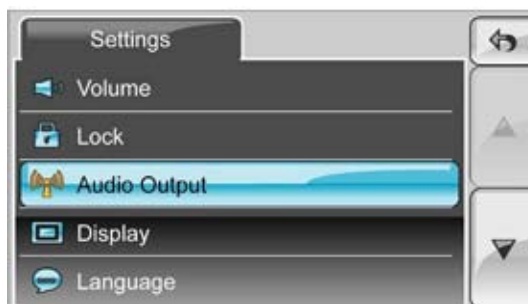

➤ 4.3.1 Speaker

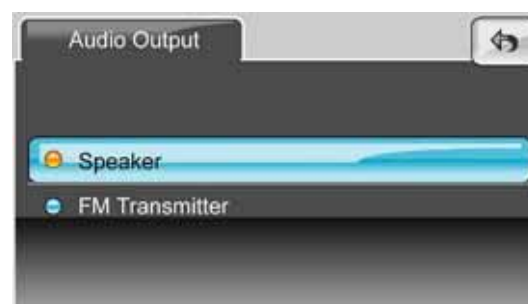 


Tap **Speaker** to activate speaker mode.



➤ 4.3.2 FM Transmitter

 
Tap **FM Transmitter** to enter FM Transmitter setting.



User may adjust frequency by  or  and save  as one of your favorite channels.




User can select various frequencies among 88.5~107.5 MHz to save up to four of your most frequent used channels as listed in the right.

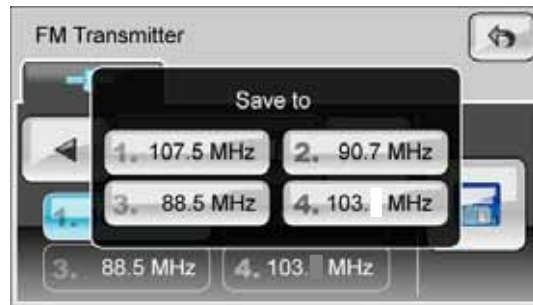


📱 4.4 Display

 Tap **Display** to set **Brightness**, **Backlight Timeout** and **Screen Stylus**.

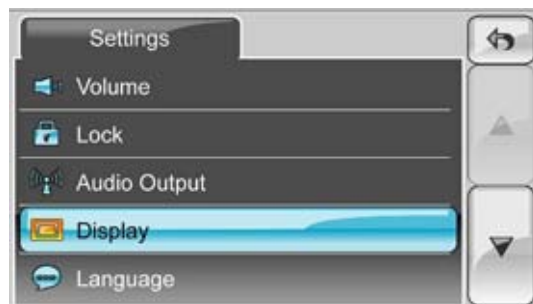


➤ 4.4.1 Brightness

 Users can adjust screen brightness either by tapping icons below to plus or minus screen brightness at **Brightness** tab.

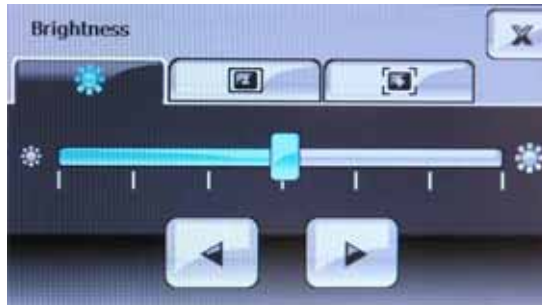



➤ 4.4.2 Backlight Timeout

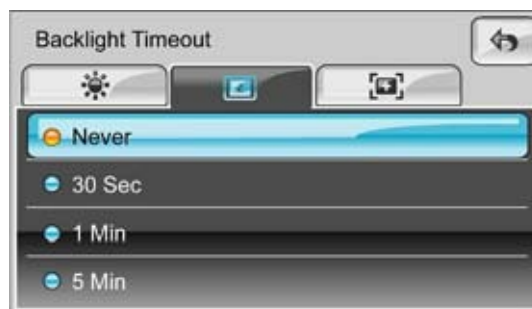 
Users can adjust **Backlight Timeout** at this tab for power saving purposes.

 


➤ 4.4.3 Screen Stylus

Users can calibrate precision of this device at **Screen Calibration** tab. Select Tap to  confirm or  to cancel.



Once  is selected, a cross symbol shall display in the center, move your finger as cross moves around.

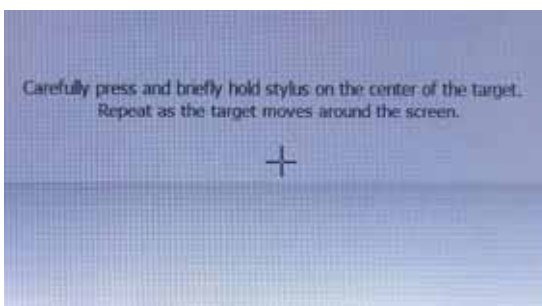

4.5 Language

Select display **Language** here.



There are ten languages available.



4.6 Date & Time

Select **Date & Time** to set local date and time.



4.6.1 Date

Set date in **Year/Month/Day** format. By adjusting icons in the right.



➤ 4.6.2 Time

Set time in **Hour: Minute**. Moreover, user could change either in 12-hour format or 24-hour format as user's preference.

 


4.7 Power Status

Tap **Power Status** to learn current power status.




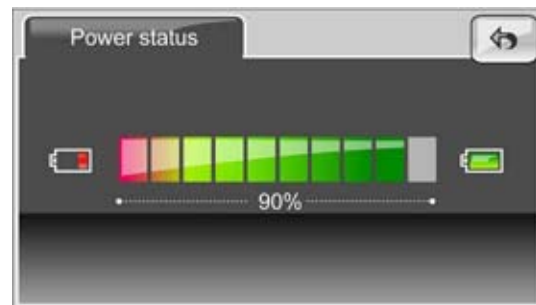


From left to right indicates short to full battery status.



 4.8 Restore

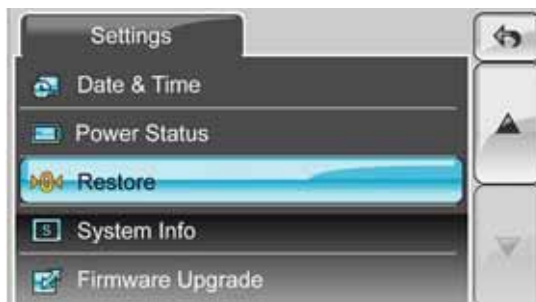Tap **Restore** to restore all defaults.

 


A window as in the right shall pop up to confirm restoration. Tap to  confirm or  to cancel. Once  is selected, a transparent icon shows **Finished** will show in a few seconds.



4.9 System Info.

Select **System Info** to know more details regarding

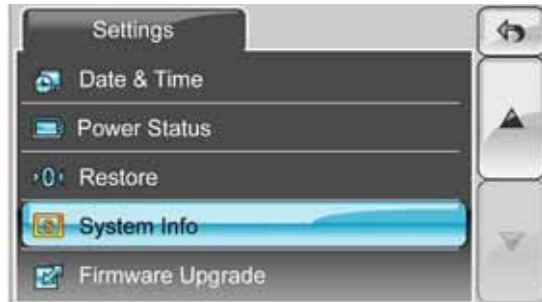

4.9.1 Devices

Software Version, **Firmware Version** and **RAM** capacity under **Devices** tab shows here.



4.9.2 Storage

Tap **Storage** tab to show capacity of Storage Card, and Flash Disk.



4.9.3 Copyright



Tap **Copyright** tab to know copyright of this product belongs to Micro Star International.



4.10 Firmware Upgrade

Tap **Firmware Upgrade** tab to upgrade Firmware.



A window in the right shall pop up to confirm. Tap to  confirm or  to cancel.



Screen shall show current status as **Upgrading**.



Then Firmware Upgrade **Finished**.

