


# Quick Start Guide, IB-3 PC

Setup for Keyboard Wedge

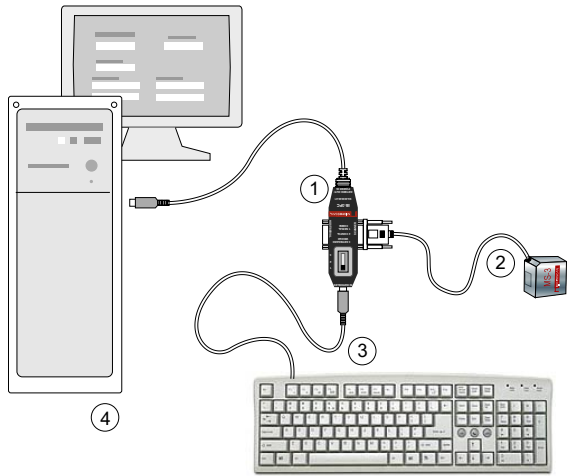

**MICROSCAN.**


83-210039 Rev C

## Required Hardware

1. IB-3 PC, P/N FIS-0001-0030G
2. MS-3 Laser Scanner
3. Customer-supplied keyboard
4. Host computer

## Steps for Connection and Startup

1. Power-off your host computer.
2. Set the IB-3 PC switch to position 1.
3. Connect the scanner (2) and the keyboard (3) to the IB-3 PC as shown.
4. Plug the IB-3 PC cable directly into the host computer's (4) keyboard port.
5. Power-on host computer.
6. Open a word processor or text editor to see scanned data.

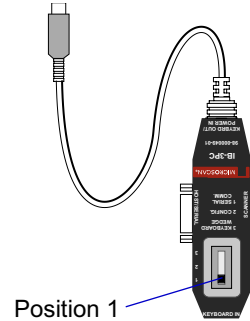

## MS-3 Laser Scanner Setup

1. Scan the configuration symbols in frame 4 in order, pausing for a second or two on each until you hear a beep (except for step 4, "Enable all Symbologies," which does not generate a beep).
2. Mount your scanner in the position that is suitable for your application and begin operations. When scanning, you have five seconds to read a symbol and move on before it is read again.

**Note:** Setup symbols for the MS-3 Laser Scanner in the next two frames are presented at right angles to each other in order to prevent accidental scanning of the wrong command.

2

3

## MS-3 Laser Scanner Configuration Symbols

1. Enable configuration mode.



2. Enable Continuous Read 1.



3. Set 5 second timeout.



4. Enable all symbologies (no beep on this one).



5. Save for power-on.



4

## MS- & CCD Setup

The two symbols to the right will setup the MS-2 CCD for reading with the IB-3 PC.

**Note:** There is no beeper on the MS-2 CCD but whenever a good read occurs the reader's LED will momentarily turn OFF and then ON and the Good Read lamp will flash ON and OFF.

### MS-2 CCD Symbols

Enable all Symbologies



Set Read Mode



5

## Test Symbol

The following bar code symbol can be used to test the operation of the setup:



**Note:** Download a copy of the [IB-3 PC User Manual](#), P/N 83-210037, for a complete description of the IB-3 PC and its capabilities.

**Note:** Also see the [MS-3 Laser Scanner User Manual](#), P/N 83-000003.

6