

MICROSCAN®

Vision HAWK Smart Camera Guide



Copyright ©2013
Microscan Systems, Inc.
Tel: +1.425.226.5700 / 800.762.1149
Fax: +1.425.226.8250

ISO 9001 Certified
Issued by TÜV USA

All rights reserved. The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and/or service Microscan manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Microscan.

Throughout this manual, trademarked names might be used. We state herein that we are using the names to the benefit of the trademark owner, with no intention of infringement.

Disclaimer

The information and specifications described in this manual are subject to change without notice.

Latest Manual Version

For the latest version of this manual, see the Download Center on our web site at:
www.microscan.com.

Technical Support

For technical support, e-mail: helpdesk@microscan.com.

Warranty and Terms of Sale

For Standard Warranty information, see: www.microscan.com/warranty.

Microscan Systems, Inc.

United States Corporate Headquarters

+1.425.226.5700 / 800.762.1149

United States Northeast Technology Center

+1.603.598.8400 / 800.468.9503

European Headquarters

+31.172.423360

Asia Pacific Headquarters

+65.6846.1214

Statement of RoHS Compliance

All Microscan readers with a 'G' suffix in the FIS number are RoHS-Compliant. All compliant readers were converted prior to March 1, 2007. All standard accessories in the Microscan Product Pricing Catalog are RoHS-Compliant except 20-500013-01 and 98-000039-02. These products meet all the requirements of "Directive 2002/95/EC" European Parliament and the Council of the European Union for RoHS compliance. In accordance with the latest requirements, our RoHS-Compliant products and packaging do not contain intentionally added Deca-BDE, Perfluorooctanes (PFOS), or Perfluorooctanic Acid (PFOA) compounds above the maximum trace levels. To view the document stating these requirements, please visit:

<http://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=CELEX:32002L0095:EN:HTML>

and

<http://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=OJ:L:2006:372:0032:0034:EN:PDF>

Please contact your sales manager for a complete list of Microscan's RoHS-Compliant products.

This declaration is based upon information obtained from sources which Microscan believes to be reliable, and from random sample testing; however, the information is provided without any representation of warranty, expressed or implied, regarding accuracy or correctness. Microscan does not specifically run any analysis on our raw materials or end product to measure for these substances.

The information provided in this certification notice is correct to the best of Microscan's knowledge at the date of publication. This notice is not to be considered a warranty or quality specification. Users are responsible for determining the applicability of any RoHS legislation or regulations based on their individual use of the product.

Regarding "RoHS Directive 2011_65_EU" Microscan produces Monitoring and Control Instruments as well as Industrial Monitoring and Control Instruments as defined within the directive. Microscan has developed and is implementing a RoHS2 compliance plan with the intention of bringing all active products listed in our current marketing literature within full compliance as per the directive deadlines.

Key milestones for the transition plan are as follows:

- Complete internal product audit and supplier transition by July 2013.
- Initial "Monitoring and Control Instruments" RoHS2-compliant products available by July 2014.
- Initial "Industrial Monitoring and Control Instruments" RoHS2-compliant products available by July 2015.
- All new products introduced in 2014 are expected to be WEEE and RoHS2 compliant.

Microscan will mark the products with the 'CE' marking that complies with the RoHS2 process to acquire 'CE' certification per the example given: Example 1 >> Machinery directive + EMC directive + RoHS2 = Declaration of Conformity.

Contents

PREFACE	Welcome! viii Purpose of This Manual viii Manual Conventions viii
CHAPTER 1	Introduction 1-1 Product Summary 1-2 Features and Benefits 1-2 Applications 1-3 Package Contents 1-3 Vision HAWK Smart Camera Models 1-4 Part Number Structure 1-5
CHAPTER 2	System Components 2-1 Hardware Components 2-1 Important Label Information 2-8 Mounting and Wiring the Vision HAWK Smart Camera 2-9 Input/Output Wiring 2-16 Ground and Shield Considerations 2-17 Power Requirements 2-19 Status Indicators 2-20 AutoVISION Button 2-21 Setting Up a Job in AutoVISION 2-22 Trigger Debounce 2-27

Contents

CHAPTER 3	Optics and Lighting 3-1 Optics 3-2 Lens Substitution 3-3 Illumination 3-5
CHAPTER 4	Using EtherNet/IP 4-1 Vision HAWK EtherNet/IP 4-2 Assembly Layout 4-4 Connection Properties: Class 3 Explicit Messaging: 4-14 EIP Control/Status Signal Operation 4-17 Data Type Descriptions and Equivalents in PLC and EDS/CIP Environments 4-18 PLC Tags and Serial Command Names 4-19
APPENDIX A	Connector Pinouts A-1 Vision HAWK Smart Camera Connectors A-2
APPENDIX B	Cable Specifications B-1 61-000160-01 Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m B-2 61-000162-01 Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m B-3 97-000003-01 Power Supply, M12 12-pin Socket, 1.3 m B-4 99-000020-02 Trigger, M12 4-pin Plug, NPN, Dark On, 2 m B-5
APPENDIX C	General Specifications C-1 Dimensions C-8 Field of View and Working Distance C-10
APPENDIX D	Web HMI D-1 Adding Options to the Base URL D-4 Basic Options D-4 Layout Options D-5 Settings Pages D-7 Style D-14 Additional Notes D-15
APPENDIX E	Allen-Bradley PLC Setup via EDS E-1 AB Rockwell RSLogix 5000 v20 PLC Integration with EDS E-2
APPENDIX F	Allen-Bradley PLC setup via Generic Ethernet Module F-1 Prepare the PLC: Integrate the Camera into a PLC Environment F-2

APPENDIX G	Demo PLC Code G-1
	Glossary of Terms G-2
	Demo Setup G-3
	Description of PLC Tags G-5
	Run the Camera: Runtime Operation of EtherNet/IP Demo G-15
APPENDIX H	Serial Commands H-1
APPENDIX I	Vision HAWK Boot Modes I-1

Welcome!

Purpose of This Manual

This manual contains detailed information about the Vision HAWK Smart Camera.

Manual Conventions

The following typographical conventions are used throughout this manual.

- Items emphasizing important information are **bolded**.
- Menu selections, menu items and entries in screen images are indicated as: Run (triggered), Modify..., etc.

CHAPTER 1 Introduction

FIGURE 1-1. Vision HAWK Smart Camera, C-Mount and Standard Models



Product Summary

The Vision HAWK Smart Camera is a compact industrial smart camera that provides powerful machine vision capabilities with a small form factor and intuitive software interface. The Vision HAWK is designed for industrial environments where IP65/67 enclosure and rugged M12 connectivity are required.

Fully-integrated I/O and communications make the Vision HAWK easy to incorporate in virtually any machine vision application. Patented liquid lens autofocus and modular optical zoom enables the Vision HAWK to inspect objects at distances from 33 mm to 2 m and beyond.

Pressing the AutoVISION button at the back of the Vision HAWK enables real time dynamic autofocus. When an object is centered in the field of view and the AutoVISION button is pressed, the camera automatically adjusts focal distance and sets internal parameters to optimize image captures.

AutoVISION software, designed for use with the Vision HAWK, provides an intuitive interface, step-by-step configuration, and a library of presets that allow easy setup and deployment. For more complex vision applications, the system can be upgraded from AutoVISION to Visionscape.

Features and Benefits

- Standard and C-Mount models available
- SXGA (1280 x 960), WVGA (752 x 480), and WUXGA (2048 x 1088, C-Mount model only) resolutions available
- World's first vision system with liquid lens autofocus (standard models)
- Integrated lighting (standard models)
- Integrated Ethernet
- Flexible programming options for custom applications
- AutoVISION button for automatic targeting, calibration, and triggering
- Simplified configuration with AutoVISION software
- Fully scalable with Visionscape
- Applications can be ported to Visionscape PC-based machine vision

Applications

- Automotive assembly verification
- Part identification
- Label positioning
- Contents verification
- Electronics assembly verification and identification
- Semiconductor packaging and component inspection
- Auto ID (Data Matrix and other 2D symbologies, 1D, OCR)

Package Contents

Before you install AutoVISION software and connect your Vision HAWK Smart Camera, please take a moment to confirm that the following items are available:

- Vision HAWK Smart Camera — Your package contains one of the available models listed in Table 1–1
- Microscan Tools Drive — USB flash drive containing AutoVISION software
- Required accessories such as a power supply or power cable

Vision HAWK Smart Camera Models

Table 1–1 lists and describes the Vision HAWK Smart Camera models.

TABLE 1–1. Vision HAWK Smart Camera Models

Part Number	Vision HAWK Smart Camera Model
GMV-6800-1000G	Vision HAWK, 1.3MP SXGA, AutoVISION, C-Mount
GMV-6800-1002G	Vision HAWK, 1.3MP SXGA, AutoVISION+Visionscape, C-Mount
GMV-6800-1004G	Vision HAWK, 1.3MP SXGA, AutoVISION+Verification/OCV, C-Mount
GMV-6800-1006G	Vision HAWK, 1.3MP SXGA, AutoVISION+Visionscape+Verification/OCV, C-Mount
GMV-6800-1010G	Vision HAWK, 0.4MP WVGA, AutoVISION, C-Mount
GMV-6800-1012G	Vision HAWK, 0.4MP WVGA, AutoVISION+Visionscape, C-Mount
GMV-6800-1014G	Vision HAWK, 0.4MP WVGA, AutoVISION+Verification/OCV, C-Mount
GMV-6800-1016G	Vision HAWK, 0.4MP WVGA, AutoVISION+Visionscape+Verification/OCV, C-Mount
GMV-6800-1030G	Vision HAWK, WUXGA, Mono, AutoVISION, C-Mount
GMV-6800-1032G	Vision HAWK, WUXGA, Mono, AutoVISION+Visionscape, C-Mount
GMV-6800-1034G	Vision HAWK, WUXGA, Mono, AutoVISION+Verification/OCV, C-Mount
GMV-6800-1036G	Vision HAWK, WUXGA, Mono, AutoVISION+Visionscape+Verification/OCV, C-Mount
GMV-6800-1100G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION, 15° Lens
GMV-6800-1102G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape, 15° Lens
GMV-6800-1104G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Verification/OCV, 15° Lens
GMV-6800-1106G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape +Verification/OCV, 15° Lens
GMV-6800-1110G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION, 15° Lens
GMV-6800-1112G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape, 15° Lens
GMV-6800-1114G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Verification/OCV, 15° Lens
GMV-6800-1116G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape +Verification/OCV, 15° Lens
GMV-6800-1200G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION, 30° Lens
GMV-6800-1202G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape, 30° Lens
GMV-6800-1204G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Verification/OCV, 30° Lens
GMV-6800-1206G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape +Verification/OCV, 30° Lens
GMV-6800-1210G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION, 30° Lens
GMV-6800-1212G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape, 30° Lens
GMV-6800-1214G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Verification/OCV, 30° Lens
GMV-6800-1216G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape+Verification/OCV, 30° Lens
GMV-6800-1300G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION, 45° Lens
GMV-6800-1302G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape, 45° Lens
GMV-6800-1304G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+ Visionscape +Verification/OCV, 45° Lens
GMV-6800-1306G	Vision HAWK, SXGA, Built-In Lighting, AutoVISION+Visionscape+Verification/OCV, 45° Lens

TABLE 1–1. Vision HAWK Smart Camera Models

Part Number	Vision HAWK Smart Camera Model
GMV-6800-1310G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION, 45° Lens
GMV-6800-1312G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape, 45° Lens
GMV-6800-1314G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Verification/OCV, 45° Lens
GMV-6800-1316G	Vision HAWK, WVGA, Built-In Lighting, AutoVISION+Visionscape+Verification/OCV, 45° Lens

Part Number Structure

GMV	6800					
		Comm	Lens	Sensor	Options	RoHS
General Machine Vision	Vision HAWK	1 = Ethernet	0 = C-Mount	0 = CCD (SXGA)	0 = AutoVISION	G = RoHS compliant
			1 = 15° Optics	1 = CMOS (WVGA)	2 = AutoVISION + Visionscape	
			2 = 30° Optics	3 = CMOS (WUXGA)	4 = AutoVISION + Verification/OCV	
			3 = 45° Optics		6 = AutoVISION + Visionscape + Verification/OCV	

System Components

This section contains information about system components as well as information to help you connect the Vision HAWK Smart Camera. Specific information describes connectors, adapters, cables, pinouts, and signals.

Note: There are no user-serviceable parts inside.

Hardware Components

Table 2-1 lists Vision HAWK Smart Camera hardware components.

TABLE 2-1. Vision HAWK Smart Camera Hardware Components

Part Number	Description
Demo Kit	
98-000215-01	Demo Kit (Power Supply, Camera Stand, Ethernet Host Cable, Carrying Case, Documentation)
Power Supplies	
97-000003-01	Power Supply, M12 12-pin Socket, 1.3 m
97-000003-02	Power Supply, M12 12 pin Plug, 1.3m
Communication Devices and Cables	
98-000103-01	QX-1 Interface Device
61-000148-01	Cordset, Common, M12 12 Pin, Socket (Ultralock) to M12 12 Pin, Plug (Ultralock), 3M
61-000148-02	Cordset, Common, M12 12 Pin, Socket (Screw-on) to M12 12 Pin Plug (Screw-on), 3M
61-000162-01	Cordset, Common, M12 12 Pin, Socket (Ultralock) to M12 12 Pin, Plug (Ultralock), 1M
61-000162-02	Cordset, Common, M12 12 Pin, Socket (Screw-on) to M12 12 Pin Plug (Screw-on), 1M
61-000153-01	Cordset, Host, Serial, M12 12 Pin Socket (Ultralock) to DB9 Socket, 1M

TABLE 2–1. Vision HAWK Smart Camera Hardware Components (Continued)

Part Number	Description
61-000153-02	Cordset, Host, Serial M12 12 pin Socket (Screw-on) to DB9 Socket, 1M
61-000164-01	Cordset, Host, Serial, M12 12 pin Socket (Ultralock) to DB9 Socket, 3M
61-000164-02	Cordset, Host, Serial, M12 12 pin Socket (Screw-on) to DB9 Socket, 3M
61-000152-01	Cordset, Host, Serial M12 12 pin Plug (Ultralock) to DB9 Socket, 1M
61-000152-02	Cordset, Host, Serial, M12 12 pin Plug (Screw-down) to DB9 Socket, 1M
61-000165-01	Cordset, Host, Serial M12 12 pin Plug (Ultralock) to DB9 Socket, 3M
61-000165-02	Cordset, Host, Serial M12 12 pin Plug (Screw-on) to DB9 Socket, 3M
61-000163-01	Cordset, Host, Ethernet, M12 8 pin Plug (Ultralock) to RJ45, 3M
61-000163-02	Cordset, Host, Ethernet, M12 8 pin Plug(Screw-on) to RJ45, 3M
61-000160-01	Cordset, Host, Ethernet, M12 8 pin Plug (Ultralock) to RJ45, 1M
61-000160-02	Cordset, Host, Ethernet, M12 8 pin Plug (Screw-on) to RJ45, 1M
61-000161-01	Cordset, M12 12 pin Plug (Ultralock) to MS-5100, 3M
61-000161-02	Cordset, M12 12 pin Plug (Screw-on) to MS-5100, 3M
61-000172-01	Cordset, M12 12 pin Plug (Ultralock) to M12 12 pin Socket (Ultralock) to DB25 Plug
61-000158-03	Cordset, M12 12 Pin Plug & Socket (Ultralock) to MS-Connect 210, RS-232, 2M
61-000158-04	Cordset, M12 12 Pin Plug & Socket (Ultralock) to MS-Connect 210, RS-422/485, 2M
61-000166-01	Cordset, M12 12 Pin Plug (Ultralock) to Flying Leads, 3M
61-000166-02	Cordset, M12 12 Pin Plug (Screw-on) to Flying Leads, 3M
61-000167-01	Cordset, M12 12 Pin Socket (Ultralock) to Flying Leads, 3M
61-000167-02	Cordset, M12 12 Pin Socket (Screw-on) to Flying Leads, 3M
61-000207-01	Cordset, C-Mount-to-Smart Series Light
FIS-0210-0001G	MS-Connect 210, Connectivity Box with Display
FIS-0210-0002G	MS-Connect 210, Connectivity Box
FIS-0210-0003G	MS-Connect 210, Connectivity Box with Display and Ethernet
FIS-0210-0004G	MS-Connect 210, Connectivity Box with Ethernet
98-000013-04	Relay Module, 120VAC, 3 Amp Output, Series 70, Type SM, for MS-Connect 210
98-000013-05	Relay Module, 240VAC, 3 Amp Output, Series 70, Type SM for MS-Connect 210
98-000013-06	Relay Module, 24VDC, 3 Amp Output, Series 70, Type SM for MS-Connect 210
Accessories	
98-000143-01	Adapter Plate Kit
98-000148-01	L-Bracket Kit
98-000144-01	Right Angle Mirror Kit
98-000146-01	Window Replacement Kit
98-000147-01	15° Lens Kit
98-000147-02	30° Lens Kit
98-000147-03	45° Lens Kit
98-000205-01	Glass WIn dow Kit with Infrared (IR) Filter
98-000206-01	Glass Window Kit
98-500006-01	Mounting Plate Kit, Flat, Custom Surfaces

TABLE 2–1. Vision HAWK Smart Camera Hardware Components (Continued)


Part Number	Description
20-610024-01	Trigger Connector, 4-pin Plug (screw terminal and field-wireable) (for self-wiring)
98-000037-01	Extension Kit, All Cameras, 6 inch
98-000054-01	Kit, Mounting Stand Base Plate, Small
98-000016-01	Mounting Arm/Adapter Kit, 6 inch
99-000056-01	Accessory, Bracket, DOAL 50 to Vision HAWK
99-000058-01	Accessory, Bracket, DOAL 75 to Vision HAWK
99-000060-01	Accessory, Bracket, DOAL 100 to Vision HAWK
99-000061-01	Accessory, Bracket, DOAL to C-MOUNT Vision HAWK
99-000050-01	Accessory, Bracket,R-100 to Vision HAWK
99-000052-01	Accessory, Bracket,R-60/70 to Vision HAWK
99-000049-01	Accessory, Bracket,R-100 to C-MOUNT Vision HAWK
99-000051-01	Accessory, Bracket,R-60/70 to C-MOUNT Vision HAWK
98-92800471	5MM Extension Tube for C-Mount Lenses
98-CO206	Lens Extension Tube Set 0.5, 1, 5, 10, 20, 40mm
98-92800571	Lens 8mm F/1.4-16, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800572	Lens 12mm F/1.8-16, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800573	Lens 16mm F/1.4-16, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800574	Lens 25mm F/1.6-16, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800575	Lens 35mm F/2.1-22, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800576	Lens 50mm F/2.8-22, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800577	Lens 75mm F/3.9-32, FT 25.5mm P 0.5mm, 2/3" C-MNT
98-92800311	Lens, Skylight UV Filter 25.5mm Thread
98-92800371	Polarizing Filter 25.5mm Thread
98-000218-01	Lens Protection Housing, Standard Length (up to 48mm)
98-000226-01	Lens Protection Housing, Long (up to 72mm)
Object Detectors	
99-000020-01	Photo Sensor, M12 4pin Plug, NPN, Dark Off, 2m
99-000020-02	Photo Sensor, M12 4-pin Plug, NPN, Dark On, 2 m
Documentation	
37-000010-01	Microscan Tools Drive (Software, User's Manuals, Quick Start Guides, Configuration Guides, links to other documents on Microscan website)

Note: Additional hardware components are available in the Microscan Product Pricing Catalog.

Standard Vision HAWK Front

Figure 2-1 shows the front of the Vision HAWK Smart Camera.


FIGURE 2-1. Front

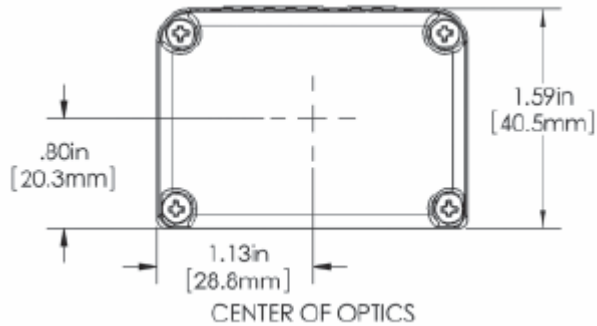

Standard Vision HAWK Base

Figure 2-2 shows the base of the Vision HAWK Smart Camera.


FIGURE 2-2. Base

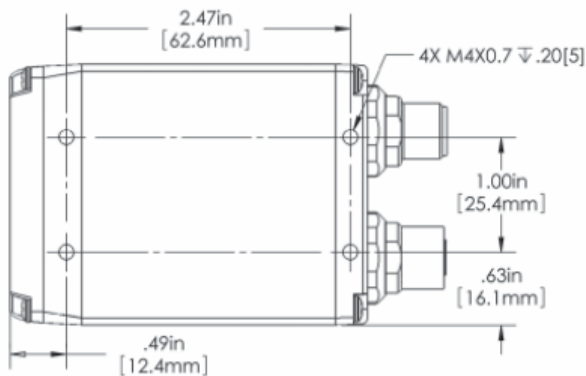

Standard Vision HAWK Side

Figure 2-3 shows the side of the Vision HAWK Smart Camera.


FIGURE 2-3. Side

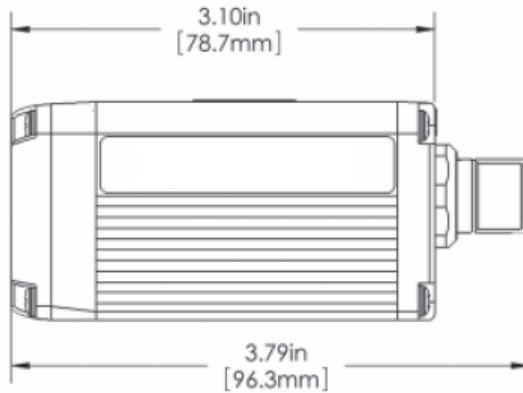

Standard Vision HAWK Back

Figure 2-4 shows the back of the Vision HAWK Smart Camera.


FIGURE 2-4. Back

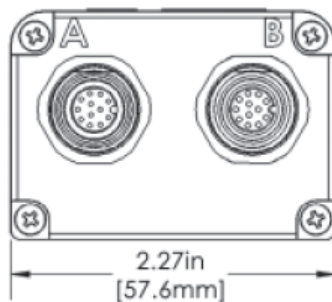

Vision HAWK C-Mount Front

Figure 2-5 shows the front of the Vision HAWK C-Mount Smart Camera.


FIGURE 2-5. Front

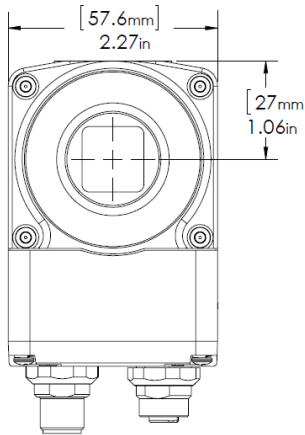

Vision HAWK C-Mount Base

Figure 2-6 shows the top of the Vision HAWK C-Mount Smart Camera.


FIGURE 2-6. Top

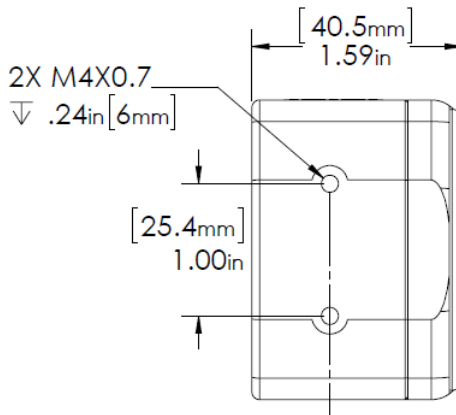

Vision HAWK C-Mount Side

Figure 2-7 shows the side of the Vision HAWK C-Mount Smart Camera.


FIGURE 2-7. Side

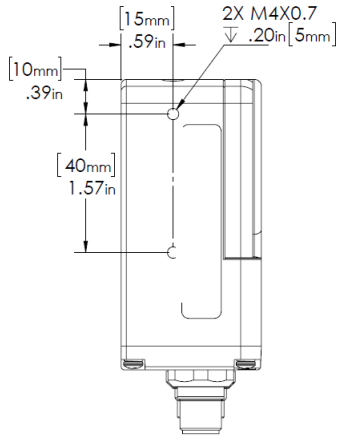

Vision HAWK C-Mount Back

Figure 2-8 shows the back of the Vision HAWK C-Mount Smart Camera.

FIGURE 2-8. Back

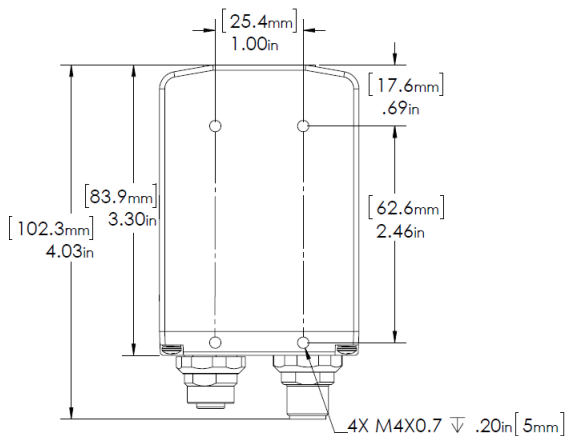


Important Label Information

Each Vision HAWK Smart Camera has its own label, which contains important information about that camera.



- P/N – The Microscan part number of your Vision HAWK Smart Camera.
- S/N — The serial number of your Vision HAWK Smart Camera.
- MAC — The MAC address of your Vision HAWK Smart Camera.

Mounting and Wiring the Vision HAWK Smart Camera

- Mount the camera (1) securely as required by the application.

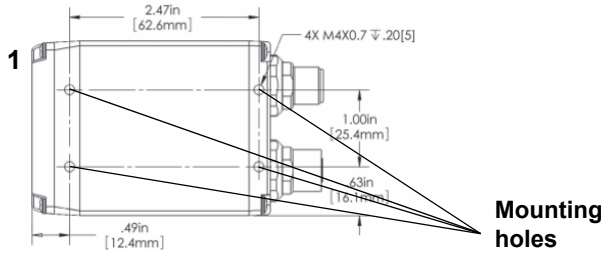


- Connect the Ethernet cable (2) from “B” on the camera (1) to the network.
- Connect the power supply cable (3) to “3” on the QX-1 (4).
- Connect the trigger (5) to “T” on the QX-1 (4).
- Connect the “Common” cable (6) from “A” on the camera (1) to “2” on the QX-1 (4).
- Plug in the power supply (3).

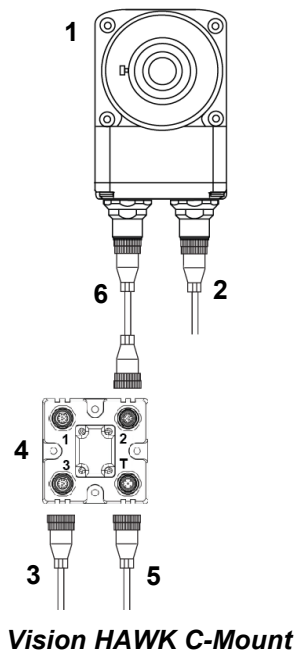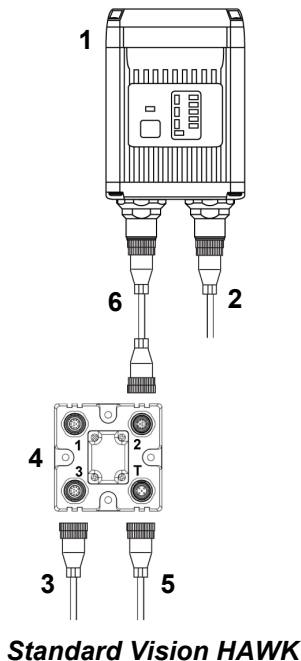


Optoisolated Outputs

The reader has optoisolated outputs that can transfer signals from the camera to peripherals. Outputs can be configured as either NPN or PNP, but NPN and PNP cannot be mixed in a system, because the output common is shared by all outputs.


NPN Output for Host Input

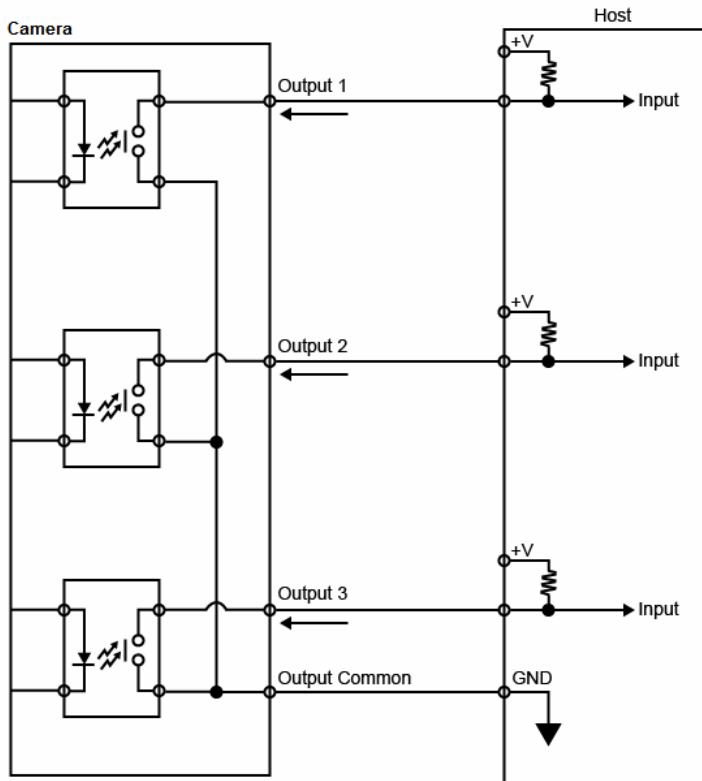


NPN Output for External Load

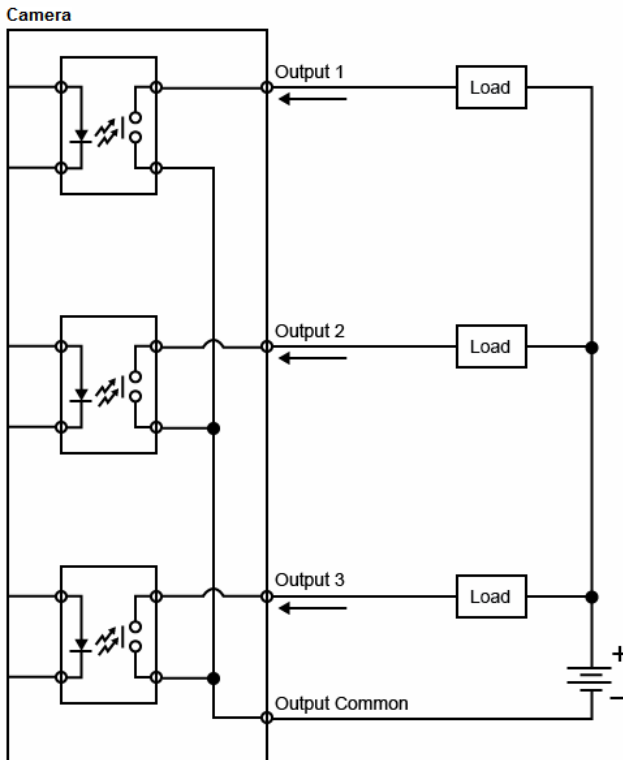

PNP Output for Host Input

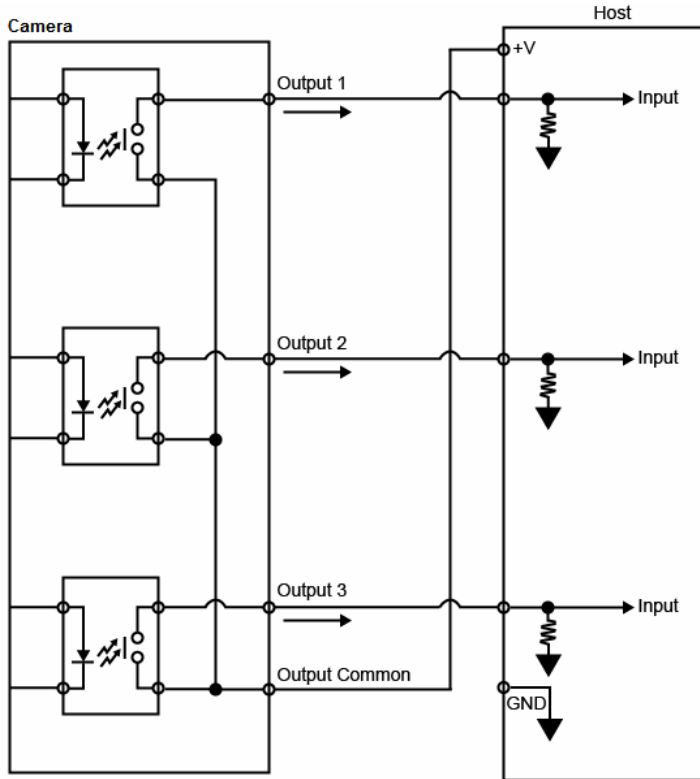


PNP Output for External Load

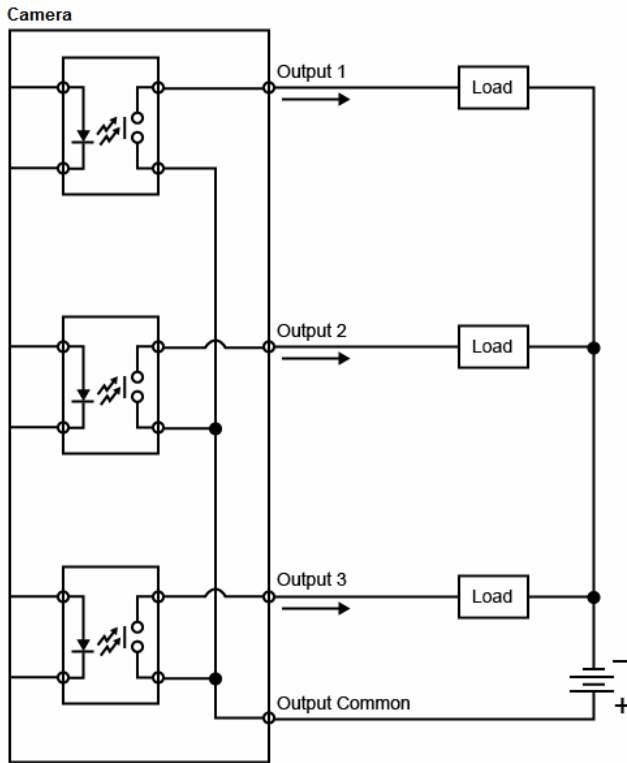


Optoisolated Inputs

All discrete inputs are optoisolated. Inputs can be configured as either NPN or PNP, but NPN and PNP cannot be mixed in a system, because the input common is shared by all inputs.


NPN

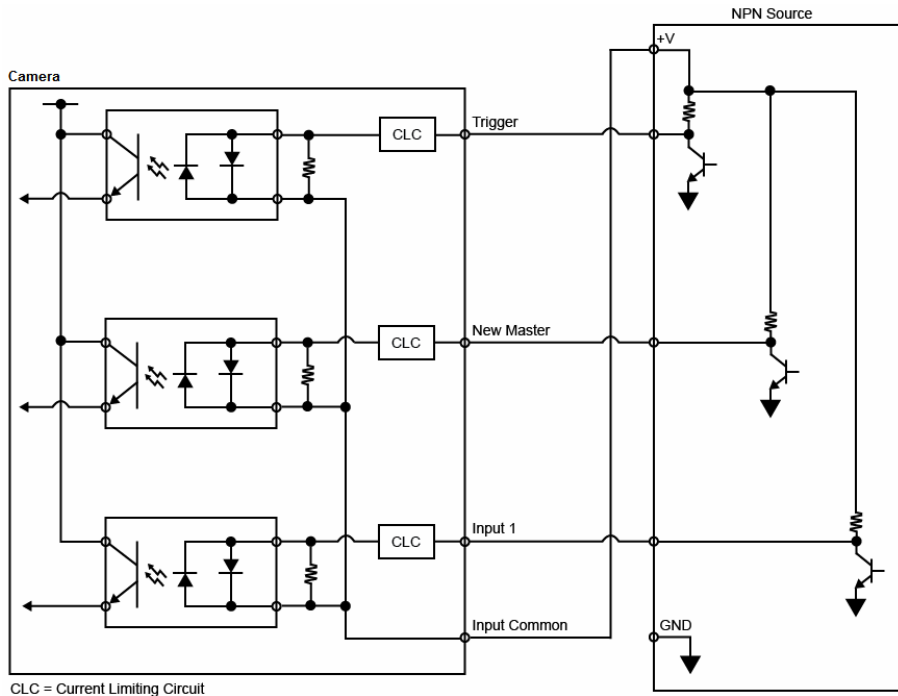

PNP

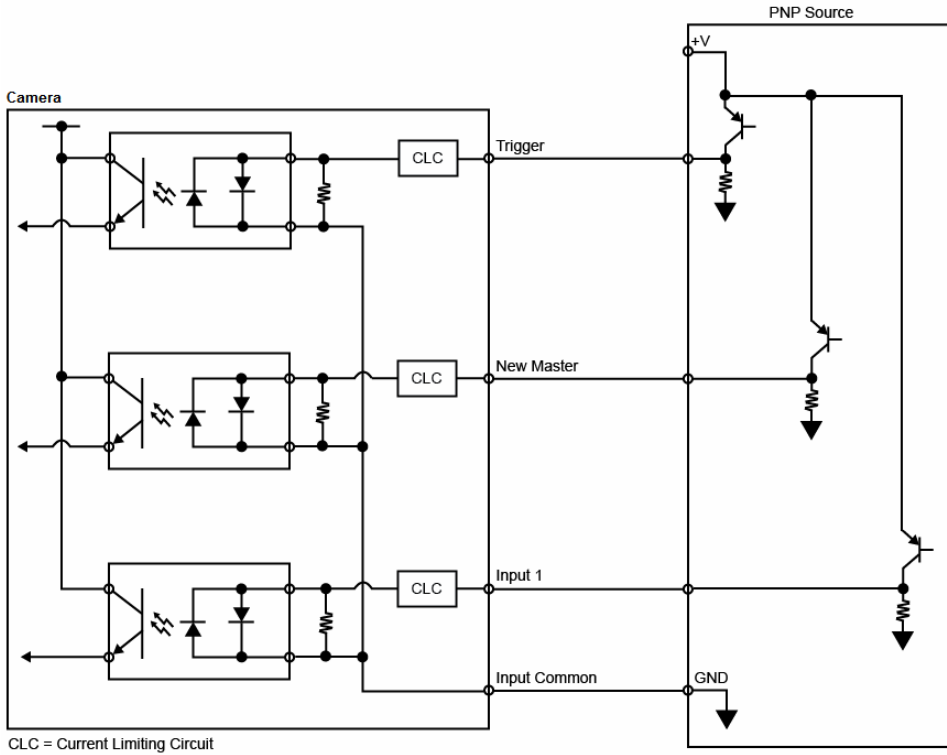


Input/Output Wiring

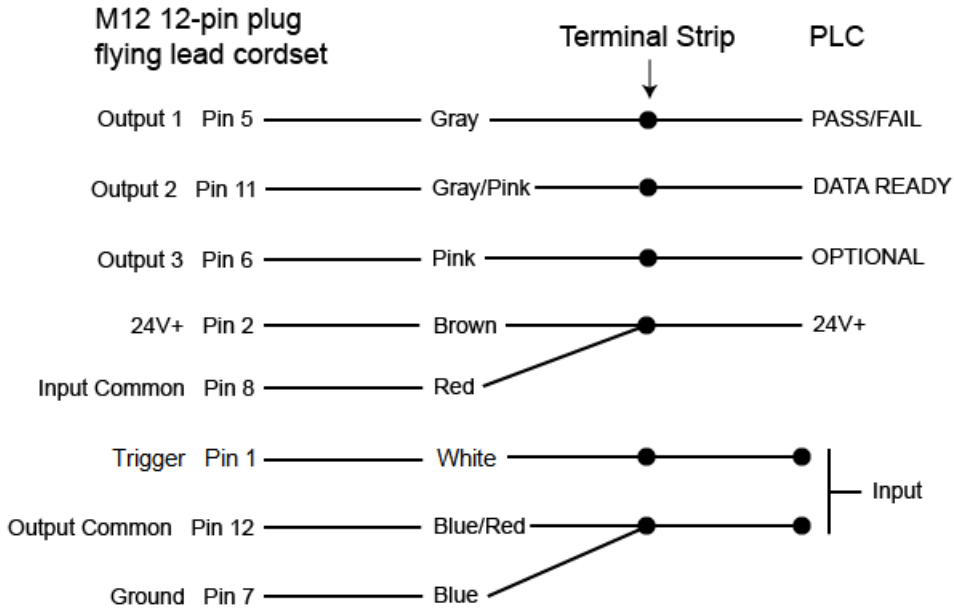

Ground and Shield Considerations

Proper grounding is necessary for operator safety, noise reduction, and the protection of equipment from voltage transients. Buildings, including any steelwork, all circuits, and all junction boxes must be grounded directly to an earth ground in compliance with local and national electrical codes.

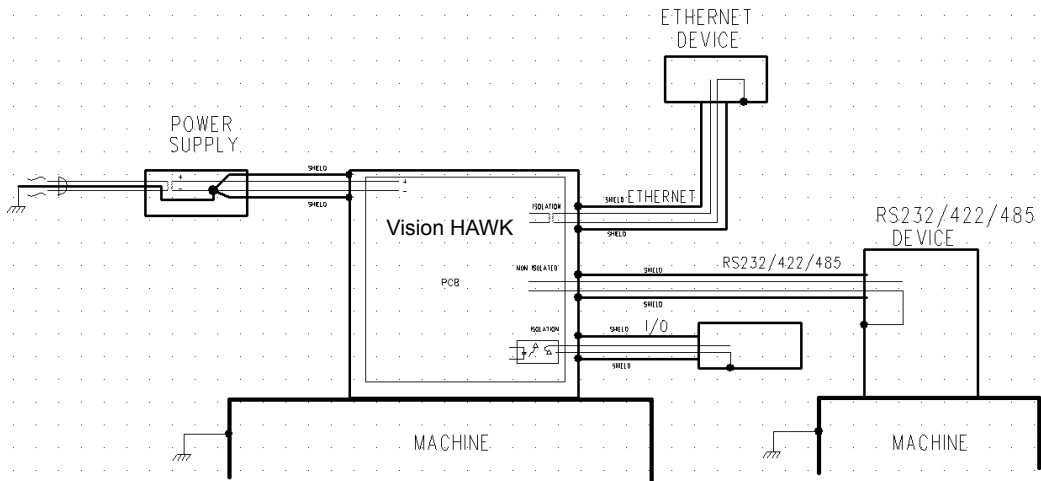


An earth ground is provided through the cable shields and chassis of the imager.

Ground Loops

Ground loops (signal degradation due to different ground potentials in communicating devices) can be eliminated or minimized by ensuring that both the host, imager, and their power supplies are connected to a common earth ground.

Expected Power and Ground Connections for Proper Operation

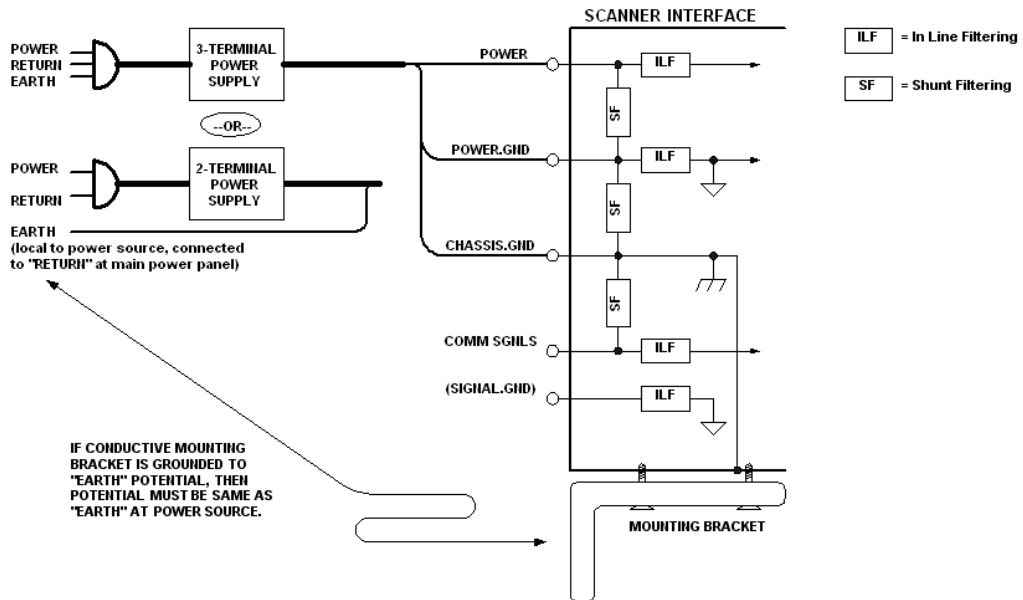

Grounding Notes:

- Ensure that mounting bracket "Earth" is at the same potential as power source "Earth".
- Supply "Return" and "Earth" ground must be stable, low-impedance reference points.
- "2-Terminal Power Supply" must still provide an "Earth" connection to the imager.
- "Signal Ground" can be used for communications and/or discrete signal ground reference. It must **not** be used as Power Ground or Earth Ground.

Power Requirements


Refer to Table 2-3 when determining the power supply requirements for your camera.

TABLE 2-3. Camera Power Requirements

Component	
Vision HAWK Smart Camera, CCD, SXGA	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.) 15.5 watts (max.)
Vision HAWK Smart Camera, CMOS, SXGA	5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.) 13 watts (max.)
Vision HAWK C-Mount Smart Camera, CCD, SXGA	5-28VDC, 200mV p-p max ripple, 130mA at 24VDC (typ.) 7 watts (max.)
Vision HAWK C-Mount Smart Camera, CMOS, WVGA	5-28VDC, 200mV p-p max ripple, 105mA at 24VDC (typ.) 4 watts (max.)
Vision HAWK C-Mount Smart Camera, CMOS, WUXGA	5-28VDC, 200mV p-p max ripple, 140mA at 24VDC (typ.) 5.7 watts (max.)

Status Indicators

The top of the Vision HAWK Smart Camera has multiple LEDs that indicate different trigger, inspection, camera, communication, and power states.

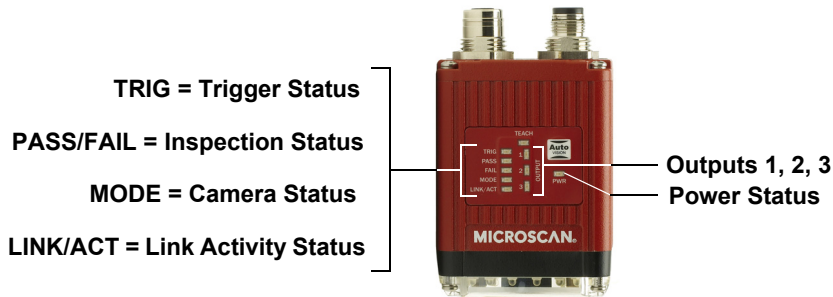

TRIG	On Steady	Continuous Trigger
	Off	Waiting for Trigger Event
	On Flashing	Trigger Event
PASS/FAIL	On	Active State
	Off	Inactive State
MODE	On Steady	Unit Ready
	Off	Unit Not Ready
LINK/ACT	On Steady	Link Established
	Off	No Link/Activity
	On Flashing	Link Established and Activity on Link
PWR	On	Power On
	Off	No Power Applied to Unit
OUTPUTS	On	Signal Sent to External Output
	Off	No Signal Sent to External Output


Additional User Feedback

- Green Flash – A green flash from the front of the unit indicates a Good Read.
- Red X Targeting Pattern – The red X targeting pattern from the front of the unit allows the user to center an object in the camera's field of view.
- Beeper – The beeper is an audible verification that either a Pass or a Fail has occurred.

AutoVISION Button



The AutoVISION Button has three positions, selectable by the length of time the button is held down, and indicated by one, two, or three beeps and LED flashes in succession. It can also be used to send a trigger signal when **Send Trigger** is checked in AutoVISION software's **Connect** view. When the trigger functionality is enabled, pushing the AutoVISION Button triggers the camera to capture an image.

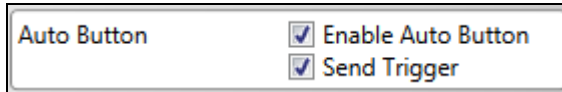

1st Position: Red Targeting Pattern

The first AutoVISION Button position turns the targeting system on. This overrides any other targeting modes that have been configured.

2nd Position: Auto Calibration

The second AutoVISION Button position starts the Auto Calibration process, which selects the appropriate photometry and focus settings for the camera. The selected values are then saved for power-on.


3rd Position: Teach

The third AutoVISION Button position sets the Match String to the next OCR string or symbol data that is decoded.

Setting Up a Job in AutoVISION

AutoVISION is a critical component of the Vision HAWK's functionality. Designed for use with the Vision HAWK, AutoVISION provides an intuitive interface, step-by-step configuration, and a library of presets that allow easy setup and deployment. For more complex vision applications, the system can be upgraded from AutoVISION to Visionscape.

1. Configure Vision HAWK hardware.

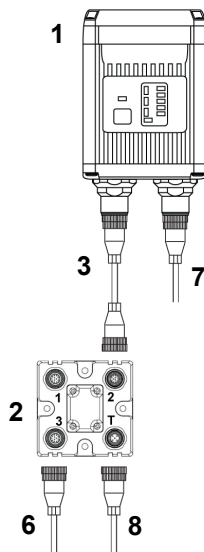


See Appendix A, [Connector Pinouts](#), for Vision HAWK pin assignments.

<i>Item</i>	<i>Description</i>	<i>Part Number</i>
1	Vision HAWK Smart Camera	GMV-6800-XXXXG
2	QX-1 Interface Device	98-000103-02
3	Cordset, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m	61-000162-01
4	Cordset, Host, Serial, M12 12-pin Plug to DB9, 1 m	61-000152-01
5	Cordset, Host, Serial, M12 12-pin Socket to DB9, 1 m	61-000153-01
6	Power Supply, M12 12-pin Socket, 1.3 m	97-000003-01
7	Cordset, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m	61-000160-01
8	Trigger, M12 4-pin Plug, NPN, Dark On, 2 m	99-000020-02

Note: Additional cables available in the Microscan Product Pricing Catalog.


- Mount the camera as required by the application.
 - Connect the Ethernet cable from "B" on the camera to the network.
 - Connect the power supply to "3" on the QX-1.
 - Connect the photo sensor to "T" on the QX-1.
 - Connect the "Common" cable to "2" on the QX-1 and "A" on the camera.
 - Plug in the power supply.
2. Select your Vision HAWK in the AutoVISION Connect view, create a job, and adjust camera settings.

AutoVISION's **Connect** view allows you to select your device and configure its settings, and to create a new job. The **Select Device** dropdown menu provides a list of available devices. Hover the mouse over a device to see its details.

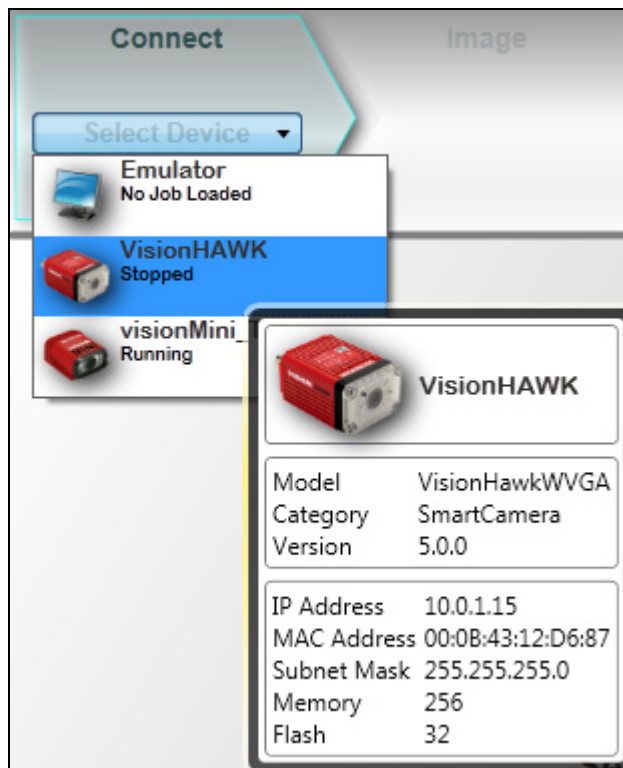


Click the lock icon to take control of the camera. When you have control of the camera, the **Modify** button will appear beneath the camera settings. Click the Modify button to adjust camera settings.

Note: The default IP address of the camera is: **192.168.0.10**. Be sure your PC is on the same subnet (**192.168.0.100**, for example).

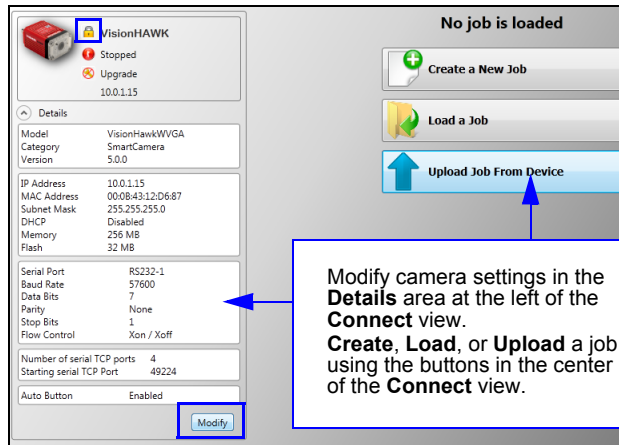


Important: When modifying camera settings, you will need to enter a username and password for the camera if a password has been defined.

Once you have selected your camera, adjusted its settings, and created a new job, you will move to the **Image** view. This view allows you to **Auto Calibrate** the camera, and to manually adjust the camera's Exposure, Gain, and Focus, and also to set the Lighting Mode (On, Off, or Strobe).

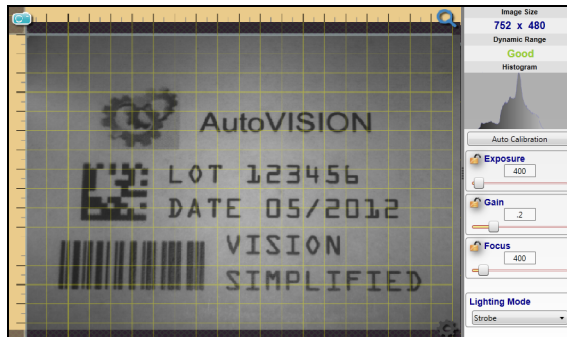

3. Edit the Job in AutoVISION.

After you have created a new job, loaded a job from your PC, or uploaded a job from the camera, you will proceed to the Edit view to refine your machine vision job. The Camera parameters below the captured image allow you to set Gain, Exposure, Focus, Trigger, and Lighting. Inspection Outputs options allow you to connect your job to the outside world. This is also the view where you can add multiple tools to the job. The tool icons are located above the main view area.

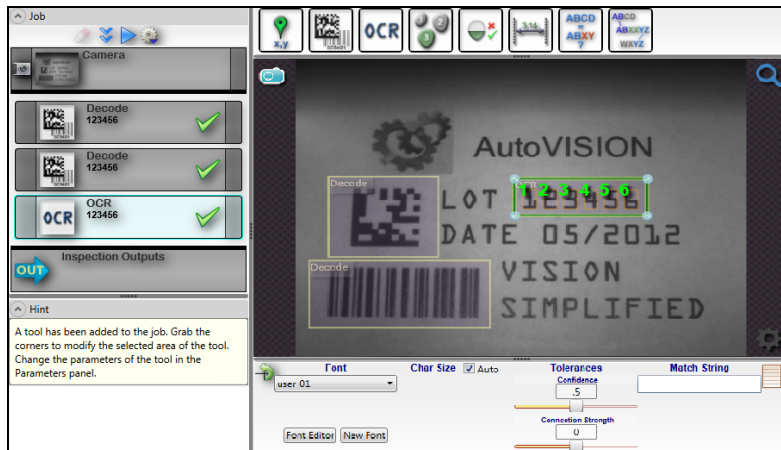

4. Run the Job in AutoVISION.

Going to the **Run** view will automatically download your job to the camera and start it running.



5. Save the Job.

Click the **Save to Camera** icon on the File menu bar to save the job to the Vision HAWK.



Trigger Debounce

Trigger Debounce is the ability of the system to accommodate switching noise on a trigger state change – a common issue with relays that have some intermittent contact while engaging.

Trigger overruns (when the vision system is triggered faster than the device can process) can be avoided by increasing the “debounce” time in the camera definition file located in the C:\Microscan\Vscope\Drivers\CamDefs directory.

The IO Line Debounce High Time and IO Line Debounce Low Time can be added to the file as in the example below. The default debounce time is 1 ms (1,000 µs).

```
// Camera Definition File
// Version: 1.10

Camera Name                VisionHAWK 752x480 CMOS // Name Displayed
in Camdef Selection Dialog
Digitizer Type             4000 // Number
associated with VisionHawk CMOS Camera

Stride                     752 // Image Width
Rows                      480 // Image Height
X Offset                   0 // Image X Offset
Y Offset                   0 // Image Y Offset
Bits Per Pixel             8 // Bits that represent Pixel Value
Pixel Type                 0 // Type of Pixel: MONOCHROME=0,
COLOR_RGB=1, COLOR_BGR=2, COLOR_BAYGR8=3, COLOR_BAYRG8=4, COLOR_BAYGB8=5,
COLOR_BAYBG8=6, COLOR_HSI=7
Image Structure            1 // Pixel Organization: Packed=1, TwoPlanes =
2, ThreePlanes = 3
Async Control              1 // Controllable shutter time. Usually
using a pulse width specified in usecs
Usecs Per Frame           16667 // Fastest time to acquire a frame: 60 FPS
for VisionHawk CMOS Camera // -1 Disables timeout feature
// IO Configuration
GPIO Edit Mask             0x0000
GPIO Defaults              0x0001 // 1 General Purpose Input 3 General Purpose
Outputs
GPIO Count                 4
GPIO Inputs                1
GPIO Outputs               3
Sensors                    1 // One input dedicated
to Trigger signal
Strobes                    0
Virtual IO                  2048
IO Line Debounce High Time 2000 //usecs
IO Line Debounce Low Time 2000 //usecs
// Focus & Photometry Ranges
Gain Dflt                  20
Gain Min                   0
Gain Max                   100 // 0 to 100%
Exp Dflt                   400
Exp Min                    25
Exp Max                    100000 // 1/10 to 1/40,000
Focus Dflt                 400
Focus Min                  100
Focus Max                   4000 // 1 to 40 inches
// Lens Configuration
C-Mount                    0 // 0 = false, 1 = true
```

3

CHAPTER 3

Optics and Lighting

This section describes the optical and illumination characteristics of the Vision HAWK Smart Camera.

Optics

The Vision HAWK Smart Camera is available with a built-in CMOS sensor or CCD sensor.

Optics Specifications

Part Number	GMV-6800-1100G	GMV-6800-1200G	GMV-6800-1300G	GMV-6800-1110G	GMV-6800-1210G	GMV-6800-1310G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps			1/3", WVGA (752 x 480) CMOS, up to 60 fps		
Sensor Color	Monochrome					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus)					
Shutter	Global Shutter; Exposure: 6µs to 100ms (1/150,000 to 1/10) Default = 666µs (1/1,500)			Global Shutter; Exposure: 25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)		
Part Number	GMV-6800-1102G	GMV-6800-1202G	GMV-6800-1302G	GMV-6800-1112G	GMV-6800-1212G	GMV-6800-1312G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps			1/3", WVGA (752 x 480) CMOS, up to 60 fps		
Sensor Color	Monochrome					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus)					
Shutter	Global Shutter; Exposure: 6µs to 100ms (1/150,000 to 1/10) Default = 666µs (1/1,500)			Global Shutter; Exposure: 25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)		
Part Number	GMV-6800-1000G	GMV-6800-1002G	GMV-6800-1010G	GMV-6800-1012G	GMV-6800-1030G	GMV-6800-1032G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps		1/3", WVGA (752 x 480) CMOS, up to 60 fps		2/3", WUXGA (2048 x 1088) CMOS, up to 48 fps	
Sensor Color	Monochrome					
Focal Range	Depends on lens					
Shutter	Global Shutter; Exposure: 6µs to 100ms (1/150,000 to 1/10) Default = 666µs (1/1,500)		Global Shutter; Exposure: 25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)		Global Shutter; Exposure: 25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)	

Lens Substitution

The following procedure will change the appropriate settings in the Vision HAWK to allow the camera to focus properly after the lens has been changed. Please note that the Vision HAWK camera will use default lookup tables for the focus when the lens selection is changed, so the actual focus distances may not be as accurate as the lens that was shipped with the unit that was factory calibrated. Since default lookup tables are used, the Vision HAWK may not focus over the full focus range that is normally seen when using the factory calibrated lens.

After the lens has been changed via the parameters below, the new values will take effect the next time that the lens focus is modified.

1. Boot the Vision HAWK Smart Camera.
2. Connect to the Vision HAWK via Telnet using the IP address of the camera.
3. Send the following command after the Vision HAWK has booted:

stopAll

The response should be "**value = 1 = 0x1**".

4. Send the following command:

GetCurrentLens()

One of these 3 responses will be seen:

1 = 15deg

2 = 30deg

3 = 45deg

5. After camera has booted, send the following command (choose the appropriate command based on the lens):

SetCurrentLens(1)(to change to 15 degree lens)

The response should be:

"Now Set to 1 = 15deg"

"value = 0 = 0x0"

SetCurrentLens(2)(to change to 30 degree lens)

The response should be:

"Now Set to 2 = 30deg"

"value = 0 = 0x0"

SetCurrentLens(3)(to change to 45 degree lens)

The response should be:

"Now Set to 3 = 45deg"

"value = 0 = 0x0"

6. Send the following command:

startAll

The response should be "value = 1 = 0x1"

Illumination

The standard version of the Vision HAWK Smart Camera has built-in lighting (red LEDs for SXGA models and white LEDs for QXGA models). The LEDs can be configured to operate in multiple modes – Continuous, Strobe, and Off.

Warning: Running a red LED board on a camera with a white LED color profile will damage both the board and the camera.

Important: The Vision HAWK C-Mount (GMV-6800-1000G, GMV-6800-1002G, GMV-6800-1010G, GMV-6800-1012G, GMV-6800-1030G, GMV-6800-1032G) does not have built-in lighting. The Machine Vision Lighting Principles on the following page provide some suggestions for how to determine the appropriate external lighting for your application.

Lighting Specifications

Part Number	GMV-6800-1100G	GMV-6800-1200G	GMV-6800-1300G	GMV-6800-1110G	GMV-6800-1210G	GMV-6800-1310G
	GMV-6800-1102G	GMV-6800-1202G	GMV-6800-1302G	GMV-6800-1112G	GMV-6800-1212G	GMV-6800-1312G
Illumination	Red @ 617nm					
Part Number	GMV-6800-1000G	GMV-6800-1002G	GMV-6800-1010G	GMV-6800-1012G	GMV-6800-1030G	GMV-6800-1032G
Illumination	External Illumination Required					

Machine Vision Lighting Principles

Proper lighting is critical to the success of a machine vision application. Depending on the requirements of your application, you may also need to add external lighting from Microscan's NERLITE family of machine vision lighting products.


Consider the following when setting up your application:

- Is the surface of the object flat, slightly bumpy, or very bumpy?
- Is the surface matte or shiny?
- Is the object curved or flat?
- What is the color of the object or area being inspected?
- Is the object moving or stationary?

Machine vision lighting should maximize contrast of the areas or features being inspected while minimizing the contrast of everything else.



Before correct lighting


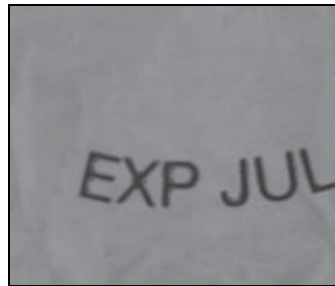


**After correct lighting with
a NERLITE CDI Illuminator**

External Illumination Control

The Vision HAWK C-Mount Smart Camera supports external lighting with Microscan’s NERLITE Smart Series lights. The diagram below demonstrates how the camera and light can be configured with two QX-1 interface devices. The light is controlled using the **Lighting** control in the **Camera** configuration settings of AutoVISION software.

The camera’s trigger is synchronized with the light to create a strobe effect for reliable image acquisition.

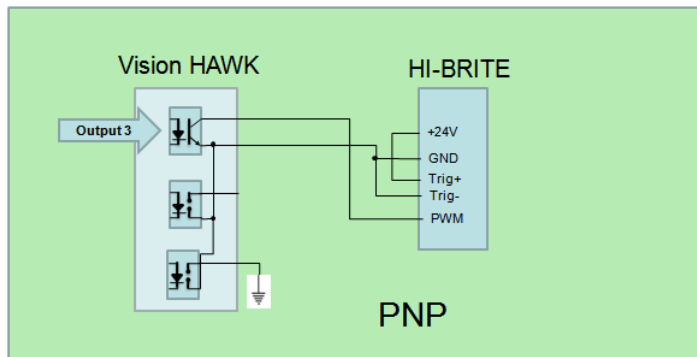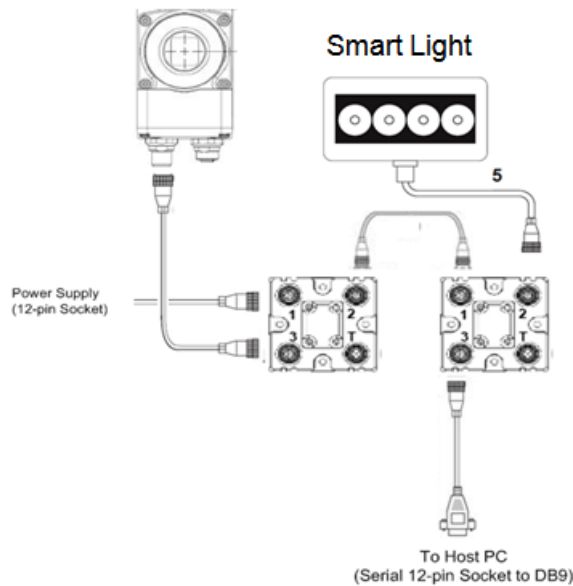

Using EtherNet/IP

This section provides information necessary for using the Vision HAWK in an EtherNet/IP environment.

Vision HAWK EtherNet/IP

Throughout this document, EtherNet/IP may be referred to as “EIP”, and Vision HAWK may be abbreviated “VH”. The EIP interface version described here is 1.1. This version number is associated with the EIP interface for Microscan’s Device Type of 100, Machine Vision Smart Cameras. It is not the software version of AutoVISION, Visionscape, or Vision HAWK firmware.

Overview

The EIP interface will be identified as Vendor Specific (100). The interface is designed to support Class 1 Implicit IO data exchange, and Class 3 Explicit messages for serial commands not accessible with Implicit messaging.

Necessary Tools

The following tools are helpful for configuring the EIP:

- AutoVISION and FrontRunner
- EtherNet/IP Messaging Tool – can be a PLC or Software Tool, must be capable of sending explicit messages and establishing Class 1 connections. EIPScan from Pyramid Solutions is an example of such a tool.
- Terminal emulation or serial communication tool that can connect to serial uart and TCP socket, such as HyperTerminal or Putty.

EtherNet/IP Terms of Use

EtherNet/IP Technology is governed by the Open DeviceNet Vendor Association, Inc (ODVA). Any person or entity that makes and sells products that implement EtherNet/IP Technology must agree to the Terms of Usage Agreement issued by ODVA. See www.odva.org for details.

EtherNet/IP Object Model

Vision HAWK uses Class 1 connected messaging to communicate most of its data and services in a single connection.

EIP Identity

Device Type

Device type is 100, Vendor Specific, Machine Vision Smart Camera.

Vendor ID

Microscan's ODVA Vendor ID is 1095.

Product Code

The Product Code is 6899.

Interface Revision

Major.Minor = 1.1

Connection Properties: Class 1 Implicit Messaging

Input Assembly Instance (to PLC/client): 102

Output Assembly Instance (to Vision HAWK): 114

Size: Fixed, 320 bytes in both directions

Input Trigger/Trigger Mode: Cyclic

RPI (Requested Packet Interval): Greater than 20 ms recommended. 10 ms to 3.2 s allowed.

Input Type/Connection Type:

- Point-to-Point (PLC OUT, O->T)
- Point-to-Point and Multicast (PLC IN, T->O)

Connection Priority: Scheduled

Assembly Layout

Input Assembly

The input assembly layout is described below and shown in the following diagram.


Bytes	Name	Description
0...1	STATUS	Status register of the camera, each bit of this register represents a different state item. See Camera Status Register for bit descriptions
2...3	ECHO	This 16 bit word value reflects back to the PLC the value that the PLC wrote to the output assembly ECHO register. The PLC can verify the output assembly has been written to the camera when this value matches the written value.
4...7	CmdCodeRslt	When Status.ExeCmdAck goes active in response to Control.ExeCmd, CmdCodeRslt reflects the result of the command invoked by Control.CmdCode. See CmdCodeRslt for definitions.
8...11	CmdRet	When Status.ExeCmdAck goes active in response to Control.ExeCmd, CmdRet contains the data returned from the command invoked by Control.CmdCode. See CmdRet for definitions.
12...13	reserved	Reserved for future use.
14...15	State	Device State register. Depending on the current state of the camera, certain STATUS and CONTROL features may or may not be operational. See State for definitions.
16...17	VIO	Each bit reflects the state of a virtual IO point. The least significant bit reflects vio point 145, the most significant bit vio point 160
18...19	reserved	Reserved for future use.
20...27	bool1-64	Each bit represents a bool value. The least significant bit of byte 20 reads the value of bool1. The most significant bit of byte 27 reads bool64.
28...47	int1-10	Each pair of sequential bytes represents a 16 bit signed integer value. The 20 bytes represent 10 integers. From bytes 28 & 29 for the value of int1 through bytes 46 & 67 for the value of int10.
48...87	long1-10	Each group of 4 bytes represents a 32 bit signed integer value. The 40 bytes represent 10 long integers. From bytes 48-51 for the value of long1 through bytes 84-87 for the value of long10.
88...127	float1-10	Each group of 4 bytes represents a 32 bit signed integer value. The 40 bytes represent 10 long integers. From bytes 48-51 for the value of long1 through bytes 84-87 for the value of long10.
128...223	string1	These 96 bytes can store a string of up to 92, 8 bit characters, with the first 4 bytes containing the length value.
224...255	string2	Each of these 32 byte groups can store a string of up to 28, 8 bit characters, with the first 4 bytes containing the length value.
256...287	string3	
288...319	string4	

The input assembly layout is shown here:

Byte		Byte		Byte		Byte	
0	STATUS	64	long5	128		192	256
2	ECHO	66		130		194	258
4	CMD CODE RSLT	68	long6	132		196	260
6		70		134		198	262
8	CMD RET	72	long7	136		200	264
10		74		138		202	266
12	reserved	76	long8	140		204	268
14	STATE	78		142		206	270
16	VIO	80	long9	144		208	272
18	reserved	82		146		210	274
20	bool1...16	84	long10	148		212	276
22	bool17...32	86		150		214	278
24	bool33...48	88	float1	152		216	280
26	bool49...64	90		154		218	282
28	int1	92	float2	156		220	284
30	int2	94		158		222	286
32	int3	96	float3	160	string1	224	288
34	int4	98		162		226	290
36	int5	100	float4	164		228	292
38	int6	102		166		230	294
40	int7	104	float5	168		232	296
42	int8	106		170		234	298
44	int9	108	float6	172		236	300
46	int10	110		174		238	302
48	long1	112	float7	176		240	304
50		114		178		242	306
52	long2	116	float8	180		244	308
54		118		182		246	310
56	long3	120	float9	184		248	312
58		122		186		250	314
60	long4	124	float10	188		252	316
62		126		190		254	318

Status: Camera Status Register (16 bit)

Each bit of this register represents a different state of the camera’s operation. A high value of 1 indicates that state is active (true).

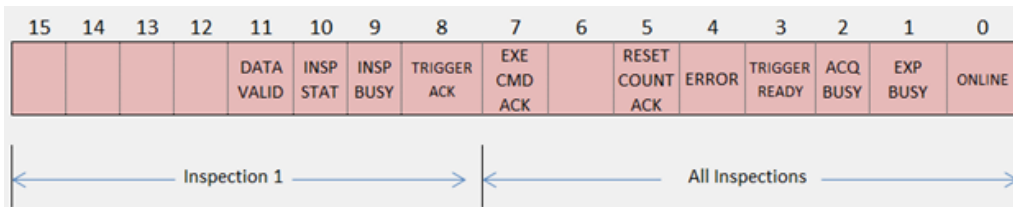

Bit	Name	Description
0	ONLINE	Inspections are running
1	EXP BUSY	The camera is busy capturing an image. The camera should not be triggered or the part under inspection moved during this time if illuminated.
2	ACQ BUSY	The camera is busy acquiring an image. The camera cannot be triggered while busy.
3	TRIGGER READY	The camera is ready to be triggered. This is equivalent to ONLINE == 1 and ACQ BUSY == 0.
4	ERROR	An error has occurred. Set the RESET ERROR control bit high to clear.
5	RESET COUNT ACK	This bit mirrors the RESET COUNT control bit. The PLC can be certain the reset command was received by the camera when this goes high. The PLC can then bring the RESET COUNT control signal back low.
7	EXE CMD ACK	This bit mirrors the EXE CMD control bit.
8	TRIGGER ACK	This bit mirrors the TRIGGER control bit.
9	INSP BUSY	This bit is high when inspection 1 is busy processing an image.
10	INSP STAT	This bit represents the inspection 1 status result. It is 1 if the inspection passes. It is only valid when DataValid goes high.
11	DATA VALID	This bit goes high when inspection 1 is complete. The PLC should clear this signal by setting RESET DV high once it has read results.

CmdCodeRslt (32 bit)

The value of CmdCodeRslt is only valid when ExeCmdAck is active (1), in response to ExeCmd being active.

CmdCodeRslt value (base 16 hex)	Meaning
0x0000_0000	Success
0x0100_0000	Fail. Possible reasons: Camera under PC control. Job cannot be changed.
0x0200_0000	Fail: No Job in slot.
0x0300_0000	Fail: Unknown cmd.

CmdRet (32 bit)

The value of CmdRet is only valid when ExeCmdAck is active (1), in response to ExeCmd being active, and CmdCodeRslt is 0 (Success). The following chart shows which CmdCodes return data in the CmdRet register.

CmdRet value (32 bit)	Associated CmdCode	Meaning
0	0x1000_0000 to 0x1300_0000 (Job Change type)	Na
1 – 255	0x1800_0000 (Query Active Job Slot)	Active Job Slot #

State (16 bit)

State reflects the following operational condition of the camera:

State value (16 bit)	Meaning	Typical action required by the client (plc), or system operator
0	Offline	Perform job change or put camera online.
1	Online	Normal runtime operation: Monitor TriggerReady and DataValid signals. Trigger the camera.
2	Changing Vision Job	If camera is under pc control: Wait until State changes to Offline or Online. If plc is controlling the job change: Use ExeCmd, CmdCode, ExeCmdAck, and CmdCodeRslt to complete the operation.
3	Booting*	Wait for camera to transition to Online or Offline.
4	Empty (no Vision Job)	Load a new job from AutoVISION or Front Runner.

*Booting (3) State: This will rarely be seen by the plc.

The value of State determines which Control and Status signals are available:

Control/Status Signal	State				
	0 (Offline)	1 (Online)	2 (Job Change)	3 (Booting)	4 (Empty)
Control.GO ONLINE	Y				
“.GO OFFLINE		Y			
“.RESET ERROR					
“.RESET COUNT	Y	Y			
“.EXE CMD	Y	Y	Y		Y
“.TRIGGER		Y			
“.RESET DATA VALID		Y			
Status.ONLINE	Y	Y	Y	Y	Y
“.ERROR					
“.RESET COUNT ACK	Y	Y			
“.EXE CMD ACK	Y	Y	Y		Y
“.EXP BUSY		Y			
“.ACQ BUSY		Y			
“.TRIGGER READY		Y			
“.TRIGGER ACK		Y			
“.INSP BUSY		Y			
“.INSP STAT		Y			
“.DATA VALID		Y			

Where:

Y = Signal is valid for this State

Empty cell = Signal is not valid for this State

VIO Register Bits

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
v160	v159	v158	v157	v156	v155	v154	v153	v152	v151	v150	v149	v148	v147	v146	v145

Output Assembly

The output assembly layout is described below and shown in the following diagram.


Bytes	Name	Description
0...1	CONTROL	Control register of camera. Each bit of this register represents a different status item. See Camera Control Register for bit descriptions
2...3	ECHO	This 16 bit value is reflected back to the PLC in the input assembly ECHO register. The PLC can verify the output assembly has been written to the camera when the input assembly matches this written value.
4...7	CmdCode	Specifies the process invoked in the camera when Control.ExeCmd goes active. See CmdCode for definitions.
8...11	CmdArg	Additional argument data for the CmdCode. See CmdArg for definition.
12...15	reserved	Reserved for future use.
16...17	VIO	Each bit reflects the state of a virtual IO point. The least significant bit reflects vio point 129, the most significant bit is vio point 144
18...19	Reserved	Reserved for future use.
20...27	bool	Each bit represents a bool value. The least significant bit of byte 20 writes the value of bool101. The most significant bit of byte 27 writes bool164.
28...47	int101-110	Each pair of sequential bytes represents a 16 bit signed integer value. The 20 bytes represent 10 integers. From bytes 28 & 29 to write the value of int101 through bytes 46 & 67 for the value of int110.
48...87	long101-110	Each group of 4 bytes represents a 32 bit signed integer value. The 40 bytes represent 10 long integers. From bytes 48-51 for the value of long101 through bytes 84-87 for the value of long110.
88...127	float101-110	Each group of 4 bytes represents a 32 bit signed integer value. The 40 bytes represent 10 long integers. From bytes 48-51 for the value of long101 through bytes 84-87 for the value of long110.
128...223	string101	These 96 bytes can store a string of up to 92 bytes, with the first 4 bytes containing the length value.
224...255	string102	Each of these 32 byte groups can store a string of up to 28 bytes, with the first 4 bytes containing the length value.
256...287	string103	
288...319	string104	

The output assembly layout is shown here:

Byte		Byte		Byte		Byte	
0	CONTROL	64	long105	128		192	256
2	ECHO	66		130		194	258
4	CMD CODE	68	long106	132		196	260
6		70		134		198	262
8	CMD ARG	72	long107	136		200	264
10		74		138		202	266
12	reserved	76	long108	140		204	268
14		78		142		206	270
16	VIO	80	long109	144		208	272
18	reserved	82		146		210	274
20	bool101_116	84	long110	148		212	276
22	bool117_132	86		150		214	278
24	bool133_148	88	float101	152		216	280
26	bool149_164	90		154		218	282
28	int101	92	float102	156		220	284
30	int102	94		158		222	286
32	int103	96	float103	160	string101	224	288
34	int104	98		162		226	290
36	int105	100	float104	164		228	292
38	int106	102		166		230	294
40	int107	104	float105	168		232	296
42	int108	106		170		234	298
44	int109	108	float106	172		236	300
46	int110	110		174		238	302
48	long101	112	float107	176		240	304
50		114		178		242	306
52	long102	116	float108	180		244	308
54		118		182		246	310
56	long103	120	float109	184		248	312
58		122		186		250	314
60	long104	124	float110	188		252	316
62		126		190		254	318

Control: Camera Control Register (16 bit)

Each bit of this register controls a function on the camera. Transitions from a low state of 0, to a high state of 1, initiates the associate operation. The PLC should return the state of the control bit back to 0 after it has acknowledged the camera has processed the control. Unused bits should remain 0.

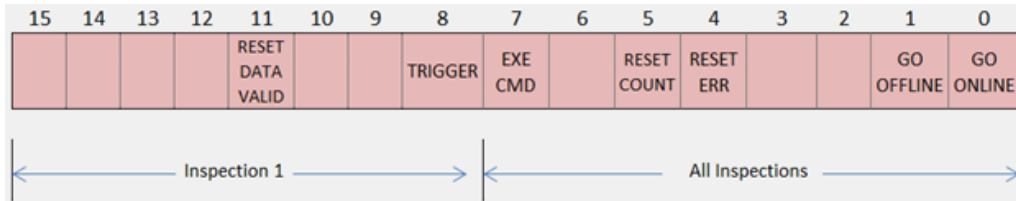

Bit	Name	Description
0	GO ONLINE	Start all inspections running
1	GO OFFLINE	Stop all inspections
4	RESET ERROR	Reset ERROR in the Status register
5	RESET COUNT	Reset all inspection counts
7	EXECMD	Execute the command specified by Control.CmdCode
8	TRIGGER	Trigger Inspection 1. The inspection must be configured for a triggered image acquisition.
11	RESET DATA VALID	Reset the Data Valid signal of the Status register


CmdCode and CmdArg (32 bit)

Specifies the process invoked in the camera when Control.ExeCmd goes active.

List of available CmdCodes, and associated CmdArg

CmdCode value	CmdArg	Operations performed
0x1000_0000	Job Slot (1-255)	Go Offline, Load job from specified slot
0x1100_0000	Job Slot (1-255)	Go Offline, Load job from specified slot, Go Online
0x1200_0000	Job Slot (1-255)	Go Offline, Load job from specified slot, Make it the boot job
0x1300_0000	Job Slot (1-255)	Go Offline, Load job from specified slot, Make it the boot job, and Go Online
0x1800_0000	na	Query active job slot. CmdRet will contain the active job slot number when the operation is done.

CmdCode and ExeCmd Operation

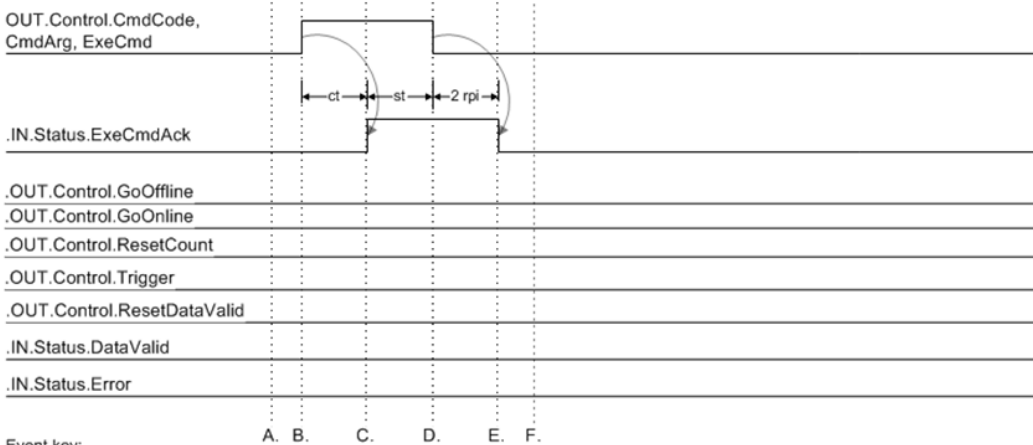

Event key:

- A. If DataValid or Error are present, clear them.
Set the following control signals idle, and keep them idle while the command is processed by the camera:
GoOffline, GoOnline, Trigger, ResetDataValid, ResetCount, ResetError.
- B. Populate CmdCode and CmdArg, then activate ExeCmd.
- C. Camera executes the command (may take up to a minute). While processing a Job Change command, State will be 2. Camera activates ExeCmdAck when it is done processing the command.
- D. When the PLC sees an active ExeCmdAck, verify CmdCodeRslt is 0, and Error is 0. Process CmdRet if needed, then clear ExeCmd.
- E. Camera clears ExeCmdAck when ExeCmd goes inactive. When ExeCmdAck goes inactive, CmdCodeRslt and CmdRet are no longer valid, and it may take a few seconds for the camera State and Online signals to settle to a final value (typically Online or Offline).
- F. Camera can now be put online and triggered.

Notes:

st = PLC program scan time

ct = Command processing time in the camera. May take up to a minute for some commands.

rpi = Requested Packet Interval. Configured in the plc's EIP module connection properties. Allowed rpi is 10 ms to 3.2 s.

All signals represent the state of plc tags.

VIO Register Bits

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
v144	v143	v142	v141	v140	v139	v138	v137	v136	v135	v134	v133	v132	v131	v130	v129

Connection Properties: Class 3 Explicit Messaging

All Class 1 IO assembly data and additional data are accessible via Explicit message. Input data (Vision HAWK to PLC/Client) occupies attributes 1 to 100 of the classes. Output data (PLC/Client to Vision HAWK) occupies attributes 101 to 200.

Service:

- Get Attribute Single (0xE)
- Set Attribute Single (0x10)

Classes:

- bool = 104 (0x68)
- int = 105 (0x69)
- long = 106 (0x6A)
- float = 107 (0x6B)
- string = 108 (0x6C)
- control/status (mixed data types) = 109 (0x6D)

Instance: 1

Attribute:

- 1 to 100 = In to PLC/Client
- 101 to 200 = Out to VH

Attribute Layout

When using explicit EIP messaging, all global data objects can be read or written. Each data type is stored in its own class object and an instance of 1 to read the global data. For example to read float2 the EIP request would be for Service Code 14 (0xE), Class 107 (0x6B), Instance 1, Attribute 2.

Class 104		Class 105		Class 106		Class 107		Class 108		Class 109	
Attr#		Attr#		Attr#		Attr#		Attr#		Attr#	
1	bool1	1	int1	1	long1	1	float1	1	string1	1	CONTROL
2	bool2	2	int2	2	long2	2	float2	2	string2	2	STATUS
3	bool3	3	int3	3	long3	3	float3	3	string3	3	
4	bool4	4	int4	4	long4	4	float4	4	string4	4	
5	bool5	5	int5	5	long5	5	float5	5	string5	5	
6	bool6	6	int6	6	long6	6	float6	6	string6	6	ECHO
7	bool7	7	int7	7	long7	7	float7	7	string7	7	CMD CODE
8	bool8	8	int8	8	long8	8	float8	8	string8	8	CMD ARG
9	bool9	9	int9	9	long9	9	float9	9	string9	9	CMD CODE RSLT
10	bool10	10	int10	10	long10	10	float10	10	string10	10	CMD RET
...	11	STATE
199	bool199	199	int199	199	long199	199	float199	199	string199	199	...
200	bool200	200	int200	200	long200	200	float200	200	string200	200	...


The value received in response to Get Attribute Single depends on the type:

- bool will return a 16 bit word with 0 for false or 1 for true
- Ints will return a 16 bit signed integer
- longs will return a 32 bit signed integer
- floats will return a 32 bit floating point number
- strings will return a counted string. Total size of a string data item is 2048 bytes. This includes a 4 byte “length” field followed by 2044 eight bit characters. When accessing strings explicitly, they are not limited to the size in the IO assemblies. Eg. string3 is limited to 28 bytes in the input assembly. If the actual string is longer than 28 bytes, it will be truncated when reading via the assembly, but not truncated when reading the same string via an attribute explicitly.

Assembly Class 109 can be used to read and write special EIP specific registers.

Attr#	Name	Description
1	CONTROL	The control register (16 bit). See Camera Control Register for bit definitions.
2	STATUS	The status register (16 bit). See Camera Status Register for bit definitions.
6	ECHO	The ECHO register (16 bit) (read only if implicit write is enabled)
7	CMD CODE	The command code register (32 bit). See CmdCode .
8	CMD ARG	The command argument register (32 bit). See CmdArg .
9	CMD CODE RSLT	The command code result register (32 bit). See CmdCodeRslt .
10	CMD RET	The command return value register (32 bit). See CmdRet .
11	STATE	The device state register (16 bit). See State for definitions.

EIP Control/Status Signal Operation

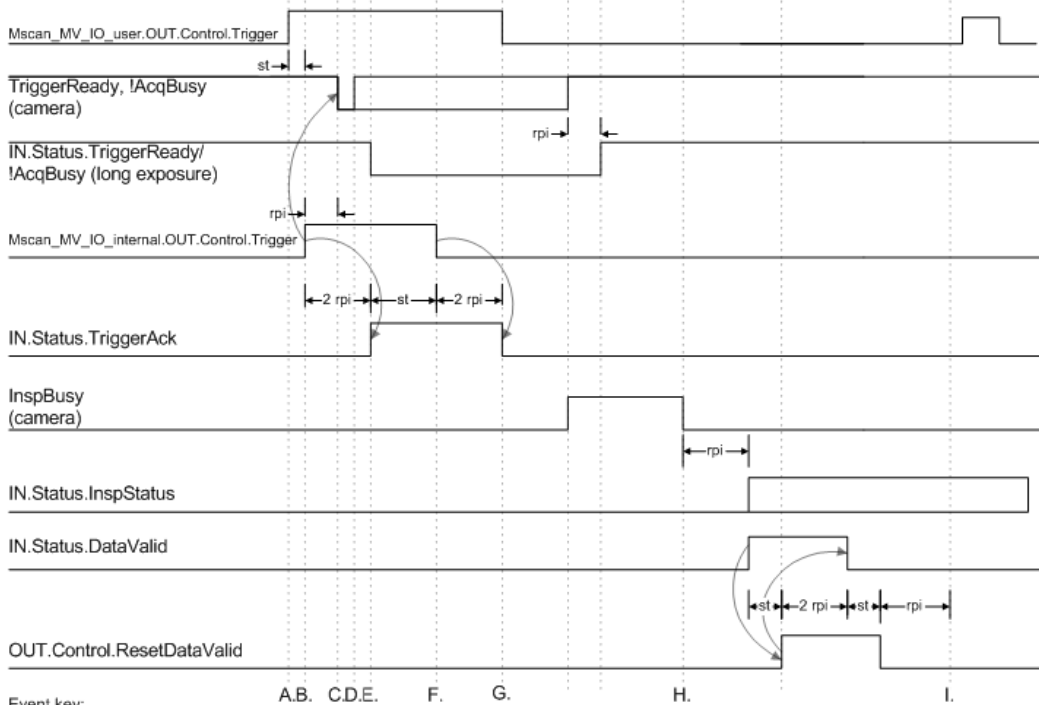

Event key:

- On rising edge of system trigger, the user app activates Mscan_MV_IO_user.OUT.Control.Trigger to trigger the demo code.
- Demo code detects rising edge of Mscan_MV_IO_user.OUT.Control.Trigger, and if the camera is ready, sends a trigger to the camera.
- Camera acquisition begins (may be delayed by one rpi).
- If the camera's exposure time is shorter than the rpi, no change will be seen in TriggerReady and AcqBusy plc IN tags.
- Camera firmware acks the trigger. The demo code may not see the ack until two rpi after the trigger was sent (event B).
- Demo code detects TriggerAck and clears the Trigger.
- Demo code detect falling edge of TriggerAck and clears the user Trigger.
- Camera internal signal DataValid will go high when InspBusy goes low
- Plc logic must delay one rpi time before re-asserting ResetDataValid

Notes:

- The chart shows the workings of the Trigger and ResetDataValid Control signals, and the TriggerAck and DataValid Status signals.
- st = plc program scan time
- rpi = Requested Packet Interval. Configured in the plc's EIP module connection properties. Allowed rpi is 10 ms to 3.2 s.
- All signals represent the state of plc tags, except where noted as "(camera)". The cam signals shown are visible in the EIP interface, but the state of the plc tags and internal firmware signals will be different for at least one or two requested packet intervals (rpi).
- The plc is running the demo code distributed with the camera. The demo code and user app use the Mscan_MV_IO_user tag set as the primary control, status, and data interface for the user app. All signal operations are still true even if the plc demo code is not used.
- TriggerReady/!AcqBusy: VisionHAWK camera exposure times can range from less than 1 ms, up to 100 ms.

Data Type Descriptions and Equivalents in PLC and EDS/CIP Environments

AV / VisionScape	Description	RSLogix equivalent	Description	EDS / EIP equivalents	Description
Bool	1 bit	BOOL	1 bit	BOOL	1 bit
				WORD	16 BOOLs
				LWORD	64 BOOLs
Int	16 bit signed integer	INT	16 bit signed integer	INT	16 bit signed integer
Long	32 bit signed integer	DINT	32 bit signed integer	DINT	32 bit signed integer
Float	32 bit floating point	REAL	32 bit floating point	REAL	32 bit floating point
String	32 bit length field followed by 8 bit ASCII characters	STRING	32 bit length field followed by 8 bit ASCII characters	DINT + USINT[]	DINT (length) + USINT array of characters. USINT = 8 bit integer

PLC Tags and Serial Command Names

PLC tags are separated into IN and OUT for data direction. Within the IN and OUT groups, the tags are sub-divided into fixed “Status” and “Control” fields, plus user-defined linked data fields. This table shows how PLC tag names correspond to serial commands.

IN (VH to PLC)			OUT (PLC to VH)		
PLC tag prefix	Serial cmd prefix	Tag name	PLC tag prefix	Serial cmd prefix	Tag name
IN.Status.	eip.status.	Online (1)	OUT.Control.	eip.control.	GoOnline ⁱ
IN.Status.	eip.status.	Online (0)	OUT.Control.	eip.control.	GoOffline ⁱⁱ
IN.Status.	eip.status.	Error	OUT.Control.	eip.control.	ResetError
IN.Status.	eip.status.	ResetCountAck	OUT.Control.	eip.control.	ResetCount
IN.Status.	eip.status.	TriggerAck	OUT.Control.	eip.control.	Trigger
IN.Status.	eip.status.	DataValid	OUT.Control.	eip.control.	ResetDataValid
IN.Status.	eip.status.	ExeCmdAck	OUT.Control.	eip.control.	ExeCmd
IN.Status.	eip.status.	TrigReady ⁱⁱⁱ	-	-	-
IN.Status.	eip.status.	AcqBusy	-	-	-
IN.Status.	eip.status.	ExpBusy	-	-	-
IN.Status.	eip.status.	InspBusy	-	-	-
IN.Status.	eip.status.	InspStat	-	-	-
IN.Status.	eip.	Echo	OUT.Control.	eip.	Echo
IN.Status.	eip.	CmdCodeRslt	OUT.Control	eip.	CmdCode
IN.Status	eip.	CmdRet	OUT.Control	eip.	CmdArg
IN.Status.	eip.	State	-	-	-
IN.vio.	io.	v[145-160]	OUT.vio.	io.	v[129-144]
IN.bool.	eip.	bool[1-100]	OUT.bool.	eip.	bool[101-200] ^{iv}
IN.int.	eip.	int[1-100]	OUT.int.	eip.	int[101-200] ^v
IN.long.	eip.	long[1-100]	OUT.long.	eip.	long[101-200]
IN.float.	eip.	float[1-100]	OUT.float.	eip.	float[101-200]
IN.string.	eip.	string[1-100]	OUT.string.	eip.	string[101-200]

ⁱ When GoOnline is changed from 0 to 1, Online goes to 1.

ⁱⁱ When GoOffline is changed from 0 to 1, Online goes to 0.

ⁱⁱⁱ TrigReady, AcqBusy, ExpBusy, InspBusy, and InspStat are all IN-direction data only.

^{iv} bool1-bool64 are mapped to PLC tags in the IN assembly. Bool101-bool164 are mapped to PLC tags in the OUT assembly. Bool members numbered 65-100 and 165-200 are accessible via Explicit Message only.

^v For int, long, float, and string data:

Data members numbered 1-10 are mapped to PLC tags in the IN assembly.

Data members numbered 101-110 are mapped to PLC tags in the OUT assembly.

Data members numbered 11-100 and 111-200 are accessible via Explicit Message only.

Connector Pinouts

This section contains information about Vision HAWK Smart Camera connectors:

- M12 12-Pin Plug on page A-2
- M12 8-Pin Socket on page A-3

Vision HAWK Smart Camera Connectors

Connector A – M12 12-Pin Plug – Power, I/O, and Serial

Figure A-1 shows the M12 12-pin plug at connector A.

FIGURE A-1. Connector A – M12 12-Pin Plug

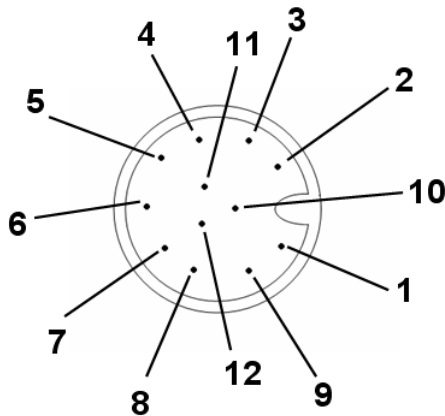


Table A-1 describes the M12 12-pin plug signals.

TABLE A-1. Connector A – M12 12-Pin Plug

Pin	Function
1	Trigger
2	Power
3	Default
4	Input 1
5	Output 1
6	Output 3
7	Ground
8	Input Common
9	Host RxD
10	Host TxD
11	Output 2
12	Output Common

Connector B – M12 8-Pin Socket – Ethernet

Figure A-2 shows the M12 8-pin socket at connector B.

FIGURE A-2. Connector B – M12 8-Pin Socket

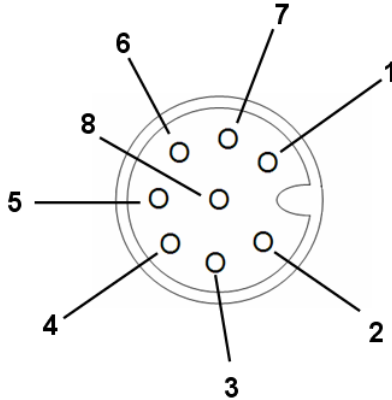


Table A-2 describes the M12 8-pin socket signals.

TABLE A-2. Connector B – M12 8-Pin Socket

Pin	Function
1	Terminated
2	Terminated
3	Terminated
4	TX (-)
5	RX (+)
6	TX (+)
7	Terminated
8	RX (-)

Cable Specifications

This section contains information about Vision HAWK Smart Camera cables.

Note: Cable specifications are published for information only. Microscan does not guarantee the performance or quality of cables provided by other suppliers.

TABLE B-1. Cable Part Numbers and Descriptions


Part Number	Descriptions
61-000160-01	Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m
61-000162-01	Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m
97-000003-01	Power Supply, M12 12-pin Socket, 1.3 m
99-000020-02	Trigger, M12 4-pin Plug, NPN, Dark On, 2 m

61-000160-01 Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m

The 61-000160-01 Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m is a 1 meter cable with an 8-pin M12 Ultra-Lock connector on one end and a standard RJ45 connector on the other end.

Figure B-1 shows the 61-000160-01 Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m.

FIGURE B-1. Cable, Host, Ethernet, M12 8-pin Plug to RJ45, 1 m

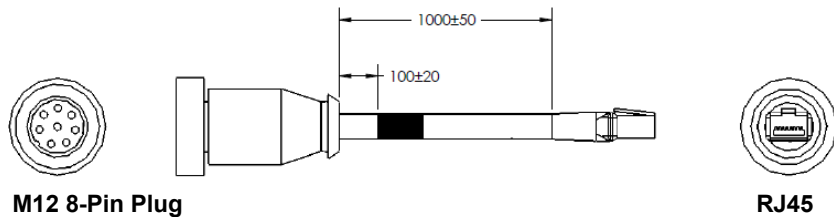

Important: Be sure that the retaining clip on the RJ45 connector has locked into place in the Ethernet receptacle on the PC and is not being impeded by the rubber housing.


Note: A screw-down version of this cable is also available (61-000160-02).

61-000162-01 Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m

The 61-000162-01 Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m is a 1 meter cable with a 12-pin M12 plug on one end and a 12-pin M12 socket on the other end.

Figure B-2 shows the 61-000162-01 Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m.

FIGURE B-2. Cable, Common, M12 12-pin Plug to M12 12-pin Socket, 1 m

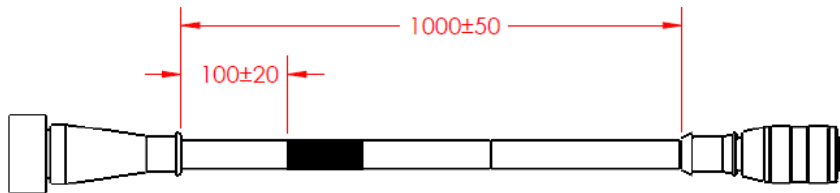


Note: A screw-down version of this cable is also available (61-000162-02).

97-000003-01 Power Supply, M12 12-pin Socket, 1.3 m

The 97-000003-01 Power Supply, M12 12-pin Socket, 1.3 m is a 90-254 VAC, +24VDC power supply.

Figure B-3 shows the 97-000003-01 Power Supply, M12 12-pin Socket, 1.3 m.

FIGURE B-3. Power Supply, M12 12-pin Socket, 1.3 m

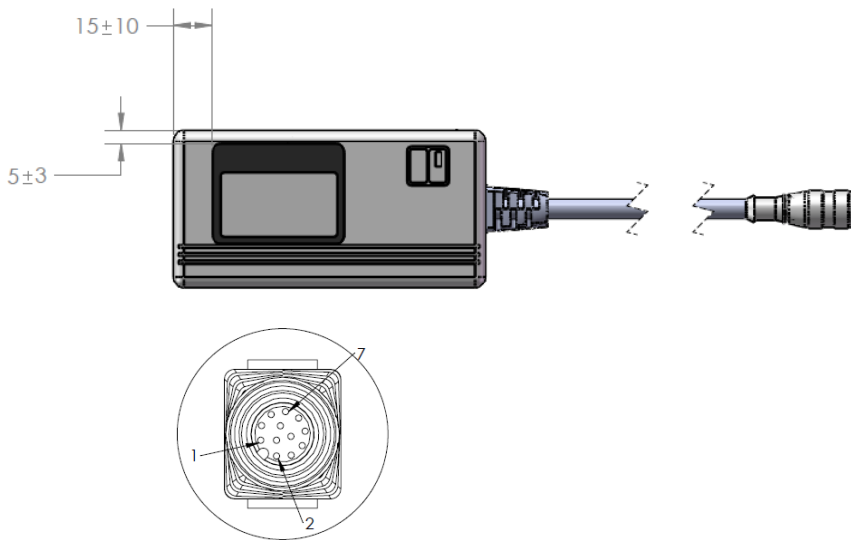


M12 12-Pin Socket

99-000020-02 Trigger, M12 4-pin Plug, NPN, Dark On, 2 m

The 99-000020-02 Trigger, M12 4-pin Plug, NPN, Dark On, 2 m is a photo sensor with a 4-pin M12 connector.

Figure B-4 shows the 99-000020-02 Trigger, M12 4-pin Plug, NPN, Dark On, 2 m.

FIGURE B-4. Trigger, M12 4-pin Plug, NPN, Dark On, 2 m

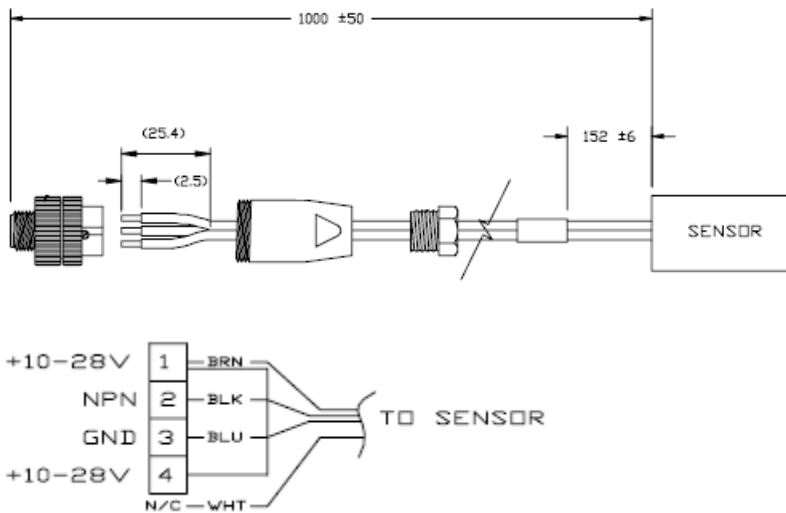

99-000020-02 Schematic

General Specifications

This section contains specifications and dimensions for the Vision HAWK Smart Camera and Vision HAWK C-Mount Smart Camera.

TABLE C–1. General Specifications

Part Number	GMV-6800-1100G	GMV-6800-1200G	GMV-6800-1300G	GMV-6800-1110G	GMV-6800-1210G	GMV-6800-1310G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps			1/3", WVGA (752 x 480) CMOS, up to 60 fps		
Sensor Color	Monochrome					
Height	1.59" (40.5 mm)					
Width	2.27" (57.6 mm)					
Depth	3.79" (96.3 mm)					
Weight	10 oz. (280 g)					
Power	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)			5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	Built-In Liquid Lens (standard Vision HAWK only)					
Communications	Ethernet					
Illumination	High Output LEDs: .564mW, 470, 525, 617nm					
Laser Output	5.0mW max.; Type: Laser diode; Output Wavelength: 655nm nominal; Operating Life: 50,000 hours @ 25° C; Safety Class: Class 1 Visible Laser					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O; Green Flash: Pass; Red X: Target					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus - standard Vision HAWK only)					
Shutter	6μs to 100ms (1/150,000 to 1/10) Default = 666μs (1/1,500)			25μs to 100ms (1/40,000 to 1/10) Default = 400μs (1/2,500)		
Operating Temperature	0° to 45° C (32° to 113° F)			0° to 50° C (32° to 122° F)		
Storage Temperature	–29° to 70° C (–20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					

TABLE C-1. Specifications (Continued)

Part Number	GMV-6800-1102G	GMV-6800-1202G	GMV-6800-1302G	GMV-6800-1112G	GMV-6800-1212G	GMV-6800-1312G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps			1/3", WVGA (752 x 480) CMOS, up to 60 fps		
Sensor Color	Monochrome					
Height	1.59" (40.5 mm)					
Width	2.27" (57.6 mm)					
Depth	3.79" (96.3 mm)					
Weight	10 oz. (280 g)					
Power	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)			5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	Built-In Liquid Lens (standard Vision HAWK only)					
Communications	Ethernet					
Illumination	High Output LEDs: .564mW, 470, 525, 617nm					
Laser Output	5.0mW max.; Type: Laser diode; Output Wavelength: 655nm nominal; Operating Life: 50,000 hours @ 25° C; Safety Class: Class 1 Visible Laser					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O; Green Flash: Pass; Red X: Target					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus - standard Vision HAWK only)					
Shutter	6μs to 100ms (1/150,000 to 1/10) Default = 666μs (1/1,500)			25μs to 100ms (1/40,000 to 1/10) Default = 400μs (1/2,500)		
Operating Temperature	0° to 45° C (32° to 113° F)			0° to 50° C (32° to 122° F)		
Storage Temperature	-29° to 70° C (-20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					

TABLE C-1. Specifications (Continued)

Part Number	GMV-6800-1000G	GMV-6800-1002G	GMV-6800-1010G	GMV-6800-1012G	GMV-6800-1030G	GMV-6800-1032G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps		1/3", WVGA (752 x 480) CMOS, up to 60 fps		2/3", WUXGA (2048 x 1088) CMOS, up to 48 fps	
Sensor Color	Monochrome					
Height	4.03" (102.3 mm)					
Width	2.27" (57.6 mm)					
Depth	1.59" (40.5 mm)					
Weight	11 oz. (320 g)					
Power	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 140mA at 24VDC (typ.)	
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	C-Mount Lens					
Communications	Ethernet					
Illumination	External Illumination Required					
Laser Output	N/A					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	Depends on lens					
Shutter	6µs to 100ms (1/150,000 to 1/10) Default = 666µs (1/1,500)		25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)		25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)	
Operating Temperature	0° to 45° C (32° to 113° F)		0° to 50° C (32° to 122° F)			
Storage Temperature	–29° to 70° C (–20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					

TABLE C-1. Specifications (Continued)

Part Number	GMV-6800-1104G	GMV-6800-1106G	GMV-6800-1114G	GMV-6800-1116G	GMV-6800-1204G	GMV-6800-1206G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps		1/3", WVGA (752 x 480) CMOS, up to 60 fps		1/3", SXGA (1280 x 960) CCD, up to 20 fps	
Sensor Color	Monochrome					
Height	1.59" (40.5 mm)					
Width	2.27" (57.6 mm)					
Depth	3.79" (96.3 mm)					
Weight	10 oz. (280 g)					
Power	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)	
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	Built-In Liquid Lens (standard Vision HAWK only)					
Communications	Ethernet					
Illumination	High Output LEDs: .564mW, 470, 525, 617nm					
Laser Output	5.0mW max.; Type: Laser diode; Output Wavelength: 655nm nominal; Operating Life: 50,000 hours @ 25° C; Safety Class: Class 1 Visible Laser					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus - standard Vision HAWK only)					
Shutter	6μs to 100ms (1/150,000 to 1/10) Default = 666μs (1/1,500)		25μs to 100ms (1/40,000 to 1/10) Default = 400μs (1/2,500)		6μs to 100ms (1/150,000 to 1/10) Default = 666μs (1/1,500)	
Operating Temperature	0° to 45° C (32° to 113° F)		0° to 50° C (32° to 122° F)		0° to 45° C (32° to 113° F)	
Storage Temperature	–29° to 70° C (–20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					

TABLE C-1. Specifications (Continued)


Part Number	GMV-6800-1214G	GMV-6800-1216G	GMV-6800-1304G	GMV-6800-1306G	GMV-6800-1314G	GMV-6800-1316G
Sensor	1/3", WVGA (752 x 480) CMOS, up to 60 fps		1/3", SXGA (1280 x 960) CCD, up to 20 fps		1/3", WVGA (752 x 480) CMOS, up to 60 fps	
Sensor Color	Monochrome					
Height	1.59" (40.5 mm)					
Width	2.27" (57.6 mm)					
Depth	3.79" (96.3 mm)					
Weight	10 oz. (280 g)					
Power	5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)	
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	Built-In Liquid Lens (standard Vision HAWK only)					
Communications	Ethernet					
Illumination	High Output LEDs: .564mW, 470, 525, 617nm					
Laser Output	5.0mW max.; Type: Laser diode; Output Wavelength: 655nm nominal; Operating Life: 50,000 hours @ 25° C; Safety Class: Class 1 Visible Laser					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	1" (33 mm) to ∞ (liquid lens autofocus - standard Vision HAWK only)					
Shutter	25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)		6µs to 100ms (1/150,000 to 1/10) Default = 666µs (1/1,500)		25µs to 100ms (1/40,000 to 1/10) Default = 400µs (1/2,500)	
Operating Temperature	0° to 50° C (32° to 122° F)		0° to 45° C (32° to 113° F)		0° to 50° C (32° to 122° F)	
Storage Temperature	-29° to 70° C (-20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					

TABLE C-1. Specifications (Continued)

Part Number	GMV-6800-1004G	GMV-6800-1006G	GMV-6800-1014G	GMV-6800-1016G	GMV-6800-1034G	GMV-6800-1036G
Sensor	1/3", SXGA (1280 x 960) CCD, up to 20 fps		1/3", WVGA (752 x 480) CMOS, up to 60 fps		2/3", WUXGA (2048 x 1088) CMOS, up to 48 fps	
Sensor Color	Monochrome					
Height	4.03" (102.3 mm)					
Width	2.27" (57.6 mm)					
Depth	1.59" (40.5 mm)					
Weight	11 oz. (320 g)					
Power	5-28VDC, 200mV p-p max ripple, 170mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 135mA at 24VDC (typ.)		5-28VDC, 200mV p-p max ripple, 140mA at 24VDC (typ.)	
Connector	M12 12-pin Ultra-Lock (Connector A) and M12 8-pin Ultra-Lock (Connector B)					
Lens Type	C-Mount Lens					
Communications	Ethernet					
Illumination	External Illumination Required					
Laser Output	N/A					
Indicators	LEDs: Trigger, Pass, Fail, Mode, Power, Network Activity, I/O					
Discrete I/O	Learn/Trigger: Bi-directional, optoisolated, 4.5–28V rated, (13mA at 24VDC); Outputs (1, 2, 3): Bi-directional, optoisolated, 1–28V rated, (I _{CE} <100mA at 24VDC, current limited by user)					
Image Acquisition	Progressive scan, square pixel					
Focal Range	Depends on lens					
Shutter	6μs to 100ms (1/150,000 to 1/10) Default = 666μs (1/1,500)		25μs to 100ms (1/40,000 to 1/10) Default = 400μs (1/2,500)		25μs to 100ms (1/40,000 to 1/10) Default = 400μs (1/2,500)	
Operating Temperature	0° to 45° C (32° to 113° F)		0° to 50° C (32° to 122° F)			
Storage Temperature	–29° to 70° C (–20° to 158° F)					
Humidity	Up to 90% (non-condensing)					
Compliance	CDRH, FCC, UL/cUL, CE (General Immunity for Light Industry: EN 55024:1998 ITE Immunity Standard; Radiated and Conducted Emissions of ITE Equipment: EN 55022:98 ITE Disturbances), CB, BSMI					


Dimensions

FIGURE C-1. Vision HAWK Smart Camera Dimensions

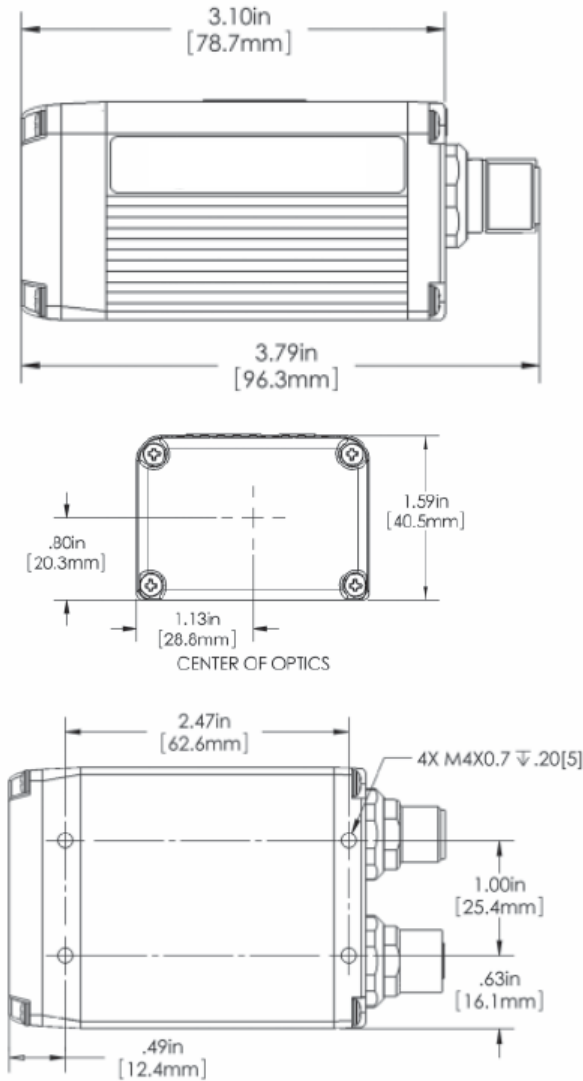


Note: Nominal dimensions shown. Typical tolerances apply.

FIGURE C-2. Vision HAWK C-Mount Smart Camera Dimensions

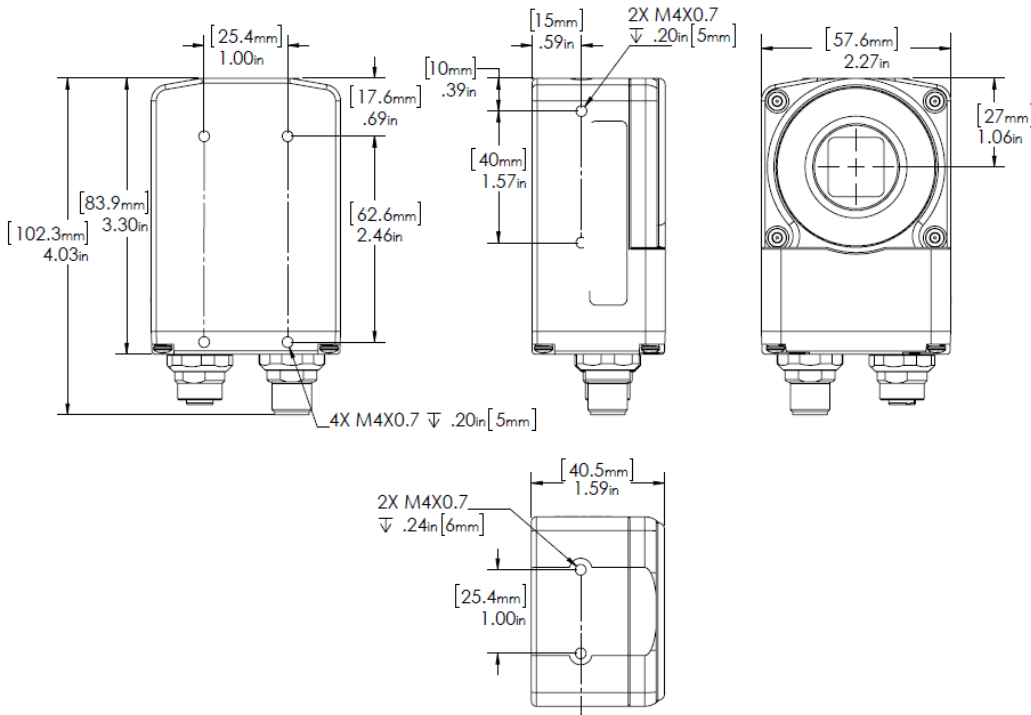

Note: Nominal dimensions shown. Typical tolerances apply.

Field of View and Working Distance

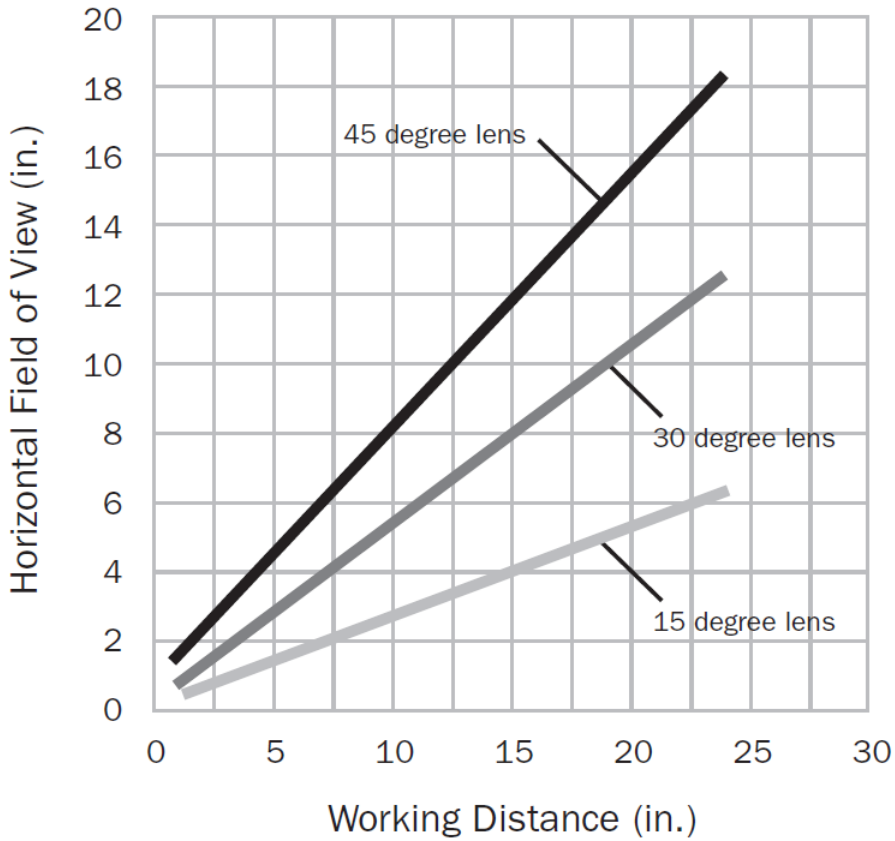

Web HMI

This appendix contains information about Vision HAWK support for Visualization HMIs. The Vision HAWK features a built in runtime monitoring web page that can be viewed from any supported browser on the same network. Supported browsers include:

- Internet Explorer 5.0 or later
- Firefox 3.0 or later

A built-in runtime HTML monitoring page suitable for HMI Panels that support Internet Explorer 5.0 or later browser such as the SIMATIC M277 Panel is available on the Vision HAWK. Note that the runtime page can also be displayed with the Firefox or Safari web browsers.


The Runtime Page shows an image from the Vision HAWK, along with inspection counters and buttons to control certain aspects of the display. A title bar displays the camera name, ip address and resolution. Options are available to change if and where the counters, buttons, and titlebar are displayed. Additionally, up to 10 results values from the job can be displayed along with each image. These values can either be overlaid over the image, or shown as a tabular report underneath the image.

All settings and options are set by the user via a series of option pages which can appear over the main display. All parameters are saved as cookies in the web browser environment, so that the next time the Runtime Page is loaded for that device, the layout and settings are retained.

The Runtime Image Page is accessed via a URL which contains the IP address of the camera, and optional parameters. The default page is accessed by simply specifying the IP address of the camera in a web browser, for example:

http:// 161.218.121.58 (example only, actual IP address of the Vision HAWK should be used)

If no previous settings have been set by the user, the display will be similar to the following:

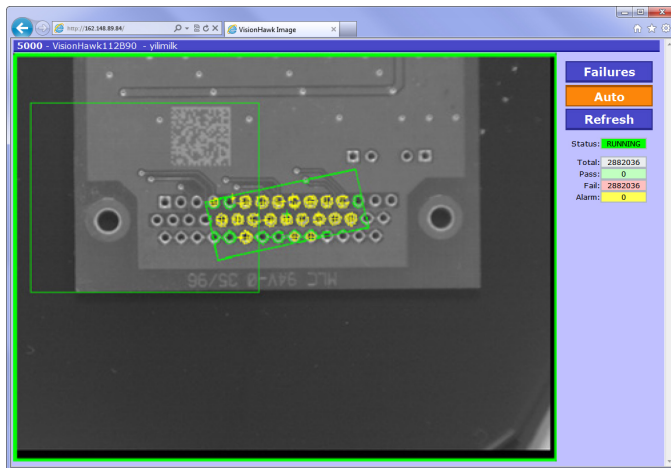

The default behavior is:

- Images and counters are for the first inspection in the job
- All images (pass & fail) are shown
- The display is automatically refreshed at regular intervals (auto=on)
- Graphics are overlaid on the image (note: not all graphics are available)
- A border is drawn around the image signifying the status of the inspection: green=pass, red=fail

The web page includes the following elements:

- **Title Bar** specifying the name of the camera, IP address, and job (avp) filename. Note that the file extension (.avp) is removed from the displayed filename.

VisionHawk112B90 - Helium (162.148.89.84) - thin-multiple buffer

- **Failures** Push Button – when this button is selected, only images related to failed inspections are displayed
- **Auto** Push Button – when this button is selected, the image and counters are updated automatically. If the button is not selected, both the image and counters are frozen.
- **Refresh** Push Button – pushing this button manually updates the image and counters



- **Status** – the run status of the inspection – RUNNING or STOPPED



- **Counters** – the Total, Pass, Fail and Alarm counters are shown for the selected inspection

Total:	5311
Pass:	5311
Fail:	0
Alarm:	0

Adding Options to the Base URL

An option can be specified by adding it to the end of the URL as follows:

`http://ip_address/?option=value`

Note the question mark “?” separating the URL from the optional parameter(s).

Additional options are specified by separating them with the ampersand “&” character.

`http://ip_address/?option1=value1&option2=value2&option3=value3`

Basic Options

NOTE: Some basic options can be changed by specifying optional values at the end of the URL. A much richer superset of these options can be configured by using the Settings Pages described below. It is possible to completely control the behavior of the Runtime Page without the use of optional parameters in the URL.

The graphics overlay can be turned on or off by using the “graphics” URL option. This is a setting that can have the value “on” or “off”. As an example, to turn the display of graphics off, the web page can be launched with the following URL:


`http:// 161.218.121.58/?graphics=off`

Option Name	Values	Default	Comments
graphics	on, off	on	on = graphics are shown overlaid on the image. (note: not all graphics are supported for web page display) off = graphics are not shown
type	last, failed	last	last = show last image for the selected inspection failed = show last failed image for the selected inspection
passfailborder	on, off	on	on = show a border around the image off = no border displayed

Note: ROI graphics are not produced by applications created by AutoVISION. They are displayed for applications created in Visionscape FrontRunner.

Layout Options

The overall layout of the Runtime Page can be configured. To change the layout, use the Settings screens as described in the next section. The following shows a default configuration:

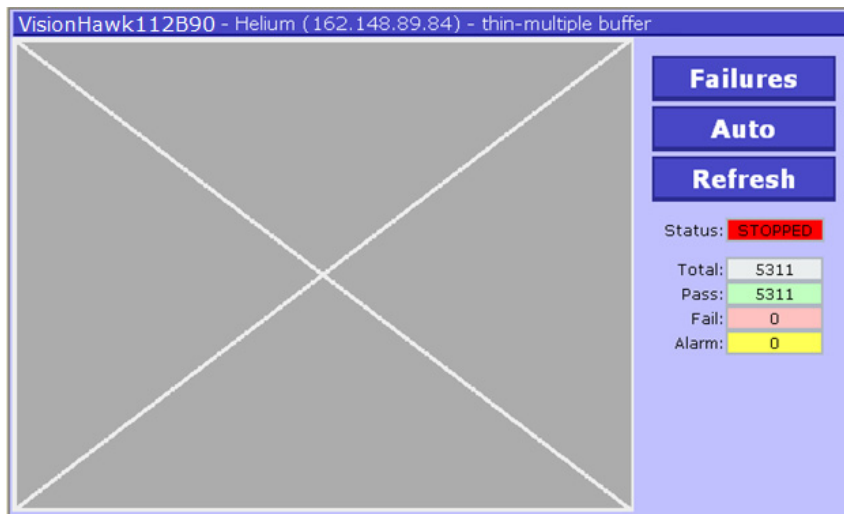


Buttons, status, and counters appear to the right of the image area. The buttons are size for use via a touch screen.

The following illustrates that the layout has been changed to position the counters at the top, shown without titles to save room. Additionally, an Options button now appears in the right side area.



Another example with buttons and counters at the top:

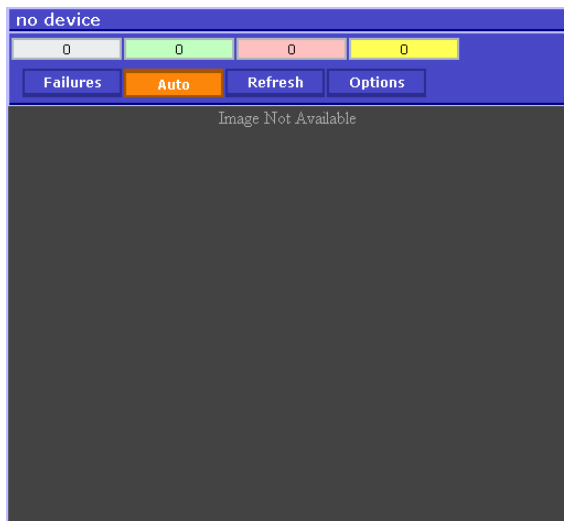


It is also possible to hide all elements except the image.

Settings Pages

All of the options and settings can be configured by using the settings pages. By default, there is no “Settings” button, so to show the settings pages, the URL should be specified with the “setopt=1” parameter as follows:


`http://ip_address/?setopt=1`

This will display the Runtime Page overlaid with the Options Setup page as follows:

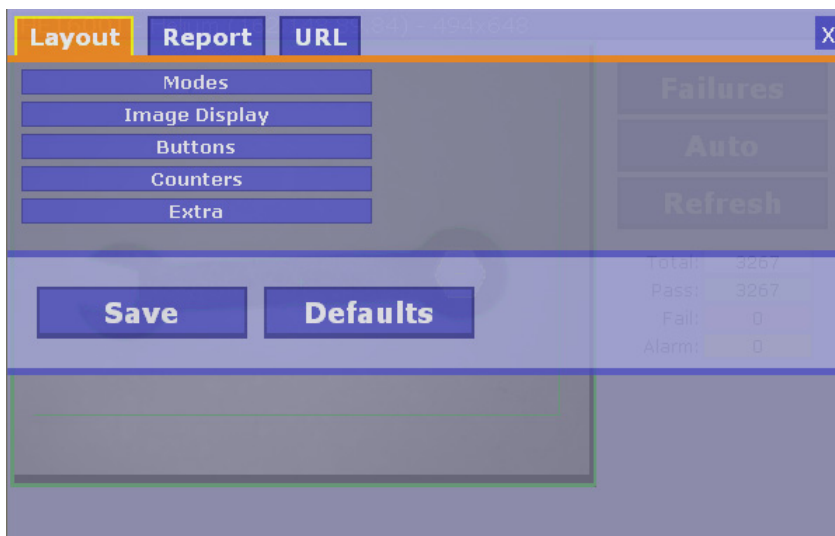

The tabs at the top of the screen can be used to navigate between the several setup pages. To close the setup screens and return to the main display, use the close button (“X”) at the upper right corner.


The Layout page controls many layout features, which are organized into groups. Selecting the Modes group results in the following options being displayed:

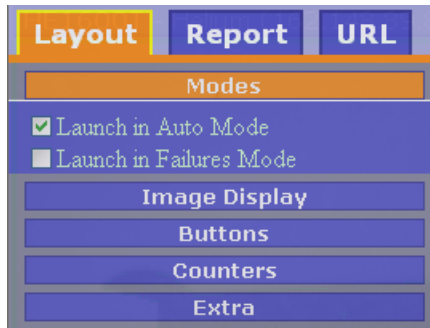

Refer to the table below for a description of the various settings. The other groups of settings appear as follows:

Image Display:

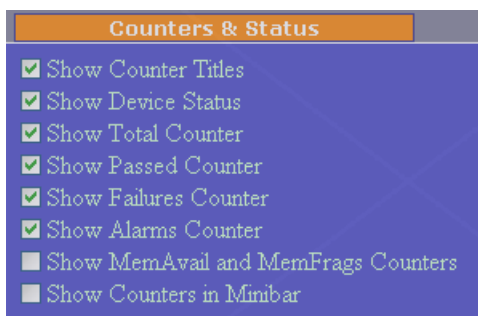

Buttons:**Counters and Status:****Extra Settings:**

As each option is checked or unchecked, the effect can be seen immediately by observing the layout of the Runtime Page shown behind the Options Setup Page.

Option Name	Function	Default
Launch in Auto Mode	Determines if the Runtime Page defaults to be in auto-refresh mode when launched.	On
Launch in Failures Mode	Determines if the Runtime Page defaults to be in show failures mode when launched.	Off
Show Tool Graphics	Shows tool graphics overlayed on the image. (NOTE: not all tool graphics are supported).	On
Show Pass/Fail Border	Shows a border around the image (green = pass, red = fail).	On
Warp Image to Fit Display	Scaling the image to fill the display area can have an adverse effect on the quality of the graphics displayed. As an example, lines can be missing. This setting improves the quality of the displayed graphics. Turning this off will reduce the overhead on the camera.	On
Fit Image Height Fit Image Width	These two settings determine how the image is scaled to fit the display area. If both are off, then no scaling is performed and the image is displayed 1:1. If both are on, then auto scaling is performed, fitting the width or height depending on which fits the display area better. Otherwise, the image is scaled either to fit the width or height.	Auto (both on)
Show Report	Shows the report configured using the Report Setup page.	On
Show Report in List Format	If on, then the report is shown in tabular form below the image. If off, then the report is overlayed on top of the image.	Off
Show Titlebar	If on, the titlebar is shown.	On
Show Buttons in Minibar	If on, the buttons are shown in the Minibar area, which appears under the titlebar. If off, the buttons will be.	Off


	shown to the right of the image area.	
Show Counters in Minibar	If on, the counters are shown in the Minibar area, which appears under the titlebar. If off, the counters will be shown to the right of the image area.	Off
Show Auto Button	If on, the Auto button is shown.	On
Show Failures Button	If on, the Failures button is shown.	On
Show Refresh Button	If on, the Refresh button is shown.	On
Show Options Button	If on, the Options button is shown. This button, when pressed, displays the Options Setup screen.	Off
Show Graphics Button	If on, the Graphics button is shown. This button controls if the graphics are overlaid on the image.	Off
Show Counter Titles	If on, a title is displayed to the left of each counter.	On
Show Device Status	If on, the device status (RUNNING, STOPPED) is displayed.	On
Show Total Counter	If on, the total counter is shown.	On
Show Passed Counter	If on, the passed counter is shown.	On
Show Failures Counter	If on, the failures counter is shown.	On
Show Alarms Counter	If on, the alarms counter is shown.	On
Show MemAvail and MemFrag Counts	If on, two counters are shown which display memory use status for the Vision HAWK.	Off

Pressing the Save button will save these settings so that they become the default behavior the next time the page is launched.

Pressing the Defaults button will reset the stored settings to the original defaults the next time the page is launched.


The Close button ("X" in upper right corner) will return to the main Runtime Page.

The Report Tab brings up the following Report Setup screen:

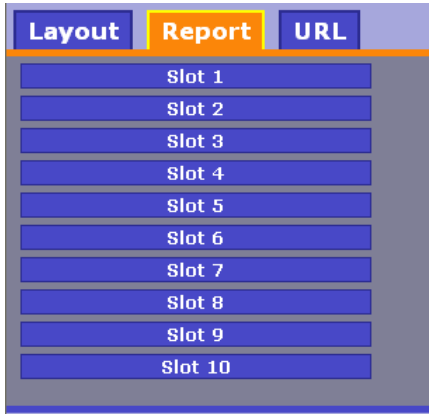

Data Values from datums in the selected inspection can be formatted and overlaid on the displayed image or shown in a table below the image. This is specified by assigning one of 10 data report slots. If overlaid on the image, each of these slots will represent a row in the display area, which is evenly split into 10 equal sized rows. The spacing will depend on the overall size of the display area, which in turn is dependant on the dimensions of the browser window. If the report is shown in list form, each slot corresponds to one of 10 rows.

Selecting a slot to configure results in the following display:

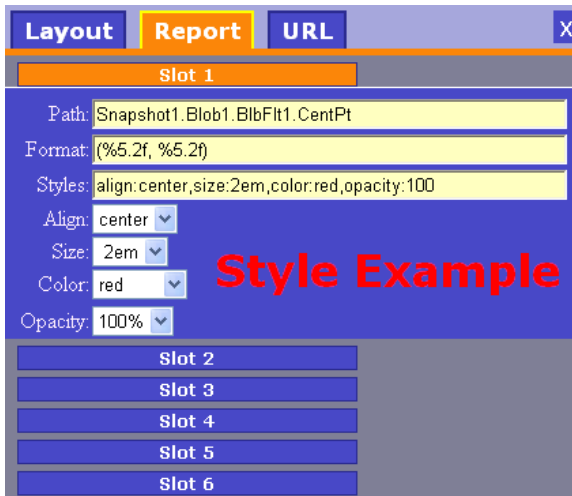

At a minimum the path to a datum must be specified. The inspection is implied, so it is not in the path. In the example above, the path Snapshot1.Blob1.BlbFlt1.CentPt is specified in the first slot.

This would display the value overlaid over the image near the top of the image display area. If D5 had been used instead, it would appear closer to the center.

By default, the displayed format will be appropriate for the datum type requested. However the format can be changed by specifying a printf style format string.

The format codes must be consistent with the expected data types. If the result is an integer, then a %d format is expected, floating point numbers require %f type formats. The list of format codes is not documented here, refer to printf documentation.

For array values, each element of the array will be passed in turn to the format string. For example, if a PointDm is being used, there are four expected array values corresponding to X, Y, angle, scale. (The order is the same as for variant access via VB). An example of using a format for PointDm:

(%.2f,%.2f) angle=%.1f scale=%.1f

This will display a result similar to:

(23.23,45.10) angle=3.2 scale=1.0

The later array values can be considered optional and can be omitted if desired. For example, to display just the x and y values of a PointDm, use the format string:

center = (%6.2f, %6.2f)

This will display a result similar to:

center = (134.22, 452.12)

If no format string is specified, an appropriate default format is used. For example, for a LineDm, by default the datum value will be displayed as:

A = value, B = value, C = value

Style

The default display of a report value is left justified, and uses a default font and color. If desired, all visual aspects of the displayed report value can be modified. If the Style field is used, it has the format:

style:value,style:value,...

For example, set the text size to 9pt, and align to the right, the following can be specified:

size:9pt,align:right

Possible style values:


Style Name	Values	Default	Comments
align	left, right, center	left	
size	CSS text size values (examples: 3em, 9pt, 22px)	9pt	
color	any named HTML color (red, blue, etc) or hexadecimal HTML color code (FF0000=red)	yellow	
opacity	number range 0..100	100	Setting this number to less than 100 will cause the displayed text to be translucent
CSS identifier	CSS values		

It is permitted to use CSS identifiers to alter other display aspects. For example, the following will show a red background color for the text:

backgroundColor:red

To set some of the more common styles, the combo boxes for Style, Size, Color, and Opacity can be used. The styles field will automatically be updated.

Selecting the URL tab brings up the following display:

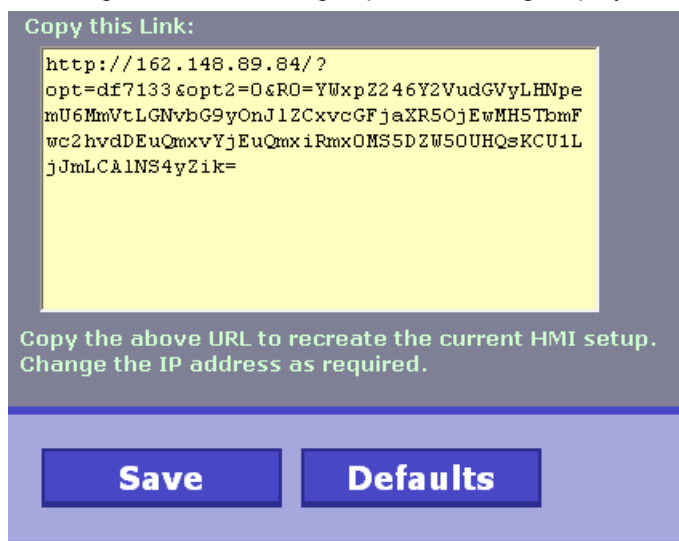

The displayed URL can be copied and then used in a browser window to completely replicate the current setup.

Additional Notes:

- Line breaks can be inserted into format strings by using embedded HTML codes. To introduce a line break, use “
”
- Commands and options are case sensitive. This is a limitation of javascript and CSS.
- A new Frontrunner feature allows copying a path of a datum to the clipboard. Right-click the Datum name in the DatumGrid display, and select the “Copy path to clipboard” option.

Allen-Bradley PLC Setup via EDS


This section describes how to set up an Allen-Bradley PLC via EDS file for use with the Vision HAWK.

AB Rockwell RSLogix 5000 v20 PLC Integration with EDS


This section was created and run on the following Allen Bradley/Rockwell components:

- RSLogix 5000 Version 20.00.00 (CPR 9 SR 5)
- 756-L61 ControlLogix5561 Controller, firmware rev 20.11
- 1756-ENBT/A EtherNet/IP interface card, firmware rev 4.1

Run the Rockwell “EDS Hardware Installation Tool”.

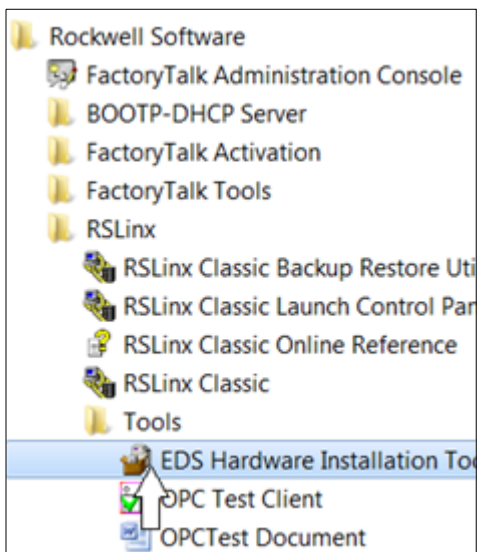


Select Add:

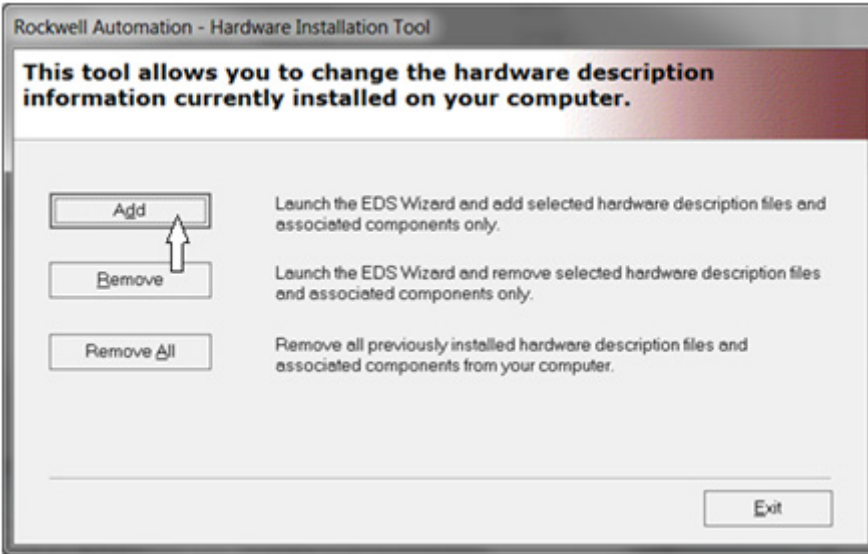


Allen-Bradley PLC
Setup via EDS

Select Browse:

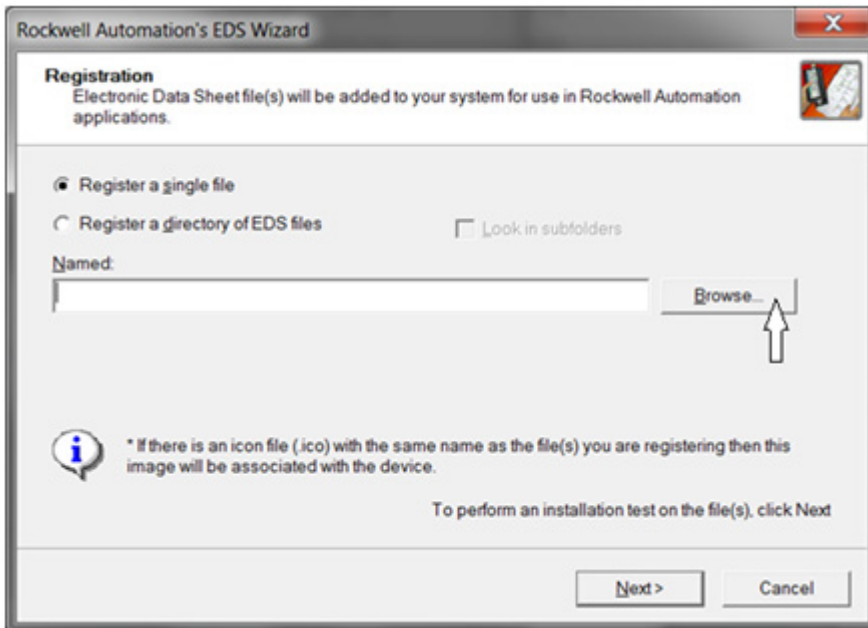


Appendix E Allen-Bradley PLC Setup via EDS


Navigate to the VisionHAWK EDS file, then Open it. The default install location is C:\Microscan\Vscope\Firmware\EDS\Vision Hawk.

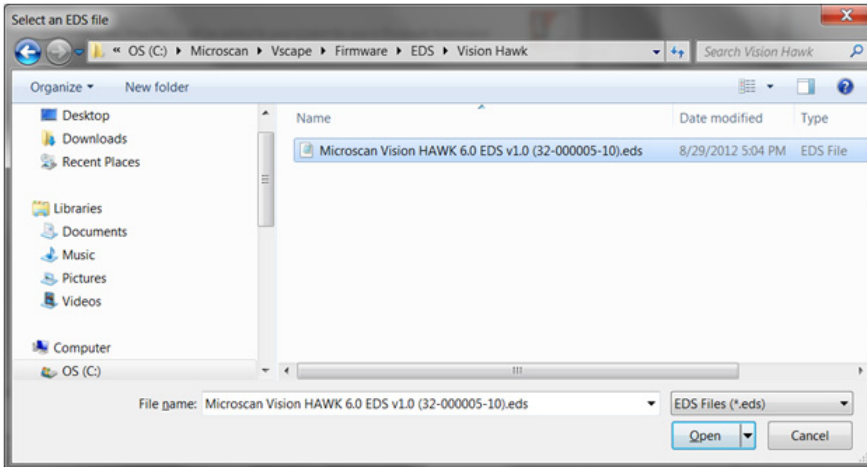

Keep clicking Next > until the Finish button is displayed:

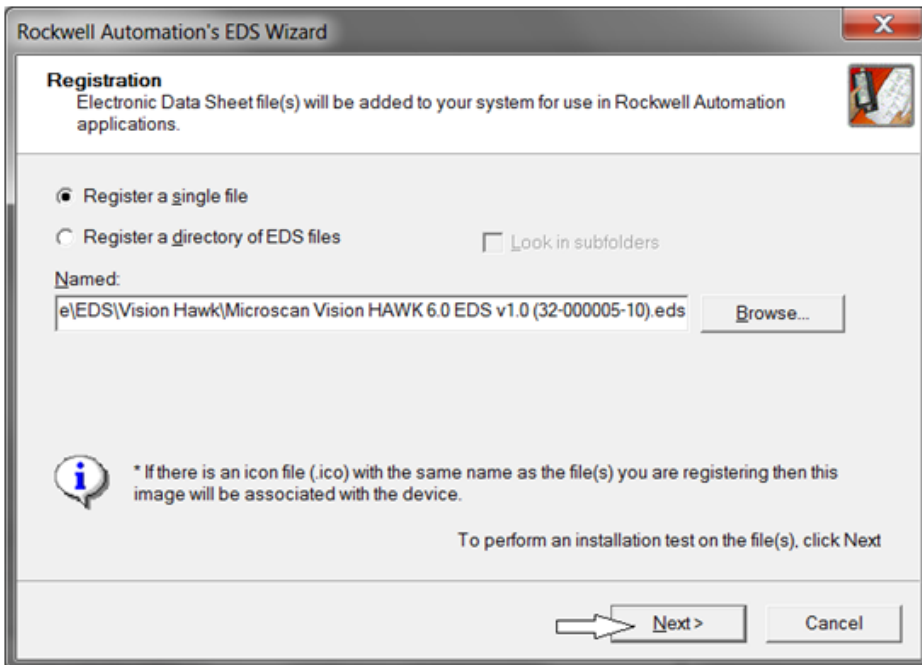


Click Finish:

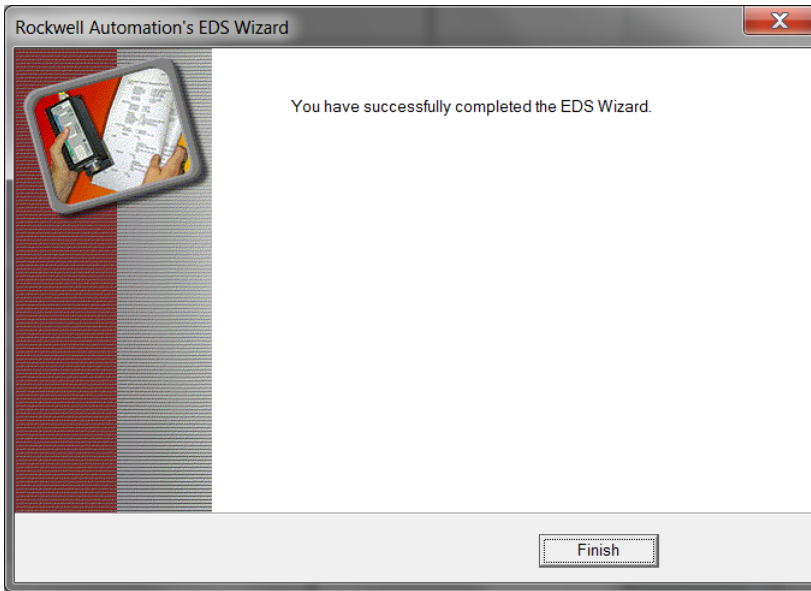


**Allen-Bradley PLC
Setup via EDS**


Open RSLogix 5000 v20 and create the I/O Configuration for the base system, including the system's Ethernet interface:

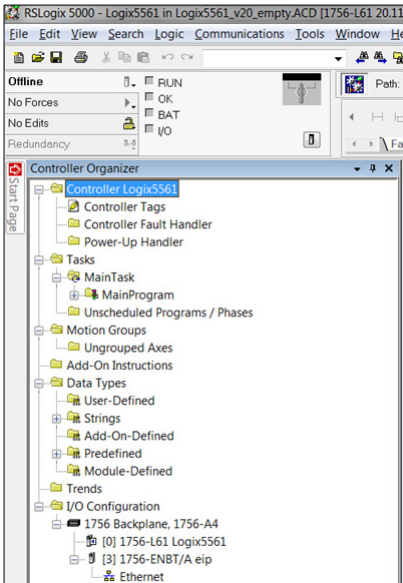


Right click on Ethernet and select New Module:

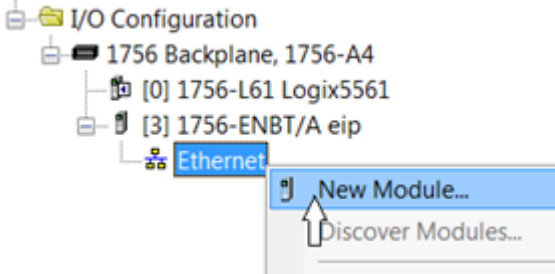


The Select Module Type dialog is displayed:

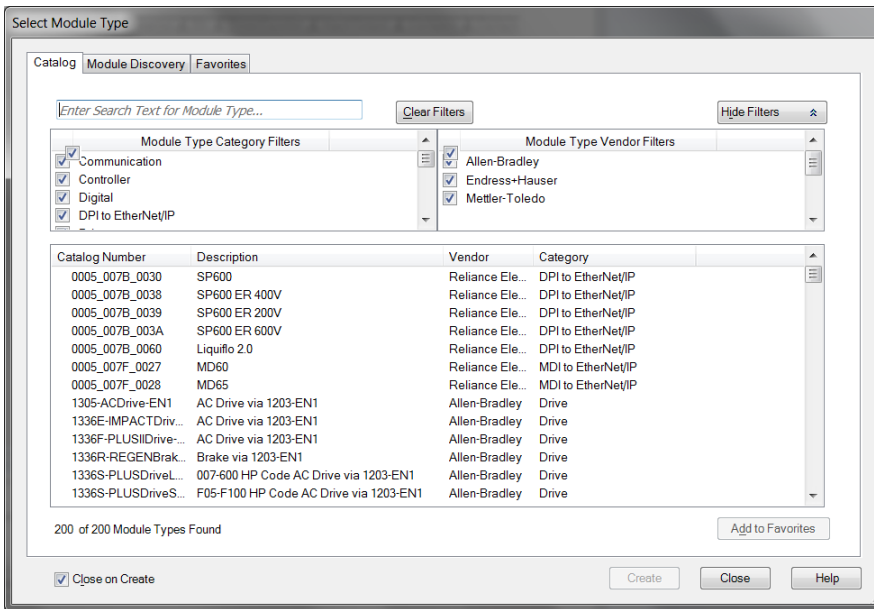


Clear the Module Type Vendor Filters:

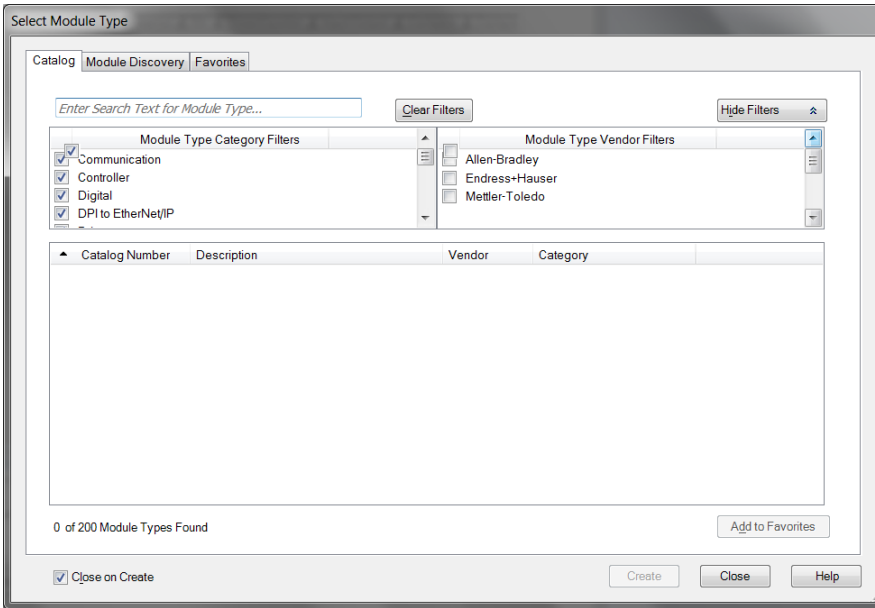


Scroll down the Module Type Vendor Filters until Microscan comes into view, then select Microscan:

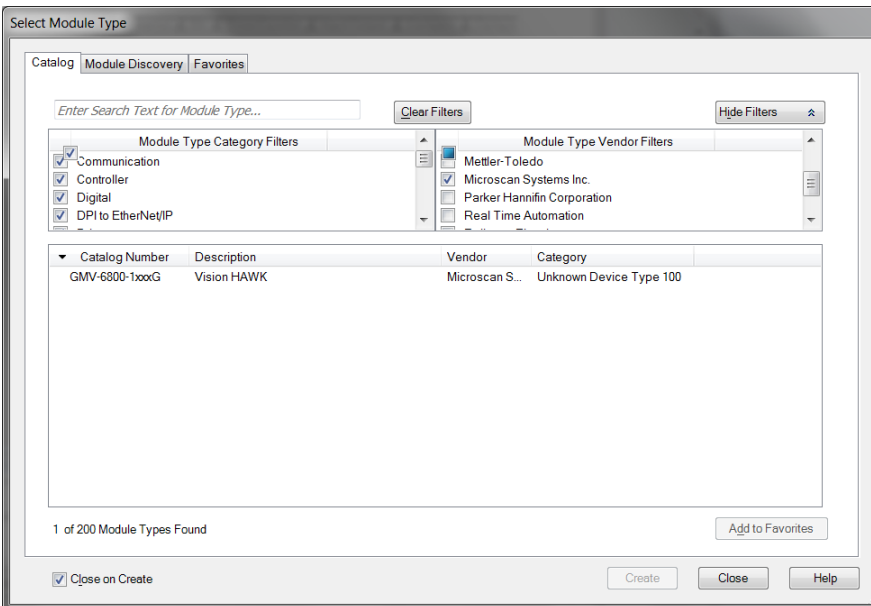


Click the required camera and select Create:

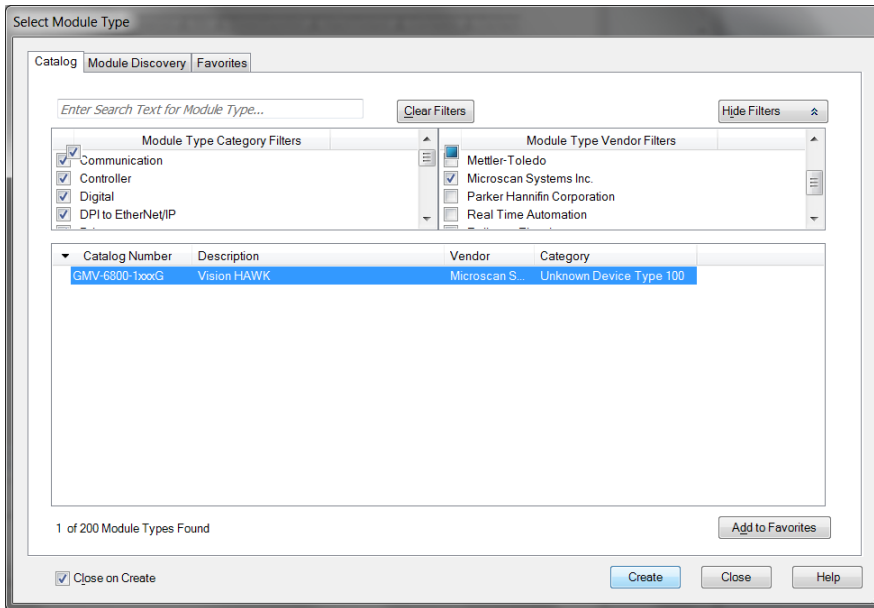

The **New Module** dialog is displayed. Type a unique name for this camera and its IP address:

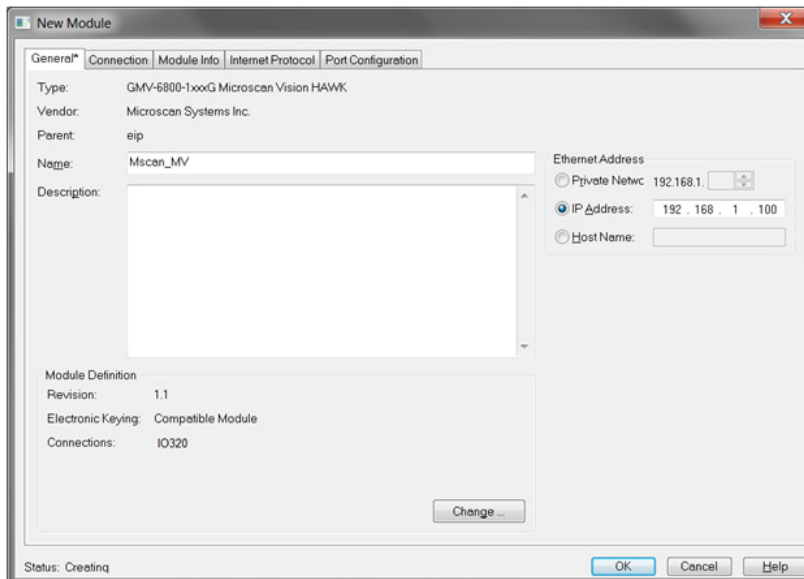


Go to the Connection tab and set the Requested Packet Interval required for the application:

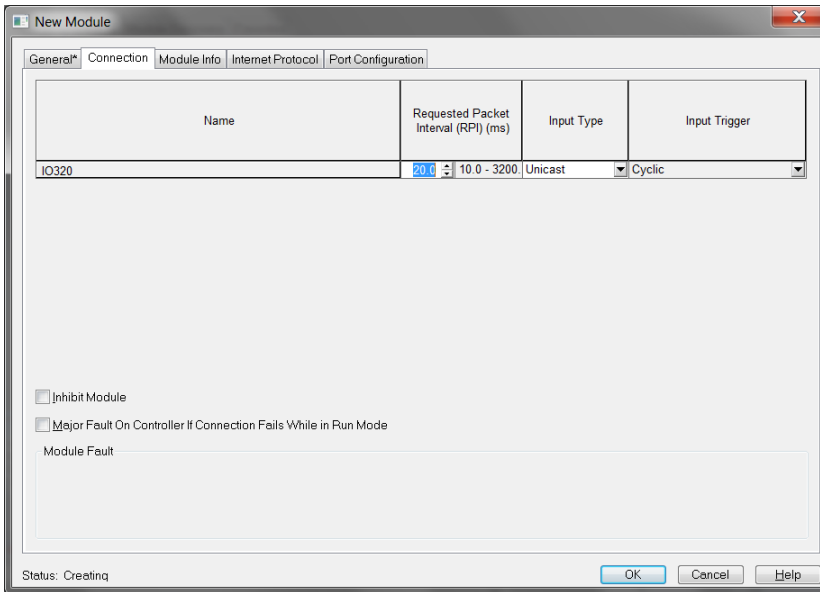


Appendix E Allen-Bradley PLC Setup via EDS


Click OK, verify the camera was added to the Ethernet network, then open the Controller Tags to verify that :I and :O tag set were created:

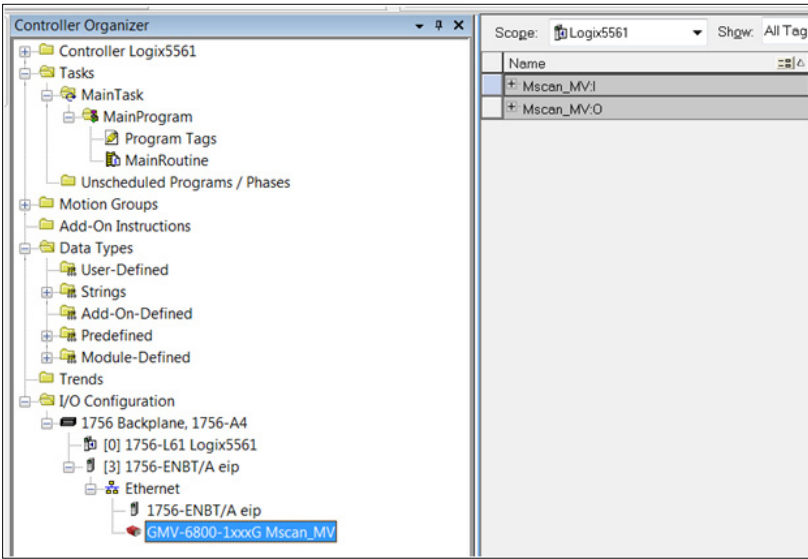

Open the Main Routine:

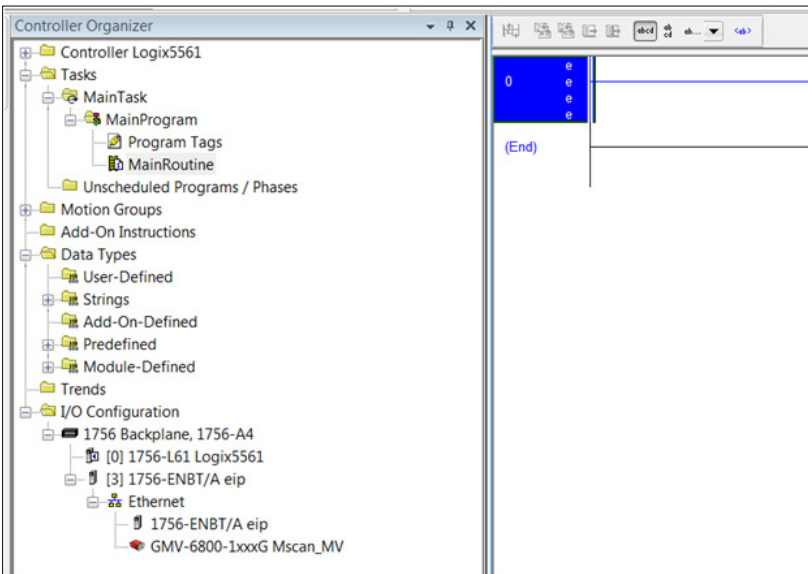


Right click on rung 0, and select Import Rungs:

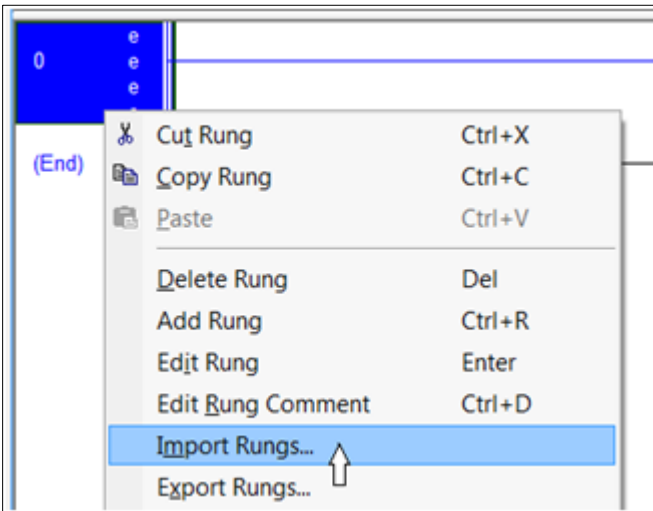


Allen-Bradley PLC
Setup via EDS


Navigate to the VisionHAWK 32-000003-lx.L5X file and select Import. The default install directory is C:\Microscan\Vscape\Tutorials and Samples\Vision Hawk\EIP demo.

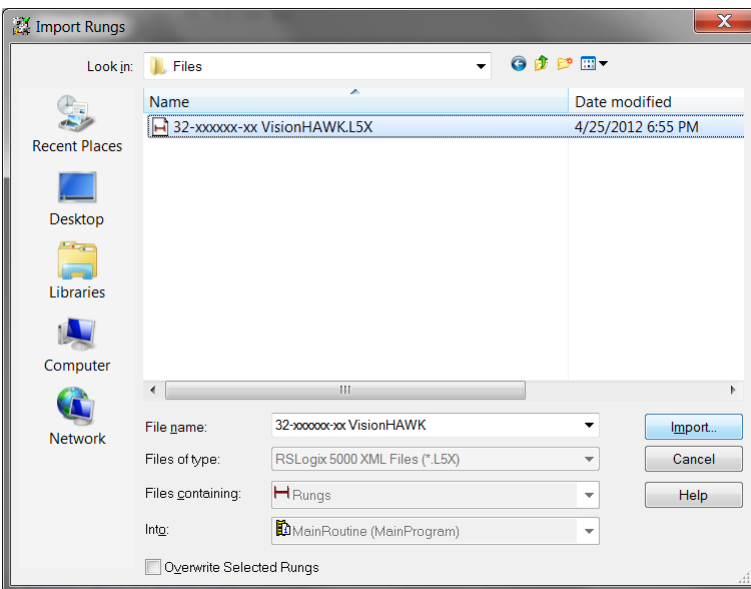


The Import Configuration dialog is displayed:

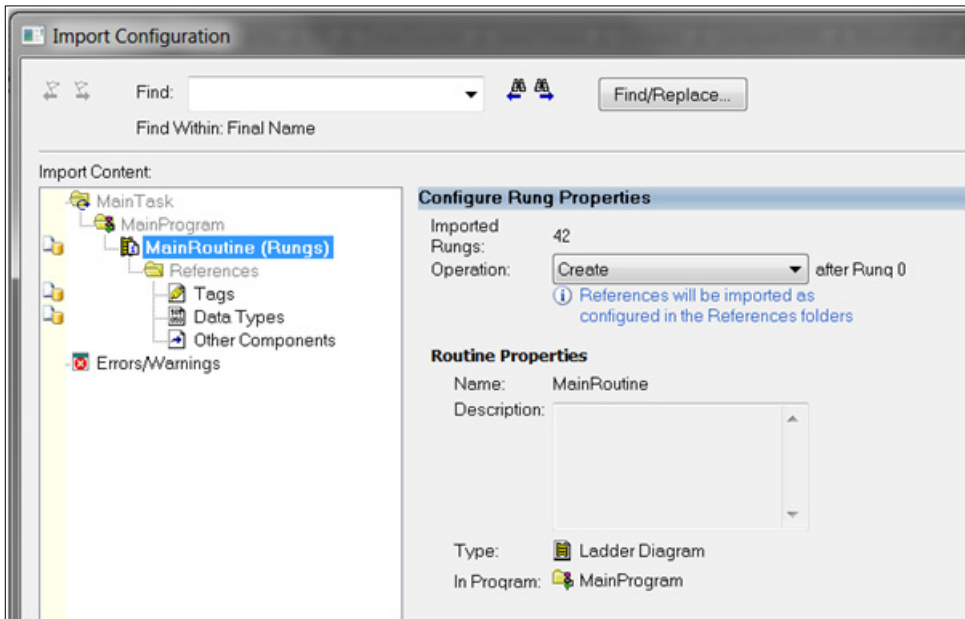

Select Tags:

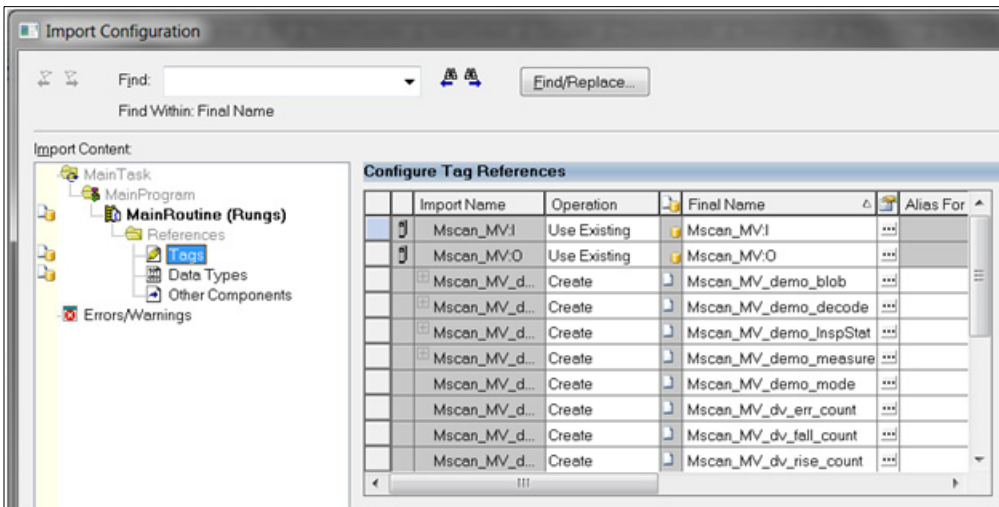


In the Final Name column, click on VisionHAWK:I, then click on the down arrow that shows up on the right:

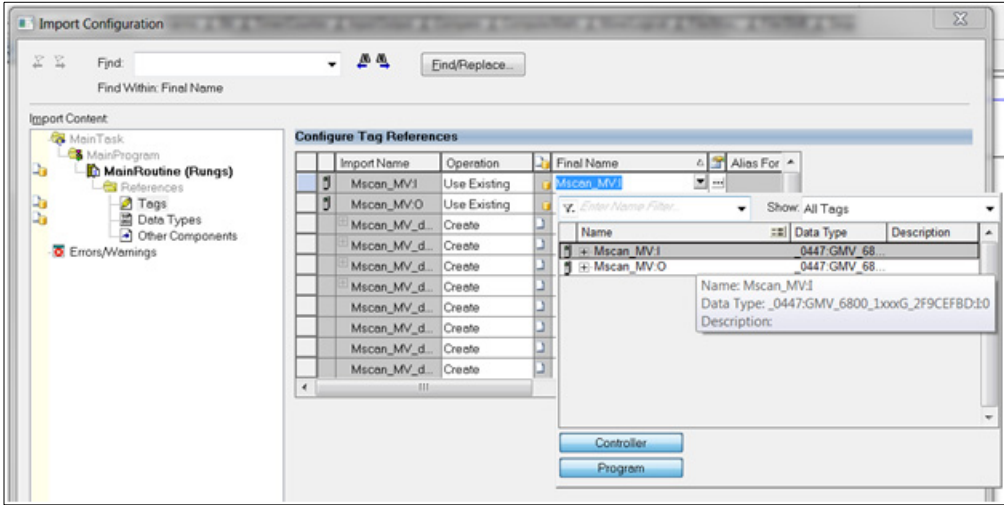


Allen-Bradley PLC Setup via EDS

Double-click on the Mscan MV:I (or whatever name that was assigned to the device) tag:

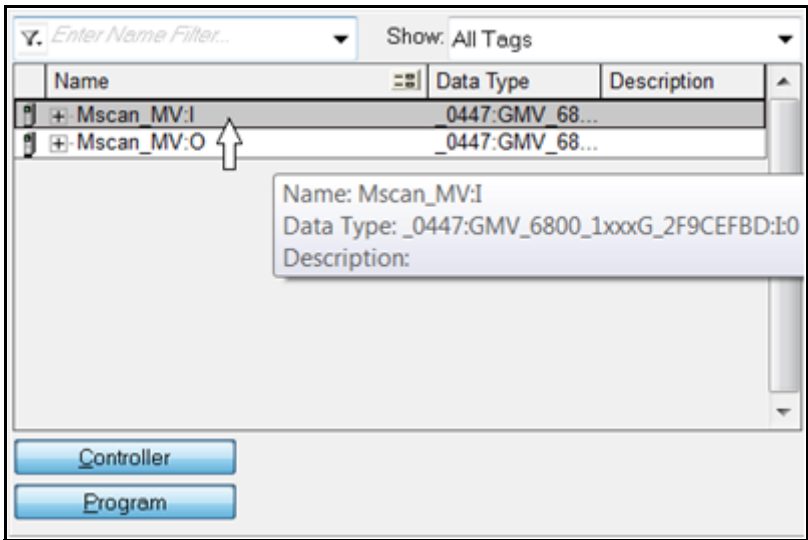


Appendix E Allen-Bradley PLC Setup via EDS


In the “Final Name” column, click on Mscan_MV:O, then click on the down arrow that shows up on the right:

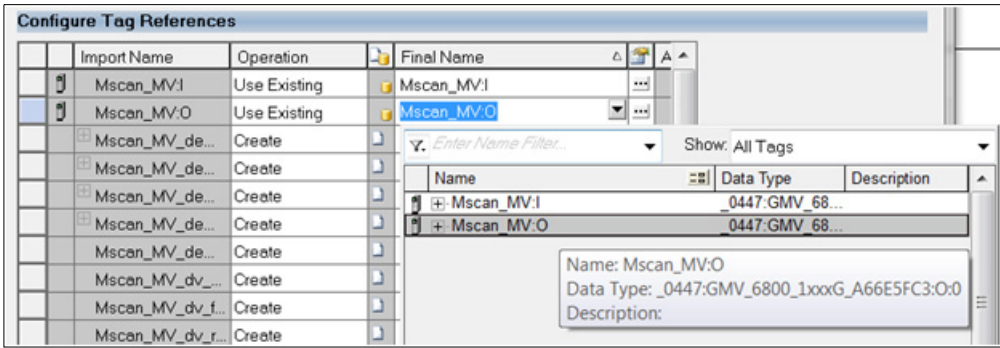


Double click on the Mscan_MV:O (or whatever name that was assigned to the device) tag:

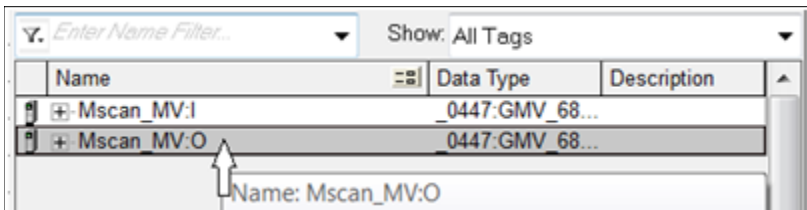


Click **OK** and the Main Routine and User Defined tags will be populated:

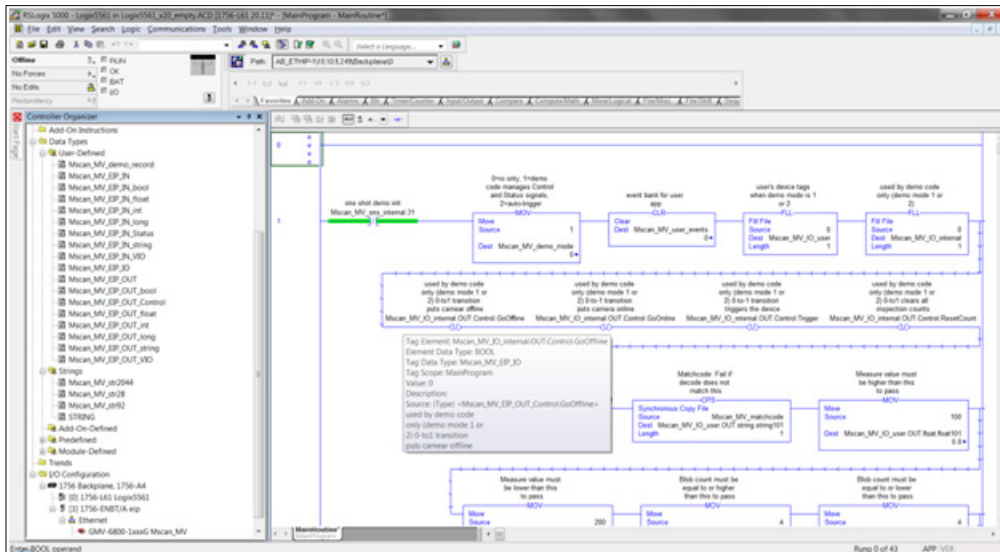


Delete any empty rungs (check rung 0):

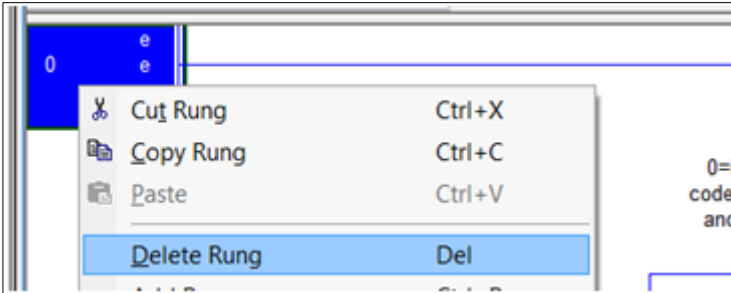


Download the project to the PLC:

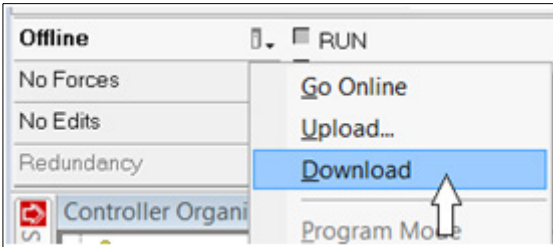

Put the PLC into Run Mode:

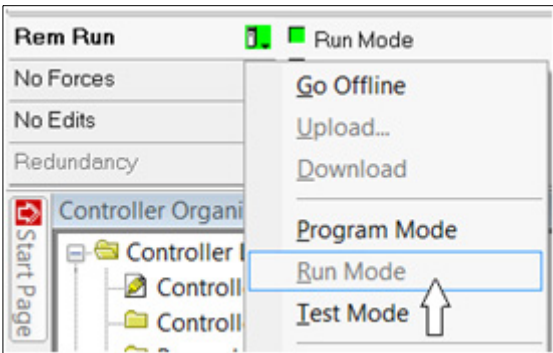


Open the Program Tag window and select “Monitor Tags”:

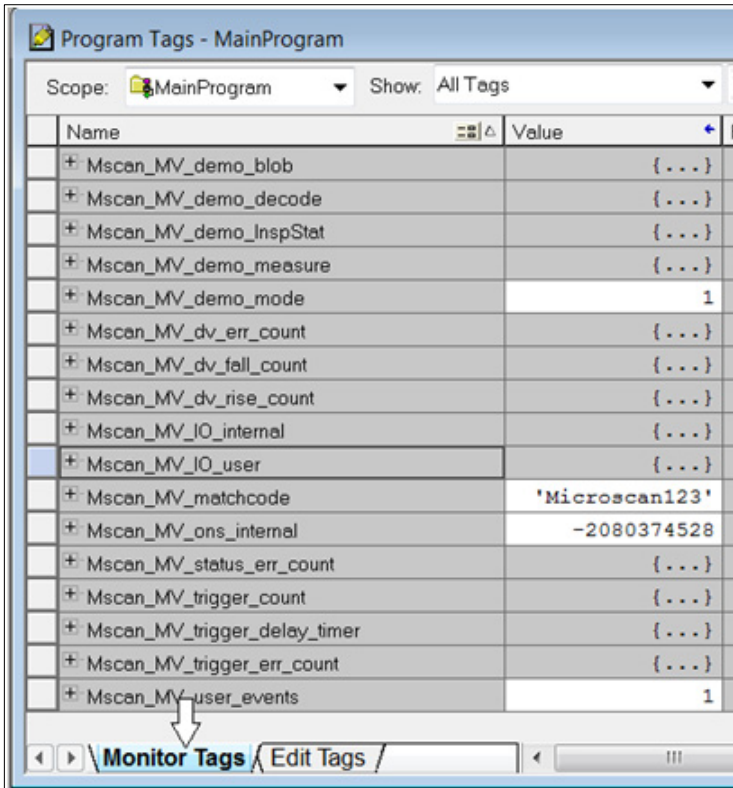

Expand Mscan_MV_IO_user so that the Echo in the .IN.Status and .OUT.Control structures are visible:

Name	Value
Mscan_MV_IO_user.IN.Status.reserved13	0
Mscan_MV_IO_user.IN.Status.reserved14	0
Mscan_MV_IO_user.IN.Status.reserved15	0
+ Mscan_MV_IO_user.IN.Status.Echo	0
+ Mscan_MV_IO_user.IN.Status.reserved32_127	{...}
+ Mscan_MV_IO_user.IN.VIO	{...}
+ Mscan_MV_IO_user.IN.bool	{...}
+ Mscan_MV_IO_user.IN.int	{...}
+ Mscan_MV_IO_user.IN.long	{...}
+ Mscan_MV_IO_user.IN.float	{...}
+ Mscan_MV_IO_user.IN.string	{...}
- Mscan_MV_IO_user.OUT	{...}
- Mscan_MV_IO_user.OUT.Control	{...}
Mscan_MV_IO_user.OUT.Control.GoOnline	0
Mscan_MV_IO_user.OUT.Control.GoOffline	0
Mscan_MV_IO_user.OUT.Control.reserved2	0
Mscan_MV_IO_user.OUT.Control.reserved3	0
Mscan_MV_IO_user.OUT.Control.ResetError	0
Mscan_MV_IO_user.OUT.Control.ResetCount	0
Mscan_MV_IO_user.OUT.Control.reserved6	0
Mscan_MV_IO_user.OUT.Control.ExeCmd	0
Mscan_MV_IO_user.OUT.Control.Trigger	0
Mscan_MV_IO_user.OUT.Control.reserved9	0
Mscan_MV_IO_user.OUT.Control.reserved10	0
Mscan_MV_IO_user.OUT.Control.ResetDataValid	0
Mscan_MV_IO_user.OUT.Control.reserved12	0
Mscan_MV_IO_user.OUT.Control.reserved13	0
Mscan_MV_IO_user.OUT.Control.reserved14	0
Mscan_MV_IO_user.OUT.Control.reserved15	0
+ Mscan_MV_IO_user.OUT.Control.Echo	0

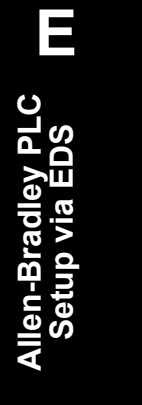

Change `.OUT.Control.Echo` to non-zero:



Mscan_MV_IO_user.OUT.Control.reserved15	0
+ Mscan_MV_IO_user.OUT.Control.Echo	4321
Mscan_MV_IO_user.OUT.Control.reserved16	0

Verify `Mscan_MV_IO_user.IO.IN.Status.Echo` is the same value as the `.OUT.Control.Echo`:



Mscan_MV_IO_user.IN.Status.reserved15	0
+ Mscan_MV_IO_user.IN.Status.Echo	4321
Mscan_MV_IO_user.IN.Status.reserved16	0


This confirms that the PLC and camera have successful two-way communication.

The demo code expects a demo vision job to be loaded on the camera, which populates the following input tags (camera to PLC) with vision tool results:

- `.IN.bool.bool1`, `bool2`, and `bool3`
- `.IN.long.long1`
- `.IN.float.float1`
- `.IN.string.string1`

The demo code will operate the Control and Status signals of the camera regardless of whatever vision job is loaded. For a more detailed overview of the demo code and vision job, please see the associated appendix **Demo PLC Code**.

To send a trigger to the camera, scroll to `Mscan_MV_IO_user.Control.Trigger`:

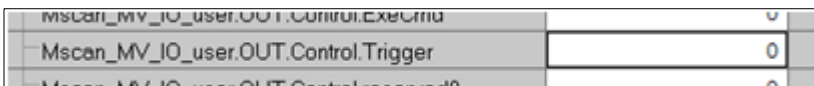

Mscan_MV_IO_user.OUT.Control.ExeCtrl0	0
Mscan_MV_IO_user.OUT.Control.Trigger	0
Mscan_MV_IO_user.OUT.Control.reserved18	0

Set the Trigger to 1. This causes the demo code to trigger the camera, process the new inspection data, record the results in the Mscan_MV_demo_xxxx tags, and clear the DataValid status signal.

The user of the demo code can know that the camera was triggered when the Trigger control changes to 0. All processing is done when the counter Mscan_MV_dv_fall_count increments, along with the pass/fail counters in the Mscan_MV_demo_xxxx tags. For example:

Name	Value	Fr
Mscan_MV_demo_blob	{...}	
+ Mscan_MV_demo_blob.pass_count	{...}	
- Mscan_MV_demo_blob.fail_count	{...}	
+ Mscan_MV_demo_blob.fail_count.PRE	0	
+ Mscan_MV_demo_blob.fail_count.ACC	1	
- Mscan_MV_demo_blob.fail_count.CU	0	
- Mscan_MV_demo_blob.fail_count.CD	0	
- Mscan_MV_demo_blob.fail_count.DN	1	
- Mscan_MV_demo_blob.fail_count.OV	0	
- Mscan_MV_demo_blob.fail_count.UN	0	
- Mscan_MV_demo_blob.bool	0	
+ Mscan_MV_demo_blob.long	6	
+ Mscan_MV_demo_blob.long_max	6	
+ Mscan_MV_demo_blob.long_min	6	
- Mscan_MV_demo_blob.float	0.0	
- Mscan_MV_demo_blob.float_min	0.0	
- Mscan_MV_demo_blob.float_max	0.0	
+ Mscan_MV_demo_blob.string	''	
+ Mscan_MV_demo_decode	{...}	
+ Mscan_MV_demoInspStat	{...}	
+ Mscan_MV_demo_measure	{...}	
+ Mscan_MV_demo_mode	1	
+ Mscan_MV_dv_err_count	{...}	
- Mscan_MV_dv_fall_count	{...}	
+ Mscan_MV_dv_fall_count.PRE	0	
+ Mscan_MV_dv_fall_count.ACC	1	
- Mscan_MV_dv_fall_count.CU	0	


Allen-Bradley PLC Setup via Generic Ethernet Module

This section describes how to set up an Allen-Bradley PLC via Generic Ethernet Module for use with the Vision HAWK.


Prepare the PLC: Integrate the Camera into a PLC Environment

This section assumes you are using an Allen Bradley PLC with Rockwell RSLogix 5000 v16 or newer. RSLogix v19 and v20 may look slightly different than the screen shots shown, but the integration process is still valid.


Create the I/O Configuration for the base system, including the system's Ethernet interface:

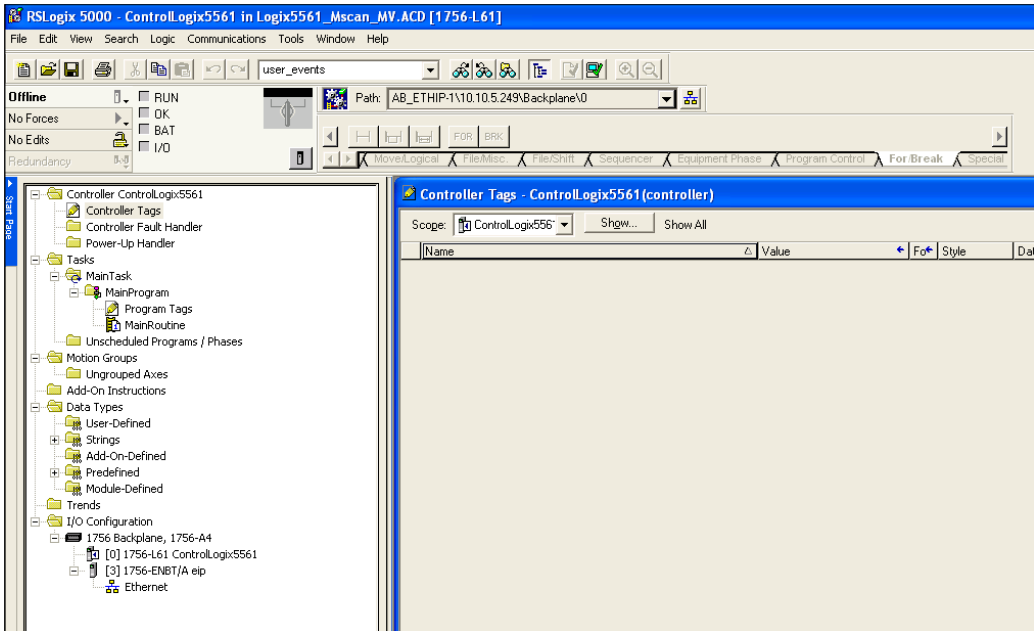

Add the camera by right-clicking on the Ethernet interface, and select "New Module":

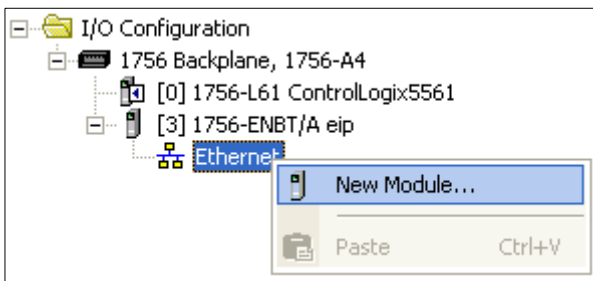

Select “ETHERNET-MODULE Generic Ethernet Module”, and click OK:

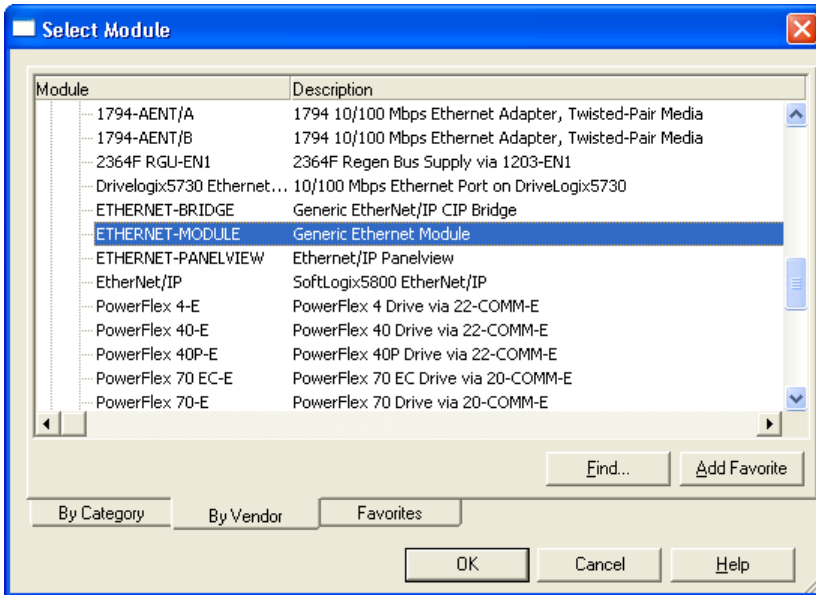

Configure the following fields:

“Name” = A useful name to remember the unit. The example here is “Mscan_MV”.

“IP Address” = The IP Address of the camera

“Comm Format” = “Data – DINT”

“Input” “Assembly Instance” = 102

“Input” “Size” = 80

“Output” “Assembly Instance” = 114


“Output” “Size” = 80

“Configuration” “Assembly Instance” = 1

“Configuration” “Size” = 0 (none)


Click OK when done.

Example:

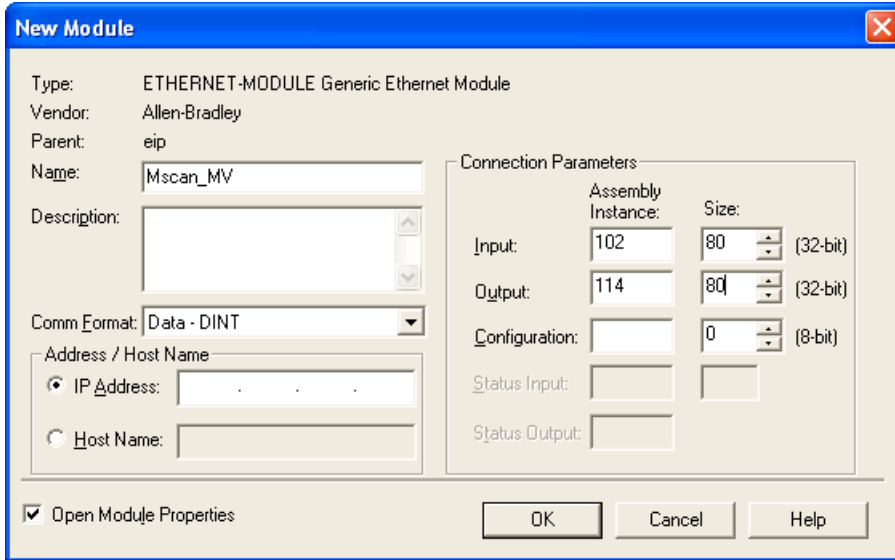


Configure the “Required Packet Interval (RPI)” and click OK.


10 ms is the minimum allowed by the camera, 20 ms or higher is recommend, as required by the application:

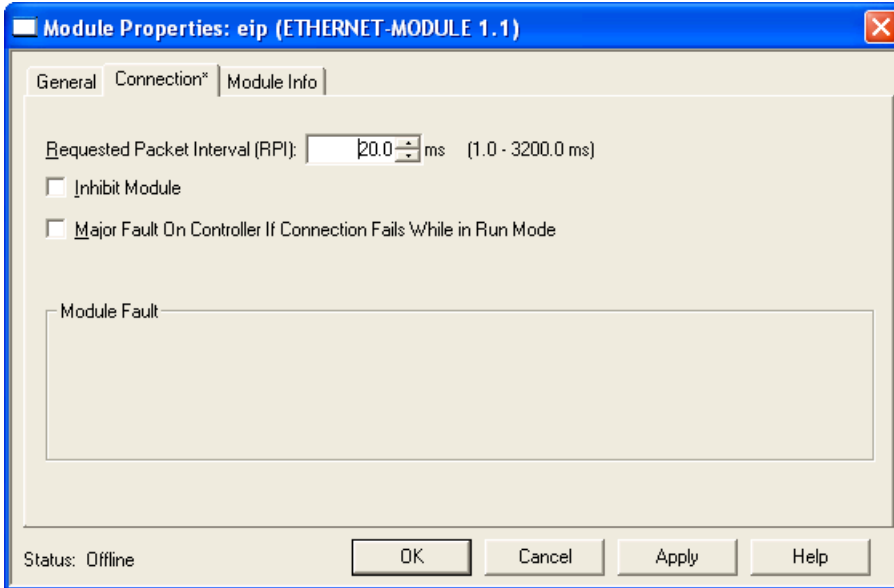


Double-click on the “Controller Tags” item, and verify VH’s :I and :O tags appear in the Controller Tags window:

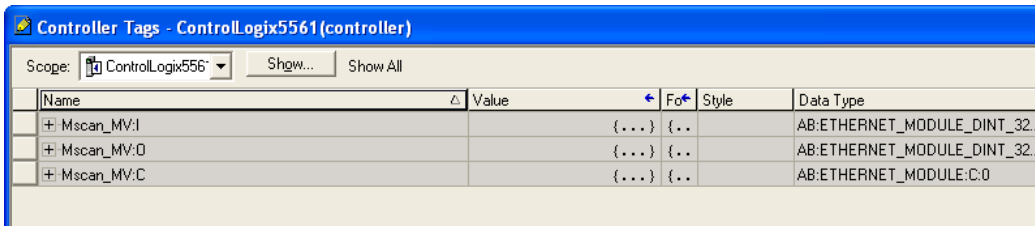


Open the “Main Routine”:

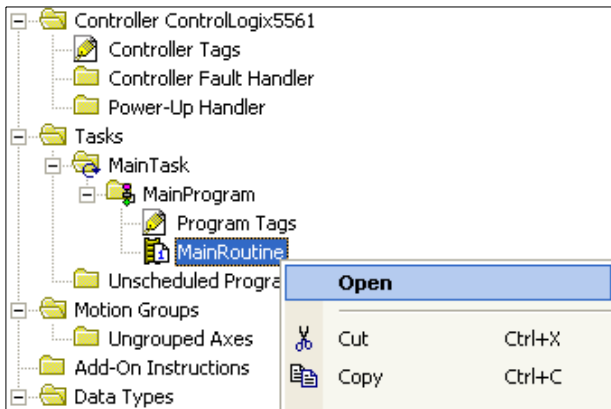


Right-click on the top rung and select “Import Rung”:

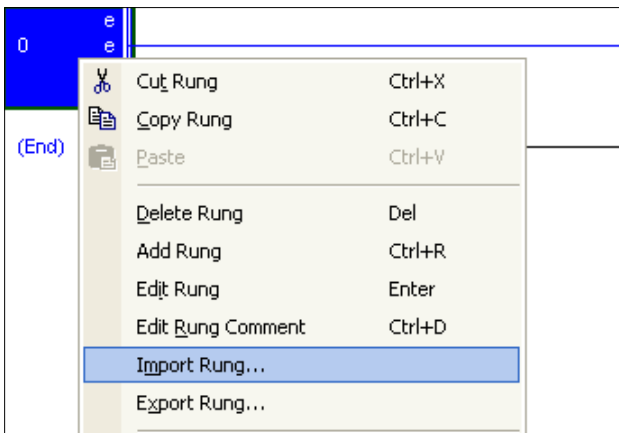

Navigate to the “32-000003-lx.L5X” file and click “Import”:

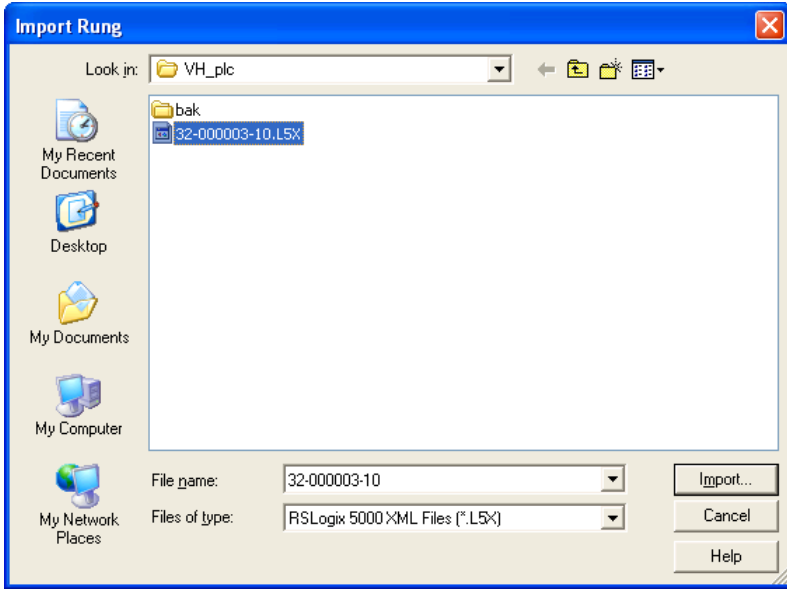


At the “Import Configuration” window, find the Module Name that was assigned to the Generic Module. Here the module name is “Mscan_MV”:

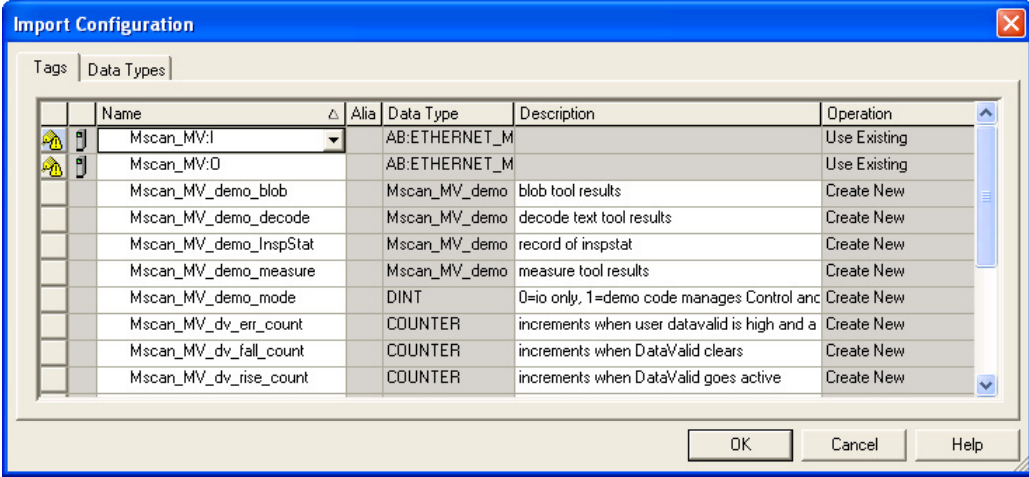


Appendix F Allen-Bradley PLC Setup via Generic Ethernet Module


Click on Mscan_MV:I, then click on the down-arrow, then double click on the “Mscan_MV:I” that appears below it:

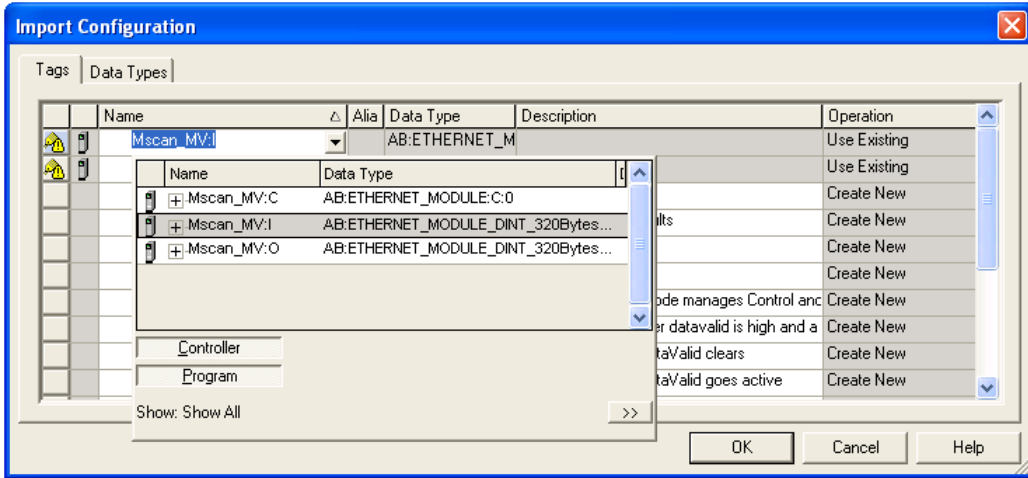

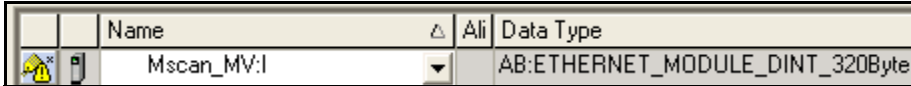

Note the “*” that appears on the far left of the dialog box for the Mscan_MV:I line:

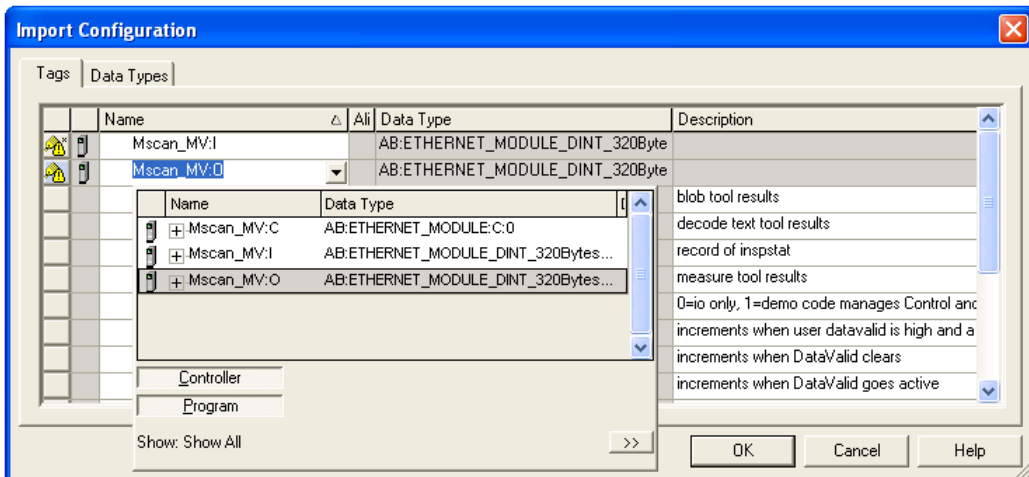

Click on Mscan_MV:O, then click on the down-arrow, then double click on the “Mscan_MV:O” that appears below it:




Note the “*” that appears on the far left of the dialog box for the Mscan_MV:O line:

Tags		Data Types		
	Name	△	Ali	Data Type
 *	Mscan_MV:I			AB:ETHERNET_MODULE_DINT_320Byte
 *	Mscan_MV:O			AB:ETHERNET_MODULE_DINT_320Byte


Click OK.

Delete any empty rungs (rung 0 may be empty):

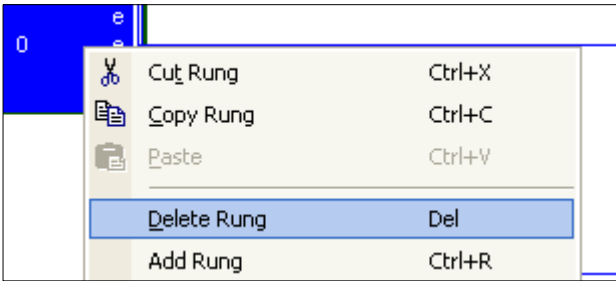


The tags and main program are now configured sufficiently to test communication with the camera.


Select the control button next to “Offline”, and select “Download”:

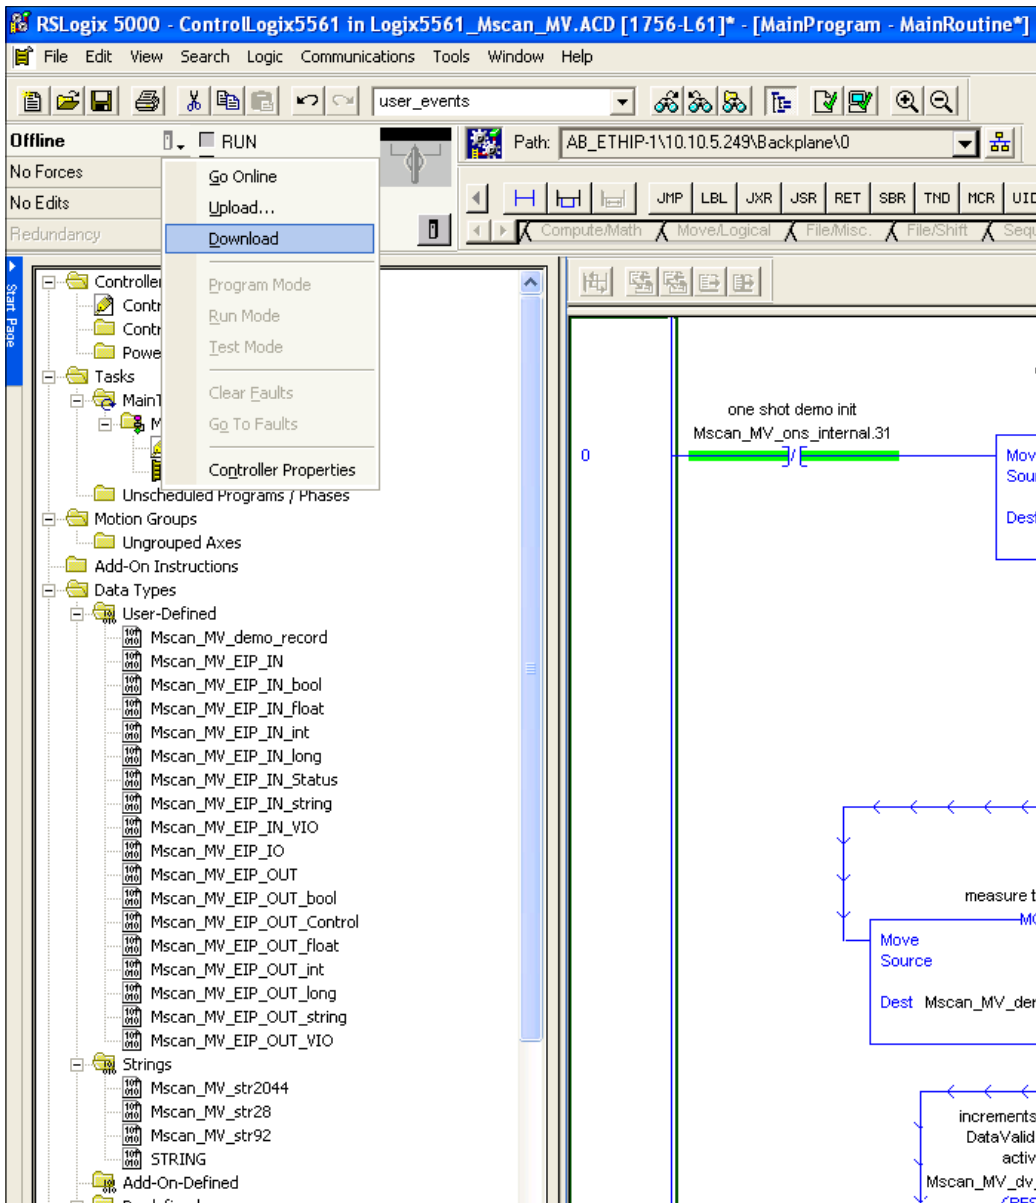


Once the program has downloaded, make sure the PLC is in Run Mode:

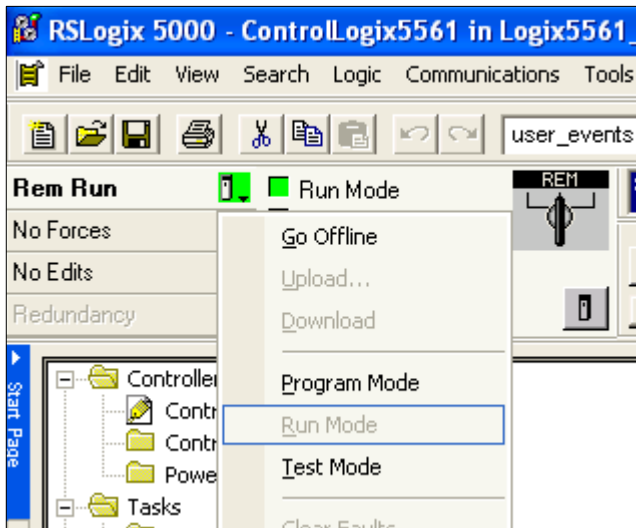

To open the Program Tags, double-click on “Program Tags”, then select the “Monitor Tags” tab at the bottom of the tag window:

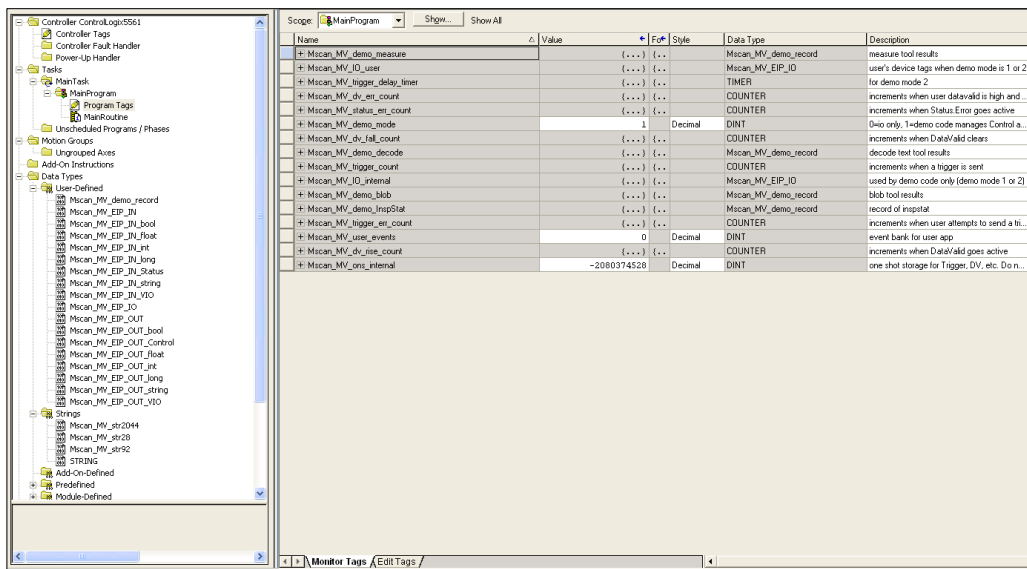

Expand Mscan_MV_IO_user so that the .IN.Status and .OUT.Control structures are visible, then scroll the window so Mscan_MV_IO_user.OUT.Control.Echo is visible:

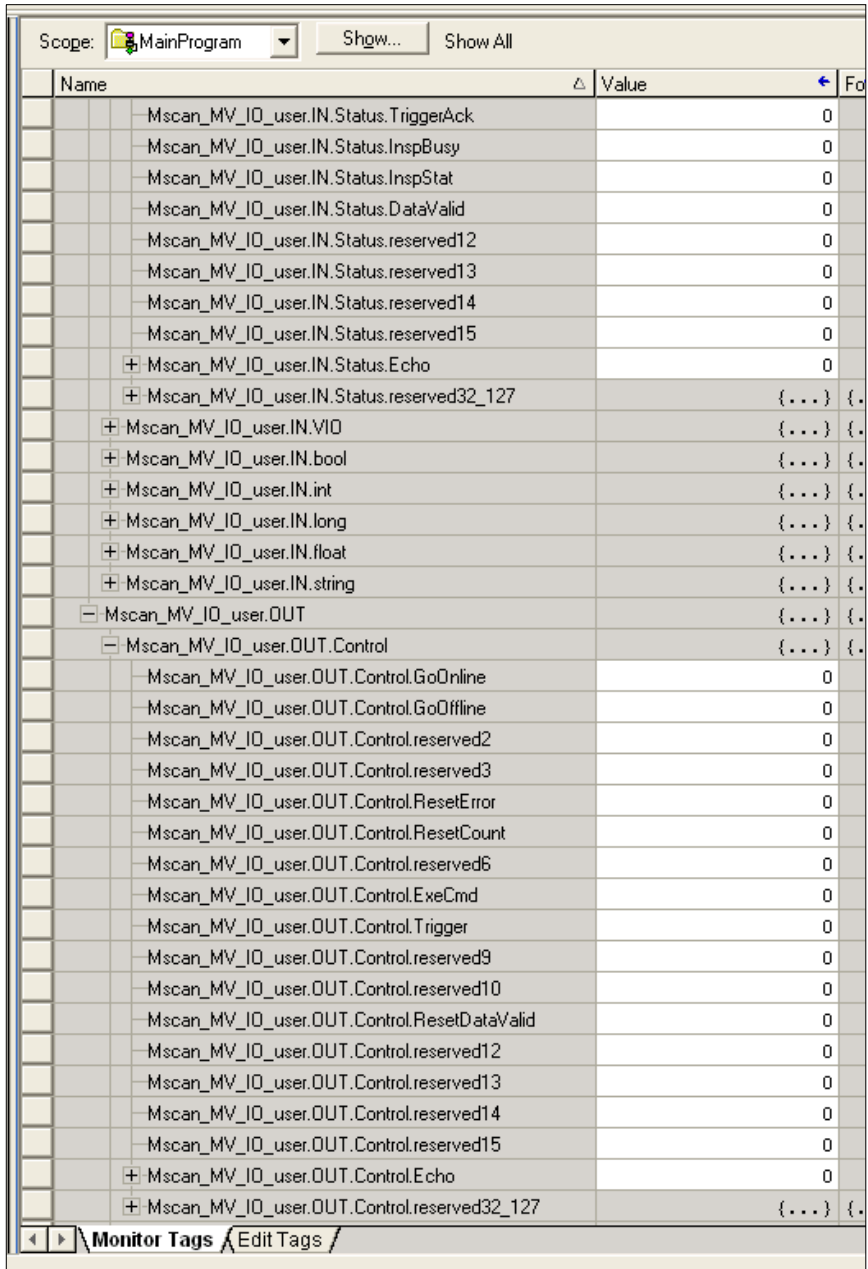

Change .OUT.Control.Echo to non-zero:

[-] Mscan_MV_IO_user.OUT	{...} {
[-] Mscan_MV_IO_user.OUT.Control	{...} {
- Mscan_MV_IO_user.OUT.Control.GoOnline	0
- Mscan_MV_IO_user.OUT.Control.GoOffline	0
- Mscan_MV_IO_user.OUT.Control.reserved2	0
- Mscan_MV_IO_user.OUT.Control.reserved3	0
- Mscan_MV_IO_user.OUT.Control.ResetError	0
- Mscan_MV_IO_user.OUT.Control.ResetCount	0
- Mscan_MV_IO_user.OUT.Control.reserved6	0
- Mscan_MV_IO_user.OUT.Control.ExeCmd	0
- Mscan_MV_IO_user.OUT.Control.Trigger	0
- Mscan_MV_IO_user.OUT.Control.reserved9	0
- Mscan_MV_IO_user.OUT.Control.reserved10	0
- Mscan_MV_IO_user.OUT.Control.ResetDataValid	0
- Mscan_MV_IO_user.OUT.Control.reserved12	0
- Mscan_MV_IO_user.OUT.Control.reserved13	0
- Mscan_MV_IO_user.OUT.Control.reserved14	0
- Mscan_MV_IO_user.OUT.Control.reserved15	0
* [+ Mscan_MV_IO_user.OUT.Control.Echo	▼ 6134
+ Mscan_MV_IO_user.OUT.Control.reserved32_127	{...} {

Monitor Tags / Edit Tags /

Scroll the window so Mscan_MV_IO_user.IO.IN.Status.Echo is visible, and verify it is the same value as the .OUT.Control.Echo:

[-] Mscan_MV_IO_user	{...} {
[-] Mscan_MV_IO_user.IN	{...} {
[-] Mscan_MV_IO_user.IN.Status	{...} {
- Mscan_MV_IO_user.IN.Status.Online	1
- Mscan_MV_IO_user.IN.Status.ExpBusy	0
- Mscan_MV_IO_user.IN.Status.AcqBusy	0
- Mscan_MV_IO_user.IN.Status.TriggerReady	1
- Mscan_MV_IO_user.IN.Status.Error	0
- Mscan_MV_IO_user.IN.Status.ResetCountAck	0
- Mscan_MV_IO_user.IN.Status.reserved6	0
- Mscan_MV_IO_user.IN.Status.ExeCmdAck	0
- Mscan_MV_IO_user.IN.Status.TriggerAck	0
- Mscan_MV_IO_user.IN.Status.InspBusy	0
- Mscan_MV_IO_user.IN.Status.InspStat	0
- Mscan_MV_IO_user.IN.Status.DataValid	0
- Mscan_MV_IO_user.IN.Status.reserved12	0
- Mscan_MV_IO_user.IN.Status.reserved13	0
- Mscan_MV_IO_user.IN.Status.reserved14	0
- Mscan_MV_IO_user.IN.Status.reserved15	0
+ Mscan_MV_IO_user.IN.Status.Echo	▼ 6134
+ Mscan_MV_IO_user.IN.Status.reserved32_127	{...} {

This confirms that the PLC and camera have successful two-way communication.

To send a trigger to the camera, scroll to Mscan_MV_IO_user.Control.Trigger:

[-] Mscan_MV_IO_user.OUT	{...}	{..}
[-] Mscan_MV_IO_user.OUT.Control	{...}	{..}
Mscan_MV_IO_user.OUT.Control.GoOnline		0
Mscan_MV_IO_user.OUT.Control.GoOffline		0
Mscan_MV_IO_user.OUT.Control.reserved2		0
Mscan_MV_IO_user.OUT.Control.reserved3		0
Mscan_MV_IO_user.OUT.Control.ResetError		0
Mscan_MV_IO_user.OUT.Control.ResetCount		0
Mscan_MV_IO_user.OUT.Control.reserved6		0
Mscan_MV_IO_user.OUT.Control.ExeCmd		0
Mscan_MV_IO_user.OUT.Control.Trigger		0
Mscan_MV_IO_user.OUT.Control.reserved9		0

Set the Trigger to 1. This causes the demo code to trigger the camera, process the new inspection data, record the results in the Mscan_MV_demo_xxxx tags, and clear the DataValid status signal. The user can know that the camera was triggered when the Trigger control changes to 0. The user can know that all processing is done when the

counter Mscan_MV_dv_fall_count increments, along with the pass/fail counters in the Mscan_MV_demo_xxxx tags. For example:

Name	Value
+ Mscan_MV_dv_err_count	{...}
- Mscan_MV_dv_fall_count	{...}
+ Mscan_MV_dv_fall_count.PRE	0
+ Mscan_MV_dv_fall_count.ACC	1
- Mscan_MV_dv_fall_count.CU	0
- Mscan_MV_dv_fall_count.CD	0
- Mscan_MV_dv_fall_count.DN	1
- Mscan_MV_dv_fall_count.OV	0
- Mscan_MV_dv_fall_count.UN	0
+ Mscan_MV_dv_rise_count	{...}
+ Mscan_MV_status_err_count	{...}
+ Mscan_MV_trigger_count	{...}
+ Mscan_MV_trigger_err_count	{...}
+ Mscan_MV_demo_mode	1
+ Mscan_MV_ons_internal	-2080374528
+ Mscan_MV_user_events	0
- Mscan_MV_demo_blob	{...}
- Mscan_MV_demo_blob.pass_count	{...}
+ Mscan_MV_demo_blob.pass_count.PRE	0
+ Mscan_MV_demo_blob.pass_count.ACC	1
- Mscan_MV_demo_blob.pass_count.CU	0
- Mscan_MV_demo_blob.pass_count.CD	0

Parameterize the Camera

Open the Mscan_MV_IO_user.OUT.long, float, and string tags and verify they are configured as follows:

[-] Mscan_MV_IO_user	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2
+ Mscan_MV_IO_user.IN	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 VisionHAWK...
[-] Mscan_MV_IO_user.OUT	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 PLC->VisionH...
+ Mscan_MV_IO_user.OUT.Control	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 Signals that c...
+ Mscan_MV_IO_user.OUT.VID	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 PLC->VisionH...
+ Mscan_MV_IO_user.OUT.bool	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 user-defined ...
+ Mscan_MV_IO_user.OUT.int	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 user-defined i...
[-] Mscan_MV_IO_user.OUT.long	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long101		4	Dec...	DINT Blob count must be equal to or higher than this to pass
+ Mscan_MV_IO_user.OUT.long.long102		4	Dec...	DINT Blob count must be equal to or lower than this to pass
+ Mscan_MV_IO_user.OUT.long.long103		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long104		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long105		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long106		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long107		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long108		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long109		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
+ Mscan_MV_IO_user.OUT.long.long110		0	Dec...	DINT user's device tags when demo mode is 1 or 2 user-defined l...
[-] Mscan_MV_IO_user.OUT.float	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float101		100.0	Float	REAL Measure value must be higher than this to pass
- Mscan_MV_IO_user.OUT.float.float102		200.0	Float	REAL Measure value must be lower than this to pass
- Mscan_MV_IO_user.OUT.float.float103		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float104		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float105		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float106		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float107		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float108		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float109		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
- Mscan_MV_IO_user.OUT.float.float110		0.0	Float	REAL user's device tags when demo mode is 1 or 2 user-defined fl...
[-] Mscan_MV_IO_user.OUT.string	{ ... }	{ .. }	Msc...	user's device tags when demo mode is 1 or 2 user-defined s...
+ Mscan_MV_IO_user.OUT.string.string101		'Microscan123'	{ .. }	Msc... Matchcode: Fail if decode does not match this

This configures the Measure (float101 and float102), Decode (string101) and Count Blob (long101 and long102) tools in the same way they were configured in AutoVISION during Try Out.

Note the Description column. It offers a hint for what each linked tag does for the vision job.

Trigger the Camera

To send a trigger to the camera, scroll to Mscan_MV_IO_user.Control.Trigger:

[-] Mscan_MV_IO_user.OUT	{...}
[-] Mscan_MV_IO_user.OUT.Control	{...}
-Mscan_MV_IO_user.OUT.Control.GoOnline	0
-Mscan_MV_IO_user.OUT.Control.GoOffline	0
-Mscan_MV_IO_user.OUT.Control.reserved2	0
-Mscan_MV_IO_user.OUT.Control.reserved3	0
-Mscan_MV_IO_user.OUT.Control.ResetError	0
-Mscan_MV_IO_user.OUT.Control.ResetCount	0
-Mscan_MV_IO_user.OUT.Control.reserved6	0
-Mscan_MV_IO_user.OUT.Control.ExeCmd	0
-Mscan_MV_IO_user.OUT.Control.Trigger	0
-Mscan_MV_IO_user.OUT.Control.reserved9	0

Set the Trigger to 1. When the Trigger returns to a value of 0, the camera may be retriggered.

If you connect to the camera with AutoVISION, it will display a new Inspection result each time the camera is triggered. Recall that the vision job was created with pre-defined images to produce predictable “Passed” and “Failed” results. The camera’s illumination lights will not flash when triggered.

The Inspection results can be seen in the PLCs’s IN tags, and well as in AutoVISION. Open the RSLogix tag window so Mscan_MV_IO_user.IN.Status and bool are visible.

Appendix F Allen-Bradley PLC Setup via Generic Ethernet Module

This example shows a “Passed” inspection, where the following tags are all 1:

IN.Status.InspStat

IN.bool.bool1 (Measure status)

IN.bool.bool2 (decode+matchcode status)

IN.bool.bool3 (count blob status)

Name	Value	For	Style	Description
[-] Mscan_MV_IO_user	{...}	{..}	Msc...	user's device tags when dem
[-] Mscan_MV_IO_user.IN	{...}	{..}	Msc...	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status	{...}	{..}	Msc...	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.Online	1		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.ExpBusy	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.AcqBusy	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.TriggerReady	1		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.Error	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.ResetCountAck	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.reserved6	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.ExeCmdAck	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.TriggerAck	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.InspBusy	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.InspStat	1		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.DataValid	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.reserved12	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.reserved13	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.reserved14	0		Dec... BOOL	user's device tags when dem
[-] Mscan_MV_IO_user.IN.Status.reserved15	0		Dec... BOOL	user's device tags when dem
[+] Mscan_MV_IO_user.IN.Status.Echo	0		Dec... INT	user's device tags when dem
[+] Mscan_MV_IO_user.IN.Status.reserved32_127	{...}	{..}	Dec... DINT...	user's device tags when dem
[+] Mscan_MV_IO_user.IN.VIO	{...}	{..}	Msc...	user's device tags when dem
[-] Mscan_MV_IO_user.IN.bool	{...}	{..}	Msc...	user's device tags when dem
[-] Mscan_MV_IO_user.IN.bool.bool1	1		Dec... BOOL	measure status
[-] Mscan_MV_IO_user.IN.bool.bool2	1		Dec... BOOL	decode+matchcode status
[-] Mscan_MV_IO_user.IN.bool.bool3	1		Dec... BOOL	blob count status

If you scroll down to the IN.long, float and string values, you will see the literal results of the vision tools:

Name	Value	For	Style	Description
+ Mscan_MV_IO_user.IN.int	{...}	{..}	Msc...	user's device tags v
- Mscan_MV_IO_user.IN.long	{...}	{..}	Msc...	user's device tags v
+ Mscan_MV_IO_user.IN.long.long1	4		Dec... DINT	Blob count
+ Mscan_MV_IO_user.IN.long.long2	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long3	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long4	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long5	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long6	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long7	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long8	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long9	0		Dec... DINT	user's device tags v
+ Mscan_MV_IO_user.IN.long.long10	0		Dec... DINT	user's device tags v
- Mscan_MV_IO_user.IN.float	{...}	{..}	Msc...	user's device tags v
- Mscan_MV_IO_user.IN.float.float1	173.0306		Float REAL	Measure value
- Mscan_MV_IO_user.IN.float.float2	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float3	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float4	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float5	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float6	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float7	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float8	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float9	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.float.float10	0.0		Float REAL	user's device tags v
- Mscan_MV_IO_user.IN.string	{...}	{..}	Msc...	user's device tags v
+ Mscan_MV_IO_user.IN.string.string1	'Microscan123'	{..}	Msc...	Decode text
+ Mscan_MV_IO_user.IN.string.string2	' '	{..}	Msc...	user's device tags v
+ Mscan_MV_IO_user.IN.string.string3	' '	{..}	Msc...	user's device tags v

This is equivalent to the AutoVISION inspection result:



This example shows a “Failed” inspection, where every tool reports a fail:

Name	Value	For	Style	Description
[-] Mscan_MV_IO_user.IN	{...}	{..}	Msc...	user's device tags when demo
[-] Mscan_MV_IO_user.IN.Status	{...}	{..}	Msc...	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.Online	1	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.ExpBusy	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.AcqBusy	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.TriggerReady	1	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.Error	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.ResetCountAck	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.reserved6	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.EveCmdAck	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.TriggerAck	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.InspBusy	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.InspStat	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.DataValid	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.reserved12	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.reserved13	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.reserved14	0	Dec...	BOOL	user's device tags when demo
-Mscan_MV_IO_user.IN.Status.reserved15	0	Dec...	BOOL	user's device tags when demo
[+] Mscan_MV_IO_user.IN.Status.Echo	0	Dec...	INT	user's device tags when demo
[+] Mscan_MV_IO_user.IN.Status.reserved32_127	{...}	{..}	Dec...	user's device tags when demo
[+] Mscan_MV_IO_user.IN.VIO	{...}	{..}	Msc...	user's device tags when demo
[-] Mscan_MV_IO_user.IN.bool	{...}	{..}	Msc...	user's device tags when demo
-Mscan_MV_IO_user.IN.bool.bool1	0	Dec...	BOOL	measure status
-Mscan_MV_IO_user.IN.bool.bool2	0	Dec...	BOOL	decode+matchcode status
-Mscan_MV_IO_user.IN.bool.bool3	0	Dec...	BOOL	blob count status

This is the Failed inspection's literal data:

Name	Value	For	Style	Description
[-] Mscan_MV_IO_user.IN.long	{...}	{..	Msc...	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long1	6		Dec... DINT	Blob count
+ Mscan_MV_IO_user.IN.long.long2	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long3	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long4	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long5	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long6	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long7	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long8	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long9	0		Dec... DINT	user's device tags wh
+ Mscan_MV_IO_user.IN.long.long10	0		Dec... DINT	user's device tags wh
[-] Mscan_MV_IO_user.IN.float	{...}	{..	Msc...	user's device tags wh
- Mscan_MV_IO_user.IN.float.float1	59.406998		Float REAL	Measure value
- Mscan_MV_IO_user.IN.float.float2	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float3	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float4	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float5	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float6	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float7	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float8	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float9	0.0		Float REAL	user's device tags wh
- Mscan_MV_IO_user.IN.float.float10	0.0		Float REAL	user's device tags wh
[-] Mscan_MV_IO_user.IN.string	{...}	{..	Msc...	user's device tags wh
+ Mscan_MV_IO_user.IN.string.string1	' '	{..	Msc...	Decode text

This is equivalent to the AutoVISION inspection report:

The screenshot displays an AutoVISION inspection interface. On the left, a camera view shows a grey surface with several yellow circles and crosses, and a dashed square outline. On the right, a summary table and a list of inspection results are shown.

Inspection			
Inspected:	Passed:	Failed:	
1	0	1	
Process			
463	Cycle:	0	
Draw	27	Cycle Worst:	0
Idle	1349591	PPM:	0
		PPM Max:	0
Buffers			
1 of 12 used (8%)			
Overruns			
None			

Snapshot	✓
Measure1 59.407	✗
Decode1	✗
Count Blobs1 6	✗

Parameterize the Camera Again

The Measure and Count Blob tools can be parameterized by the PLC so they always pass. The Decode tool can be parameterized so it always fails, either due to no decode, or a matchcode mismatch. Scroll the tag window so OUT.long, float and string are visible, then change them as shown here:

Name	Value	For	Style	Description
+ Mscan_MV_ID_user.IN.float	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.IN.string	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 PLC->Visi
+ Mscan_MV_ID_user.OUT.Control	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 Signals th
+ Mscan_MV_ID_user.OUT.VID	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 PLC->Visi
+ Mscan_MV_ID_user.OUT.bool	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.int	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.long	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long101	4	Dec...	DINT	Blob count must be equal to or higher than this to pass
+ Mscan_MV_ID_user.OUT.long.long102	6	Dec...	DINT	Blob count must be equal to or lower than this to pass
+ Mscan_MV_ID_user.OUT.long.long103	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long104	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long105	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long106	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long107	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long108	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long109	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.long.long110	0	Dec...	DINT	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float101	50.0	Float	REAL	Measure value must be higher than this to pass
- Mscan_MV_ID_user.OUT.float.float102	200.0	Float	REAL	Measure value must be lower than this to pass
- Mscan_MV_ID_user.OUT.float.float103	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float104	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float105	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float106	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float107	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float108	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float109	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.float.float110	0.0	Float	REAL	user's device tags when demo mode is 1 or 2 user-defin
- Mscan_MV_ID_user.OUT.string	{...}	{..	Msc...	user's device tags when demo mode is 1 or 2 user-defin
+ Mscan_MV_ID_user.OUT.string.string101	'wrong code'	{..	Msc...	Matchcode: Fail if decode does not match this

Trigger the Camera Again

Trigger the camera twice, and you will see the Status results stay the same for all triggers:

bool2 (decode+matchcode status) = 0

Why: Decode+Matchcode status always fails because the matchcode has been changed to “wrong code”, or there is no decode.

bool1 (Measure status) and bool3 (count blob status) = 1

Why: The inspected values are now in tolerance.

InspStat = 0

Why: The Decode tool fails, so the overall Inspection result is a Fail.

PLC tags:

Name	Value	For	Style	Description
[-] Mscan_MV_ID_user.IN	{...}	{..	Msc...	user's device tags when demo
[-] Mscan_MV_ID_user.IN.Status	{...}	{..	Msc...	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.Online	1	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.ExpBusy	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.AcqBusy	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.TriggerReady	1	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.Error	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.ResetCountAck	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.reserved6	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.ExeCmdAck	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.TriggerAck	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.InspBusy	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.InspStat	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.DataValid	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.reserved12	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.reserved13	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.reserved14	0	Dec...	BOOL	user's device tags when demo
- Mscan_MV_ID_user.IN.Status.reserved15	0	Dec...	BOOL	user's device tags when demo
+ Mscan_MV_ID_user.IN.Status.Echo	0	Dec...	INT	user's device tags when demo
+ Mscan_MV_ID_user.IN.Status.reserved32_127	{...}	{..	Dec...	DINT... user's device tags when demo
+ Mscan_MV_ID_user.IN.VIO	{...}	{..	Msc...	user's device tags when demo
[-] Mscan_MV_ID_user.IN.bool	{...}	{..	Msc...	user's device tags when demo
- Mscan_MV_ID_user.IN.bool.bool1	1	Dec...	BOOL	measure status
- Mscan_MV_ID_user.IN.bool.bool2	0	Dec...	BOOL	decode+matchcode status
- Mscan_MV_ID_user.IN.bool.bool3	1	Dec...	BOOL	blob count status

This concludes the EtherNet/IP demo.

Demo PLC Code

This section describes how to use Microscan demo PLC code with a vision job and camera target.

The EIP demo files can be found where AutoVISION is installed, in the folder C:\Microscan\Vscape\Tutorials and Samples\Vision Hawk\EIP demo. Open the EIP_demo.avp with AutoVISION and download it to the camera.

During PLC integration, import the 32-000003-lx.L5X file to create the camera's demo tags and ladder logic.

Glossary of Terms

The following terms are used in the description of Microscan's demo PLC program.

Camera

The Microscan Smart Camera used in this application, which has an EtherNet/IP communication interface.

User App

The PLC logic code written by the end user or system integrator.

Demo Code

The PLC logic code distributed by Microscan that can be imported into the PLC's ladder logic area. It encapsulates most of the device Control and Status management.

The demo code expects a demo vision job loaded on the camera. However, the demo code will operate whether or not the demo vision job is loaded on the camera.

Activate / Set High

Writing a 1 value to a single Control bit, or any other bool bit.

Active

A Control, Status, bool, or PLC logic "contact" in a 1 state.

Clear

A Control, Status, bool, or PLC logic "contact" in a 0 state.

One Shot


PLC tag write operation that is performed once, typically in reaction to an event. After a one shot operation, the PLC logic does not write to the same tag again unless another event occurs.

Demo Setup


Vision Job Setup

The EIP demo files can be found where AutoVISION is installed, where the default folder is C:\Microscan\Vscape\Tutorials and Samples\Vision Hawk\EIP demo.


1. Open EIP_demo.avp with AutoVISION.
2. To use pre-defined images, select the camera icon on the Camera tool.

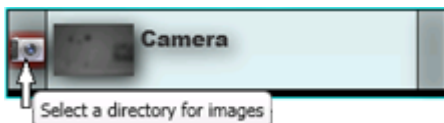


3. Browse to the EIP demo folder, select it, and click OK.

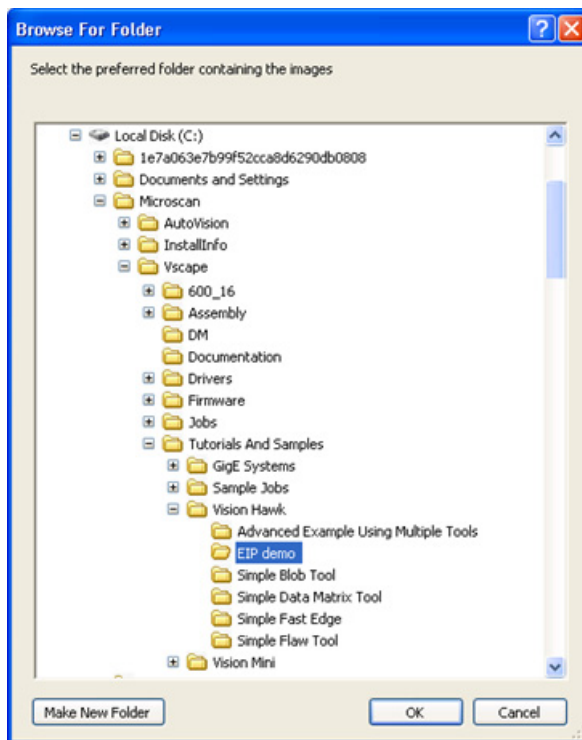

After the EIP demo folder has been enabled for image load, the camera icon will change to a folder:

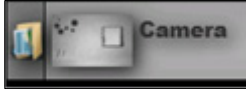


- 4. While in Edit mode, Try Out can be used to get an understanding of what to expect after the job is sent to the camera.

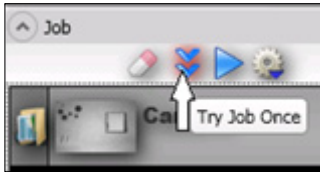


Before Try Out can be effective, the Measure, Decode, and Count Tool parameters must be specified. After job download, the tool parameters will be supplied by the PLC.


Measure Tolerance:

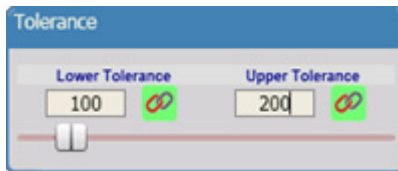

Decode Matchstring:

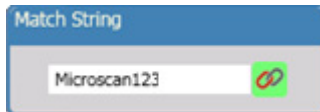

Count Tolerance:

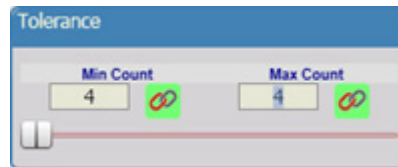


With these tool parameter configured as shown, Try Out will show the following Pass/Fail results.

Fail:



Pass:

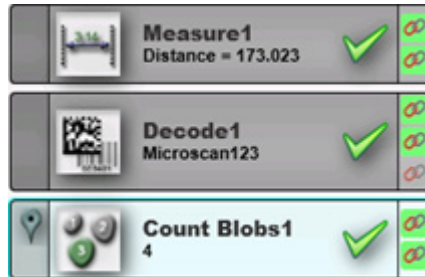

5. Download the job to the camera.
6. Add the camera and demo code to the PLC environment (see the next section).

PLC Demo Code Setup

During PLC integration, import the 32-000003-1x.L5X file, found in the EIP demo folder, to create the camera's demo tags and ladder logic. Please refer to [Allen-Bradley PLC Setup via EDS](#).

Description of PLC Tags

Mscan_MV_demo_mode

Purpose

This is intended for demonstration purposes only, to modify the operation of the demo code. It allows the first-time user to control the device directly

with no assistance from the demo code, or allow the demo code to manage the Control and Status signals fully.

The demo mode tag takes three different values, putting the demo code into one of three modes of operation:

- Exchange IO data only
- Actively operate device controls, status, and demo data
- Automatically trigger the device after one second of idle time

User App Method

User app can set the demo mode with one of three values to define the demo code's mode of operation.

0=Exchange IO data only

In this mode, the user directly accesses the Mscan_MV_IO_internal tag set. The demo code only exchanges data with the camera, doing nothing to control the device or respond to events from it.

1=Operate device controls and respond to device events

This is the default mode of the demo code. In this mode, the user app accesses the Mscan_MV_IO_user tag to control and monitor the camera. The user app must not access the Mscan_MV_IO_internal tag set.

In this mode, the user activates the controls in Mscan_MV_IO_user.OUT.Control (Trigger, ResetCount, GoOnline, GoOffline, ResetError, ExeCmd), and the demo code handles the rest.

2=Auto-trigger

In this mode, the demo code fully manages the Control and Status signals, the same as when the mode is set to 1. It also activates the camera's trigger after one second of idle time. The timer used to drive the trigger is Mscan_MV_trigger_delay_timer.

Demo Code Usage

Depending on the mode, the demo code will run the appropriate level of code.

- In mode 0, only the IO exchange rungs are executed. All others are bypassed (ladder jmp).

- In mode 1, the auto-trigger rungs are bypassed. This is the default mode of the demo code.
- In mode 2, all rungs are executed.

Mscan_MV_IO_user

Purpose

User-accessible IO data for the camera. The user app reads and writes these IO tags, and the demo code handles the actual on-the-wire control of the camera.

User App Method

Activate a Control by setting its value to 1.

The user app can determine that the Control is done when the Control is clear (demo code changes the Control to a bit/bool value of 0). Do not attempt to activate a Control unless it is clear.

The user app should activate the Controls using one-shot writes. The user app should not continuously hold a Control in an active state. Holding a Control in an active state will prevent the demo code from notifying the user app that the Control operation is complete by clearing the Control.

Usually, when a Control is clear (0), the camera is ready for the Control to be activated again. Please see the [Specific Control Guidelines](#) and [Specific Status Guidelines](#) below for qualifications.

Demo Code Usage

The demo code waits for the user app to activate a Control. When the user app activates a Control, the demo code handles all handshaking and confirmation that the Control operation is performed by the camera. When the operation is complete, the demo code clears the Control back to 0.

Specific Control Guidelines

GoOnline and GoOffline

In order to take the camera Online and Offline, only one of these Controls can go active (change from 0 to 1), and be active, at any given time.

ResetCount

After the user app activates ResetCount, the demo code will clear ResetCount when the operation is complete. The next Inspection output will be #1 (as can be seen if AutoVISION is connected to the camera in run mode).

Trigger

Do not trigger the camera unless the TriggerReady Status is active. If the Trigger goes active when TriggerReady is not active, the demo code increments the counter Mscan_MV_trigger_err_count, and immediately clears the Trigger Control, without attempting to trigger the camera.

After the user app activates the Trigger, the demo code will clear the Trigger when the camera indicates it has accepted the Trigger.

Do not re-trigger the camera until DataValid in the Status register goes active, all Inspection data has been processed, and the DataValid is cleared using the ResetDataValid Control.

ResetDataValid

When the user app sees DataValid go active, it should process the Inspection data, then clear DataValid by activating ResetDataValid.

See [Data Valid](#) for more details.

ResetError

To clear the Error Status, activate ResetError.

ExeCmd, CmdCode, CmdArg

These Controls can be used to perform a job change, and query the active job slot. Refer to the CmdCode section of the EIP chapter for available command codes, command result codes, and a diagram of

command execution. The demo code includes tags with pre-defined **CmdCode** and **CmdCodeRslt** definitions:

Tag	Meaning
Mscan_MV_const_CmdCode_GetActiveJob	Request active job#
Mscan_MV_const_CmdCode_JbChg	Change job, stay offline
Mscan_MV_const_CmdCode_JbChg_Online	Change job and go online
Mscan_MV_const_CmdCode_JbChg_MkBt	Change job, make it the boot job, stay offline
Mscan_MV_const_CmdCode_JbChg_MkBt_Online	Change job, make it the boot job, go online
Mscan_MV_const_CmdCodeRslt_Success	Command completed successfully
Mscan_MV_const_CmdCodeRslt_Fail_No_Job	Job change command requested an empty slot
Mscan_MV_const_CmdCodeRslt_Fail_UI	Camera is controlled by AutoVision or FrontRunner.
Mscan_MV_const_CmdCodeRslt_Fail_Unk_Cmd	Unknown command

The ExeCmd, CmdCode, and CmdArg controls are used in combination with these Status signals:

Control signal	Status signal
ExeCmd	ExeCmdAck
CmdCode	CmdCodeRslt
CmdArg	CmdRet

The demo code records the final result of the command operation by copying **CmdCode**, **CmdArg**, **CmdCodeRslt** and **CmdRet** to the following tags:

Source Control/Status tag	Final result tag
Mscan_MV_IO_user.OUT.Control.CmdCode	Mscan_MV_CmdCode_last
Mscan_MV_IO_user.OUT.Control.CmdArg	Mscan_MV_CmdArg_last
Mscan_MV_IO_user.IN.Status.CmdCodeRslt	Mscan_MV_CmdCodeRslt_last
Mscan_MV_IO_user.IN.Status.CmdRet	Mscan_MV_CmdRet_last

The demo code will automate the command process when Mscan_MV_demo_mode is 1, which is the default value at program startup, similar to how it assists the Triggering and DataValid Controls. The PLC integrator can initiate command operation by accessing the demo code's Mscan_MV_IO_user tag set for Control and Status signals. While a command operation is active, the demo code forces all Control signals to an inactive state, except for the Echo. No Controls can be activated until the command operation is completed. To verify the camera is still "alive" during command execution, the Control.Echo can be incremented, and the Status.Echo will update accordingly.

When the demo code automates the command process, the PLC integrator is responsible for the following steps:

1. Deactivate all Controls and clear DataValid and Error status signals. This is a “best practice” measure, to ensure that the PLC has transitioned from a state of triggering and processing inspections, to issuing a command.
2. If a job change command is to be issued, populate the output tags required to configure the new job (bool, int, long, float, string).
3. Write the required CmdCode (see Mscan_MV_const_CmdCode_xxxx tags) and CmdArg, then activate ExeCmd.
4. Wait for ExeCmd to go inactive (per typical demo mode 1 operation). Note that job changes can take up to a minute. While a job change command is being executed, the Status.State tag will be 2.
5. When ExeCmd goes inactive, verify the following:
 - Mscan_MV_CmdCodeRslt_last is 0 (Success)
 - Mscan_MV_CmdRest_last contains the returned data from the command (if any)
 - Status.State has changed to 0 (Offline) or 1 (Online)
 - ExeCmdAck is inactive (0)
 - Status.Error is inactive (0)
6. Put the camera online (if necessary), and continue with normal runtime operation.

Specific Status Guidelines

Online

The camera cannot be Triggered or generate Inspection data unless Online is active. See the GoOnline Control.

TriggerReady

Do not attempt to trigger the camera unless TriggerReady is active.

See the description of the [Trigger](#) for more details.

TriggerAck and ResetCountAck

Used by the demo code to complete the respective operations.

DataValid

When DataValid goes active, the user app should process the Inspection data, then clear DataValid using the ResetDataValid control. This is handled, by the demo code in mode 1 and 2, as a demonstration for the user app.

If the camera's DataValid goes active, but the user app has not cleared a previous DataValid event, the demo code does not overwrite Mscan_MV_IO_user with new Inspection data. Instead, the demo code increments the counter Mscan_MV_dv_err_count. The new Inspection data remains stranded in the Mscan_MV_internal tag set, and is effectively lost.

Mscan_MV_trigger_count

Incremented by the demo code when a new trigger is issued to the camera over the EtherNet/IP interface (Trigger Control activated).

Mscan_MV_trigger_err_count

Incremented by the demo code if the user app attempts to trigger the camera when TriggerReady is not active.

Mscan_MV_dv_err_count

Incremented by the demo code when new Inspection data is received from the camera, but the user app has not cleared the previous DataValid.

Mscan_MV_status_err_count

Incremented by the demo code whenever the Error Status goes active.

Mscan_MV_demo_blob, Mscan_MV_demo_decode, Mscan_MV_demo_InspStat, Mscan_MV_demo_measure

Purpose

These tags record counts and min and max values of several EIP IN data members.

The demo code expects a demo vision job to be loaded on the camera, and a demo target to be in the camera's field of view. The demo PLC code will operate without the demo vision job being loaded on the camera. However, the data records will not be valid.

The demo vision job has the following data members linked to certain job tools:

IN

Bool1 = Measure status (pass/fail)

Bool2 = Decode+Matchcode status (pass/fail)

Bool3 = Blob count status (pass fail)

Long1 = Blob count

Float1 = Measure value

String1 = Decode text

OUT

Long101 = Blob count minimum count tolerance

Long102 = Blob count maximum count tolerance

Float101 = Measure lower tolerance

Float102 = Measure upper tolerance

String101 = Matchcode

Each tag set records the following data for each vision job tool result received in the Inspection report:


Tool Result	Record tag	EIP IN tag
Measurement Status	Mscan_MV_demo_measure. bool = last status (pass/fail) pass_count = count of passes fail_count = count of fails	Mscan_MV_user_IN.bool.bool1
Measurement	Mscan_MV_demo_measure. float = last value float_max = max value recorded float_min = minimum value recorded	Mscan_MV_user_IN.float.float1
Decode Text Status (matchcode)	Mscan_MV_demo_decode. bool = last status (pass/fail) pass_count = count of passes fail_count = count of fails	Mscan_MV_user_IN.bool.bool2
Decode Text	Mscan_MV_demo_decode. string = text of the last barcode decode attempt (nul if no read)	Mscan_MV_user_IO.string.string1
Blob Status	Mscan_MV_demo_blob. bool = last status (pass/fail) pass_count = count of passes fail_count = count of fails	Mscan_MV_user_IN.bool.bool3
Blob Count	Mscan_MV_demo_blob. long = last value long_max = max value recorded long_min = minimum value recorded	Mscan_MV_user_IN.long.long1

User App Method

The user app can follow the demo code’s usage of these tags for further application logic development.

During runtime, the user app can change the OUT data members, and observe the change in tool status after a new trigger.

Specifically, the PLC integrator would typically modify the logic beginning at the following rungs:

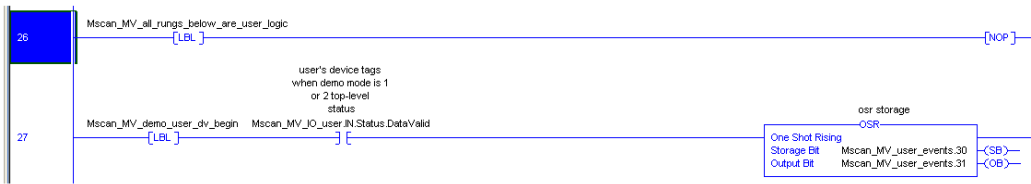


Demo Target

The demo vision job uses predefined images. It is unnecessary to have the camera aimed at any specific target. If preferred, the job can be changed to enable the camera’s image sensor. In this case, the demo targets should be printed approximately 2.5 inches (63 mm) wide by 1.6 inches (40 mm) tall, centered on white paper larger than the camera’s field of view, and presented to the camera with the Data Matrix symbol on the right:

“Pass” Image



“Fail” Image

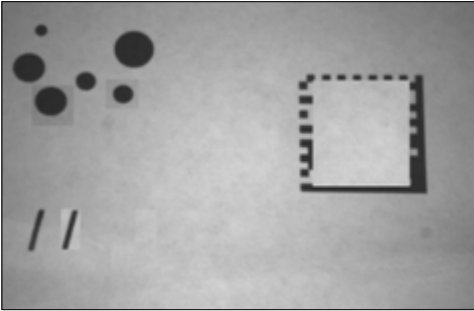

Demo Code Usage

The user app example of the demo code watches for Data Valid. When it goes active, the user app example processes the user IO data, updates each demo record with the results, then uses ResetDataValid to clear DataValid.

Mscan_MV_IO_internal, Mscan_MV_ons_internal

Purpose

Used by the demo code to manage the camera.

User App Method

None. The user app must not attempt to read or write to this tag set.

Demo Code Usage

The demo code uses this tag set to abstract the on-the-wire control of the camera from the user app.

Run the Camera: Runtime Operation of EtherNet/IP Demo

At this point in the evaluation, it is assumed that you have downloaded the demo vision job to the camera, your PLC is running the EIP demo code and is exchanging data with the camera. The PLC can now parameterize, trigger and monitor the camera over EtherNet/IP.

Serial Commands

This section provides descriptions of the serial commands that can be sent to the camera via TCP (Telnet) port, AutoVISION Terminal, or HyperTerminal.

SET {tagname}{value}

Sets value of a global tag.

The tagname must correspond to one of the supported tags within the device.

The value can contain spaces.

The command is terminated by a carriage return and/or line feed character.

The value can be a list of comma-separated items to set a sequence of tags:

Send **SET int1 1, 2, 3** to set int1 = 1, int2 = 2, int3 = 3.

The AVP service allows setting of step and datum information from the job tree using forward slash '/' in the symbolic name path. **SET avp/insp1/snapshot1/acq1/gain 2.0** paths are not case-sensitive and do not need to be fully qualified if unique.

SET avp/acq1/gain 2.0 will set the same gain value if there is only one acquire.

Control tags in the AVP service such as **START**, **STOP**, and **TRIGGER** act as momentary switches. **SET avp.start 1** is equivalent to the **ONLINE** command. **avp.start** will reset immediately and always read as **0**.

Success Return: On success will return **!OK** followed by an echo of the command. For example:

!OK SET matchstring1 ABCD

Fail Return: On failure will return **!ERROR** followed by the reason for the failure. For example:

!ERROR Tag matchstring66 not found

GET {tagname}

Gets value of a global tag.

The tagname must correspond to one of the supported tags within the device.

The command is terminated by a carriage return and/or line feed character.

Include an index to get a single value from an array such as **GET int1**. If the index is omitted, the full array of values will be returned in a comma-separated list of values.

Send **Get {tagname}** to get the value of a tag within the global data service. To get the value of a tag within another service, prefix the tagname with the service name. For example, a **GET {service.tagname}** command such as **GET eip.input** for the EIP input assembly.

The AVP service allows retrieval of step and datum information from the job tree using forward slash '/' in the symbolic name path. **GET avp/insp1/snapshot1/status** paths are not case-sensitive and do not need to be fully qualified if unique.

GET avp/snapshot1/status will return the same result if there is only one inspection.

When issued against a step, **GET avp/snapshot1** will return the values for all datums.

Success Return: On success will return the value stored in the tag. For example:

ABCD

Fail Return: On failure will return **!ERROR** followed by the reason for the failure. For example:

!ERROR Tag matchstring66 not found

INFO {service.tagname or service}

Gets information about a tag or service.

INFO with no arguments gets a list of services.

INFO {service} gets a list of tags in that service.

INFO {service.tagname} gets attributes of the tag as well as a list of subtags.

The AVP service allows retrieval of step and datum information from the job tree using forward slash '/' in the symbolic name path.

INFO avp/insp1/snapshot1/status paths are not case-sensitive and do not need to be fully qualified if unique.

INFO avp/snapshot1/status will return the same result if there is only one inspection.

When issued against a step, **INFO avp/snapshot1** returns properties of the step, a list of child datums, and a list of child steps. Child steps are indicated by a trailing forward slash.

GETIMAGE {-transfer=ymodem} {-type=failed}{-format=[jpg|png]} {-quality=n} {-inspection=n} {woi=l,t,r,b}

Initiates serial transfer of inspection image.

-transfer=ymodem is not currently optional - only Ymodem protocol is supported.

-type=failed to retrieve the last failed image. If omitted, the current image is returned.

-format=[jpg|png] specifies the format of the image. If omitted, the image format is JPG.

-quality=n specifies a JPG compression quality of *n* less than or equal to 100. The default quality is **80** if not specified.

-inspection=n specifies the inspection from which to retrieve an image. The image will be from the first snapshot within that inspection. If not specified, the image will be from the first inspection that does contain a snapshot.

woi=left,top,right,bottom specifies a rectangular area of the image to be included in the output image. If omitted, the full image buffer is returned.

ONLINE

Starts all inspections.

OFFLINE

Stops all inspections.

TRIGGER {inspection index}

Triggers inspection. If {inspection index} is omitted, inspection 1 is triggered.

VT (Virtual Trigger) Command

Triggers an inspection by pulsing a Virtual I/O point. For example:

VT 1

will return pulse **VIO1**. The inspection will run if it is configured to use **VIO 1** as a trigger.

Syntax: VT [VIO Index]

- If specified, the VIO index must be in the allowed range for Virtual I/O points within Visionscape. The virtual I/O line will be set high then low.
- If VIO Index is not specified, VIO1 is assumed

Success Return: Nothing is echoed on success of the VT command.

Fail Return: Return **!ERROR** followed by the reason for the failure. For example:

!ERROR No such trigger

JOBSAVE [-slot=]n

Save job to slot *n*.

JOBLOAD [-slot=n][-r]

Load job from slot *n*.

-r = Start inspections.

JOBDELETE [-slot=n]

Delete job in slot *n*.

JOBINFO [[-slot=n][-v]

Get job summary or info about slot *n*.

-v = Verbose. This option shows the amount of space that would be freed if the job were deleted. It also lists the total disk space and free disk space.

JOBBOOT {-slot=n}

Set bootup job slot *n*.

JOBDOWNLOAD [-transfer=]{YMODEM}

Download .avz job packaged via transfer method.

JOBDELETE -all

Delete all jobs in job slots.

Important: Does not delete the current job loaded in camera memory.

GET SYSTEM.JOBSLOT

Retrieve the slot of the current job. Note that the current job in the camera can be loaded from a job slot or the PC. If it isn't loaded from a job slot then this command will return -1.

ASSIGN [-automap] [-u] [-name=avp] [-range=n] [-count=n] {tagname}

Assign marks a tag or range of tags as in use by an application. Once marked as in use, the application will avoid those tags when attempting to auto-assign another tag range.

-automap = find the first unused set of 'n' tag indices

-u = un-assign tag

-name = name of application that is taking assignment

 
-range = maximum number of indices to search when -automap is used

-count = number of consecutive tag indices to assign

-tagname = tag to perform assignment on

For example, **ASSIGN -automap -name=avp -range=10 -count=2 int101**

will find the first set of 2 unassigned integers starting from int101 up to int110 and mark them as assigned by 'avp'. The index value is returned.



Vision HAWK Boot Modes

This section describes the Vision HAWK's Diagnostic Boot Mode and Boot Error Mode.

Diagnostic Boot Mode

The Vision HAWK supports a special boot mode used for diagnostics and recovery. There are two ways in which the camera can be put into this mode:

1. This method requires an Ethernet connection between the host PC and Vision HAWK. Power-on the unit and hold the AutoVISION button down until the green flash illuminates once. For C-Mount versions, hold the button down for approximately 30 seconds. The unit is now configured for IP address 192.168.0.10 with subnet mask 255.255.255.0. Establish a telnet connection between the host PC and Vision HAWK. The [SAFE-KERNEL] prompt is displayed.
2. This method requires a QX-1 and a serial connection between the host PC running a terminal emulator and Vision HAWK camera. Power-on the unit and hold down the Tab key down for several seconds. The unit will boot to a [SAFE-KERNEL] prompt with communication settings of 115200, N, 8, 1 (baud, parity, data bits, stop bits).

Once the unit is booted, there are many possible actions the user can take. However, the most useful actions are listed below.

In rare situations, the boot job executed at camera startup can cause unexpected behavior. If this is the suspected case, it is possible to disable loading and running of the boot job at startup using the following command.

[SAFE-KERNEL] BP_UpdateStartupOptions(0, 0)

Note that the loading and running of the boot job is automatically re-enabled the next time a job is saved to camera flash from AutoVISION or FrontRunner.

At boot time, the system configures itself using a set of information known as boot parameters. To obtain a list of the current configuration's boot parameters, issue the following command:

[SAFE-KERNEL] BP_Dump()

Should your device need to be configured with different IP information, follow the example below and substitute the appropriate settings for IP address, subnet mask, and gateway address, respectively.


[SAFE-KERNEL] BP_UpdateIP("192.168.0.10", "255.255.255.0", "192.168.0.100")

It is possible to configure the system to acquire its IP address via DHCP or to use a static IP address. Issue the following command with a '0' for static IP or a '1' for DHCP.

[SAFE-KERNEL] BP_UpdateDHCP(0)

Boot Error Mode

The Vision HAWK enters an error mode on boot if it's unable to fully load Visionscape. This mode is visually displayed to the user by flashing the Error LED along with the OUTPUT 1, OUTPUT 2, and OUTPUT 3 LEDs on the front of the unit. Additionally, this mode is represented as a "BOOT_ERR" in the Network Overview tool.

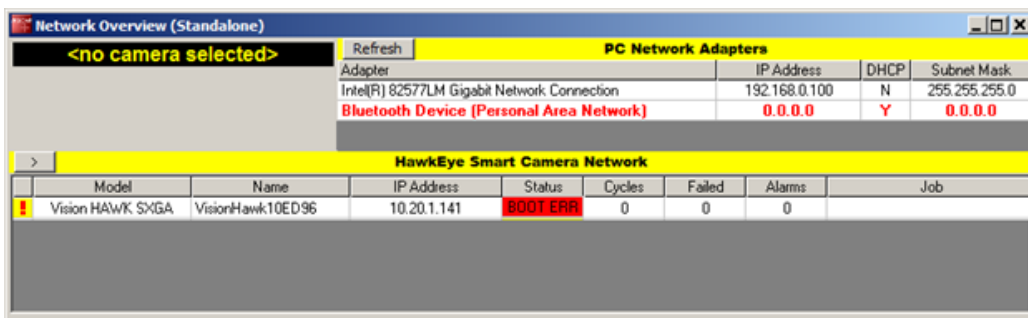

If you encounter this error condition, you will need to reload the firmware using the Smart Camera Firmware Update Tool.

