


Nokia Wireless Audio Gateway AD-42W

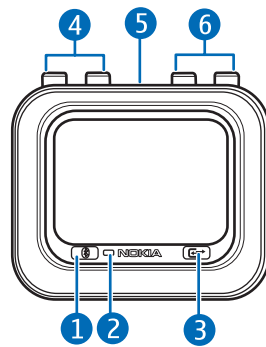

9247809/1

ENGLISH

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product AD-42W is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found from http://www.nokia.com/phones/declaration_of_conformity/.

CE 0681 



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

© 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia is a registered trademark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to

ENGLISH

revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Introduction

The AD-42W gateway allows you to connect a standard home stereo system to a compatible music player or headset that supports Bluetooth wireless technology.

Read this user guide carefully before using the gateway. Read also the user guides for your compatible audio devices that you use with the gateway. Keep the gateway and its accessories out of reach of small children.

Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible communication devices without cables. A Bluetooth connection does not require that the gateway and the other device be in line of sight, but both devices must be within a

certain distance of each other. The distance depends on the operating range of the devices. The gateway is a Bluetooth Class 1 device with an operating range of up to 100 meters (300 feet) but a typical

ENGLISH

operating range of Bluetooth devices is 10 meters (30 feet).

Connections can be subject to interference from obstructions, such as walls, or other electronic devices.

The gateway is compliant with Bluetooth Specification 2.0 supporting the following profiles: Advanced Audio Distribution Profile (A2DP) 1.0, and Generic Audio/

Video Distribution Profile (GAVDP) 1.0. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Parts

The gateway contains the parts shown at the start of this guide:

- 1—Pairing key
- 2—Blue indicator light
- 3—Operating mode key

4—RCA audio inputs; the red connector is for the left stereo channel and the white connector for the right channel.

- 5—Power connector
- 6—RCA audio outputs

Chargers

Check the model number of any charger before use with this device. The device is intended for use when supplied with power from the AC-3, AC-4, or DC-4 charger.



Warning! Use only chargers approved by Nokia for use with this particular device. The use of any other types may invalidate any

approval or warranty, and may be dangerous.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Switch the gateway on or off

To switch on, plug the charger cable into the power connector at the back, and connect the charger to a wall outlet. When the gateway is connected to a paired audio device and is ready for use, the indicator light flashes slowly. The gateway tries to connect to the Bluetooth

device that you have used most recently in the current operating mode. For more information on the two operating modes, see "Pair the gateway".

To switch off, unplug the charger from the wall outlet and the gateway.

Pair the gateway

Before you can use the gateway with a compatible audio device that supports Bluetooth wireless technology, you need to pair the gateway with it.

To pair the gateway with a music player (such as a music player device or a mobile phone with a music player feature), do as follows:

1. Check that the operating mode key is in the down position. If it is not, press the key.
2. Press and hold the pairing key until the indicator light is continuously shown.
3. Use your music player or phone to search for and select the gateway and to enter the Bluetooth passcode 0000.

ENGLISH

If the pairing was successful, the indicator light flashes quickly 10 times.

To pair the gateway with a headset, do as follows:

1. Check that the operating mode key is in the up position. If it is not, press the key.
2. Set up the headset for pairing as instructed in the user guide for the headset.
3. Press and hold the pairing key until the indicator light is continuously shown.

The gateway is paired automatically with the headset. If the headset requires a Bluetooth passcode and the

default passcode of the headset is not 0000, change the passcode to 0000 as instructed in the user guide of the headset.

You can pair the gateway with up to eight Bluetooth devices but connect it to only one device at a time in both operating modes. To change the Bluetooth audio device (such as a music player or headset) that you have connected to the gateway, disconnect the current device from the gateway and connect another paired device to it. For details, see the user guides of your audio devices.

If you want to clear the list of paired devices, press and hold the pairing key for 15 seconds while you are not listening to music through the gateway.

Connect the gateway

Ensure that the home stereo system is switched off before making any connections to it.

To play music on your paired music player through a home stereo system, plug the

supplied RCA cables to the audio outputs on the gateway and to the audio inputs on your stereo system.

To play music on your home stereo system through a paired headset, plug the RCA

ENGLISH

cables to the audio inputs on the gateway and to the audio outputs on your stereo system.

After you have connected the gateway to your home stereo system, set the volume at a moderate level on the music player or headset and the stereo system, and start to play music on the music player or stereo system.

If you have paired and connected the gateway with a music player and a headset, to switch between the two connections, press the operating mode key. To use the gateway with a music player, the operating mode key must be in the down position. To use the gateway with a headset, the operating mode key must be in the up position.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.

ENGLISH

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to

ENGLISH

which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Modifications not expressly approved by Nokia could void the user's authority to operate the equipment.