 



# Nokia Bluetooth Stereo Headset BH-111



9227195/1

 Cyan Magenta Yellow Black

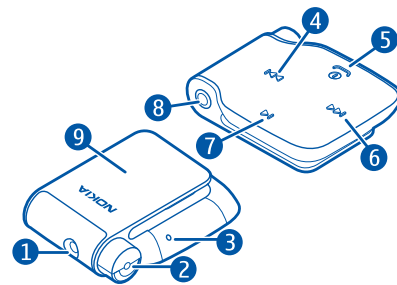

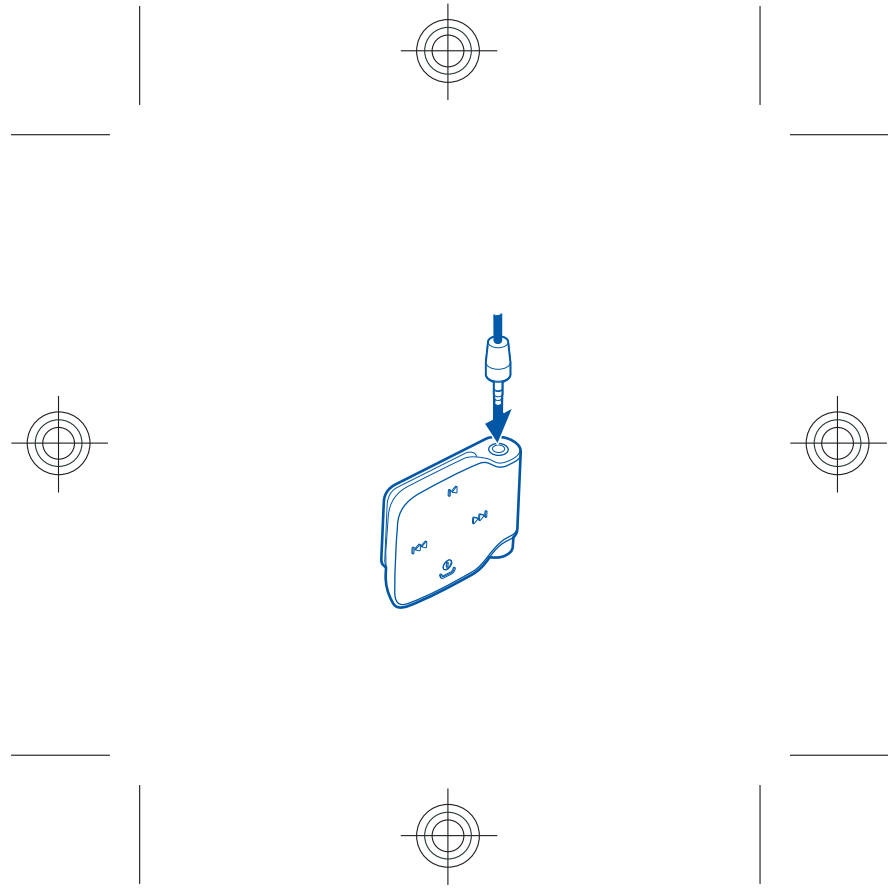

Cyan Magenta Yellow Black

ENGLISH

## Introduction

### About your headset

With the Nokia Bluetooth Stereo Headset BH-111, you can handle calls hands-free and enjoy your favourite music on the go. The headset is easy to pair with compatible devices, and you can switch smoothly between music and calls.

The surface of this product is nickel-free.

**Warning:** This product may contain small parts. Keep them out of the reach of small children.

Parts of the product are magnetic. Metallic materials may be attracted to the product. Do not place credit cards or other magnetic storage media near the product, because information stored on them may be erased.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

For support, go to [www.nokia.com/support](http://www.nokia.com/support).

### About Bluetooth connectivity

You can use Bluetooth to make a wireless connection to other compatible devices, such as mobile devices.

Devices do not need to be in direct line-of-sight, but they must be within 10 metres (33 feet) of each other. The connection may be affected by obstructions such as walls or other electronic devices.

This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles:



## ENGLISH

Headset Profile (HSP) 1.0, Hands-Free Profile (HFP) 1.5, Advanced Audio Distribution Profile (A2DP) 1.2, and Audio Video Remote Control Profile (AVRCP) 1.0. Check with the manufacturers of other devices to determine their compatibility with this device.

### Get started

#### Keys and parts

- 1 Charger connector
- 2 Volume knob and indicator light
- 3 Microphone
- 4 Rewind key ◀◀
- 5 Multifunction key Ⓜ
- 6 Fast-forward key ▶▶
- 7 Play/Pause key ▶||
- 8 Audio connector (3.5 mm)
- 9 Clip

 
 
#### Charge the battery

Before using the headset, you must charge the battery.

When you unplug a charger, hold and pull the plug, not the cord.

1. Connect the charger to a wall outlet.
2. Connect the charger cable to the charger connector on the headset. The red indicator light turns green when the battery is fully charged.
3. Disconnect the charger from the headset, then from the wall outlet.


The fully charged battery has power for up to 7 hours of talk time, up to 6 hours of music playing time, or up to 120 hours of standby time.






## ENGLISH

 
When the battery charge is low, the headset beeps every 5 minutes and the red indicator light flashes. When the battery is charging, the red indicator light is on.

**Check the battery charge** — With your headset connected to your mobile device, press . A green light indicates a sufficient charge level. If the light is yellow, you may need to recharge the battery soon. If the light is red, recharge the battery.

### Switch the headset on

Press and hold  for 2 seconds. The headset beeps, and a green indicator light flashes once. The headset automatically connects to the last connected device. If you have never paired your headset with a device, or you have cleared

the pairings, pairing mode is activated.

**Switch the headset off** — Press and hold  for 4 seconds. The headset beeps, and a red indicator light flashes once.

If the headset is not connected to a device within 30 minutes, it switches off.


### Pair and connect your headset

Before using the headset, you must pair and connect it with a compatible device.

1. Make sure the headset is switched off.
2. Activate the Bluetooth feature on your compatible device.
3. Switch the headset on. If you have never paired your headset with a device, or you have cleared the pairings, pairing



## ENGLISH

mode is activated automatically. If you have previously paired your headset with a device, press and hold  for 5 seconds. The green indicator light starts to flash quickly.

4. Within about 3 minutes, set your device to search for Bluetooth devices. For details, see the user guide of the device.
5. On your device, select the headset from the list of found devices.
6. If required, enter the passcode **0000**.

 
 
In some devices, you may need to make the connection separately after pairing.

When the headset is paired and connected, the green indicator light flashes slowly.

If your mobile device supports the A2DP Bluetooth profile and has a music player feature, you can also use your device to play music through the headset. If your mobile device does not support the A2DP profile, you can separately pair the headset with a music player that supports this profile. If you have paired and connected the headset to your mobile device, disconnect the headset from it before pairing the headset with the music player.



You can pair the headset with up to 8 devices, but connect it to only one device supporting the HFP profile and another device supporting the A2DP profile at a time.

When you switch on your headset, it automatically connects to the last used device. To manually connect the headset to the last





## ENGLISH

used device, press and hold  for 2 seconds. To manually connect the headset to a device that supports the A2DP profile, press .

 
### Wear the headset

Connect the headphones to the audio connector.

The headset is provided with different-sized rubber earpieces. Select the ones that fit you best.

Make sure you insert the earpiece marked with **L** into your left ear and the one marked with **R** into your right ear.


You can attach the headset to your clothing using the clip.





## Make and receive calls

When making and receiving calls, hold the microphone close to your mouth.

**Make a call** — When the headset is connected to your compatible mobile device, make a call normally using your mobile device.

**Answer or end a call** — During a call, press .

**Decline a call** — Press  twice.

**Mute or unmute the microphone** — Press .

You can redial the number you last called or make a call using voice dialling, if your mobile device








---

## ENGLISH

supports these features with the headset.

**Redial the last called number** — When no call is in progress, press  twice.

**Activate voice dialling** — When no call is in progress, press and hold  for 2 seconds, and follow the instructions in the user guide of your mobile device.

**Switch calls between your headset and your mobile device** — To switch a call from the headset to a compatible mobile device, or back to the headset, press and hold  for 2 seconds.




## Music


---


### Play music

Listen to your favourite music wherever you are.

You must pair and connect your headset to a mobile device that supports the A2DP Bluetooth profile and has a music player feature, or to a compatible music player that supports this profile.

 **Warning:** Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level.

**Play a song** — Select the song in the music player, and press .

**Pause or resume playing** — Press .





## ENGLISH

If you receive or make a call while listening to music, the music is paused.

**Play the next song** — Press **▶▶**.

**Play the previous song** — Press **◀◀** twice.

**Start the current song from the beginning** — Press **◀◀**.

**Scroll through the current song quickly** — Press and hold **▶▶** or **◀◀**.

## Settings

### Switch the indicator lights off

You can switch the indicator lights off if you do not want them to be shown, for example, during a call.

When the headset is connected to a device, press and hold **Ⓜ** and **◀◀** for 5 seconds. A red indicator light flashes.

**Stop playing** — Press and hold **▶||**.

 
### Change the volume

Use the volume knob.

If supported, you can also change the headset volume on the connected A2DP device.

Some indicator lights may still be shown, for example, when the battery charge is low.


**Switch the lights back on** — When the headset is connected to a device, press and hold **Ⓜ** and **▶▶** for 5 seconds. A green indicator light flashes.





**ENGLISH**

 
**Clear the pairings**

Switch the headset off, and press and hold  for 9 seconds. The headset beeps twice, and the red and green indicator lights alternate. After the settings are cleared, pairing mode is activated.

**Troubleshooting**

 Cannot connect the headset to a compatible device? Make sure

that the headset is charged, switched on, and paired with the device.

Did the headset stop functioning even though it is charged? Plug the charger into a wall outlet, and while you press and hold , connect the headset to the charger.



**Product and safety information**

 
**Battery and charger information**

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device.

This device is intended for use when supplied with power from the following chargers: AC-3, AC-8,

AC-11, AC-15, DC-4, and DC-9. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out.





**ENGLISH**

Talk and standby times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.

A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Use the charger for its intended purpose only. Improper use or use of unapproved chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged charger. Only use the charger indoors.

**Take care of your device**

Handle your device, charger and accessories with care. The following suggestions help you protect your warranty coverage.



 


## ENGLISH

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, allow the device to dry.
  - Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
  - Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
  - Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
  - Do not attempt to open the device.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
  - Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
  - Only use a soft, clean, dry cloth to clean the surface of the device.
  - Do not paint the device. Paint can clog the moving parts and prevent proper operation.

### **Recycle**

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at [www.nokia.com/wecycle](http://www.nokia.com/wecycle).



ENGLISH

## Copyright and other notices

**DECLARATION OF CONFORMITY**  
Hereby, NOKIA CORPORATION declares that this BH-111 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

**CE0979**

© 2011 Nokia. All rights reserved.  
Nokia, Nokia Connecting People, and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this



**ENGLISH**

 
 
document or withdraw it at any time without prior notice.

 
To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of products may vary by region. For more information, contact your Nokia dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

**FCC/INDUSTRY CANADA NOTICE**  
This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any

interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



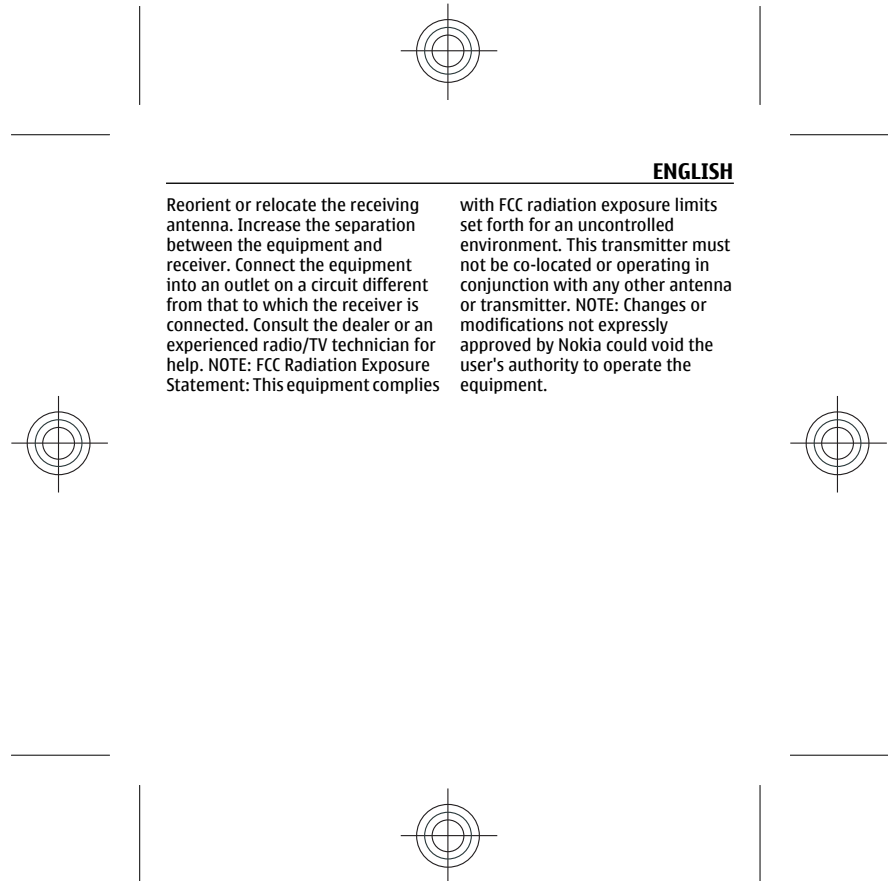

**ENGLISH**

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies

with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

