 
 


Nokia Bluetooth Headset BH-806

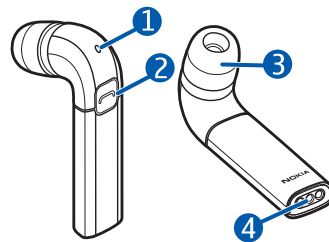

555555/1

Cyan Magenta Yellow Black

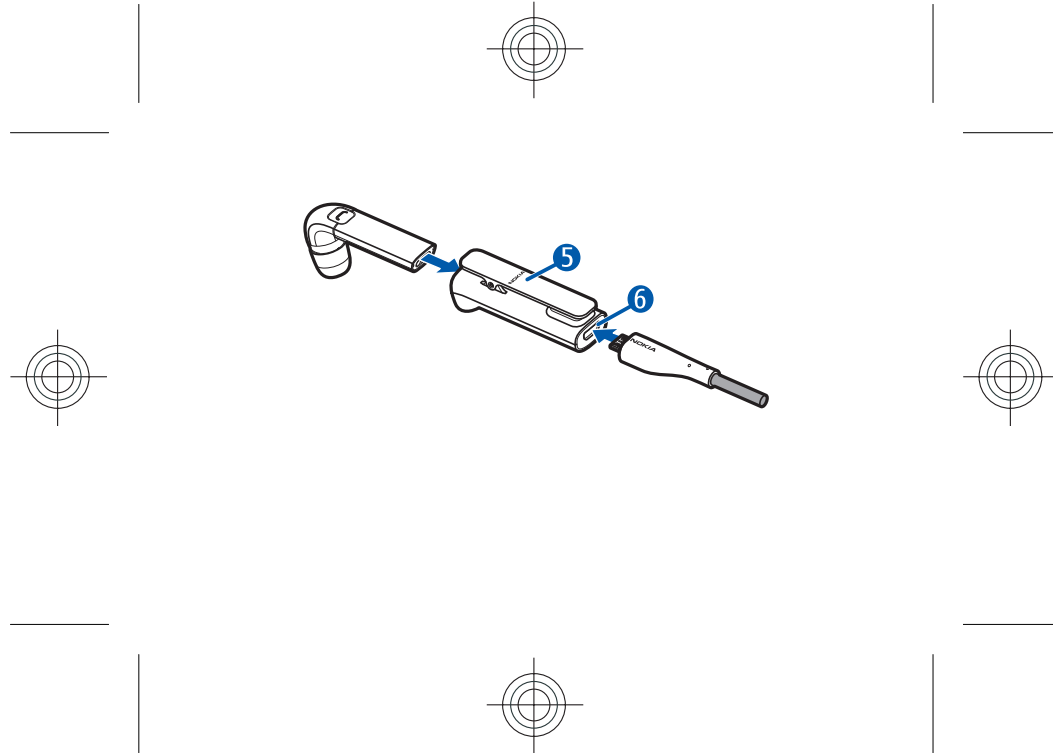

Cyan Magenta Yellow Black

ENGLISH

Introduction

About your headset

With the Nokia Bluetooth Headset BH-806, you can handle calls hands-free, even when you are using two mobile devices at the same time.



Note: The surface of this product does not contain nickel in the platings. The surface of this device contains stainless steel.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.

For more information, go to www.nokia.com/support.

About Bluetooth connectivity

You can use Bluetooth to make a wireless connection to other compatible devices, such as mobile devices.


This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: Headset Profile 1.1 and Hands-Free Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this device.

Cyan Magenta Yellow Black

ENGLISH

Get started

Keys and parts

- 1 Indicator light
- 2 Multifunction key 
- 3 Earpiece
- 4 Microphone
- 5 Carrying clip
- 6 Charger connector

Start using your headset

The headset comes with different sized earpads. Select the earpad that fits the best and is the most comfortable for your ear. To change the earpad, pull the current earpad from the earpiece, and push the new earpad into place.

1. To switch the headset on, remove it from the carrying clip. If the headset doesn't switch on, charge the battery.
2. Gently push the earpiece into your ear.
3. To select the language, follow the voice prompts. You can select English or Chinese. Pairing mode is activated.
4. To pair the headset with a compatible device, follow the voice prompts.

Charge the battery

1. Connect the charger to a wall outlet.
2. Place the headset in the carrying clip.
3. Connect the charger cable to the charger connector in the clip. The red indicator



ENGLISH


light turns green when the battery is fully charged.

4. Disconnect the charger from the carrying clip, then from the wall outlet.

The fully charged battery has power for up to 5 hours of talk time and up to 100 hours of standby time. If you keep the headset in the carrying clip, the standby time is up to 3 months.

When the battery charge is low, the red indicator light flashes, and you hear a voice prompt every 5 minutes. If you have deactivated voice prompts, the headset beeps every 5 minutes.

Check the battery charge — Make sure the headset is switched on, and touch and hold

 for 2 seconds. A voice prompt tells you the battery charge level.

 
Switch the headset on or off

Switch on — Remove the headset from the carrying clip. The headset beeps, and a green indicator light flashes once.

The headset connects to the last connected device. If you have never paired the headset with a device, or you have cleared the device pairings, pairing mode is activated.

Switch off — Place the headset in the carrying clip. The headset beeps, and a red indicator light flashes once. All active calls are ended.



If not connected to a device within 30 minutes, the headset switches off.






ENGLISH

 


Tip: Don't have the carrying clip with you? To switch the headset off, press and hold  for 4 seconds. To switch the headset on, press .

Pair and connect the headset to your mobile device

Before using the headset, you must pair and connect it to a compatible device.

1. To switch the headset off, press and hold  for 4 seconds.
2. Switch on the device to pair with.
3. If you have never paired the headset with a device, or you have cleared the device pairings, switch the headset on.

If you have previously paired your headset with another device, press and hold  for 5 seconds.

Pairing mode is activated, and a blue indicator light starts to flash quickly. Follow the voice prompts.

4. Within 3 minutes, activate Bluetooth on the device, and set it to search for Bluetooth devices. For details, see the user guide of the device.
5. Select the headset from the list of found devices.
6. If required, enter the passcode **0000**.

You can pair your headset with 8 compatible devices, but you can only connect it to a maximum of 2 devices at the same time.





ENGLISH

With some mobile devices, you may need to make the connection separately after pairing.

Wear the headset

Gently push the earpiece into your ear.

When you're not using your headset, keep it in the carrying clip.



Tip: Have your headset always at hand — clip it to your pocket as you would a pen.



Make calls


Make and receive calls

To make and receive calls using your headset, you need to connect it to your mobile device.

Make a call — Make a call in the normal way.


Answer a call — Remove the headset from the carrying clip.





Tip: If the headset is not in the carrying clip, touch .

End a call — Place the headset in the carrying clip.



Tip: To end a call, you can also touch  twice.

Reject a call — Touch  twice.


Switch a call between your headset and mobile device — Touch and hold  for 2 seconds.

 




ENGLISH

You can redial the last called number or use voice dialling, if your mobile device supports these features with the headset.

Redial the last called number — When no call is in progress, press .


Use voice dialling — When no call is in progress, press and hold  for 2 seconds, and follow the instructions in the user guide of your mobile device.

Change the volume

Set the desired volume level on your connected mobile device. The selected volume level is saved as the minimum volume level for the device that is currently connected to the headset. Your headset adjusts the volume automatically according to the level of background noise.

Pair and connect the headset to two devices

When you use the headset for the first time, it automatically connects to your mobile device. You can also connect your headset to another device, and manage calls from, for example, both your personal and your work mobile device at the same time.


1. To switch the headset off, press and hold  for 4 seconds.
2. Activate pairing mode, and pair the headset with the second device.
3. Make sure Bluetooth is activated on both devices, and switch the headset off and back on. The headset connects to both devices.






ENGLISH

Handle calls from two devices

 
End an ongoing call, and answer a call on another device — Touch .

Put an ongoing call on hold, and answer a call on another device — Touch and hold  for 2 seconds.

Switch between active and held calls — Touch and hold  for 2 seconds.


End an ongoing call, and activate a held call — Touch .


If you redial or use voice dialling, the call is made on the device you last had an active call on with the headset.



Settings

 Deactivate voice prompts

Make sure the headset is switched on, and touch and hold  for 9 seconds. You hear a voice prompt, and a yellow indicator light flashes once.

Activate voice prompts — Touch and hold  for 9 seconds. You hear a voice prompt, and a green indicator light flashes once.







ENGLISH

 
 
Clear device pairings

When you clear the device pairings, you need to select the language again.

1. To switch the headset off, press and hold  for 4 seconds.
2. Press and hold  for 9 seconds. The headset beeps twice, and the red and green indicator lights alternate.
3. When the headset switches on, follow the voice prompts. Pairing mode is activated.

Change the language

When you change the language, your device pairings are cleared, and you need to pair and connect your headset to your device again.





ENGLISH

Product and safety information

Compatible chargers

This device is intended for use when supplied with power from the following chargers: AC-10, AC-6, DC-10, DC-6, DC-11, DC-11K, DT-600, and

CA-146C. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

Copyright and other notices

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this BH-806 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/phones/declaration_of_conformity/.


CE 0560


© 2010 Nokia. All rights reserved.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

FCC/INDUSTRY CANADA NOTICE

  This device complies with Part 15 of the FCC Rules. Operation is subject to the following two






ENGLISH

conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

 the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.



FRANÇAIS CANADIEN

Droits d'auteur et autres avis

DÉCLARATION DE CONFORMITÉ

NOKIA CORPORATION déclare par la présente que le produit BH-806 est conforme aux exigences essentielles et aux dispositions applicables de la Directive 1999/5/EC. Vous trouverez une copie de la déclaration de conformité à l'adresse www.nokia.com/phones/declaration_of_conformity/.

CE 0560

© 2010 Nokia. Tous droits réservés.

Bluetooth est une marque déposée de Bluetooth SIG, Inc.

AVIS DE LA FCC ET D'INDUSTRIE CANADA

Cet appareil est conforme aux dispositions de la section 15 du règlement de la FCC. Son utilisation

est assujettie aux deux conditions suivantes : 1. Ce dispositif ne doit pas causer d'interférence nuisible; et 2) ce dispositif doit accepter toute interférence reçue, y compris l'interférence qui pourrait causer un fonctionnement non désiré. Cet appareil a été vérifié et s'est révélé conforme aux limites pour un dispositif numérique de classe B, conformément à la section 15 du règlement de la FCC. Ces limites sont définies pour offrir une protection raisonnable contre les interférences nuisibles au sein d'une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux directives, causer de l'interférence nuisible aux communications radio. Il n'y a toutefois pas de garantie qu'aucune interférence ne surviendra



FRANÇAIS CANADIEN

dans une installation donnée. Si cet appareil cause de l'interférence nuisible à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en allumant l'appareil, essayez de corriger l'interférence au moyen des mesures suivantes : Réorientez ou déplacez l'antenne. Augmentez la distance entre l'appareil et le récepteur. Connectez l'appareil dans la prise d'un circuit différent de celui où est connecté le récepteur. Consultez le fournisseur ou un technicien en radio/télévision qualifié pour obtenir de l'aide. REMARQUE : Énoncé de la

FCC relatif à l'exposition aux rayonnements : Cet appareil est conforme aux limites d'exposition aux rayonnements définies par la FCC dans un environnement non contrôlé. Cet émetteur ne doit pas être placé près d'une autre antenne ou d'un autre type d'émetteur ni être utilisé avec ce type d'équipement. REMARQUE : Les changements et modifications non formellement approuvés par Nokia pourraient annuler le droit de l'utilisateur de se servir de l'appareil.

