


Nokia Portable Wireless Charging Plate DC-50

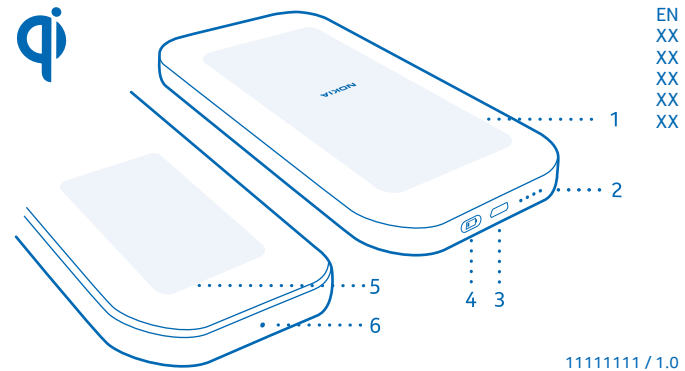

EN
XX
XX
XX
XX
XX

ENGLISH: Keys and parts

1. Charging area for charging the phone
2. Battery level and charging indicators
3. Charging cable connector
4. Power indicator key
5. Charging area for charging the plate
6. Phone charging indicator

The surface of this product is nickel-free.

Some of the accessories mentioned in this user guide may be sold separately.

1. Top up your phone

Place your phone on top of the charging plate so that the charging areas on the two devices touch.

The battery status indicators switch on for 10 seconds, showing you the battery charging level. The phone charging indicator is on when the phone is charging.

If the charging plate becomes too warm, it automatically stops charging for a while.

When you're travelling, or when you don't need the charging plate for a while, you can switch it off. Press and hold the power indicator key for 5 seconds. Switch the plate back on by pressing the power indicator key again, or by connecting to a USB cable.

2. Charge your charging plate

1. To charge wirelessly, place the charging plate on a wireless charger. Make sure the charging areas on the two devices touch.

Alternatively, when using a USB charger or a computer, first put the micro-USB end of the cable in the charger connector of your charging plate. Then put the USB end of the cable into the charger and plug the charger into a wall outlet, or connect the cable to a computer.

The battery level and charging indicators show the charging progress by blinking steadily while the battery is charging. The charging time may vary depending on the charging method.

If the charging plate becomes too warm, it automatically stops charging for a while.

2. When the battery is full, take your plate off the wireless charger, or disconnect the USB cable from your charging plate and the charger from the wall outlet.

3. Charge your charging plate and phone at the same time

1. To charge wirelessly, place the charging plate on a wireless charger so that the charging areas touch.

Alternatively, connect your charging plate to a USB charger or a computer.

2. Place your phone on the charging plate so that the charging areas touch.

4. Troubleshooting and support

When you want to learn more about your device, or if you're unsure how your device should work, there are several support channels for you to check.

To help you get the most out of your device, you can explore www.nokia.com/support.

There you can find:

- Full-length user guides
- Troubleshooting info
- Discussions
- News on apps and downloads
- Further details about features and technologies, and the compatibility of devices and accessories

Troubleshooting and discussions may not be available in all languages.

The Federal Communications Commission (FCC) certification requires the following user instruction: This device is intended for desktop use and should not be used next to your body. This device has been tested to comply with RF exposure limits at 10 cm from the body.



ENGLISH:

Product and safety information

Take care of your device
Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, let the device dry.
- Use the charger for intended purposes only. Improper use, or use of incompatible chargers may present a risk of fire, explosion, or other hazard. Never use a damaged charger.

- Do not attempt to charge a device having a damaged, cracked or open battery case or a device that is not compatible with Qi.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.

- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.

- Do not open the device.

- Unauthorised modifications may damage the device and violate regulations governing radio devices.

- Do not drop, knock, or shake the device. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.

Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check

how to recycle your Nokia products at www.nokia.com/recycle.

Battery and charger info

Charge your device with AC-60 charger. Charger plug type may vary.

- Unauthorised modifications may damage the device and violate regulations governing radio devices.

Nokia may make additional battery or charger models available for this device.

Battery and charger safety

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully-charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Device temperature monitoring allows safe operation for battery

charging in 0°C – +45°C and discharging in -15°C – +55°C.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

When your charger is not in use, unplug it. If left unused, a fully-charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Device temperature monitoring allows safe operation for battery

charging in 0°C – +45°C and discharging in -15°C – +55°C.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between

a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Copyright and other notices

DECLARATION OF CONFORMITY



Hereby, NOKIA CORPORATION declares that this DC-50 product is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.

The availability of products may vary by region. For more info, contact your Nokia dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous

development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

FCC/INDUSTRY CANADA/MEXICO NOTICE

This device complies with part 15 of the FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

TM & © 2013 Nokia. All rights reserved. Third party products/names may be TMs of their respective owners.

The 'Qi' symbol is a trademark of the Wireless Power Consortium.

Warranty

The warranty period Nokia provides for this product is 12 months. For details please visit the local Nokia online warranty text web site www.nokia.com/support.