

---

 
# User Guide

Nokia Wireless Charger DT-601

**NOKIA**

# Parts

Get to know your wireless charger.

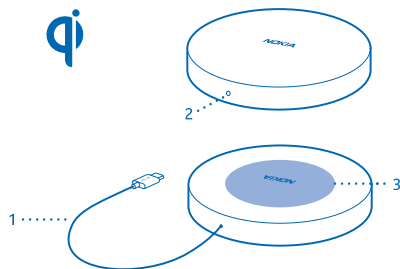


- 1 USB cable
- 2 Indicator light
- 3 Charging area

The surface of this product is nickel-free.

## Charge your phone

 Charge your phone or other Qi-compatible device without the hassle of untangling charger cables. Just pop your phone on the charging plate to start charging.

1. Connect the charging plate to a wall outlet using the charger provided in the sales box. You can also connect the USB cable on the charging plate to your computer.
2. Make sure the charging plate is facing up, and that there's nothing on the plate.
3. Place your device on the charging plate. When the white indicator light switches off, the battery is fully charged.

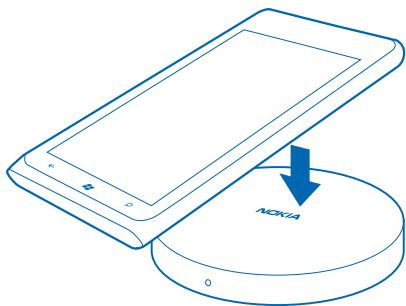

It's normal for the charging plate and device to get warm, and they may get even warmer if you use your device, for example, to stream music from your phone while charging.

Keep the area around the plate free. If there is something on the plate besides your phone, the phone doesn't charge, and the white indicator light blinks quickly.

# About Qi

Qi is a global standard that makes wireless charging possible for your device.

 
Qi works using magnetic induction, and is currently designed for devices that use 5 watts of power or less, such as mobile phones.

Qi chargers and devices use the same frequency. As long as their charging areas are touching, all Qi products are compatible, regardless of manufacturer or brand.

For more details, see the user guides of the relevant devices.

# Indicator lights

Wonder what the different lights on your charging plate mean?

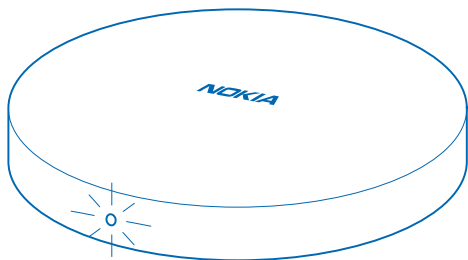

Continuous	Charging
Off	The battery of your phone is fully charged
Flashing quickly	Charging error, or the connected power source is not able to provide enough power

If there is a problem with charging:

- Check that no other object is on the plate.
- If the charging plate is too warm, take your device off the plate, and unplug the plate. The plate may switch off automatically if it is too hot. When the plate has cooled down, try charging again.
- Use the charger provided in the sales box.

# Troubleshooting and support

When you want to learn more about your device, or if you're unsure how your device should work, there are several support channels for you to check.



To help you get the most out of your device, you can explore [www.nokia.com/support](http://www.nokia.com/support).

There you can find:

- Troubleshooting info
- Discussions
- News on apps and downloads
- Further details about features and technologies, and the compatibility of devices and accessories

Troubleshooting and discussions may not be available in all languages.

# Product and safety information

## Take care of your device

Handle your device, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, let the device dry.
- Use the charger for intended purposes only. Improper use, or use of incompatible chargers may present a risk of fire, explosion, or other hazard. Never use a damaged charger.
- Do not attempt to charge a device having a damaged, cracked or open battery case or a device that is not compatible with Qi.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.

During extended operation, the device may feel warm. In most cases, this is normal. If the device is not working properly, take it to the nearest authorised service facility.

### Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at [www.nokia.com/recycle](http://www.nokia.com/recycle).

### Crossed-out wheeled-bin symbol



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to [www.nokia.com/support](http://www.nokia.com/support). For more info on the environmental attributes of your device, see [www.nokia.com/ecoprofile](http://www.nokia.com/ecoprofile).

## Battery and charger info

Charge your device with AC-60 charger. Charger plug type may vary.

Nokia may make additional battery or charger models available for this device.

# Copyrights and other notices

## DECLARATION OF CONFORMITY



Hereby, NOKIA CORPORATION declares that this DT-601 product is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.

The availability of products may vary by region. For more info, contact your Nokia dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

## FCC/INDUSTRY CANADA NOTICE

This device complies with part 15 of the FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TM & © 2013 Nokia. All rights reserved. Third party products/names may be TMs of their respective owners.

The 'Qi' symbol is a trademark of the Wireless Power Consortium.



# Warranty

The warranty period Nokia provides for this product is 12 months. For details please visit the local Nokia online warranty text web site [www.nokia.com/support](http://www.nokia.com/support).