 
 
 
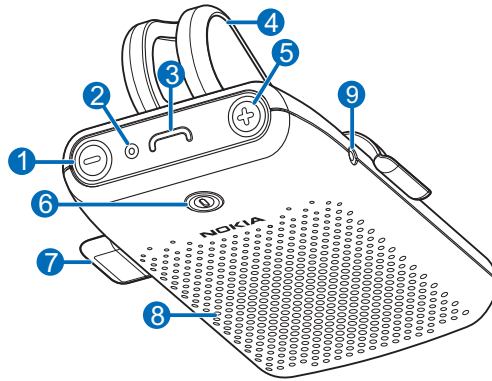 
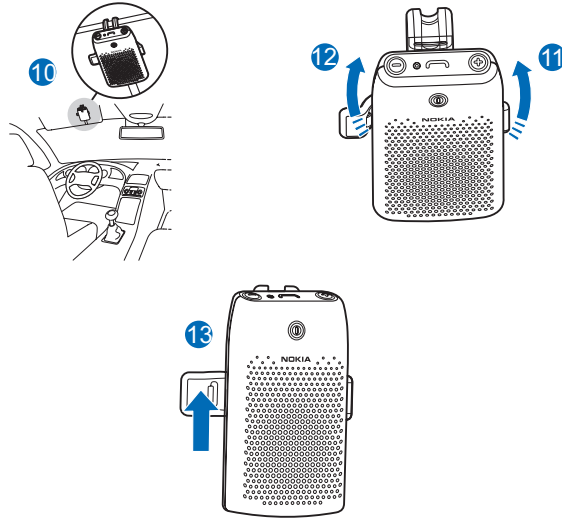 
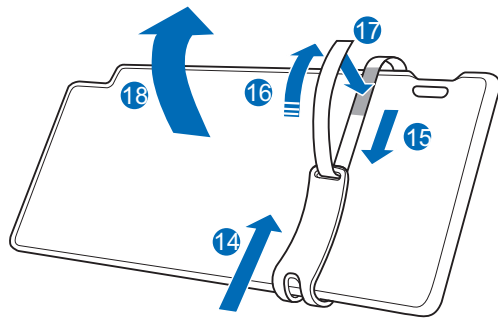 


Nokia Speakerphone HF-210



9223070/1





ENGLISH

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this HF-210 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The product is in conformity with the limits defined in Directive 2004/104/EC (amending Directive 72/245/EEC), Annex I, paragraph 6.5, 6.6, 6.8 and 6.9. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity

CE 0560

© 2010 Nokia. All rights reserved.

Nokia, Nokia Connecting People and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products may vary by region. For more information, contact your Nokia dealer. This device may contain commodities, technology or software

ENGLISH

subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



Road safety comes first
Obey all local laws. Always keep your hands free to



Interference
All wireless devices may be susceptible to interference, which could affect performance.

operate the vehicle while driving. Your first consideration while driving should be road safety.

Introduction

With the Nokia Speakerphone HF-210, you can make and answer calls hands-free.

Read this user guide carefully before using the speakerphone. Also, read the user guide for the device that you connect to the speakerphone.

This product may contain small parts. Keep them out of the reach of small children.

The surface of this device is nickel-free.

ENGLISH

Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible devices without cables. The speakerphone and the other device do not need to be in line of sight, but they should be within 10 metres (33 feet) of each other. Connections may be subject to

interference from obstructions, such as walls, or other electronic devices.

The speakerphone is compliant with the Bluetooth Specification 2.1 + EDR supporting the following profiles: Handsfree Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this device.

Get started

The speakerphone contains the following parts shown on the title page: volume down key (1), microphone (2), answer/end key with indicator light (3), clip (4), volume up key (5), power key (6), release tab (7), speaker (8), and charger connector (9). Before using the speakerphone, you must charge the battery and pair the speakerphone with a compatible device.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Charge the battery

Before charging the battery, carefully read "Battery information".

1. Connect the charger cable to the charger connector.

ENGLISH

2. Connect the charger to the power source. The red indicator light is displayed while charging.

If you use a charger that is connected to the cigarette lighter socket, power must be supplied by a 12-volt car battery. Make sure the charger is properly inserted in the cigarette lighter socket and does not interfere with the normal operation of the car.

In some car models, the cigarette lighter socket is powered by the car battery, even when you remove the ignition key. In those cases, the car battery might be discharged, even if the speakerphone is not used. For more information, contact the vehicle manufacturer.

If charging does not start, disconnect the charger and plug it in again. Charging the battery fully may take up to 2 hours.

3. When the battery is fully charged, the green indicator light is displayed. Disconnect the charger from the speakerphone, then from the power source.

The fully charged battery has power for up to 10 hours of talk time or up to 240 hours of standby time.

To check the battery charge, observe the colour of the indicator light when you switch on the speakerphone. If the light is green, the charge level is sufficient. If the light is yellow, you may need to recharge the battery soon. If the light is red, recharge the battery.

When the battery charge is low, the speakerphone beeps every 5 minutes and the red indicator light flashes.

Switch on or off

To switch on, press the power key. The speakerphone beeps, and the indicator



ENGLISH



light flashes slowly while the speakerphone tries to connect to the last used device. When the speakerphone is connected to your device and is ready for use, the blue indicator light flashes slowly. If the speakerphone has not been paired with a device, it automatically enters pairing mode.

1. Make sure your mobile device is switched on.
2. If you have not previously paired the speakerphone with a device, switch on the speakerphone. The speakerphone enters pairing mode, and the blue indicator light starts to flash quickly.

To switch off, press the power key. The speakerphone beeps, and the red indicator light is briefly displayed. If the speakerphone is not connected to a device within about 30 minutes, it switches off automatically.

 
 
 
If you have previously paired the speakerphone with a device, make sure the Bluetooth function is deactivated in the current device or the device is not within 10 metres (33 feet) of the speakerphone. Then switch off the speakerphone, and switch it on again.

Pair and connect

Before using the speakerphone, you must pair and connect it to a compatible device.

You can pair the speakerphone with up to 8 devices, but connect it to only one device at a time.

3. Within about 3 minutes, activate the Bluetooth feature on your device, and set the device to search for Bluetooth devices. See the user guide of your device for instructions.






ENGLISH



4. Select the speakerphone from the list of found devices.
5. If necessary, enter the passcode 0000 to pair and connect the speakerphone to your device. In some devices, you may need to make the connection separately after pairing.

 
connect to one of the other paired devices. To reconnect the speakerphone when it is on, but not connected to a device, make sure the other device is on, and switch the speakerphone off and back on; or make the connection in the Bluetooth menu of your device.



When the speakerphone is connected to your device and is ready for use, the blue indicator light flashes slowly.

When you switch on the speakerphone, it tries to connect to the last used device. If the connection fails, the speakerphone tries to

 You may be able to set your mobile device so that the speakerphone connects to it automatically. To activate this feature in a Nokia device, modify the paired device settings in the Bluetooth menu.



Installation in a car

You can attach the speakerphone to the sunvisor of your car using the supplied clip.

General safety instructions

When you install the speakerphone in a car, make sure it does not interfere with or hinder the systems used in the operation of the vehicle (for example,



ENGLISH

airbags) or disturb your field of vision while driving.

Check that the deployment of the airbags is not blocked or impaired in any way. Only operate the speakerphone if it is safe to do so under all driving conditions.

To use the speakerphone when it is attached to the sunvisor, make sure the sunvisor is folded up against the car roof (10).

Attach the clip to the sunvisor

Slide the clip around the sunvisor from the driver's or passenger's side.

Push the clip towards the sunvisor (14), and pull the strap attached to the clip (15 and 16). Firmly press the hook and loop end of the strap against the felt on the strap (17) to keep the speakerphone securely in place. Fold the sunvisor up against the car roof (18).

Attach the speakerphone to the clip

Line up the recess at the right side of the speakerphone with the catch on the clip (11), and press the left side towards the clip (12) to lock the speakerphone firmly in place. Check that the speakerphone is in the correct position.

To detach the speakerphone, press the release tab, and pull the speakerphone away from the clip (13).

ENGLISH

Basic use

Adjust volume

During a call, press either volume key.



Warning: Do not hold the device near your ear, because the volume may be extremely loud.

Calls

To make a call, use your mobile device in the normal way when the speakerphone is connected to it. Speak towards the speakerphone microphone. For optimal performance, check that there are no objects in front of the microphone and that the microphone is in front of you. During a call, the blue indicator light is displayed.

To redial the number you last called (if your mobile device supports this feature with the speakerphone), when

no call is in progress, press the answer/end key twice.

To activate voice dialling (if your mobile device supports this feature with the speakerphone), when no call is in progress, press and hold the answer/end key for about 2 seconds. Proceed as described in the user guide of the mobile device.

To answer a call, press the answer/end key. To reject a call, press the answer/end key twice.

To end a call, press the answer/end key.

To switch an active call between the speakerphone and the connected device, press and hold the answer/end key for about 2 seconds.



ENGLISH



Activate or deactivate lights

By default, the indicator lights are used in all situations. To deactivate the lights in some situations (for example, during a call or when the speakerphone is connected to a mobile device), press and hold the answer/end key and the volume down key for about 5 seconds when the speakerphone is connected to a device. The speakerphone beeps, and the yellow indicator light flashes once.

To activate the lights, press and hold the answer/end key and the volume up key for about 5 seconds. The speakerphone beeps, and the green indicator light flashes once.

Clear settings or reset

 
 
To clear the pairing settings from the speakerphone, switch off the speakerphone, and press and hold the power key and the answer/end key at the same time for over 8 seconds.

When the settings are cleared, the red and green indicator lights alternate.

To reset the speakerphone if it stops functioning, even though it is charged, connect the speakerphone to a charger while you press and hold the power key.

Troubleshooting

If you cannot connect the speakerphone to your compatible device, check that the speakerphone is charged, switched on, and paired with your device.



ENGLISH

Battery information

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device. This device is intended for use when supplied with power from the following chargers: AC-3, AC-4, AC-5, AC-8, AC-15, DC-4, DC-9, and DC-13. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Talk and standby times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

ENGLISH

Use the charger for its intended purpose only. Improper use or use of unapproved chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If

you believe the charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged charger. Only use the charger indoors.

Take care of your device

Handle your device, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can

shorten the life of the device, damage the battery, and warp or melt plastics.

- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.

ENGLISH

- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at www.nokia.com/werecycle, or with a mobile device, www.nokia.mobi/werecycle.



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your device, see www.nokia.com/ecodeclaration.

Additional safety information

Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic

antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

ENGLISH

Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids,

gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

FCC/Industry Canada notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be



ENGLISH



co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

