 
 
 
 




Nokia Speakerphone HF-200 User Guide



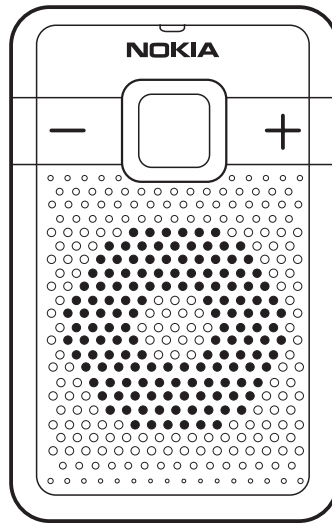

© 2008 Nokia. All rights reserved.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

 
 
 
The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with your Nokia dealer for details.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

??????? / Issue 1 EN



Contents

For your safety	4	Attach the clip to the sunvisor....	11
1. Introduction	5	4. Basic use	12
Bluetooth wireless technology	5	Adjust volume.....	12
2. Get started	6	Calls.....	12
Chargers	6	Make a call	12
Charge the battery.....	6	Answer a call.....	12
Switch on or off.....	7	End a call.....	12
Pair with another device	8	Switch a call between speakerphone and connected device	13
Disconnect the speakerphone	8	Clear settings or reset.....	13
Reconnect the speakerphone	9	Troubleshooting	13
3. Installation	10	5. Battery information	14
General safety instructions.....	10	Care and maintenance	15
Attach to the sunvisor using the clip	10	Additional safety information	17
Fix the speakerphone to the clip.....	10		



For your safety



For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.
Read the complete user guide for further information.



 
 
 
ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.





1. Introduction

With the Nokia Speakerphone HF-200, you can make and answer calls hands free. You can connect the speakerphone to a compatible mobile device that supports Bluetooth wireless technology.

 
 
 
Read this user guide carefully before using the speakerphone. Also, read the user guide for the device that you connect to the speakerphone. It provides important safety and maintenance information. Check www.nokia.com/support or your local Nokia website for the latest version of the user guide and additional information related to your Nokia product.

Keep all accessories and enhancements out of the reach of small children.

■ Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible devices without cables. In a Bluetooth connection, the mobile device and the speakerphone should be within 10 meters (33 feet) of each other. Connections can be subject to interference from other electronic devices.

The speakerphone complies with the Bluetooth Specification 2.0 that supports the Handsfree Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this device.




Get started

2. Get started

The speakerphone contains the following parts:

 - Microphone (1)
- Indicator light (2)
- Answer/end key (3)
- Volume down key (4)
- Volume up key (5)
- Speaker (6)
- Charger connector (7)

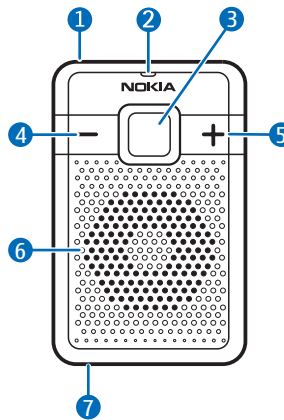

Before using the speakerphone, you must charge the battery and pair the speakerphone with a compatible device.

Parts of the speakerphone are magnetic. Metallic materials may be attracted to the speakerphone. Do not place credit cards or other magnetic storage media near the speakerphone, because information stored on them may be erased.

■ Chargers

The speakerphone is intended for use when supplied with power from the AC-3, AC-4, AC-5, and DC-4 chargers.



Warning: Use only chargers approved by Nokia for use with this particular enhancement. The use of any other types may invalidate any approval or warranty, and may be dangerous.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

■ Charge the battery

 
 
Before charging the battery, read "Battery information," p. 14.



Get started



1. Connect the charger cable to the charger connector on the speakerphone.
2. Connect the charger to the power source. For example, connect the DC-4 charger to the cigarette lighter socket of your car or the AC-5 charger to a wall outlet. The red indicator light is displayed while charging.
 - If you use a charger that is connected to the cigarette lighter socket, power must be supplied by a 12-volt car battery. Ensure that the charger is properly inserted in the cigarette lighter socket and does not interfere with the normal operation of the car.
 - In some car models, the cigarette lighter socket is powered by the car battery even when you remove the ignition key. In those cases, the car battery might be discharged even if the speakerphone is not used. For more information, contact the vehicle manufacturer.
 - It may take a while before charging starts. If charging does not start, disconnect the charger, plug it in again, and retry. Charging the battery fully may take up to 2 hours and 30 minutes???
3. When the battery is fully charged, the indicator light turns off. Disconnect the charger from the speakerphone and the power source.




The fully charged battery has power for up to 10??? hours of talk time or up to 150??? hours of standby time.

When battery power is low, the red indicator light flashes slowly. Recharge the battery.

■ Switch on or off

 To switch on, press and hold the answer/end key until the speakerphone beeps and the green indicator light turns on. The indicator light flashes when the speakerphone tries to connect to a paired device. When the speakerphone is connected to a paired device and is ready for use, the green indicator light is continuously displayed.







Get started



To switch off, press and hold the answer/end key until the red indicator light is briefly displayed. If the speakerphone is not connected to a paired device within about 5 minutes, it switches off automatically to save power.

■ Pair with another device

  1. Ensure that your mobile device is switched on.
2. If you have not previously paired the speakerphone with a device, switch on the speakerphone. The indicator light flashes green slowly.
If you have previously paired the speakerphone with another device, disconnect the speakerphone from the current device, then switch on the speakerphone.
3. Activate the Bluetooth feature on the mobile device, and set the device to search for Bluetooth devices. See the user guide of your device for instructions.
4. Select the speakerphone (Nokia HF-200) from the list of found devices.
5. Enter the Bluetooth passcode 0000 to pair and connect the speakerphone to your device. In some devices, you may need to make the connection separately after pairing.



If pairing succeeds, the speakerphone is shown in the list of currently paired Bluetooth devices in your mobile device.

When the speakerphone is connected to your mobile device, the green indicator light is continuously displayed.

You can pair the speakerphone with up to eight devices but connect it to only one device at a time. To pair and connect the speakerphone with a new device, disconnect the speakerphone from the current device, then pair and connect the new device.

Disconnect the speakerphone

To disconnect the speakerphone from your mobile device, do one of the following:

- Switch off the speakerphone.





Get started



- Disconnect the speakerphone in the Bluetooth menu of your device.
- Move the speakerphone more than 10 metres (33 feet) away from the device.

 
 
 
 
 
You do not need to delete pairing with the speakerphone to disconnect it.

Reconnect the speakerphone

When you switch on the speakerphone, it tries to connect to the device that was last used with it. If the connection fails, the speakerphone tries to connect to one of the other recently used devices.

To connect the speakerphone when it is on but not connected to a device, ensure that the other device is on, and press the answer/end key; or make the connection in the Bluetooth menu of your device.

In your mobile device, you may be able to allow the speakerphone to connect to it automatically. To do this in a Nokia device, change your paired device settings in the Bluetooth menu.

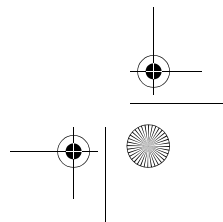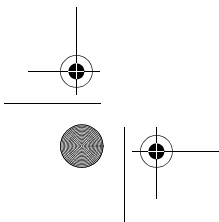

Installation

3. Installation

 
You can attach the speakerphone to the sunvisor of your car using the supplied clip.

■ General safety instructions

When you install the speakerphone in a car, ensure that it does not interfere with or hinder the systems used in the operation of the vehicle (for example, airbags) or disturb your field of vision while driving.

Check that the deployment of the airbags is not blocked or impaired in any way. Only operate the speakerphone if it is safe to do so under all driving conditions.

To use the speakerphone when it is attached to the sunvisor, ensure that the sunvisor is up at the car roof (as shown in the figure).

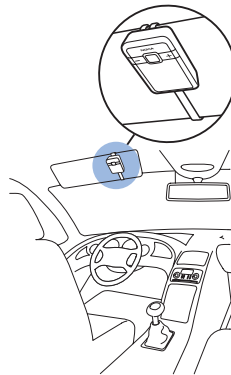


■ Attach to the sunvisor using the clip

You can attach the speakerphone to the sunvisor using the supplied clip.

Fix the speakerphone to the clip

 Turn the speakerphone sideways, as shown in the figure. Push the speakerphone towards the clip (1), and turn the speakerphone clockwise (2) until it locks into place. (To detach the speakerphone, turn it counterclockwise, and pull it away from the clip.)

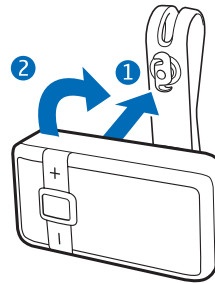


Installation


Attach the clip to the sunvisor

Slide the clip (and the speakerphone attached to it) around the sunvisor from the driver's or passenger's side as shown in the figure.

 Push the clip towards the sunvisor (3), and pull the strap attached to the clip (4 and 5). Firmly press the hook and loop end of the strap against the felt on the strap (6) to keep the speakerphone securely in place. Fold the sunvisor up against the car roof (7).

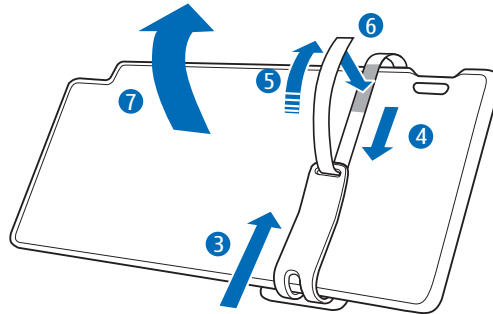

 Check that the speakerphone is in the correct position (8).

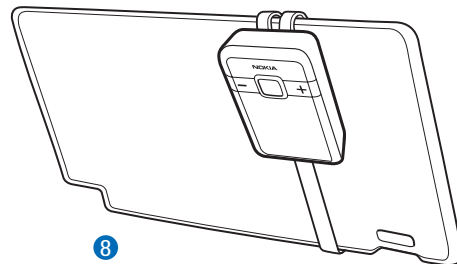

Basic use

4. Basic use

■ Adjust volume

To adjust the speakerphone volume during a call, use the volume keys on the speakerphone.



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

■ Calls

Make a call

To make a call, use your mobile device in the normal way when the speakerphone is connected to it. Speak towards the speakerphone microphone. For optimal performance, check that there are no objects in front of the microphone and that the microphone is in front of you. During a call, the green indicator light is displayed.

If your device supports last number redial with the speakerphone, press the answer/end key twice when no call is in progress.

If your device supports voice dialing with the speakerphone, press the answer/end key when no call is in progress, and proceed as described in the user guide of your device.

Answer a call

When you receive a call, you hear a ringing tone through the speaker on the speakerphone. To answer the call, press the answer/end key. To reject the call, press the answer/end key twice.

End a call

To end a call, press the answer/end key. The speakerphone beeps.



Switch a call between speakerphone and connected device

To switch the active call from the speakerphone to your device, press and hold the answer/end key.

To switch the call back to the speakerphone, press the answer/end key.

■ Clear settings or reset

 
 
 
To clear the pairing settings from the speakerphone, press and hold the answer/end key and the volume up key at the same time for about 10 seconds. When the settings have been cleared, the indicator light alternates red and green.

To reset the speakerphone if it stops functioning, although it is charged, press and hold the answer/end key, and plug the speakerphone into a charger. The speakerphone switches off. To use the speakerphone, reconnect it to your mobile device. The reset does not clear the pairing settings.

■ Troubleshooting

If you cannot connect the speakerphone to your compatible device, do as follows:

- Ensure that the speakerphone is charged, switched on, and paired with your device.
- Ensure that the Bluetooth feature is activated on your device.
- Ensure that the speakerphone is within 10 metres (33 feet) of your device and that there are no other electronic devices between the speakerphone and the device.



Battery information

5. Battery information

Your device is powered by a rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved charger may present a risk of fire, explosion, leakage, or other hazard.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears.


Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.

Improper battery use may result in a fire, explosion, or other hazard. If the device is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Never use any charger that is damaged.

 **Important:** Battery talk and standby times are estimates only and depend on network conditions, features used, battery age and condition, temperatures to which battery is exposed, and many other factors. The amount of time a device is used for calls will affect its standby time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts, microphone, or speaker and prevent proper operation.

These suggestions apply equally to your device, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.



Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. Do not dispose of these products as unsorted municipal waste.

 
 
 
By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local Nokia representative. For the product



Care and maintenance



Eco-Declaration or instructions for returning your obsolete product, go to country-specific information at www.nokia.com.



Additional safety information

Additional safety information

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



FCC/Industry Canada notice



FCC/Industry Canada notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

