 


## 1.6 User Manual

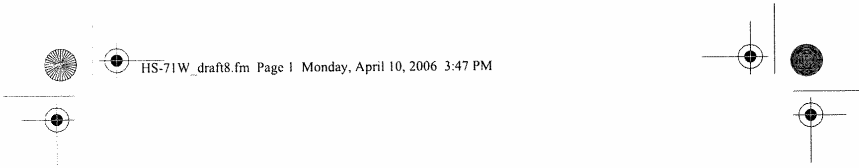 


# Nokia Bluetooth Headset BH- 501 User Guide

---




9249883  
Issue 1 EN

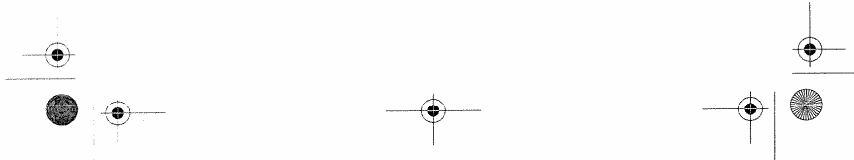

HS-71W\_draf8.fm Page 2 Monday, April 10, 2006 3:47 PM

**DECLARATION OF CONFORMITY**  
We, NOKIA CORPORATION declare under our sole responsibility that the product HS-71W is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

**CE 0197**

 The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

©2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

**Export Controls**  
This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

 
9249883 / Issue 1 EN

2

HS-71W\_draft8.fm Page 3 Monday, April 10, 2006 3:47 PM

## Contents

1. Introduction .....	4	3. Basic use .....	9
Bluetooth wireless technology .....	4	Place the headset over the ears .....	9
2. Get started .....	5	Adjust the volume .....	9
Chargers and batteries .....	5	Call handling .....	9
Charge the battery .....	5	Listen to music .....	10
Switch the headset on or off .....	6	Clear the settings .....	10
Pair the headset .....	7	4. Battery information .....	11
Pair with a phone that has a compatible music player feature	7	Care and maintenance .....	12
Pair with a phone and a music player .....	7	FCC notice .....	13
Disconnect the headset .....	8		
Reconnect the headset .....	8		

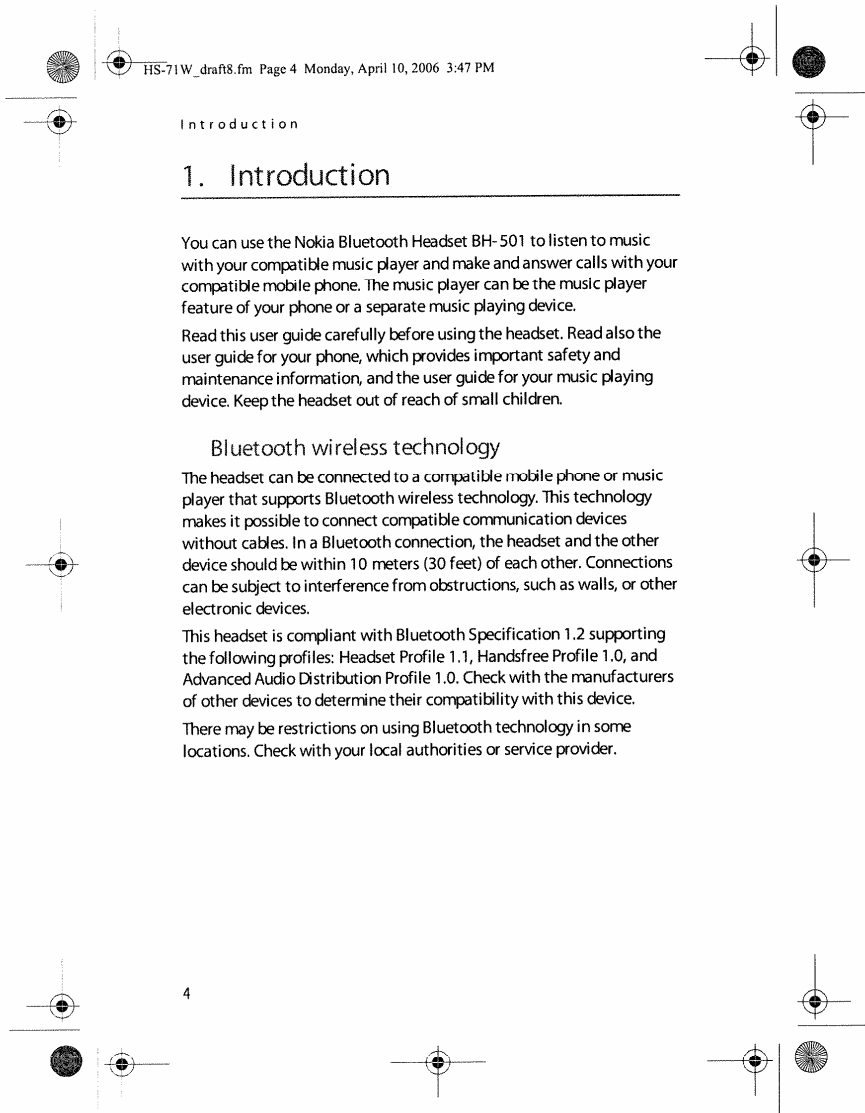

HS-71W\_draft8.fm Page 4 Monday, April 10, 2006 3:47 PM

Introduction

# 1. Introduction

You can use the Nokia Bluetooth Headset BH-501 to listen to music with your compatible music player and make and answer calls with your compatible mobile phone. The music player can be the music player feature of your phone or a separate music playing device.

 
Read this user guide carefully before using the headset. Read also the user guide for your phone, which provides important safety and maintenance information, and the user guide for your music playing device. Keep the headset out of reach of small children.

## Bluetooth wireless technology

The headset can be connected to a compatible mobile phone or music player that supports Bluetooth wireless technology. This technology makes it possible to connect compatible communication devices without cables. In a Bluetooth connection, the headset and the other device should be within 10 meters (30 feet) of each other. Connections can be subject to interference from obstructions, such as walls, or other electronic devices.

This headset is compliant with Bluetooth Specification 1.2 supporting the following profiles: Headset Profile 1.1, Handsfree Profile 1.0, and Advanced Audio Distribution Profile 1.0. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

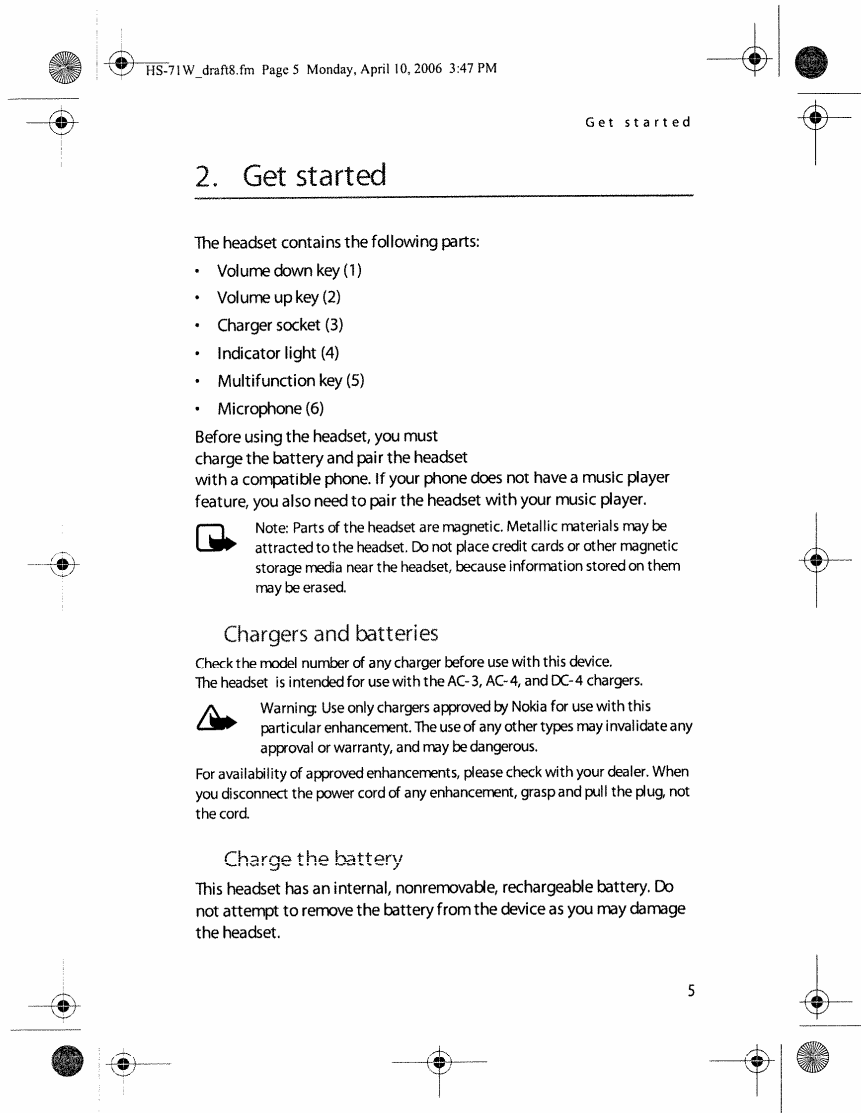

HS-71W\_draß8.fm Page 5 Monday, April 10, 2006 3:47 PM


Get started

## 2. Get started

The headset contains the following parts:


- Volume down key (1)
- Volume up key (2)
- Charger socket (3)
- Indicator light (4)
- Multifunction key (5)
- Microphone (6)

Before using the headset, you must charge the battery and pair the headset with a compatible phone. If your phone does not have a music player feature, you also need to pair the headset with your music player.

 Note: Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

### Chargers and batteries

Check the model number of any charger before use with this device. The headset is intended for use with the AC-3, AC-4, and DC-4 chargers.

 
 Warning: Use only chargers approved by Nokia for use with this particular enhancement. The use of any other types may invalidate any approval or warranty, and may be dangerous.

 
For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

### Charge the battery

 
This headset has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the headset.

5

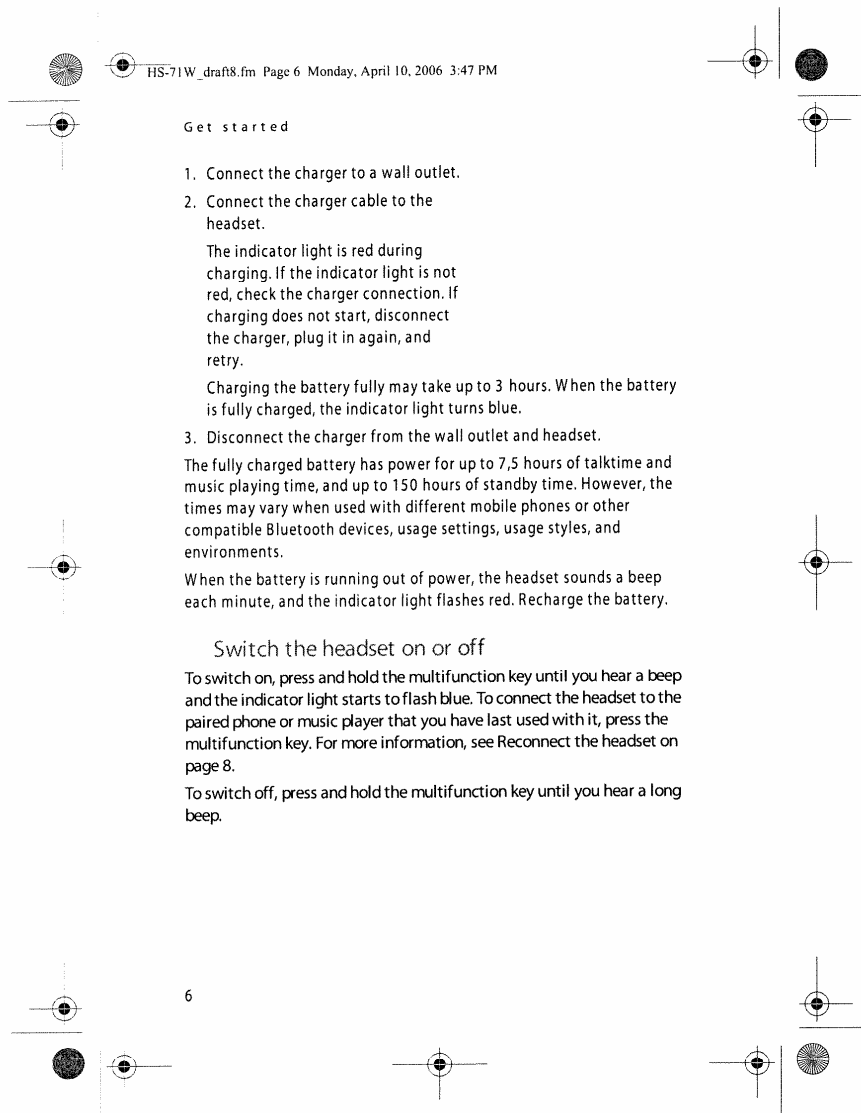


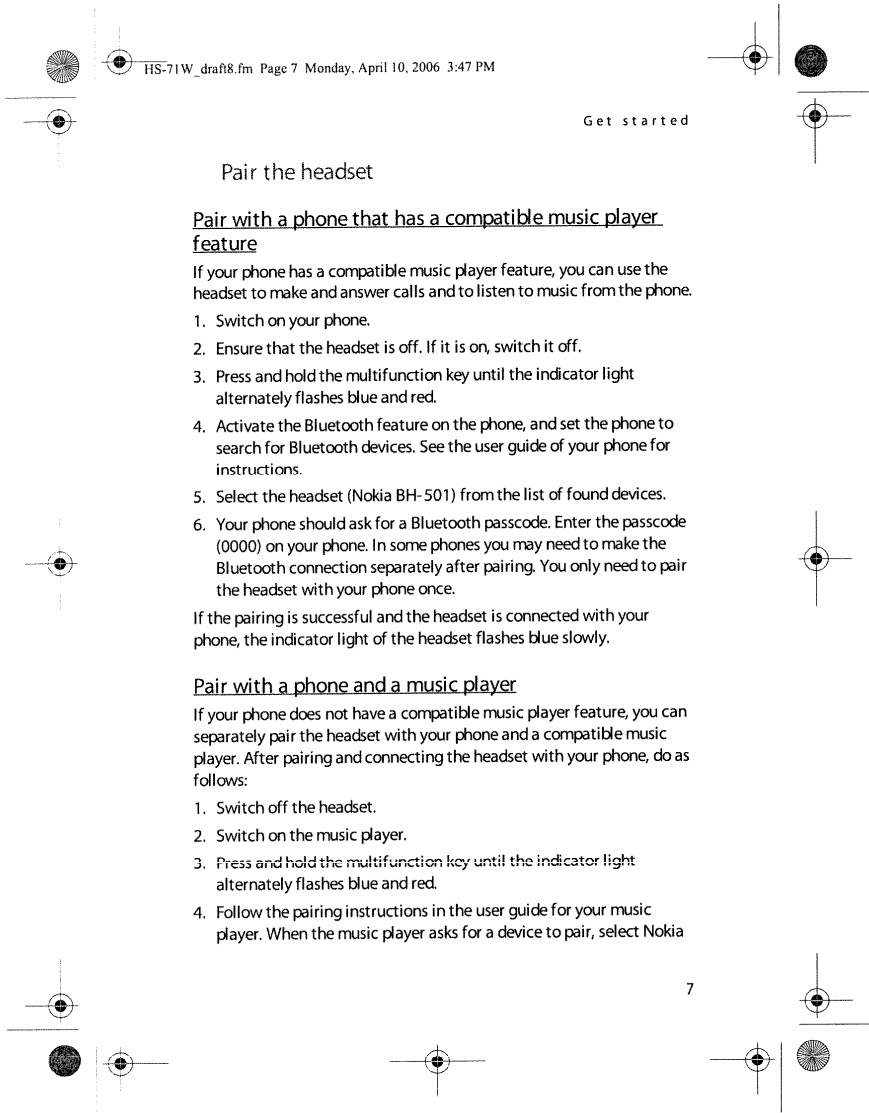



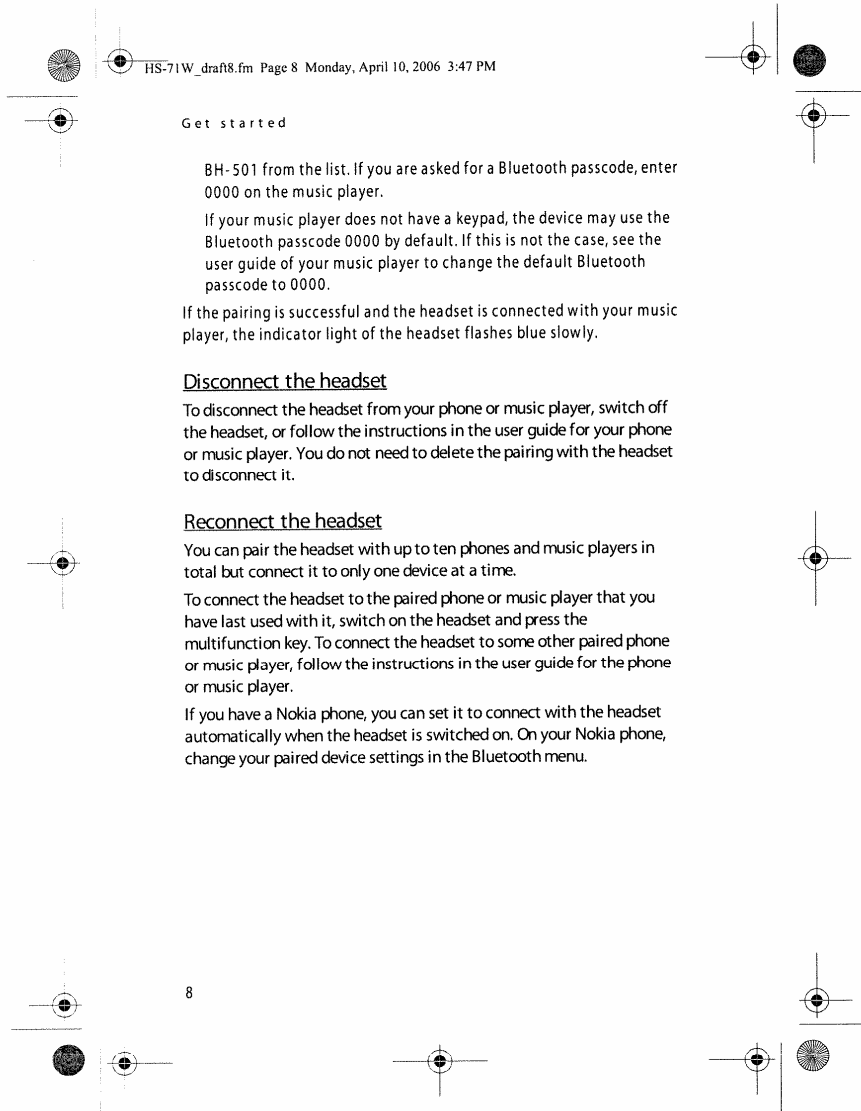

8

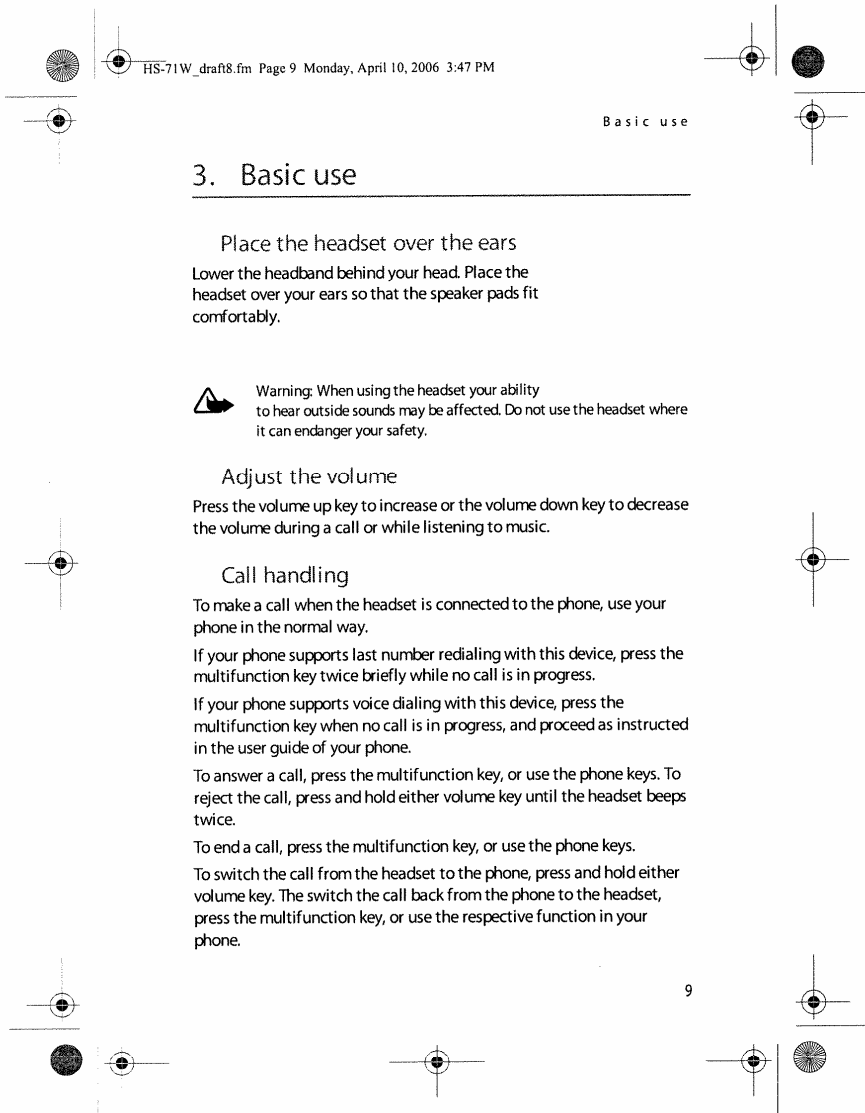 

### 3. Basic use

Place the headset over the ears  
Lower the headband behind your head. Place the headset over your ears so that the speaker pads fit comfortably.



 
Warning: When using the headset your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

 
#### Adjust the volume

Press the volume up key to increase or the volume down key to decrease the volume during a call or while listening to music.

#### Call handling

To make a call when the headset is connected to the phone, use your phone in the normal way.  
If your phone supports last number redialing with this device, press the multifunction key twice briefly while no call is in progress.  
If your phone supports voice dialing with this device, press the multifunction key when no call is in progress, and proceed as instructed in the user guide of your phone.  
To answer a call, press the multifunction key, or use the phone keys. To reject the call, press and hold either volume key until the headset beeps twice.  
To end a call, press the multifunction key, or use the phone keys.  
To switch the call from the headset to the phone, press and hold either volume key. The switch the call back from the phone to the headset, press the multifunction key, or use the respective function in your phone.

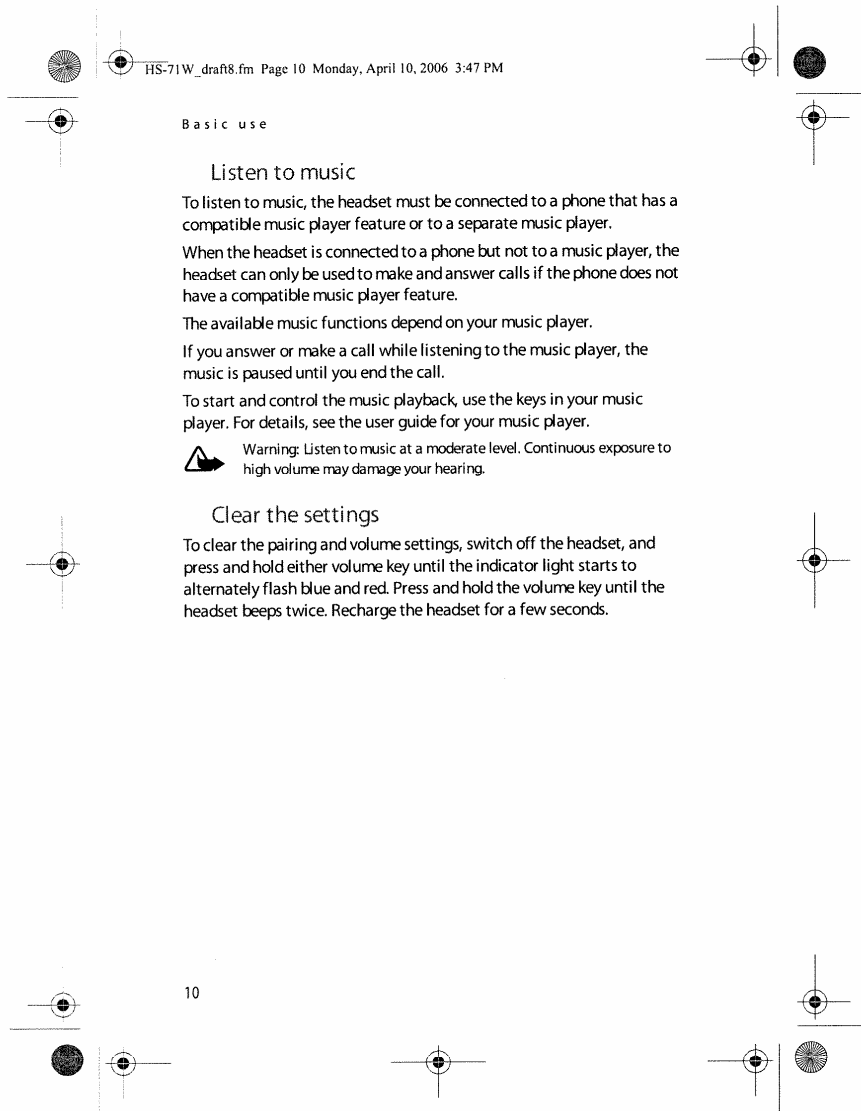

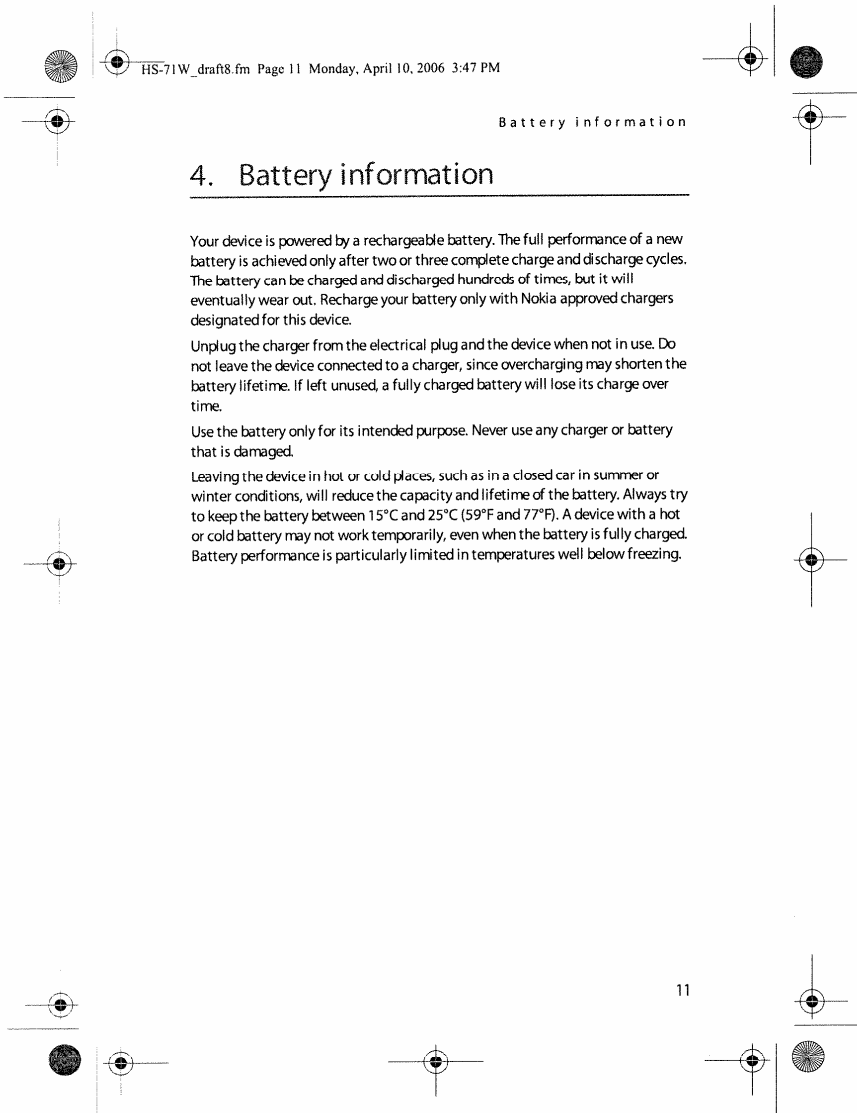

#### 4. Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the device connected to a charger, since overcharging may shorten the battery lifetime. If left unused, a fully charged battery will lose its charge over time.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

