







ENGLISH

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you. Export Controls
This device may contain commodities,

technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

For your safety



Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



Interference
All wireless devices may be



susceptible to interference, which could affect performance. Batteries and chargers
Use only approved batteries and chargers. Do not connect incompatible products.



Connecting to other devices When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



Qualified service
Only qualified personnel may repair this device.



Introduction



With the Nokia Wireless GPS Module, you can determine your current position and direction easily. The GPS module is a

battery-operated device that uses Bluetooth wireless technology to communicate positioning information to















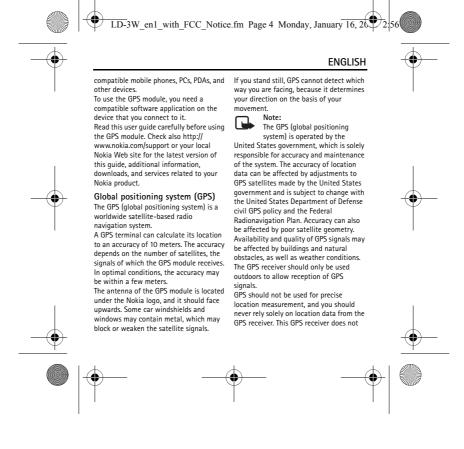

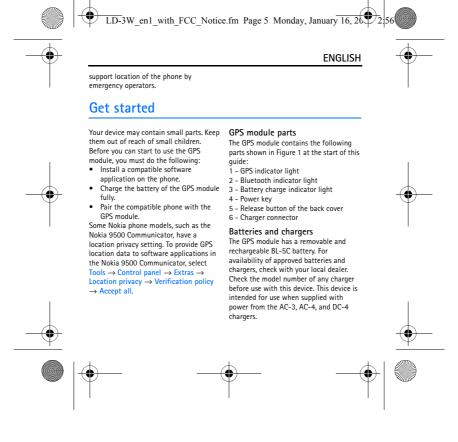






LD-3W_en1_with_FCC_Notice.fm Page 6 Monday, January 16, 26 256









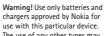

The use of any other types may invalidate any approval or warranty, and may be

dangerous. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.



See Figure 2 at the start of this guide. To open the back cover of the GPS module, press the release button (1),

- and slide the cover away from the device (2).
- Insert the battery (3).
 Close the back cover (4), and slide it in the direction of the arrow (5) until it locks into place.

ENGLISH

1. Plug the charger into its connector on

Charge the battery

the GPS module.

2. Connect the charger to a power outlet. During charging, the green or red indicator light blinks, depending on whether the GPS module is on (green) or off (red).

When the battery is fully charged and the power is on, the green light is displayed continuously. When the battery is fully charged and the power

is off, the red light stops to blink.

3. Disconnect the charger from the power outlet and the GPS module. When the battery is running out of power, the red indicator light on the GPS module starts to blink every 15 seconds. Recharge the battery.







The GPS module should only be used outdoors to allow reception of GPS signals.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the



















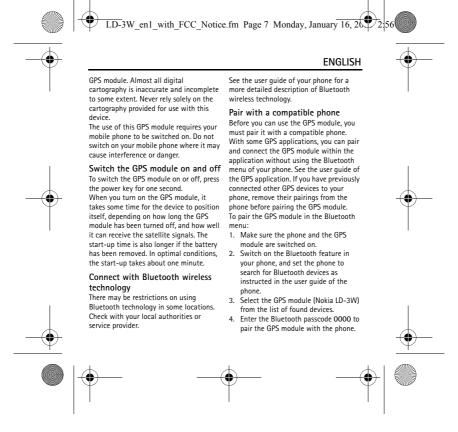

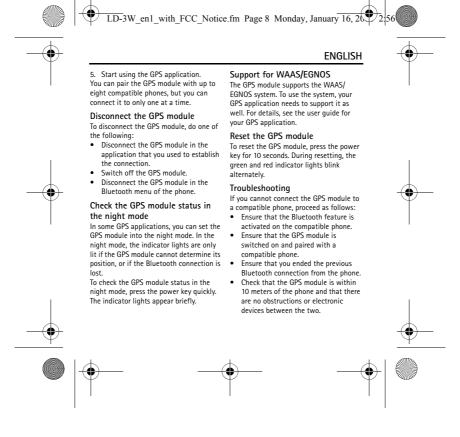

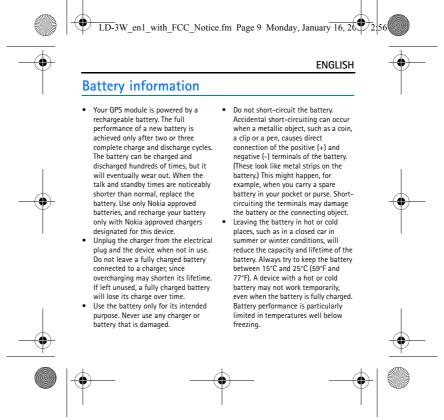

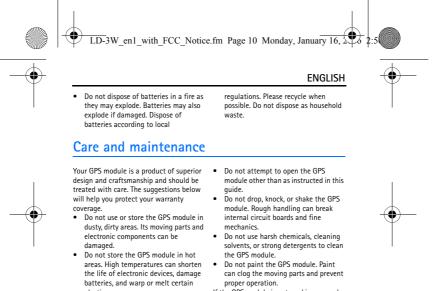

plastics.

• Do not store the GPS module in cold areas. When the device returns to its

normal temperature, moisture can form inside the device and damage electronic circuit boards.

can clog the moving parts and prevent proper operation. If the GPS module is not working properly, take it to the nearest authorized service

facility for service.

