


Nokia Wireless Music Receiver MD-310



9229078/1

Cyan Magenta Yellow Black

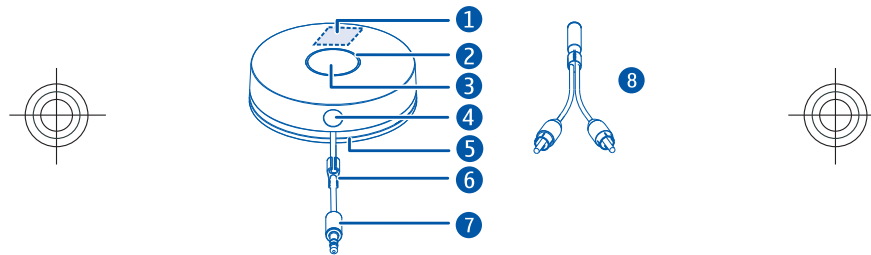

ENGLISH

Get started

Keys and parts

- 1 NFC area
- 2 Bluetooth status indicator light
- 3 Multifunction key
- 4 Power connector
- 5 Streaming indicator
- 6 Cable clip
- 7 Audio cable (3.5 mm)
- 8 RCA adapter cable

Start using your music receiver

1. Use either the 3.5 mm audio cable or the RCA adapter cable to connect the music receiver to an audio system, such as your home stereo system.
2. Connect the power supply first to the wall outlet, then to the music receiver. The music

receiver switches on automatically.

3. Pair and connect your compatible device, such as your phone, to the music receiver.

If your compatible device supports Near Field Communication (NFC), activate its NFC feature, and touch the NFC area of the music receiver (1) with the NFC area of your device.

If your compatible device does not support NFC, press and hold the multifunction key (3). Pairing mode is activated, and the blue indicator light (2) flashes slowly. Activate Bluetooth on your device, set your device to search for



ENGLISH

devices, and select the music receiver from the list of found devices.

4. On your compatible device, select a song or album, and start playing music.

For more information, go to www.nokia.com/support, and search for Wireless Music Receiver.

Product and safety information

Charger information

This device is intended for use when supplied with power from the following chargers: AC-3. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

Warning: Use only chargers approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. Use of unapproved chargers may present a risk of fire, explosion, or other hazard.

When you unplug a charger, hold and pull the plug, not the cord.

Take care of your device

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not store the device in cold temperatures.
- Do not attempt to open the device.
- Unauthorised modifications may damage the device and violate





ENGLISH

regulations governing radio devices.

- Do not drop, knock, or shake the device.
- Only use a soft, clean, dry cloth to clean the surface of the device.

Recycle

Always return your used electronic products, batteries, and packaging

Copyright and other notices

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-20W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/phones/declaration_of_conformity/.

CE 0979 ⓘ

© 2011 Nokia. All rights reserved. Nokia, Nokia Connecting People, and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.





ENGLISH

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia

reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of particular products may vary by region. Please check with your Nokia dealer for details. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE
This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: 1. This device may





ENGLISH

not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

