 


Nokia Bluetooth Speakers MD-5W

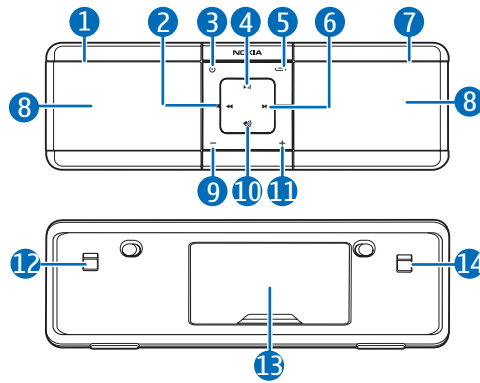


9200275/1

ENGLISH

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-5W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

CE 0678

 The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose

of these products as unsorted municipal waste. For more information, see product Eco-Declaration or country specific information at www.nokia.com.

© 2007 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.



 
ENGLISH



The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.
Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.



Export Controls
This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Introduction



Congratulations on your purchase. With Nokia Bluetooth Speakers MD-5W you can listen to music from your compatible phone or music device and enjoy the high-quality audio. You can also use the speakers as a speakerphone thanks to the integrated microphone.
You can connect the speakers to a compatible device using Bluetooth wireless technology or the supplied cable.
Read this user guide carefully before using the speakers. Also read the user guide for your phone, which provides

  important safety and maintenance information, or the user guide for the compatible music device. Keep all accessories and enhancements out of the reach of small children.
Bluetooth wireless technology
Bluetooth wireless technology allows you to connect compatible devices without cables. A Bluetooth connection does not require that the speakers and the other device be in line of sight, but both devices should be within 10 meters (30 feet) of each other. Connections may be subject to





ENGLISH



interference from obstructions, such as walls, or other electronic devices. The speakers comply with the Bluetooth Specification 1.2 that supports Advanced Audio Distribution Profile (A2DP) 1.0, Headset Profile 1.1, Hands-Free Profile 1.0, and Audio/Video Remote Control Profile (AVRCP)

1.0. Check with the manufacturers of other devices to determine their compatibility with this device. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Getting started

 
 
 
Parts

The speakers contain the parts shown on the title page: indicator light (1), rewind key (2), multifunction key (3), play/pause key (4), answer/end key (5), fast forward key (6), microphone (7), speakers (8), volume down key (9), stereo widening key (10), volume up key (11), power connector (12), battery compartment (13), and audio input (14).

Parts of the speakers are magnetic. Metallic materials may be attracted to the speakers. Do not place credit cards or other magnetic storage media near the speakers, because information stored on them may be erased.

Chargers

Check the model number of any charger before use with this device. The speakers are intended for use with the supplied AC-4 charger.





ENGLISH



Warning: Use only chargers approved by Nokia for use with this particular device.

The use of any other types may invalidate any approval or warranty and may be dangerous.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Connect to power

The speakers can be powered by four AA batteries or the supplied charger.

Install AA batteries

When you use batteries, alkaline batteries are recommended. To install the batteries, ensure that the speakers are off, and open the cover of the battery compartment by pushing the lower part of the cover and pulling the cover up.

Place the batteries as indicated in the compartment, and push the cover until it snaps into place.

 
 
 
During long periods where the speakers are not used, remove the batteries to prevent damage from battery leakage.

When battery power falls low, the red indicator light starts to flash and the speakers beep once a minute.

Connect to wall outlet

To use the speakers with the charger, connect the charger to a wall outlet, and plug the charger cable to the power connector.

If rechargeable batteries are placed in the battery compartment, they are not charged by the charger.





ENGLISH



Switch the speakers on or off

To switch on, press and hold the multifunction key until the blue indicator light is displayed.

To switch off, press and hold the multifunction key until the red indicator light is displayed.

Connect the speakers

 
 
 
You can connect the speakers to a compatible device (such as a mobile phone or music player) using Bluetooth wireless technology or the supplied cable.

Pair and connect using Bluetooth wireless technology

The following instructions apply for a mobile phone but the procedure is the same for a music player, except that you may not need to give the Bluetooth passcode.

1. Ensure that the speakers are off and that the phone is on.
2. Press and hold the multifunction key until the blue and red indicator lights start to alternate.
3. Activate the Bluetooth feature on the phone, and set it to search for Bluetooth devices.
4. Select the speakers from the list of found devices.
5. Enter the Bluetooth passcode 0000 to pair and connect the speakers to the phone. In some phones you may need to make the connection separately after pairing.

If the pairing is successful, the blue indicator light flashes five times, and the speakers appear in the phone menu where you can view the paired Bluetooth devices.





ENGLISH



Connect using a cable

You can connect the speakers to a compatible device with the supplied CA-63U cable.

To connect the speakers to a device that has a 3.5-mm audio connector, plug the cable into the audio input on the speakers and the audio connector on the device.

Basic use

Adjust the volume

To set the volume of the speakers, press either volume key. If the sound level of the speakers becomes too low when using battery power, change the batteries.

using Bluetooth wireless technology. The compatible music player should support the A2DP Bluetooth profile. If you use a cable connection, you can only adjust the volume of the speakers; to control music, use the keys on your music player.

Listen to music

 
To listen to music, connect the speakers to a compatible music player such as a mobile phone with a music player feature or other music player device.

If you answer or make a call while listening to music, playing is paused until the call ends.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

To use the music functions, connect the compatible device to the speakers





ENGLISH



To play music, select a track on your music player, and press the play/pause key.

toward the microphone on the speakers.

To select the next track, press the fast forward key. To select the previous track, press the rewind key.

If your phone supports last number redialing with the speakers, press the answer/end key twice when no call is in progress.

To pause or resume playing, press the play/pause key. To stop playing, press and hold the play/pause key.

If your phone supports voice dialing with the speakers, press the answer/end key when no call in progress, and proceed as described in the user guide of your phone.

To widen the stereo image of the sound, check that this feature is off in your music player, and press the stereo widening key.

 
To answer or end a call, press the answer/end key. If you do not want to answer the call, press and hold either volume key.

Call handling

The speakers can be used for call handling if connected to a compatible phone using Bluetooth wireless technology.

To switch an ongoing call from the speakers to a compatible phone, press and hold either volume key. To switch the call back to the speakers, press the multifunction key.

To make a call, use your phone in the normal way when the speakers are connected to your phone. Speak



ENGLISH

Clear settings or reset

To clear the settings, switch off the speakers. Press and hold the volume down and multifunction keys until the purple indicator light is displayed. Press and hold the volume down key

until the blue indicator light is displayed.

To reset the speakers if they do not work, remove the batteries and unplug the speakers from the charger.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

ENGLISH

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.

FCC/Industry Canada notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly



ENGLISH



approved by Nokia could void the user's authority to operate the equipment.

