 




Microsoft®

# Wireless Wheel Mouse

[www.microsoft.com/mouse](http://www.microsoft.com/mouse)

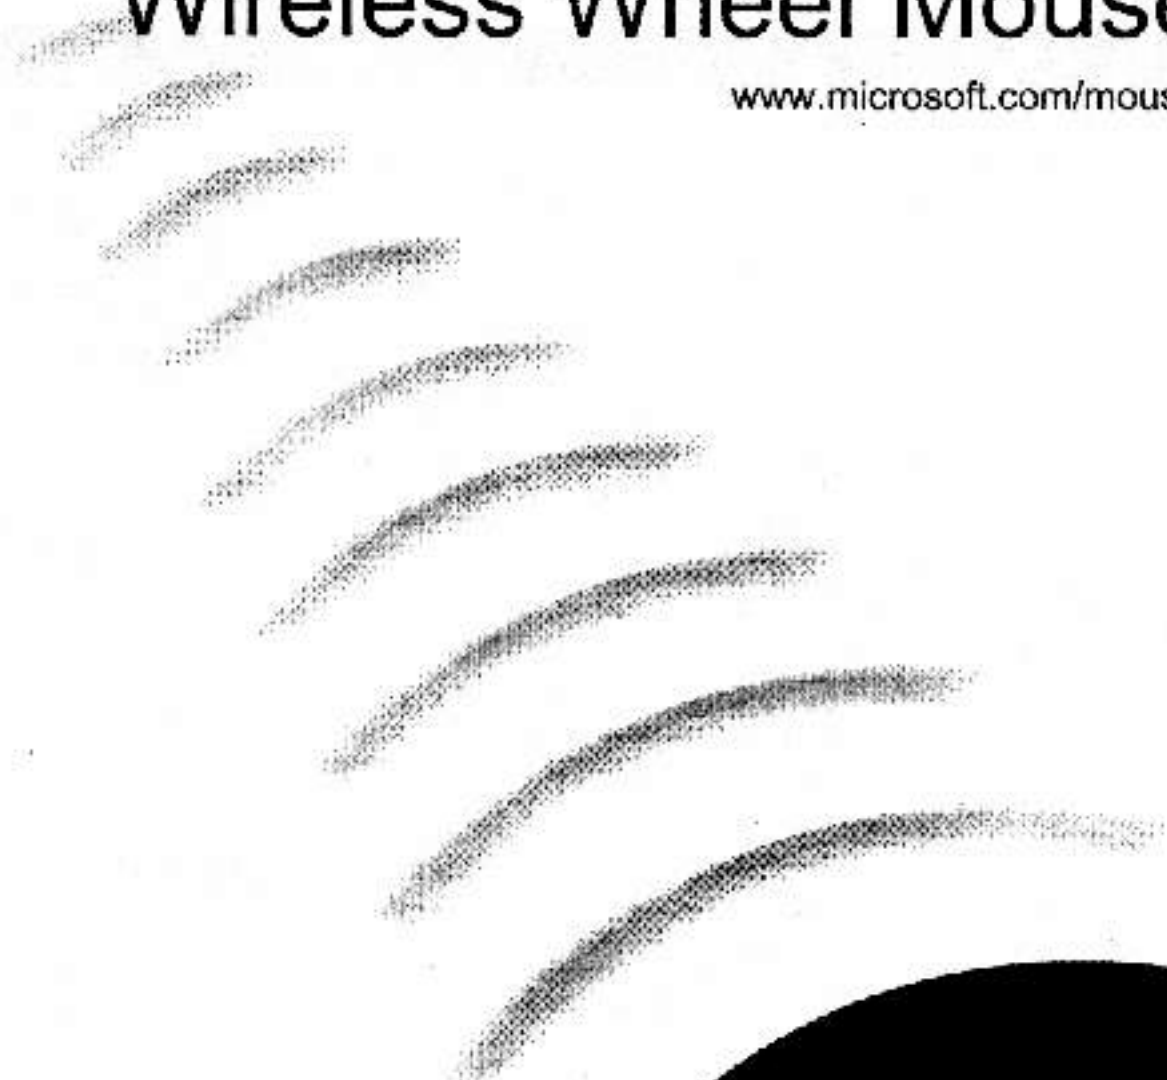



Use of a keyboard or pointing device may be linked to serious injuries or disorders.

When using a computer, as with many activities, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. However, if you experience symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, **DO NOT IGNORE THESE WARNING SIGNS. PROMPTLY SEE A QUALIFIED HEALTH PROFESSIONAL**, even if symptoms occur when you are not working at your computer. Symptoms such as these can be associated with painful and sometimes permanently disabling injuries or disorders of the nerves, muscles, tendons, or other parts of the body. These musculoskeletal disorders (MSDs) include carpal tunnel syndrome, tendonitis, tenosynovitis, and other conditions.

While researchers are not yet able to answer many questions about MSDs, there is general agreement that many factors may be linked to their occurrence, including: medical and physical conditions, stress and how one copes with it, overall health, and how a person positions and uses his or her body during work and other activities (including use of a keyboard or pointing device). Some studies suggest that the amount of time a person uses a keyboard may also be a factor. Some guidelines that may help you work more comfortably with your computer and possibly reduce your risk of experiencing an MSD can be found in the "Healthy Computing Guide" topic of the User's Guide, provided with the software program on your CD-ROM. If you do not have the CD-ROM for this product, you can access the "Healthy Computing Guide" from

<http://www.microsoft.com/hardware/>, or (in the United States only) call 1-800-360-7561 to request a CD-ROM at no charge. If you have questions about how your own lifestyle, activities, or medical or physical condition may be related to MSDs, see a qualified health professional.

## About Your Rights and Obligations

The software with this product is licensed, not sold. You must either agree to the license contract in the software Setup screens or promptly return the entire product for a refund, excluding the return costs. After you install the software, you may consult the license and the Limited Warranty for the product at any time by looking in the "Legal Information" section of the software User's Guide. You may also print a copy for your records.

---

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, people and events depicted herein are fictitious and no association with any real company, organization, product, person or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2001 Microsoft Corporation. All rights reserved.

U.S. and International Patents Pending.

Microsoft, Windows, Windows NT, and IntelliMouse are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

0601 Part No. X08-23333

## Wireless Wheel Mouse

### Welcome!


Congratulations on your purchase of the Microsoft® Wireless Wheel Mouse. Setting up the device takes a few simple steps, and then you can enjoy the freedom of wireless technology and the convenience of a clutter-free desktop.

### 1 Insert the Batteries

The Wireless Wheel Mouse requires two AAA batteries, which are included in the package. Whenever you replace the batteries, always make sure each of the batteries is new. Alkaline batteries are recommended.

#### To insert the batteries

- 1 Turn the device upside down, and then remove the battery compartment cover.
- 2 Insert new batteries, making sure to properly orient the positive (+) and negative (-) ends as specified by the battery compartment labels.
- 3 Close the battery compartment cover.

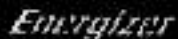

Batteries Recommended

**Important** Before boarding any aircraft, remove the batteries from the wireless pointing device. The wireless pointing device can transmit radio frequency (RF) energy, much like a cellular telephone, whenever batteries are installed and the pointing device is moved or a button is pressed.


### 2 Connect the Receiver to Your Computer

 The wireless receiver has a green connector labeled with a mouse icon that plugs into the PS/2 mouse port.

#### To connect the receiver to your computer

- 1 Shut down and turn off the computer.
- 2 Plug the green PS/2 connector into the computer's round PS/2 mouse port, which may be similarly colored and labeled with a mouse icon.
- 3 Turn on the computer.

**Important** Before using this product, read about the potential for radio interference in the topic titled "Radio and TV interference regulations" in the User's Guide installed with the software.

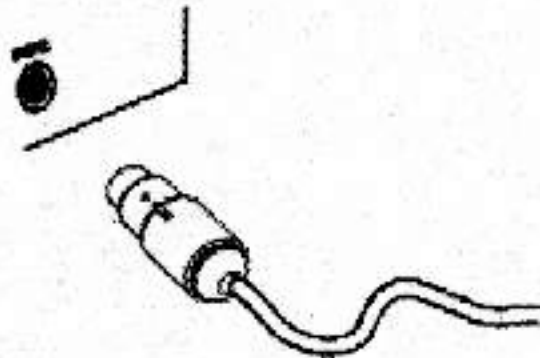

### 3 Position the Receiver and Pointing Device

For optimum performance, position the receiver so that it is at least 8 inches (20 cm) away from the pointing device and any items that might cause interference. Items that might cause interference include: computer monitors, large metal objects (such as computer cases and metal furniture), desktop fans, or fluorescent lights.

The pointing device may work up to 6 feet (1.8 m) away from the receiver. This distance varies depending on the positioning of the receiver and pointing device, nearby items causing interference, and other factors.

## 4 Install IntelliPoint Software

IntelliPoint software gives your Microsoft pointing device full functionality and lets you customize the pointing device to fit your needs. For example, you can:

- Reassign each of the pointing device buttons, including the wheel button, to perform a command or keyboard shortcut.
- Modify the pointing device settings, such as the pointer speed or wheel scrolling rate.

### To install IntelliPoint software

1 Insert the Microsoft IntelliPoint CD-ROM into the computer's CD-ROM drive.

If the Setup screen does not appear automatically, do the following:

- Click the Start button, and then click Run.
- Type [drive]:setup. For example, if your CD-ROM drive is drive E, type e:setup.

2 Follow the Setup Wizard instructions on the screen.

3 When prompted, you must restart the computer before proceeding.

After the computer is restarted, the Quick Start Guide will automatically open to help you learn about the pointing device features.

## 5 Test the Pointing Device

Try using the pointing device. If it does not work as expected, make sure the following procedures were completed as specified earlier in these instructions:

- New batteries are inserted and positioned correctly
- The receiver is properly connected to the computer
- The receiver and pointing device are properly positioned and there are no nearby items that might cause interference

If the pointing device is still not working, try changing the wireless connection channel. The pointing device has two wireless connection channels available. Changing the wireless connection channel is useful if you are experiencing interference or if you are using more than one wireless pointing device at the same time.

### To change the wireless connection channel

- Press the button on the bottom of the wireless pointing device.

If changing the wireless connection channel does not solve the problem, you may need to reconnect the pointing device to the receiver. To avoid potential interference, each wireless pointing device transmits data using a unique code, which the receiver is preset to accept. In rare circumstances, the pointing device may need to be reconnected with the receiver to work properly.

### To reconnect the pointing device to the receiver

- 1 Make sure that the pointing device and receiver are positioned as specified earlier in these instructions.
- 2 Press the button on the top of the wireless receiver.
- 3 Press the button on the bottom of the pointing device.

If reconnecting the pointing device to the receiver does not solve the problem, refer to the User's Guide installed with the software for additional troubleshooting information.

## Wireless Wheel Mouse

### 6 Read the User's Guide

The User's Guide is your complete product manual and it is installed with IntelliPoint software. It contains important product information in a searchable format, including:

- Hardware and software features and instructions
- Troubleshooting topics and Product Support Services information
- End-User License Agreement (EULA) and Limited Warranty
- Healthy Computing Guide
- Battery removal and safety information
- Regulatory and radio interference information

#### To open the User's Guide

- Click the **Start** button, point to **Programs** (or **More Programs**—depending on the operating system version), click **Microsoft Mouse**, and then click the **Help** button.

### 7 Customize the Pointing Device Settings (Optional)

You can start IntelliPoint software and customize your pointing device.

#### To start IntelliPoint software

- Click the **Start** button, point to **Programs** (or **More Programs**—depending on the operating system version), and then click **Microsoft Mouse**.

## Product Information and Software Updates

For general product information and software updates, go to the Microsoft Mouse Web site at:  
<http://www.microsoft.com/mouse/>

## Product Support

If you have a question about your Wireless Wheel Mouse, try the following options:

- View the **User's Guide**, which contains product information and troubleshooting tips.
- Look in **Readme.txt** on the installation CD-ROM for late-breaking product information.
- Go to the **Microsoft Mouse Web site** at:  
<http://www.microsoft.com/mouse/>  
for additional product information and software updates.
- See the **Product Support Services** section of the **User's Guide**, or go to:  
<http://support.microsoft.com/directory/>  
for information about how to contact Microsoft Product Support Services.

## Important Battery Information

### General Precautions

- Keep batteries out of reach of children.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with your local ordinances.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with your local ordinances and the battery manufacturer's instructions. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for longer than a month without being used.



### Special Precautions

To prevent the sudden release of electrolytes, avoid the following prohibited actions:

- Do not open, puncture, or mutilate the batteries.
- Do not heat batteries.
- Do not use a fire to dispose of batteries.

Released battery electrolyte is corrosive, can cause damage to the eyes and skin, and may be toxic if swallowed.

### Regulatory Information

This device complies with part 15 of the FCC Rules and Industry Canada RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tested to comply with FCC standards. For home and office use. Model number: Wireless Wheel Mouse receiver (all models) and FCC ID: C3KMS8

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Note** Any changes or modifications not expressly approved by Microsoft could void the user's authority to operate this device.

For use with UL Listed and GS approved personal computers.

For detailed information on U.S. and Canadian radio interference regulations, search for "regulations" in the User's Guide installed with IntelliPoint software.

Microsoft Corporation; One Microsoft Way; Redmond, WA 98052-6399; U.S.A.

United States: (800) 426-9400 Canada: (800) 933-4750

No serviceable parts included. This device is rated as a commercial product for operation at +41°F (+5°C) to +95°F (+35°C).

### RF Technical specifications

Channel RF frequencies: Channel 1-27.045MHz, Channel 2-27.145MHz

RF output power: < 80 dBµV/m at 3 m

## Wireless Wheel Mouse

### Declaration of Conformity

We, the undersigned,

**Company:** Microsoft Corporation  
**Address:** One Microsoft Way, Redmond WA 98052-6399  
**Country:** U.S.A.  
**Telephone number:** +1 425-882-8080  
**Fax number:** +1 425-936-7329

certify and declare under our sole responsibility that the following equipment:

**Product Description/** 27MHz low power wireless computer pointing device  
**Intended use:** for home and office use  
**EU/EFTA member states** EU: Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy,  
**intended for use:** Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom  
EFTA: Switzerland, Iceland, Liechtenstein, Norway  
**Restrictive use:** -none-  
**Manufacturer:** Microsoft Corporation  
**Brand:** Microsoft  
**Model Number:** Microsoft Wireless Wheel Mouse (all models)

is tested to and conforms with the essential radio test suites included in following standards:

Standard	Issue date
EN 300 220-1	V1.3.1 (2000-09)
EN 300 220-3	V1.1.1 (2000-09)
ETSI EN 301 489-1	V1.2.1 (2000-08)
ETSI EN 301 489-3	V1.2.1 (2000-08)
EN 60950	(1992), incl. A1, A2, A3, A4, A11

and therefore complies with the essential requirements and provisions of the Directive 1999/5/EC of the European Parliament and of the council of 9 march 1999 on Radio equipment and Telecommunications Terminal Equipment and the mutual recognition of their conformity.

The following Notified Bodies have been consulted in the Conformity Assessment procedure:

Notified Body number	Name and address
0560	KTL, Saxon Way Priory Park West, Hull, HU13 9PB, UK

The technical documentation as required by the Conformity Assessment procedure is kept at the following address:

**Company:** Microsoft European Operation Centre  
**Address:** Blackthorn Road, Sandyford Industrial Estate, Dublin 18  
**Country:** Ireland  
**Telephone number:** +353 1 295 3826  
**Fax number:** +353 1 295 3581

# CE05600