

2 Volume key

The volume key turns the volume up or down on the earpiece, the headset, and the loudspeaker.

3 Music key

The music key takes you to the **Music player** and **FM radio** without going through the menu. You can also switch the music off with this key.

i) Short press and long press of the music key

The first short press of the music key will take you to the music menu.



j) Once you are in the music menu, a short press switches or scrolls through the menu choices (*Music player*, *Radio*, and *Switch music off*). The choices are highlighted as you move or switch from one menu choice to the next.





k) A long press on a highlighted choice selects and starts the music player or radio, or switches the music off.

4 Four-way scroll key

Up , down , left  and right 

Use the scroll key to scroll through contact names, phone numbers, menus or settings. You can also do a station search in the radio, adjust the music settings, and access music functions such as play, stop, fast forward, and rewind.


While listening to the music player or radio, press  once to skip back to the beginning of a song on the music player, or press twice to skip backwards to the previous recording or previous radio station. Press  to skip forward to the next recording or radio station.


In standby mode, press  to go to the first name stored in **Contacts**. Press  to go to the last name stored in **Contacts**. Press  to go to **Messages** to create a new message. Press  to go to a calendar of the current month with the current day highlighted. You can also scroll up and down to see previous and future months.

5 Selection keys and

In standby mode the selection keys are **Menu** and **Contacts**. As you go through the menus, the selection keys give you different options. For example, if you press the selection key below **Contacts**, you will see **Select** and **Exit**.


6 Send and End keys

Press the send key  to dial a phone number or answer a call. If you press this key in standby mode, it shows the last phone number you dialed.

Press the end key  to end a call. This key is also a quick way to *exit from any function*.

Connectors


- 1 Charger connector
- 2 Pop-Port™ connector for headsets, the USB data cable, and loopset
- 3 Audio ADE-2 recording cable connector to connect the phone to external audio equipment such as a CD player or PC

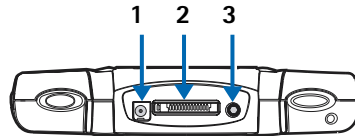

Standby mode

The phone is in standby mode when it is on and ready to use, but you have not entered any numbers or characters.

- 1 Indicates the wireless system that is in use.
- 2 Shows the signal strength of the cellular system at your current location. The higher the bar, the stronger the signal.
- 3 Shows the battery charge level. The higher the bar, the more power in the battery.
- 4 The left selection key in standby mode is **Menu**.
- 5 The right selection key in standby mode is **Contacts**.

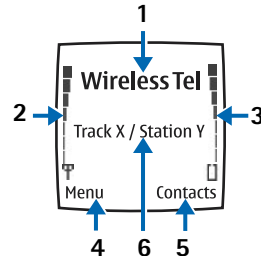

- 6 When the music player is on, the track title is shown. When the radio is on, the radio station is shown.

You can show the time and date in standby mode. See [Clock](#) and [Date](#) for instructions. Also see [icons in standby mode](#).

Screen saver

Your phone has an automatic screen saver for saving power in standby mode. A digital clock is displayed when no phone functions are in use. You can set the timer to activate the screen saver. See [Screen saver timeout](#). To deactivate the screen saver, press any key.

If you have not set the time, 00:00 is displayed. To set the time, see [Clock](#).

Wallpaper

You can select and set a wallpaper or background picture to display when the phone is in standby mode. See [Wallpaper](#).

Icons in standby mode

The following list shows different icons seen on the screen in standby mode to let you know you have received messages or which settings are active.



You have received one or more text or picture messages. See [Read and reply to a message](#).



You have received one or more multimedia messages. See [Read and reply to a multimedia message](#).



You have received one or more voice messages. See [Voice messages](#).



The phone keypad is locked. See [Keypad lock \(keyguard\)](#).



The phone does not ring at an incoming call or text message when [Incoming call alert](#) is set to [Off](#) and [Message alert tone](#) is set to [Off](#). See [Tone settings](#).



The alarm clock is set to [On](#). See [Alarm clock](#).



The countdown timer is running. See [Countdown timer](#).



The stopwatch timer is running in the background. See [Stopwatch](#).



A GPRS connection is established. The indicator is shown on the top left of the display.



The GPRS connection is on hold, for example, if there is an incoming or outgoing call during a GPRS connection.



All your calls are forwarded to another number, [Forward all voice calls](#). If you have two phone lines, the forward indicator for the first line is and for the second line . See [Call forwarding](#).

1 or 2

If you have two phone lines, indicates the selected phone line. See [Line for outgoing calls](#).



The loudspeaker has been activated.

Track name

The music player is on.

Radio station name

The radio is on.



Calls are limited to a closed user group. See [Security settings](#).



The timed profile is selected.
See [Profiles \(Menu 4\)](#).




A headset accessory is connected to the phone.



A loopset accessory is connected to the phone.

Wrist strap


You can attach a wrist strap to your phone. Thread the strap through the holes behind the music key as shown in the picture, and pull to tighten.

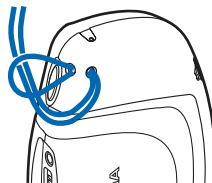


Headset

Connect

Insert the headset plug into the Pop-Port™ connector on the top of the phone. The cable is connected correctly when the arrowhead points toward the display screen and the cord falls toward the music key on the left side.

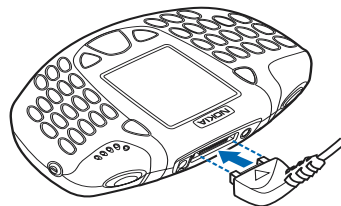

When the headset is connected,  appears on the screen.

Disconnect

Remove the headset cable from the Pop-Port™ connector by grasping the plug (not the cord) and pulling it out.

Wear the HDS-3H Stereo Headset as shown in the picture.

The headset cable functions as the radio antenna, so let it hang freely.


Answer a call with the headset

Press the headset button to answer and end a call.

Headset button

Press the headset button to change tracks while listening to the music player, or to change stations while listening to the radio.


A long press of the headset button activates voice recognition for voice tags you have saved.

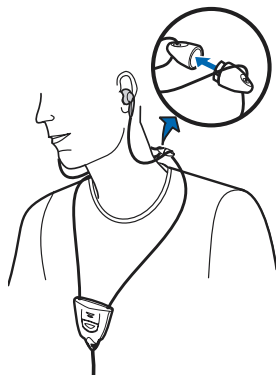

Warning: This headset may affect your ability to hear sounds around you. Do not use this headset in situations that may endanger your safety.

Attach and use supplied cables

You can connect your phone to a compatible PC with the supplied DKU-2 USB data cable (1). The cable is connected correctly when the arrowhead points toward the display screen and the cord falls toward the music key on the left side. To record music, you can connect your phone to external audio equipment with the supplied ADE-2 recording cable (2). See [Recorder](#).

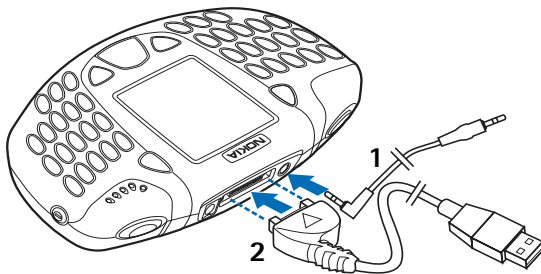

Important: Disconnect the USB data cable from the phone to make a call.

Use the Nokia Audio Manager software to handle your music files and transfer them from the PC to the memory card in your phone. See [Nokia Audio Manager](#). You can also drag and drop music files from your PC to a folder created when you first connect the USB data cable. See [Disconnect the USB cable properly](#) before you begin transferring files.



Note: Close all applications on the phone and disconnect the audio line-in cable before connecting your phone to a PC with the USB data cable.



Important: Do not connect the USB cable to your PC before you have installed the Nokia Audio Manager PC software from the CD-ROM.

Disconnect the phone from the PC

When you connect your phone to the PC, the **Unplug** or **Eject Hardware** icon appears at the right on the Windows taskbar. This indicates that a USB mass storage device has been connected to the PC.

To disconnect the phone from the PC:

- 1 Click on the **Unplug** or **Eject Hardware** icon.
- 2 Choose **Stop USB Mass Storage Device – Nokia 3300**.
- 3 When Windows notifies you that it is safe, unplug the connectivity cable.



Important: To ensure that all memory card operations are completed in a controlled way, do not unplug the connectivity cable until Windows notifies you that it is safe to do so. Uncontrolled completion of the memory card operations may cause the memory card and the information stored on it to become corrupted. A corrupted memory card may have to be formatted before it can be used again. When a memory card is formatted, all information on the card is permanently lost.

4. Getting started


Install the SIM card and battery

The SIM card and the gold contacts on the card can be damaged by scratches or by bending the card. Be careful when inserting, removing, or handling the card.




Warning: Keep all miniature SIM cards out of the reach of small children.

- 1 Before you install the SIM card, make sure the phone is switched off.
- 2 Remove the back cover of the phone with the back of the phone facing you.
- 3 Press the back cover release button (1) and slide the cover forward.

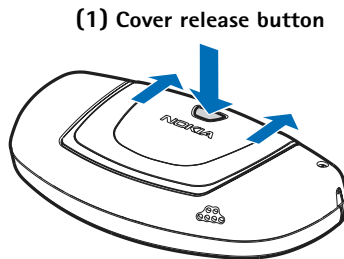


- 4 Slide the SIM card holder down (3) and pull up to open (4).

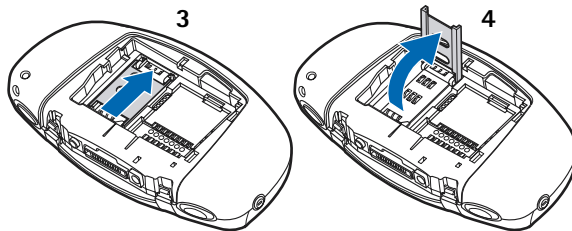


- 5 Insert the SIM card into the SIM card holder (5).


The SIM card is inserted correctly with the bevelled corner on the card up. The gold contact area on the card is facing the connectors on the phone.

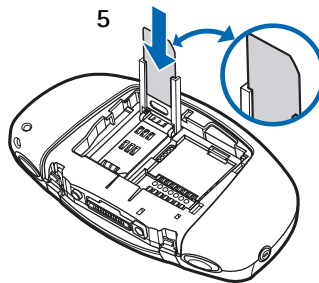

- 6 Close the SIM card holder (6) and push up to lock (7).

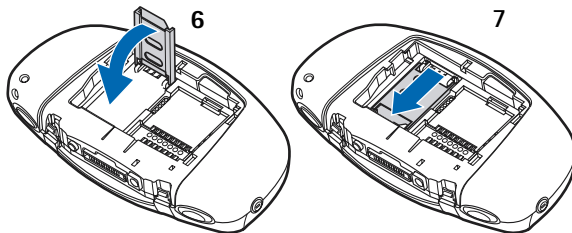

- 7 Insert the battery (8) with the gold contacts on the battery aligned with the gold contacts in the battery slot.
- 8 To replace the back cover (9), insert the locking catches on the back cover in the corresponding slots in the phone, and slide the cover until it locks into place.

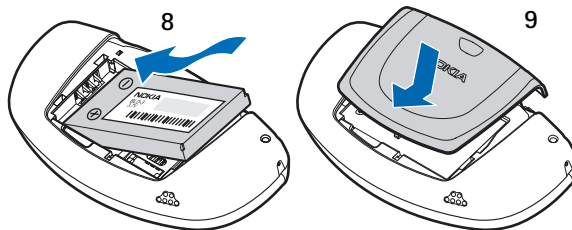

Remove and install the memory card

Your phone comes with a 64MB, pre-installed, ready-to-use memory card.




Note: Do not remove the memory card in the middle of an operation. Be sure to close all memory card applications before removing the card.




Important: Keep all memory cards out of the reach of small children.

- 1 Make sure the phone is switched off.
- 2 With the back of the phone facing you, slide the cover open and remove the battery. See step 1 in [Install the SIM card and battery](#).
- 3 To remove the memory card, press the memory card release button (1) and lift the card off (2).

Be careful not to scratch the gold contacts on the card.

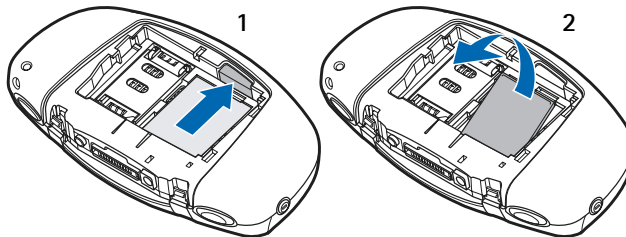


- 4 To install the memory card, gently press the memory card in place (3) while pressing the memory card release button (4). Make sure that the gold contacts of the card are facing down.
- 5 Replace the battery and cover.

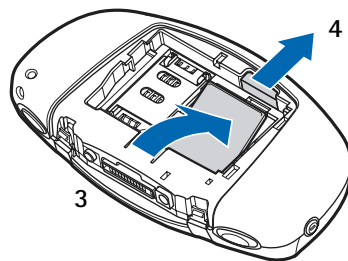

Charge the battery

- 1 Connect the plug from the charger to the socket on the top of your phone.
- 2 Connect the charger to an ac wall socket.

Charging is displayed briefly if the phone is switched on. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or any calls can be made.

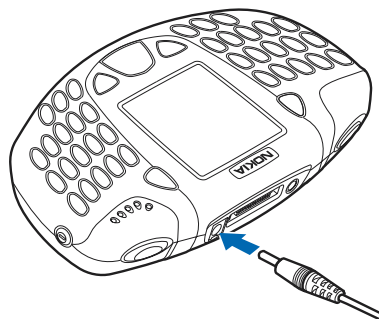


You can use your phone while the charger is connected.

Charging time depends on the charger and the battery used. For example, charging a BLD-3 battery with the ACP-12 charger takes up to one hour and 30 minutes while the phone is in standby mode.


Switch the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key  located on the right side of your phone until the display lights come on.

If the phone displays *Insert SIM card* even though the SIM card is properly inserted, or *SIM card not supported*, contact your service provider. Your phone does not support 5-V SIM cards and the card may need to be changed.

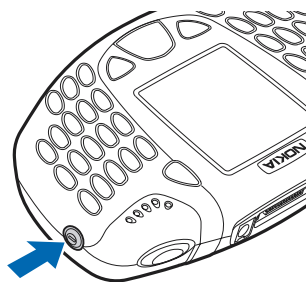

- If the phone asks for a PIN code, key in the PIN code (displayed as ****), and press **OK**.
See also [PIN code request](#) in [Security settings](#) and [Access Codes](#).
- If the phone asks for a security code, key in the security code (displayed as ****), and press **OK**.

Change the security code, PIN code, PIN2 code or restriction password.

Codes can only include numbers from 0 to 9.


EFFICIENT OPERATION: Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimizes the antenna performance and the talktime of your phone.




Keypad lock (keyguard)


You can lock the keypad to prevent the keys being accidentally pressed when you are carrying your phone.

Lock the keypad

In standby mode, press the left selection key under **Menu** and then  within 1.5 seconds.

Unlock the keypad


Press the left selection key under **Unlock** and then  within 1.5 seconds.


If you receive a call while the keypad is locked, you do not need to unlock it to answer a call. Press , and during a call, the phone can be operated normally. When you end or reject a call, the keypad will automatically remain locked.

For automatic keypad lock, see [Automatic keyguard](#).

For locking the keypad during a call, see [Options during a call](#).



Note: When keyguard is on, calls may be possible to the emergency number programmed into your phone (such as 911 or other official emergency numbers). Key in the emergency number and press . The number is displayed only after you have keyed in the last digit.

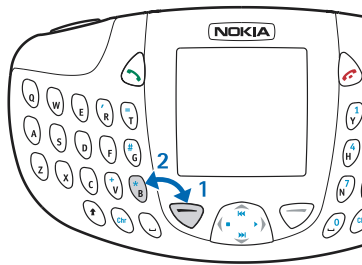


Change the covers




Note: Before removing the cover, always switch off the power and disconnect the charger and any other device. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

- 1 Remove the back cover.

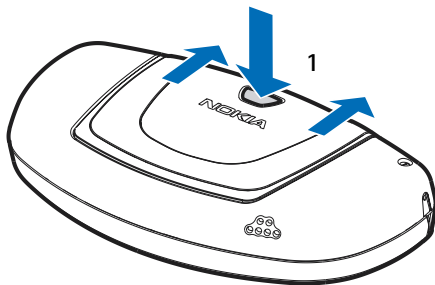

- 2 To remove the front cover, gently pull the cover on both sides (1) and remove the cover starting from the top (2).

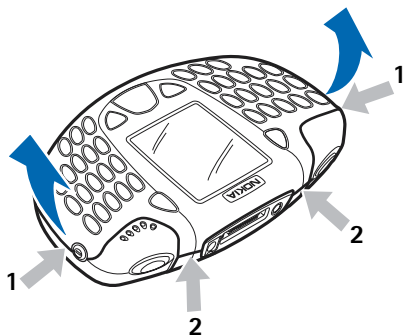

- 3 Remove the key mat from the front cover and replace on the phone (3).

