



The wireless phone described in this guide is approved for use in CDMA networks.

## **LEGAL INFORMATION**

Part No. 9354100 Issue No. 1

Copyright © 2002 Nokia. All rights reserved.

Nokia is a registered trademark of Nokia Corporation. Nokia, Nokia Connecting People, Original Accessories logos, Snake II, Pass 'n Rush, Space Impact, Bumper, and Racket are trademarks of Nokia Corporation and/or its affiliates.

Printed in Canada March, 2002.PDF created in US April 11, 2002.

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2001. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for Nokia 6370 phone. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

**UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.**

**THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.**

## **EXPORT CONTROLS**

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

## **FCC/INDUSTRY CANADA NOTICE**

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

# Table of contents

	For your safety .....	1
	Quick guide .....	3
	Menu shortcuts .....	4
1	<b>Welcome .....</b>	<b>5</b>
	Get the most out of this guide .....	5
	Understand wireless network services .....	7
	Learn about Accessibility solutions .....	8
	Contact Nokia .....	9
	REGISTER YOUR PHONE .....	11
	E-NEWSLETTERS .....	11
	Contact your service provider .....	11
2	<b>About your phone .....</b>	<b>12</b>
	Your Nokia phone .....	12
	About the antennas .....	13
	About the battery .....	13
	Switch your phone on or off .....	16
	Check the Start screen .....	16
	Learn about the keys .....	17
	Make and answer calls .....	19
	Review phone symbols .....	20
	Use the selection keys .....	21
	View your phone's help system .....	22
	Browse phone menus .....	22
	Menu and menu shortcuts .....	24
	Phone book menu .....	32
3	<b>Phone setup .....</b>	<b>34</b>
	Learn about your headset .....	34
	Adjust the volume .....	35
	Adjust screen contrast .....	35
	Lock keypad (Keyguard) .....	35
4	<b>Text entry .....</b>	<b>36</b>

	Enter letters and numbers . . . . .	36
	Write using ABC and 123 modes . . . . .	37
	Write with predictive text . . . . .	40
5	<b>Phone book . . . . .</b>	<b>44</b>
	Saving names and numbers . . . . .	44
	Recall names and numbers. . . . .	45
	Use phone book menus. . . . .	45
	Edit a name or number . . . . .	47
	Add a number to a phone book entry . . . . .	47
	Erase stored names and numbers. . . . .	49
	Add other information to a phone book entry . . . . .	50
	Use caller groups. . . . .	50
	Check memory status . . . . .	51
6	<b>Call log . . . . .</b>	<b>52</b>
	Check missed, received, or dialed calls . . . . .	53
	Clear call lists . . . . .	54
	Use call timers. . . . .	55
	Turn on a current call timer . . . . .	56
	Clear call timers. . . . .	56
	Data timers (Data/fax and Minibrowser). . . . .	57
7	<b>Voice mailbox . . . . .</b>	<b>58</b>
	Store your voice mailbox number . . . . .	58
	Set greetings . . . . .	58
	Listen to your voice messages . . . . .	59
8	<b>Text messages . . . . .</b>	<b>60</b>
	Write a text message . . . . .	60
	Use message templates. . . . .	63
	Learn about e-mail text messages. . . . .	64
	Picture messages. . . . .	65
	Receive text messages . . . . .	67
	Respond to a text message. . . . .	68
	Reply to a message . . . . .	69
	Erase messages . . . . .	70
	Message settings. . . . .	72
	Organize text messages using folders . . . . .	72

9	Personalization	74
	Learn about profiles	74
	Select a different profile.	74
	Use a timed profile	75
	Customize a profile.	75
	Rename profiles.	78
	Download a ringing tone	80
	Set the display language	80
	Set the clock	81
	Customize the Welcome screen.	82
	Learn about voice commands	83
10	Advanced features	85
	View in-call options	85
	Use call forwarding.	86
	Use call waiting.	88
	Make a conference call.	89
	Send own caller ID with next call	90
	Use Automatic redial	91
	Calling card	91
	Voice dialing	93
	1-touch dialing	96
	Learn about Caller Groups	97
	Use Touch tones	98
	Link phone book entries	101
	Learn about Voice Recorder	102
11	Security and System settings.	104
	Lock keypad (Keyguard)	104
	Security code.	105
	Phone lock.	106
	Call restrictions.	108
	Automatic update of service	110
	Learn about system selection.	111
12	Organizer.	114
	Use the alarm clock	114
	Calendar.	115

	Use the to-do list .....	118
	Calculator.....	119
	Stopwatch .....	121
13.	<b>Games .....</b>	<b>124</b>
14	<b>Your phone and other devices .....</b>	<b>126</b>
	IR basics .....	126
	PC Connectivity - cable and IR.....	129
15	<b>Minibrowser .....</b>	<b>131</b>
	Understand browsing sessions and indicators .....	131
	Launching the minibrowser .....	132
	Minibrowser menu .....	132
	Navigate in the minibrowser .....	133
	Links .....	134
	Bookmarks .....	135
	Receive messages via the minibrowser .....	136
	End the minibrowser session .....	136
	Disable minibrowser confirmations .....	137
16	<b>Reference information .....</b>	<b>138</b>
	Use accessories safely.....	138
	Important safety information.....	139
	Certification information (SAR) .....	143
	CARE AND MAINTENANCE .....	145
	Accessories.....	146
	Battery information.....	146
	Chargers and other accessories .....	148
	Complete Car Kit (CARK-91H) .....	151
	Frequently Asked Questions (FAQ).....	152
	Glossary .....	156
	Technical information.....	161
	Troubleshooting.....	162
17	<b>Nokia One Year Limited Warranty.....</b>	<b>164</b>
	Appendix A: A message from the CTIA .....	169
	Appendix B: A message from the FDA .....	173
18	<b>Index .....</b>	<b>179</b>

# For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



## SWITCH OFF WHERE PROHIBITED

Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



## INTERFERENCE

All wireless phones may get interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



## USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



## ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



## WATER-RESISTANCE

Your wireless phone is not water-resistant. Keep it dry.



## BACKUP COPIES

Remember to make backup copies of all important data.



## CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.






## INFRARED PRECAUTIONS

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.





## CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



## EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed (for example, to exit a call, to exit a menu) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.



# Quick guide



- |                                    |  |
|------------------------------------|--|
| Make a call                        | Enter phone number, press  |
| Answer a call                      | Press  |
| Answer a call with call waiting    | Press  or Answer   |
| End a call                         | Press  |
| Ignore a call                      | Press Silence when your phone rings  |
| Redial                             | Press  twice   |
| Adjust call volume                 | Press the up or down volume key  |
| Use the in-call menu               | While in a call, press Options   |
| Use 1-touch dialing                | Press and hold any key 2 through 9   |
| Save a name and number             | Enter a number, press Options and select Save. Enter a name and press OK   |
| Recall a name/number               | Press Names, select Search. Enter name and press Search or List  |
| Recall a name/number during a call | Press Options, scroll New call, press Select, press Search, enter the first letter of the name to find   |
| Check voice mail                   | Press and hold  OR dial your voice mailbox number  |
| Send a text message                | Press Menu 01-1-1. Add recipient's phone number, then press Options. Scroll to Enter text, then press Select. Enter the message text, then press Options and select Send.  |
| Send an e-mail message             | Press Menu 01-1-1. Add recipient's e-mail address, then press Options. Scroll to Enter text, then press Select. Enter the message text, then press Options and select Send.  |
| Read new message                   | Press Show   |
| Reply to a message                 | Press Options, select Reply, then select a reply option. Write the reply, press Options and select Send.   |
| Reply to an e-mail message         | Press Options, select Reply, then select a reply option. Write the reply, press Options and select Send.   |
| Send a business card (SMS)         | Recall a name from the phone book. Press Details, then press Options, select Send bus. card, select Via text msg. Enter the recipient's number or press Search to retrieve a number from the phone book. Press OK. |
| Send a business card (IR)          | Same as above, but select Via infrared. Align the IR ports of the 2 devices, then press Select.  |

## • MENU SHORTCUTS

Full list of shortcuts on page 24

### 1 MESSAGES

Text messages	01-1
Write message	01-1-1
Inbox	01-1-2
Outbox	01-1-3
Archive	01-1-4
Templates	01-1-5
Erase messages	01-1-6
Message settings	01-1-7
Voice messages	01-2
Minibrowser messages	01-3

### 2 CALL LOG

Missed calls	2-1
Received calls	2-2
Dialed numbers	2-3
Clear call lists	2-4
Call timers	2-5

### 3 PROFILES

Normal	3-1
Silent	3-2
Meeting	3-3
Outdoor	3-4
Pager	3-5

### 4 SETTINGS

Call settings	4-1
Phone settings	4-2
Time settings	4-3
Accessory settings	4-4
Security settings	4-5
Network services	4-6

### 5 SYSTEM

### 6 GAMES

Select game	6-1
Snake II	6-1-1
Space Impact	6-1-2
Bumper	6-1-3
Pass 'n Rush	6-1-4
Racket	6-1-5
Settings	6-2

### 7 VOICE

Voice tags	7-1
Voice commands	7-2
Profiles	7-2-1
Voice mailbox	7-2-2
Infrared	7-2-3
Voice recorder	7-2-4
Call log	7-2-5
Voice recorder	7-3
Record	7-3-1
Recordings list	7-3-2

### 8 MINIBROWSER

### 9 MOBILELINK

Infrared	9-1
Data/fax calls	9-2

 
### 10 ORGANIZER

Alarm clock	10-1
Calendar	10-2
To-do list	10-3
Calculator	10-4
Stopwatch	10-5

# 1 Welcome

Congratulations on the purchase of your Nokia mobile phone - a new tool for the mobile information society.

Nokia recommends that you read this chapter before you use your new phone. You will find useful information about:

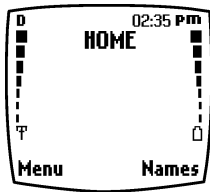




- How to use this guide
- How to understand network services
- How to contact Nokia

## • GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you use this guide efficiently as you learn to use your phone.

### Understand the terms

This guide uses certain terms for certain actions.

- **Press** means to briefly press then release a key. For example, Press  means "Press the zero key."
- **Press Menu** means to press the key that is below the word **Menu** on the phone's screen.
- **Press and hold** means to press and hold a key for two to three seconds (depending on the feature you're using), then release the key.
- Use the **selection keys**  and  to choose an option on a menu.
- **Highlighted** means that an option you see on the screen is enclosed in a dark bar. Choices you make with the two selection keys act on the highlighted option.

## Observe text conventions

This user guide provides text clues to help make instructions clear and easy to follow. These clues are called **conventions**.

Convention	What it means
<b>bold</b>	Indicates one of the following items: <ul style="list-style-type: none"> <li>The word or phrase appears on the phone's screen.</li> <li>Special text such as <b>Notes</b> and <b>Warnings</b>.</li> </ul>
<b>bold and blue</b>	Indicates the text is an address on the World Wide Web.
<i>blue and italic</i>	A definition for the word or phrase appears in the terms list (glossary) near the end of the user guide.
<i>italic</i>	Italics indicate emphasis. Pay close attention to any information in italics.

## Follow graphic clues

This guide uses certain icons (small pictures) to alert you to important information.



**Tip:** Provides information about a shortcut or an alternate method of doing something.



**Note:** Explains a feature or points out an important concept.



**Important:** Alerts you to information critical to using a feature correctly.



**Caution!** Warns you when you may lose information.



**Warning!** Helps you avoid personal injury, damage to the phone, or property damage.

## Look for updates

 
From time to time, Nokia updates this user guide to reflect changes or corrections. The latest version can be found in the US market section of the Nokia Web site:

<http://www.nokia.com>

## • UNDERSTAND WIRELESS NETWORK SERVICES

Your service provider's wireless network may be equipped to provide special features or functions for use with your Nokia phone. These features are called **network services**, and may include some of the following:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Text and picture messages
- Ability to block or send your own caller ID
- News and information services
- Selected Internet access services

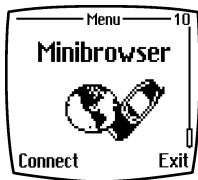

## Sign up with a service provider

Before you can take advantage of your service provider's network services, you must sign up with a wireless service provider and subscribe to these services. Your service provider will make available descriptions of its services and instructions for using them.

## Note differences among service providers

Wireless service providers may differ from each other in certain ways. For example, some networks may not support special language-dependent characters. Contact your service provider regarding your service needs.

## 1 • LEARN ABOUT ACCESSIBILITY SOLUTIONS

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. Nokia maintains a Web site that is dedicated to accessibility solutions. For more information about phone features, accessories, and other Nokia products designed with your needs in mind, please visit the following Web site:

[www.nokiaaccessibility.com](http://www.nokiaaccessibility.com)

### Alternate format user guides

This user guide is available in alternate formats, including:

- Braille
- Large print
- Audiocassette
- E-text (electronic documents on a 3.5-inch disk, in Microsoft Word or WordPerfect format).

To request any of the above formats, please contact Nokia Customer Care. Please see "Contact Nokia" on page 9 for more information.

### Accessible features

Your phone has many accessible features, including the following:

- Tactile feedback when a you press a key
- Adjustable display contrast
- Ability to send and receive short text messages
- Convenience of one-touch dialing
- Vibrating alert for incoming calls and messages
- Volume keys located on the side of your phone
- Flashing lights alert for incoming calls and messages
- TTY/TDD device compatibility using the 2.5mm accessory jack

## Text Telephone (TTY) and Teletype Device for the Deaf (TDD) device compatibility

Your Nokia phone is equipped with a universal 2.5mm accessory jack that can be used to connect any "cellular ready" or "cellular compatible" TTY/TDD device's cable to your phone. It may be possible to connect the TTY/TDD device to the bottom connector using the HDA-8 phone adapter. However, Nokia recommends using the 2.5mm accessory jack for optimum performance.



**Important:** Once your TTY/TDD device is connected to your phone, you must use the phone's menu (**Menu - Settings - Accessory settings - TTY**) to enable the TTY/TDD mode.

## LPS-1 mobile inductive loopset

The LPS-1 Loopset is a Nokia accessory designed to make the 6300 series phone more accessible to hearing-aid users.

The Nokia Loopset gives hearing-impaired wireless customers clear access to digital telephony for the first time. With the loopset, people who use a T-coil equipped hearing aid can make and receive calls without noise interference.



**Note:** The LPS-1 is sold separately as an accessory. Once you connect the LPS-1 to your phone, use the phone's menu (**Menu - Settings - Accessory settings - Loopset**) to enable loopset mode.

## • CONTACT NOKIA

When you need help, the Nokia Care Center can provide information about Nokia products. Please refer to the table on the following page for more information on how to contact Nokia.

Customer Care Center, USA	Customer Interaction Centre, Canada
Nokia Mobile Phones 7725 Woodland Center Blvd., Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)	Nokia Products Ltd. 601 Westney Road South Ajax, Ontario L1S 4N7 Tel: 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-427-1070

If you ever need to call Nokia Customer Care, Nokia Customer Interaction Center, or your wireless service provider, you will need to provide specific information about your phone. This information is provided on the phone's label.

## Your phone's label

The label is on the back of your phone (under the battery). It contains important information about your phone, including the model and electronic serial numbers (ESN). Nokia recommends that you note this information on the title page of this guide. Please do not remove or deface the label.

## Have the right information available

We recommend that you have the following information available before you contact the Nokia Customer Service department:

- the phone's model number
- electronic serial number (ESN)
- your ZIP code



## Have the phone or accessory available

Whether you're calling about your phone or an accessory, have the equipment available when you call. A Nokia representative may ask a specific question about your phone or accessory, so please have the device available for quick reference.


### • REGISTER YOUR PHONE

Make sure to register your phone at [www.warranty.nokiausa.com](http://www.warranty.nokiausa.com) or 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should need to call the Nokia call center or have your phone repaired.

### • E-NEWSLETTERS

When you register your phone, you can sign up for Nokia's e-newsletter *Nokia Connections* if you would like. You will receive tips and tricks on using your phone, accessory information, and special offers.

### • CONTACT YOUR SERVICE PROVIDER

Some service providers have pre-programmed their customer support number into the phone. Pressing and holding the  key (or the key that your service provider instructs you to use) for two seconds will automatically dial their customer support number.

This feature can be helpful if you're having difficulties dialing a number, especially when traveling outside your home area.

If your service provider determines that the problem is Nokia-related, the provider's representative will direct you to the Nokia Customer Care Center (USA) or Nokia Customer Service (Canada).

 


**Note:** This one-key feature may not be available on all systems. Contact your service provider for availability.

## 2 About your phone


This section gives you a brief introduction to your phone and provides you with quick steps for making, answering, and managing your calls. The rest of this guide user provides complete details on phone use.

### • YOUR NOKIA PHONE

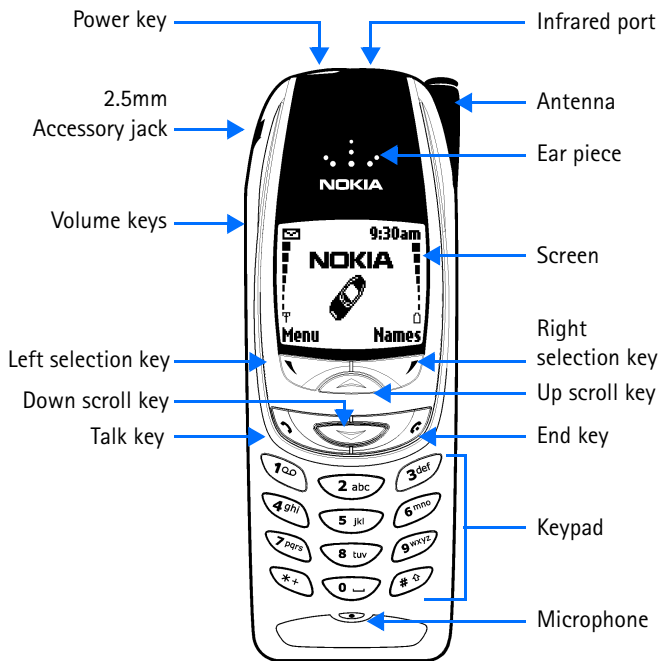

## • ABOUT THE ANTENNAS

 Your phone is equipped with two antennas. The internal antenna is active when the whip antenna is fully retracted. Extending the whip antenna disables the internal antenna.

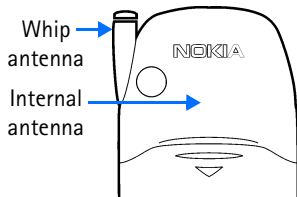

As with any other radio transmitting device, do not touch either of the two antennas unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimizes the antenna performance and the talk time of your phone.



Hold the phone to your ear, placing your finger tips on the ridge of the battery cover (located below the antenna area on the back of your phone).

## • ABOUT THE BATTERY

  
### Install the battery

If your dealer has already installed the battery, please see "Charge the battery" on page 14.

- 1 Remove the back cover of the phone by gripping the bottom of the phone between thumb and index finger. Press downward with the other thumb, sliding the cover toward the bottom of the phone. Set the back cover aside.
- 2 Place the battery in the compartment with the label side facing up and the metal contacts aligned with the contact prongs.

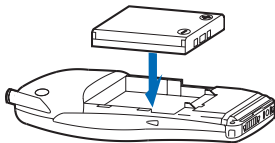

 - Slide the battery into place and snap the top of the battery in so that the retainer bar comes down snugly next to the battery.

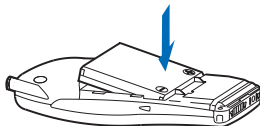


- Replace the cover by sliding it upward until you hear a click.



## Charge the battery

 
Follow these guidelines to charge the battery.

- With your phone on or off, connect the lead from the charger to the bottom of the phone.
- Connect the charger to an AC wall outlet.

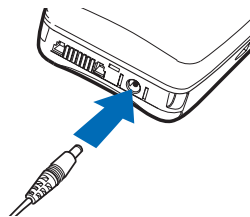

The battery indicator bar appears on the screen and starts to scroll up and down after a few seconds.

 
- Disconnect the charger from the phone and AC outlet when the battery is fully charged.

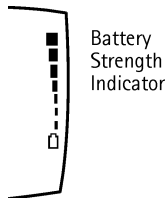

After the indicator bar stops scrolling, the battery is approximately 80% charged, and is fully charged after an additional hour (approximately). See "Charging and Discharging" on page 148 for more information.




**Note:** For best performance, charge the battery for 24 hours before you use the phone. The charging time depends on the charger and battery you use. For example, the charging time for the BLB-3 battery with the ACP-8U charger is approximately 2 hours.

-  **Important:** Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime.

## Remove the battery

 You will need to remove the existing battery if you want to install a new battery or if you've purchased a spare battery. Make sure the phone has been turned off for ten seconds.

- 1 Remove the back cover of the phone as shown in step 1 on page 13.
- 2 Place your index finger in the space at the top of the battery, and press toward the bottom of the phone.
- 3 Take out the battery.

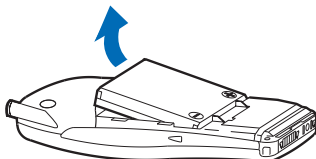

**Warning!** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.


## Important battery information

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is totally empty, it may take a few minutes for the battery indicator to appear on the screen.
- If you switch the phone on when charging is complete, the message **Battery full** is displayed momentarily.
- Charging time depends on the charger and battery used. Please see "Battery information" on page 146 for more information.
- If the battery has become completely empty, you may need to recharge it for a few minutes before you can make or receive calls.

## Prolong battery life

 
A battery lasts longer and performs better if you fully discharge it from time to time. To discharge your battery, follow either of these steps.

- Leave your phone switched on until the battery drains completely. *Ignore any messages to recharge your battery and let the battery completely discharge.*
- Or, use the battery discharge feature of any approved accessory available for your phone.

 **Important:** Do not attempt to discharge the battery by any means other than those just described.

## • SWITCH YOUR PHONE ON OR OFF

To switch your phone on or off, press and hold the power key (located on the top of the phone) for two seconds.

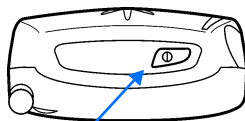


Power key




**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.






## • CHECK THE START SCREEN

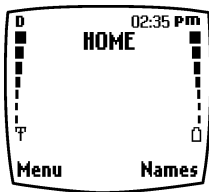 The Start screen refers to the phone's display when no calls are in progress, and there are currently no menu or phone book entries displayed.

You can easily return to the Start screen from any location (other than an active call) simply by pressing the  key. However, keep in mind that any text or numbers that you were entering at the time will be lost, and your work will not be saved.
















The following table describes the primary indicators and icons found on the Start screen:

Element	Description
Home	Your service provider's name may appear here.
	Shows the signal strength of the wireless network where you are. The higher the bar, the stronger the signal.
	Shows the battery charge level. The higher the bar, the higher the power level in the battery.
Menu	The entry point for your phone's menu. Press  (left selection key) to view the menu options.
Names	The entry point for the phone book menu. Press  (right selection key) to view the phone book menu options.
	Icon appears in upper left corner of screen, indicating that you are in a digital network.

## • LEARN ABOUT THE KEYS

 The table on the following page contains a summary of how the various keys on your phone work.







Key	Description
	<p><b>Power:</b> Press and hold to switch the phone on or off.</p> <p>Pressing this key momentarily displays a list of profiles. Power key also displays menu while using Minibrowser</p>
	<p><b>Selection:</b> Press to choose the option shown by the word above the key (for example, Menu or Names).</p>
	<p><b>Scroll keys:</b> Press to scroll up or down through a menu list of options.</p>
	<p><b>Talk:</b> Press  to make a call to the name or number shown on the screen or to answer a call.</p> <p>Pressing this key when not in a call (or when not in the menu or phone book) displays a list of recently dialed numbers.</p>
	<p><b>End:</b> Press  to end a call, to silence the ring from an incoming call, or to exit the phone book or menus completely. Used as Back key in Minibrowser.</p>
 <p>through</p>	<p><b>Number:</b> Use keys 1 through 9 to enter numbers and letters. Press and hold  to dial your voice mailbox. Press and hold  to launch the Minibrowser.</p>
	<p><b># key:</b> Use # key to change case of text, or to enable or disable predictive text input.</p>
	<p><b>* key:</b> Use * key to enter special characters (example: punctuation) or access special characters menu.</p>
	<p><b>Volume:</b> Use to increase or decrease volume.</p>



## • MAKE AND ANSWER CALLS

 Use the following table as a quick reference for making and answering calls:














2












Task	Instructions
Make a call	<ol style="list-style-type: none"><li>1 Enter the number using the keypad (include area code as needed).</li><li>2 Press </li><li>3 Hold the phone as you would any other telephone, with the ear piece over your ear and the microphone near your mouth.</li></ol>
Answer a call	When your phone rings, press 
End a call	Press  to terminate the active call.
Reject a call	Press  when you don't want to answer a call, but still want to silence the ringer.
Avoid accidental calls	Press <b>Menu</b> then  (within three seconds) to lock your keypad. This activates the Keyguard feature.
Unlock keypad	When the keypad is locked, press <b>Menu</b> then  (within three seconds). This deactivates the Keyguard feature.

## • REVIEW PHONE SYMBOLS

2

 
The following is a collection of the various indicators and icons you may see on your phone.



Symbol	Description
	A call is in progress.
	You have selected the <b>Silent</b> profile (silencing your phone's ringer, keypad tones, warning tones, etc.)
	Keyguard is active
	You have one or more voice messages waiting.
	You have one or more unread text messages waiting.
	Digital service is available.
	Letters you enter appear as uppercase (ALL CAPS).
	Letters you enter appear in lowercase.
	Letters you enter appear in sentence case (first word in sentence capitalized) or title case (in phone book).
	Characters you enter appear as numbers.
	Predictive text mode is active. Predictive text feature available for Calendar and To-do list notes, or writing text messages.
	Predictive text mode activated. Characters you enter appear in sentence case (only first word in sentence capitalized).
	Predictive text mode activated. Characters you enter appear as uppercase letters.

Symbol	Description
	Predictive text mode activated. Characters you enter appear as lowercase letters.
	Insert symbol mode, used to enter special characters such as punctuation marks.
	The alarm clock is set.
	Indicates that a reminder has expired.
	Indicates you are roaming.
	Indicates call over a secure connection.
	Indicates that a headset is connected (either via the 2.5mm jack or to bottom of phone)
	Indicates phone is in handsfree car kit
	Indicates a connection to packet data network.
	Indicates you have a minibrowser message.
	Indicates TTY/TDD mode is active

## • USE THE SELECTION KEYS

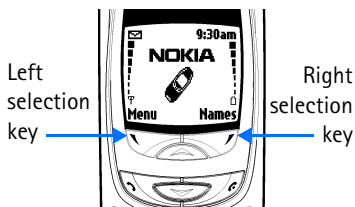Note the two selection keys beneath the screen. The function of these keys is determined by the word shown above them on the screen.





For example, pressing the left selection key when the word **Menu** appears above it shows the first of many menus. You scroll through the menus using the  and  keys.

Likewise, pressing the right selection key when **Names** appears above it displays the phone book menu.

When this guide says, "Press **Menu**," it means, "Press the selection key beneath the word **Menu**."

## • VIEW YOUR PHONE'S HELP SYSTEM

Your phone provides brief descriptions of all menu options. To view any of the help texts:

- 1 Scroll to a menu or submenu option.
- 2 Wait about 15 seconds.  
A short message appears, describing the option and what it does.
- 3 Use  and  as needed to scroll down through longer descriptions.

 
### ENABLE/DISABLE HELP SYSTEM



Press Menu 4-2-4 (Settings > Phone settings > Help text activation) to turn the phone's help system on or off.

## • BROWSE PHONE MENUS


Your phone's menu system displays choices you can make to change settings on your phone or gives you access to various phone features. Your phone has 10 menus, plus the phone book menu (**Names**). Each menu can contain several levels of submenus.

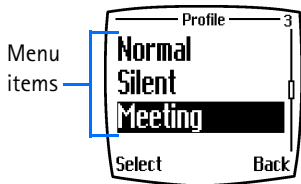

You can use menus and submenus two ways: by scrolling or by using a shortcut.

## Check the menu number, header line, and scroll bar

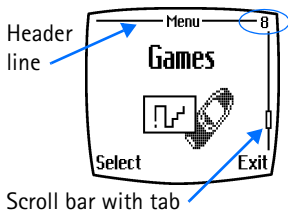 


A **header line** appears at the top of your screen when in the phone book or while navigating the menus. The header line provides you with a reminder of the phone book entry you are working with, or serves as a reminder of the menu or sub-menu with which you are working.





A **scroll bar** appears on the right side of the screen when you scroll through the main menu. A **tab** on the bar gives you a visual indication of your relative position in the menu structure.

The **menu number** is located at the top of the scroll bar.

## Scroll through menus

 
- 1 At the Start screen, press **Menu**, then scroll through the menus using the  and  keys.
- 2 Press **Options**, **Select**, or **OK**, pressing the selection key for the option you want.
- 3 Use the scroll and selection keys to navigate the submenus; press the  key to return to the Start screen.

### SCROLLING TIPS

- You can scroll upward (backward, so to speak) as well as downward to find some of the most frequently used submenu options.
- You can return to the previous menu level by pressing **Back**.
- To exit a menu and return to the Start screen, press . If you leave a menu by pressing , you cancel any changes you made.
- Some menus may not appear. Ask your service provider for details.

## Learn about menu shortcuts

Menus and options are numbered so that you can jump directly to the option you use frequently. The numbers appear in the top right corner of the screen and show your location in the menu.

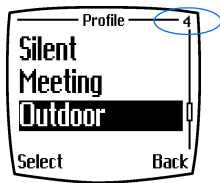

### USE A SHORTCUT

Example: To turn on Automatic redial:

- 1 Press Menu.
- 2 Within three seconds, press 4-1-2-1 (Settings > Call settings > Automatic redial > On).

## • MENU AND MENU SHORTCUTS

MESSAGES.....	1
Text messages .....	01-1
Write message (Text/Page) .....	01-1-1
Add e-mail .....	01-1-1-1
Add number .....	01-1-1-2
Enter text .....	01-1-1-3
List recipients .....	01-1-1-4
Send .....	01-1-1-5
Inbox.....	01-1-2
Erase .....	01-1-2-1
Reply .....	01-1-2-2
Use number .....	01-1-2-3
Save.....	01-1-2-4
Use Web link.....	01-1-2-5
Save address.....	01-1-2-6
Forward.....	01-1-2-7
Move.....	01-1-2-8
Rename .....	01-1-2-9
Save picture .....	01-1-2-10
Outbox .....	01-1-3

Archive.....	01-1-4
Templates.....	01-1-5
Erase messages.....	01-1-6
All read.....	01-1-6-1
Inbox.....	01-1-6-2
Outbox.....	01-1-6-3
Archive.....	01-1-6-4
Message settings.....	01-1-7
Sending options.....	01-1-7-1
Other settings.....	01-1-7-2
Voice messages <sup>1</sup> .....	01-2
Listen to voice messages.....	01-2-1
View details of last voice mail.....	01-2-2
Voice mailbox number.....	01-2-3
Clear voice mail icon.....	01-2-4
Minibrowser messages.....	01-3
<b>CALL LOG.....</b>	<b>2</b>
Missed calls <sup>2</sup> .....	2-1
Call time.....	2-1-1
Send message.....	2-1-2
View number.....	2-1-3
Use number.....	2-1-4
Save.....	2-1-5
Add to name.....	2-1-6
Erase.....	2-1-7
Call.....	2-1-8
Received calls.....	2-2
Dialed numbers.....	2-3
Clear call lists.....	2-4
All.....	2-4-1
Missed.....	2-4-2
Received.....	2-4-3
Dialed.....	2-4-4

1 Menu option may vary, based on your service provider's requirements.

2 Options for the Received calls and Dialed calls lists are identical to Missed calls list of options.

Call Timers .....	2-5
Duration of last call .....	2-5-1
Show call time on display .....	2-5-1-1
Duration of dialed calls .....	2-5-2
Duration of received calls .....	2-5-3
Duration of all calls .....	2-5-4
Life timer .....	2-5-5
Clear timers .....	2-5-6
Data/fax calls .....	2-6
Last sent data/fax .....	2-6-1
Last received data/fax .....	2-6-2
All sent data/fax .....	2-6-3
All received data/fax .....	2-6-4
Duration of last data/fax call .....	2-6-5
Duration of all data/fax calls .....	2-6-6
Clear all data/fax logs .....	2-6-7
Minibrowser .....	2-7
Last sent browser data .....	2-7-1
Last received browser data .....	2-7-2
All sent browser data .....	2-7-3
All received browser data .....	2-7-4
Last browser session .....	2-7-5
All browser sessions .....	2-7-6
Clear all browser logs .....	2-7-7
<b>PROFILES .....</b>	<b>3</b>
Normal .....	3-1
Select .....	3-1-1
Customize <sup>1</sup> .....	3-1-2
Ringing options .....	3-1-2-1
Ringing tone .....	3-1-2-2
Ringing volume .....	3-1-2-3
Vibrating alert .....	3-1-2-4
Message alert tone .....	3-1-2-5
Keypad tones .....	3-1-2-6

---

1 Customize options for Silent, Meeting, Outdoor, and Pager profiles are identical to those of the Normal profile



Warning tones .....	3-1-2-7
Accepted caller groups .....	3-1-2-8
Profile name <sup>1</sup> .....	3-1-2-9
Timed .....	3-1-3
Silent .....	3-2
Meeting .....	3-3
Outdoor .....	3-4
Pager .....	3-5
<b>SETTINGS .....</b>	<b>4</b>
Call settings. ....	4-1
Anykey answer .....	4-1-1
Automatic redial .....	4-1-2
1-touch dialing .....	4-1-3
Auto-update of service <sup>2</sup> .....	4-1-4
Minibrowser confirmation .....	4-1-5
None .....	4-1-5-1
On connection .....	4-1-5-2
On exit .....	4-1-5-3
Both .....	4-1-5-4
Calling card .....	4-1-6
No card .....	4-1-6-1
Card A .....	4-1-6-2
Card B .....	4-1-6-3
Card C .....	4-1-6-4
Card D .....	4-1-6-5
Phone settings. ....	4-2
Language .....	4-2-1
Touch tones .....	4-2-2
Manual touch tones .....	4-2-2-1
Touch tone length .....	4-2-2-2
Welcome note .....	4-2-3
Help text activation .....	4-2-4

1 Normal profile cannot be renamed.

2 Menu option may not be visible, based on your service provider's requirements.

Lights <sup>1</sup> .....	4-2-5
On .....	4-2-5-1
Automatic .....	4-2-5-2
Display contrast .....	4-2-6
Restore factory settings .....	4-2-7
Time settings .....	4-3
Clock .....	4-3-1
Show (Hide) clock .....	4-3-1-1
Set the time .....	4-3-1-2
Time format .....	4-3-1-3
Auto update of date & time .....	4-3-2
On .....	4-3-2-1
Confirm first .....	4-3-2-2
Off .....	4-3-2-3
Accessory settings .....	4-4
Handsfree .....	4-4-1
Default profile .....	4-4-1-1
Automatic answer .....	4-4-1-2
Lights .....	4-4-1-3
Headset .....	4-4-2
Default profile .....	4-4-2-1
Automatic answer .....	4-4-2-2
Loopset .....	4-4-3
Use loopset .....	4-4-3-1
Default profile .....	4-4-3-2
Automatic answer .....	4-4-3-3
TTY .....	4-4-4
Use TTY .....	4-4-4-1
Default profile .....	4-4-4-2
Automatic answer .....	4-4-4-3
Security settings .....	4-5
Call restrictions .....	4-5-1
Restrict outgoing calls .....	4-5-1-1
Restrict incoming calls .....	4-5-1-2

---

1 Appears when in Handsfree mode.

Access codes .....	4-5-2
Phone lock .....	4-5-2-1
Allowed number when phone locked.....	4-5-2-2
Change lock code .....	4-5-2-3
Change security code .....	4-5-2-4
Network services <sup>1</sup> .....	4-6
Voice privacy .....	4-6-1
Call forwarding .....	4-6-2
Forward all calls .....	4-6-2-1
Forward if busy .....	4-6-2-2
Forward if not answered.....	4-6-2-3
Forward if out of reach.....	4-6-2-4
Forward all data calls .....	4-6-2-5
Cancel all call forwarding.....	4-6-2-6
Call waiting .....	4-6-3
Send own caller ID with next call .....	4-6-4
Yes .....	4-6-4-1
No.....	4-6-4-2
Network feature setting.....	4-6-5
Own number selection .....	4-6-6
<b>SYSTEM<sup>2</sup> .....</b>	<b>5</b>
Home only .....	5-1
Automatic .....	5-2
Mode .....	5-3
Digital pref.....	5-3-1
Digital only .....	5-3-2
Analog per call .....	5-3-3
<b>GAMES .....</b>	<b>6</b>
Select game .....	6-1
Snake II .....	6-1-1
Pass 'n Rush.....	6-1-2
Space impact.....	6-1-3
Bumper .....	6-1-4

1 Network services menu options are visible only after entering the correct services code.

2 Menu options may vary, depending on your service provider's requirements.

Racket .....	6-1-5
Settings .....	6-2
Game sounds .....	6-2-1
Game lights .....	6-2-2
Shakes .....	6-2-3
<b>VOICE .....</b>	<b>7</b>
Voice tags .....	7-1
Add voice tag <sup>1</sup> .....	7-1-1
Playback .....	7-1-1-1
Change .....	7-1-1-2
Erase .....	7-1-1-3
Voice commands .....	7-2
Profiles .....	7-2-1
Normal .....	7-2-1-1
Silent .....	7-2-1-2
Meeting .....	7-2-1-3
Outdoor .....	7-2-1-4
Pager .....	7-2-1-5
Voice mailbox .....	7-2-2
Call voice mailbox .....	7-2-2-1
Infrared .....	7-2-3
Activate infrared .....	7-2-3-1
Recorder .....	7-2-4
Record .....	7-2-4-1
Call log .....	7-2-5
Missed calls .....	7-2-5-1
Received calls .....	7-2-5-2
Voice recorder .....	7-3
Record .....	7-3-1
Recordings list .....	7-3-2
Playback .....	7-3-2-1
Edit title .....	7-3-2-2
Erase .....	7-3-2-3
Alarm/Add alarm .....	7-3-2-4

<sup>1</sup> Voice command options for Profiles, Voice mailbox, Infrared, and Call log same as Voice tag options.

<b>MINIBROWSER</b> .....	<b>8</b>
<b>MOBILE LINK</b> .....	<b>9</b>
Infrared .....	9-1
Data/fax calls .....	9-2
Incoming data/fax call .....	9-2-1
Normal .....	9-2-1-1
Data calls only .....	9-2-1-2
Fax calls only .....	9-2-1-3
Data rate display <sup>1</sup> .....	9-2-2
Text .....	9-2-2-1
Graphic .....	9-2-2-2
Off .....	9-2-2-3
<b>ORGANIZER</b> .....	<b>10</b>
Alarm clock .....	10-1
Calendar .....	10-2
View day .....	10-2-1
View .....	10-2-1-1
Make a note .....	10-2-1-2
Erase .....	10-2-1-3
Edit .....	10-2-1-4
Move .....	10-2-1-5
Repeat .....	10-2-1-6
Go to date .....	10-2-1-7
Send note .....	10-2-1-8
Copy .....	10-2-1-9
Settings .....	10-2-1-10
Make note .....	10-2-2
Meeting .....	10-2-2-1
Call .....	10-2-2-2
Birthday .....	10-2-2-3
Memo .....	10-2-2-4
Go to date .....	10-2-3
Settings .....	10-2-4
Set the date .....	10-2-4-1

---

<sup>1</sup> Menu options may vary, depending on your service provider's requirements.

Set the time .....	10-2-4-2
Date format .....	10-2-4-3
Time format .....	10-2-4-4
Week starts.....	10-2-4-5
Auto erase.....	10-2-4-6
To-do list .....	10-3
Add .....	10-3-1
View .....	10-3-2
Erase .....	10-3-2-1
Edit .....	10-3-2-2
Edit priority.....	10-3-2-3
Go to priority .....	10-3-2-4
Save to cal.....	10-3-2-5
Erase.....	10-3-3
Edit.....	10-3-4
Change priority .....	10-3-5
Go to priority.....	10-3-6
Save to cal.....	10-3-7
Calculator.....	10-4
Stopwatch .....	10-5
Continue.....	10-5-1
Show last time.....	10-5-2
Split timing .....	10-5-3
Lap timing .....	10-5-4
View times .....	10-5-5
Erase times.....	10-5-6



**Important:** Some menu shortcuts may not be available. This list serves as a more detailed list of your phone's menu structure, as well as a list of shortcuts.

## • PHONE BOOK MENU

From the Start screen, press **Names**. The following phone book options are available (see table on following page):

Menu	Menu (cont'd.)
<p><b>Search</b></p> <p><b>Add new</b></p> <p><b>Edit name</b></p> <p><b>Erase</b></p> <p>    One by one</p> <p>    Erase all</p> <p><b>Add number</b></p> <p><b>Options</b></p> <p>    Scrolling view</p> <p>    Name list</p> <p>    Name+number</p> <p>    Memory status</p> <p><b>1-touch dialing</b></p> <p>    View number</p> <p>    Change</p> <p>    Erase</p> <p><b>Voice tags</b></p> <p>    Playback</p> <p>    Change</p> <p>    Erase</p>	<p><b>Own numbers</b></p> <p><b>Caller groups</b></p> <p>    Family<sup>a</sup></p> <p>        Rename group</p> <p>        Group ringing tone</p> <p>        Group logo</p> <p>        On</p> <p>        Off</p> <p>        View</p> <p>        Send logo</p> <p>        Group members</p> <p>        Remove name</p> <p>        Add name</p> <p>    VIP</p> <p>    Friends</p> <p>    Business</p> <p>    Other</p>

a. Menu options for VIP, Friends, Business, and Other are identical to Family options.


## 3 Phone setup

3

Now that you've had a chance to learn about some of the basic functions and features of your phone, you may want to explore a few options to improve the way you use your phone.

### • LEARN ABOUT YOUR HEADSET

 
Your sales package may include either the HDC-9P or HDE-1 headset. Using the headset offers you convenient handsfree communications with your phone.

 **Note:** The HDC-9P and HDE-1 headsets are also available for purchase as an accessory, in the event yours becomes lost or damaged (or was not a part of your sales package).

### Connect the headset

Before using the headset:


- 1 Plug the headset jack into the bottom of your phone.
- 2 Put the round ear piece into one ear.

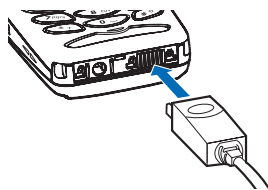

### Use the headset

You can make, answer, and end calls as usual with the headset connected. The headset's microphone hangs at the side of your head. Although the microphone may seem far from your mouth, you can speak at a normal volume.

 You can use the HDC-9P's button to answer or end a call, as well as activate voice dialing or voice commands.

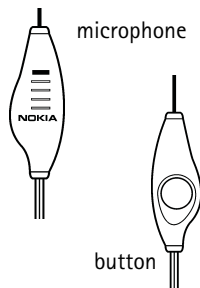




You can also use the  or  to answer and end calls. HDE-1 users must use these keys to answer or end calls.

## • ADJUST THE VOLUME

 You can change your phone's ear piece volume, making the caller's voice sound louder or softer. The volume keys are located on the side of the phone.

Adjustments to the ear piece volume can be made at any time by pressing the top volume key to increase volume or the bottom key to decrease volume.

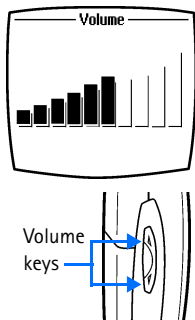



3


## • ADJUST SCREEN CONTRAST

 You can change the contrast on your phone's screen, making the screen brighter or darker.

- 1 Press Menu 4-2-6 (Settings > Phone settings > Display contrast).

Your phone displays the current setting.

- 2 Press  or  to increase or decrease contrast.
- 3 Press OK to confirm your changes.

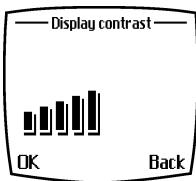

## • LOCK KEYPAD (KEYGUARD)

The Keyguard feature allows you to temporarily lock your phone's keypad and prevent the keys from being pressed accidentally (for example, when the phone is in your pocket or in your purse). For more information about locking your keypad, please see "Lock keypad (Keyguard)" on page 104.

 
## 4 Text entry



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

4

You can enter letters, numbers, and special characters via the phone's keypad when working with the phone book, calendar, to-do list, text messaging, or while browsing the Internet. This section provides detailed instructions for the two text entry methods: traditional text entry, and predictive text input.

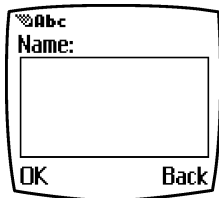


### • ENTER LETTERS AND NUMBERS

You have four modes available for entering information, based on the type of data you're entering (phone book, organizer notes or text messages):

Mode	The phone shows	Use for
ABC	<b>ABC</b> - sentence case or title case (first letter capitalized) <b>ABC</b> - all uppercase letters <b>abc</b> - all lowercase letters	Entering names, numbers or addresses in phone book. Entering notes in Calendar or To-do list Writing a text message.
123	<b>123</b> - number entry.	Entering numbers.
Special characters	<b>? ! @</b> - special characters list	Entering punctuation or special characters
Predictive text	- in combination with ABC mode indicators.	Writing SMS text messages, calendar or to-do list notes.

## • WRITE USING ABC AND 123 MODES

 A status indicator in the upper left corner of your screen indicates what mode you're in whenever you are entering information into your phone (phone book, calendar, to-do list, or text messaging).

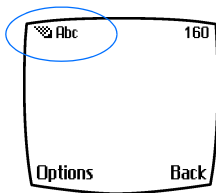

### Enter letters

The following table contains a list of the characters displayed when entering text and numbers from your keypad:

Key	Characters	Key	Characters
	. , @ ' ? ! - 1		P Q R S 7
	A B C 2		T U V 8
	D E F 3		W X Y Z 9
	G H I 4		Space, 0
	J K L 5		Special characters menu
	M N O 6		Changes letter case.

Pressing a key repeatedly cycles you through all of that key's options. To enter a letter, press the appropriate key repeatedly until the desired letter appears. Continue this process until the word or name is completed.






 





 


**Note:** If the next letter in the word you're entering is on the same key, wait two to three seconds for the cursor to advance, then enter the new letter, or press to advance the cursor.



**Important:** Your phone's language settings may affect the characters associated with your phone's keypad.



For example: to enter the name "Albert":

Press  A  
 Press    l  
 Press   b  
 Press   e  
 Press    r  
 Press  t





**Note:** Default mode is sentence case **Abc** where first letter of a name or sentence is automatically capitalized. Phone book default mode is title case -each word is capitalized.

## OTHER OPTIONS

- **Erase mistakes** - If you make a mistake, press **Clear** to erase one character to the left. Press and hold the **Clear** key to speed up the erasing process.
- **Enter a space** - When you've completed entering a word or name, press .
- **Change letter case** - Press  to switch between the various text entry modes or from uppercase and lowercase letters.

## Enter numbers

Your phone automatically switches to 123 mode when entering a number into your phone book. When in ABC mode, you can insert numbers using any of the following methods:

- Press and hold the  key for two seconds to switch to 123 mode, then press the desired number keys. Press and hold  again to return to ABC mode.
- Press and hold the desired number key until the number appears on the display.
- Press the desired key repeatedly until the desired number appears.

## Enter punctuation/other characters

You can enter punctuation, special characters, and symbols while writing text messages, entering notes in the **Organizer**, creating phone book entries, or browsing the Internet. The illustration to the right shows a sample of the available characters.




4


### ENTER PUNCTUATION OR SPECIAL CHARACTERS

Depending on the type of text you're entering, you can add punctuation or special characters by doing any of the following:

- Press **1 a-o** repeatedly while in ABC mode to cycle through some of the most common punctuation marks and special characters.
- Press **\* +** to activate the special characters list. A screen appears displaying the available special characters.

Use the scroll keys to highlight the desired character, then press **Select**.

 **Note:** For faster scrolling when viewing the special characters list, you can use the **2 abc** (up), **8 tuv** (down), **4 gh** (left) and **6 mno** (right) keys. Press **5 jkl** to **Select** your choice.

 **Important:** Some networks may not support all language-dependent characters.

## Use special characters in phone numbers

You can enter certain special characters as a part of the phone numbers you save to the phone book. Pressing **\* +** repeatedly cycles through the four special characters available when saving a phone number.

 


- \* This character sends command strings to the network. Contact your service provider for more information.

- + This character is used to link a 1-touch dialing location to the number currently being entered.
- p This character creates a pause that occurs when the phone dials a number. Numbers entered to the right of this special character are automatically sent as touch tones after a 2.5-second pause.
- w This character causes the phone to wait for you to press **Send**.

## • WRITE WITH PREDICTIVE TEXT

Your phone offers a quick way to enter text called predictive text input. Predictive text uses a highly compressed database (or "dictionary") of common words and tries to anticipate the word you are entering.

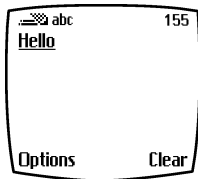

You can use predictive text input when you:

- Write or reply to a text message
- Create a note in the calendar or to-do list
- Enter text while using the Minibrowser

Watching predictive text guess a word can be confusing, so you should disregard the screen until all characters have been entered

Example: To write "Nokia":

What you press	What you see
Press <b>6</b> <i>mno</i> - N	O
Press <b>6</b> <i>mno</i> - o	On
Press <b>5</b> <i>jkl</i> - k	Onl
Press <b>4</b> <i>ghi</i> - i	Onli
Press <b>2</b> <i>abc</i> - a	Nokia

## KEYS AND TOOLS FOR PREDICTIVE TEXT

Key	Description
	Use for text entry. Press each key only once per letter. Press and hold the key to enter the number.
	If the underlined word is not the word you intended, press this key repeatedly until the word you want appears. Press and hold this key to display a list of punctuation and special characters.
Spell	If the word entered isn't recognized, <b>Spell</b> appears above the left selection key. Press <b>Spell</b> , enter the desired word, then press <b>Save</b> .
Clear	Press once to delete the character to the left of the cursor. Press and hold to erase characters faster.
	Press once to accept the word and add a space. Press and hold to enter a zero.
	Press and hold to enter <b>123</b> mode. Enter the desired number, then press and hold again to return to predictive text.
	Press once to add a period. Press  repeatedly to view other punctuation marks. Press once to add a punctuation mark that predictive text converts to an apostrophe. Press and hold to enter the numeral 1.
	Press to switch between sentence case, lowercase, or uppercase modes or to switch to the above modes without predictive text.

## Turn on predictive text input

You can turn on predictive text input from the **Options** menu while writing a text message or to-do note. Once enabled, predictive text is available to all features that support it. For example, if you enable predictive text while writing a text message, you also enable predictive text for to-do list notes.

 in the screen's upper left corner indicates predictive text is active.

### ENABLE PREDICTIVE TEXT (QUICK METHOD)

While creating a new text message, calendar note, or to-do list note. press and hold the **Options** key for two seconds.

The message **T9 prediction on** is displayed and the English language dictionary is enabled.(or the most recently selected dictionary).

### ENABLE PREDICTIVE TEXT (AND SELECT DICTIONARY)

While creating a new text message or to-do list note:

- 1 Press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to the dictionary you want (for example, **English**), then press **Select**.

The message **T9 prediction on** is displayed. The dictionary in the language you've selected is enabled.

## Turn off predictive text input

While creating a new text message or to-do list note, press and hold the **Options** key for two seconds, -OR-



- 1 Press **Options**, scroll to **Predictive text** and press **Select**.
- 2 Scroll to **Prediction off**, then press **Select**.

## Tips for predictive text



### CHECK A WORD


When you've finished writing a word and the word is correct as shown:



- Press  to confirm the word and enter a space. Continue by writing the next word. –OR–
- Insert a punctuation mark, then press  for a new sentence.

If the displayed word is not correct:

- Press  repeatedly until the word you want appears, then press  to confirm your choice and continue. –OR–
- Press **Options**, scroll to **Matches**, then press **Select**. Scroll to the correct word and press **Use**.

Press  to confirm the word and enter a space.



**Tip:** When you enter punctuation at the end of a sentence, the phone switches to sentence case. The first letter of the next word automatically appears in uppercase.

### ADD A WORD TO THE DICTIONARY

When the word you intended to write is not in the dictionary, the left selection key becomes **Spell**.



- 1 Select **Spell** and enter the word using standard text entry.
- 2 Press **Save** to insert the correct word (and to save it to the dictionary).

### INSERT NUMBERS AND SYMBOLS

The procedure for entering numbers with predictive text and standard text entry is the same. Please see “Enter numbers” on page 38.

The procedure for entering symbols with predictive text and standard text entry is the same. Please see “Enter punctuation/other characters” on page 39.

### WRITE COMPOUND WORDS

 
- 1 Write the first part of the compound word, then press  to accept that part.
- 2 Write the last part of the compound word. Press  to enter the word.

## 5 Phone book



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can save up to 500 entries (names and associated numbers) in your phone book. In addition, your phone book is capable of storing multiple numbers for each name (home, business, mobile, etc.), as well as text information (postal address, e-mail address, or note).

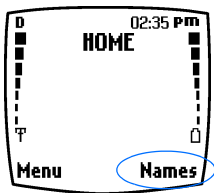


**Note:** Phone book memory is dynamic. The amount of detail stored for each entry may affect total number of entries available.

### • SAVING NAMES AND NUMBERS

 There are several ways to save names and numbers in your phone book. Instructions for the two most common ways are listed below.

#### SAVE A NUMBER AND NAME (USING PHONE BOOK MENU)

- 1 Press **Names**.
- 2 Scroll to **Add new** and press **Select**.
- 3 Enter the name and press **OK**.
- 4 Enter the area code (as necessary) and phone number, then press **OK**.

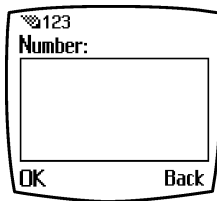

#### SAVE A NUMBER AND NAME (QUICK SAVE)

- 1 Enter the phone number using the keypad.
- 2 Press the left selection key twice (**Options - Save**).
- 3 Enter a name and press **OK**.
- 4 Press **Done** to return to the Start screen.





**Tip:** Pressing and holding the **Options** selection key for two seconds after entering the number stores the number only.

## • RECALL NAMES AND NUMBERS

There are several ways to recall phone book entries. Once you locate the desired name and number from the phone book, you can perform any of the following tasks: call the number, edit or add information to the selected phone book entry, or delete the entry.

5

From the Start screen, recall a phone book entry as follows:

- Press  or  to display the list of phone book entries. Press repeatedly to scroll through the list of names.



**Tip:** When viewing the list of names, enter the first few letters of the desired entry. The phone book automatically jumps to that section of the phone book.

- Press **Names**, select **Search**, enter the first few letters of the entry, then press **Search**.

## • USE PHONE BOOK MENUS

The phone book has several menu options from which you can choose. These options appear when you press **Names**. Use the scroll keys to move to the option you want to use.



Option	Description of function
Search	Allows you to search for a specific phone book entry
Add new	Allows you to add a new contact to your phone book
Edit name	Allows you to edit the name of a phone book entry
Erase	Allows you to erase phone book entries one by one or all at once

Option	Description of function
Add number	Allows you to add a phone number to an existing contact
Options	Displays a list of phone book options, including phone book memory status and scrolling view.
1-touch dialing	Allows you to assign phone book entries to any of the 8 speed dialing locations
Voice tags	Allows you to create and manage voice tags for voice dialing
Own numbers	Displays your phone number(s)
Caller groups	Allows you to organize phone book entries into groups and categories and assign special ringing tones and graphics to the group

## Displaying the phone book

Your phone book's information can be displayed in three different ways:

- **Name list** - Entries displayed as a list of names.
- **Name+number** - Name and default number displayed

When viewing the phone book, use  or  to scroll through the phone book entries.

## Change phone book view

- 1 Press **Names**, scroll to **Options**, then press **Select**.
- 2 Select **Phone book view**, then scroll to the view option you want.
- 3 Press **OK** to confirm your choice.

## • EDIT A NAME OR NUMBER

 
You can edit a phone book entry at any time.

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Edit name** or **Edit number** and press **Select**.
- 4 Edit the name or number, then press **OK**.

## • ADD A NUMBER TO A PHONE BOOK ENTRY

There are several ways to add additional numbers to an existing phone book entry. Your phone book can store up to five numbers per entry.

Once you choose to add a number, you can assign one of the following **number types** for the additional numbers: **General**, **Mobile**, **Home**, **Work**, or **Fax**.

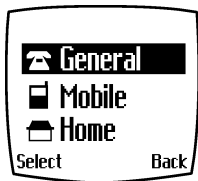

### From the phone book

- 1 Press **Names**, scroll to **Add number**, then press **Select**.
- 2 Scroll to the entry you wish to modify, then press **Add no.**
- 3 Scroll to the type of number you are adding (**General**, **Mobile**, **Home**, **Work**, or **Fax**), then press **Select**.
- 4 Enter the number and press **OK**.

### From the Start screen

- 1 Enter the phone number using the keypad, then press **Options**.
- 2 Scroll to **Add to name**, then press **Select**.
- 3 Scroll to the desired phone book entry, then press **Add no.**
- 4 Scroll to the desired number type and press **Select**.

## By recalling the name

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then press **Options** again.
- 3 Scroll to **Add number**, then press **Select**.
- 4 Scroll to the desired number type and press **Select**.
- 5 Enter the number and press **OK**.

## Change the number type


Every time you create a new phone book entry, your phone automatically assigns the **General** number type to the new number. You can use a phone book entry's **Options** menu to change the number type for any of the phone numbers. (For example, change a number's type from **General** to **Home**.)

- 1 Recall the name from the phone book.
- 2 Press **Details**, then scroll to highlight the number you want to modify.
- 3 Press **Options**, scroll to **Change type**, then press **Select**.
- 4 Scroll to the number type you would like, then press **Select**.



**Important:** If you plan on using Nokia PC Sync to synchronize your phone book and your PC's PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.

## Learn about primary number

If a phone book entry contains multiple numbers, the number entered when the phone book entry was created is designated as the **primary number**. When you highlight a phone book entry and press , your phone dials the primary number.

Consider designating the number you dial most often (for phone book entries containing multiple numbers per name) as the primary number.

## CHANGE PRIMARY NUMBER

Any phone number can be designated the primary number.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to set as the primary number.
- 3 Press **Options**, scroll to **As primary no.**, then press **Select**.

## • ERASE STORED NAMES AND NUMBERS

You can erase a number from a phone book entry, erase all details of a contact, or erase the entire contents of your phone book. Once you erase information, it cannot be recovered.

### ERASE A NUMBER

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to erase.
- 3 Press **Options**, scroll to **Erase number**, then press **Select**.
- 4 Press **OK** to confirm your choice.

### ERASE ENTIRE PHONE BOOK ENTRY

 
- 1 Highlight the phone book entry (name) you want to erase, then press **Details**.
- 2 Press **Options**. Scroll to **Erase**, then press **Select**.
- 3 Press **OK** to delete the phone book entry (including all details).

### ERASE THE ENTIRE PHONE BOOK

- 1 Press **Names**, scroll to **Erase**, then press **Select**.
- 2 Scroll to **Erase all** and press **Select**.
- 3 When you see the message **Are you sure?**, press **OK**.
- 4 Enter your security code, then press **OK**.

## • ADD OTHER INFORMATION TO A PHONE BOOK ENTRY


Once you have created a contact, you can add an e-mail address, a mailing address, or a note to that contact.

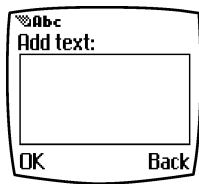

5



**Note:** Text information can only be added to existing contacts. For example, you cannot create a new contact with only an e-mail address.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then press **Options** again.
- 3 Scroll to **Add info**, then press **Select**.
- 4 Scroll to the type of information you would like to add (**E-mail**, **Street addr.**, etc.), then press **Select**.
- 5 Enter the information, then press **OK**.
- 6 Press  to return to the Start screen.

## • USE CALLER GROUPS

Your phone allows you to group phone book entries with similar attributes into **caller groups**. The five default caller groups are **Family**, **VIP**, **Friends**, **Business**, and **Other**. Each group has three attributes which can be defined by the user: *Group Name*, *Group Tone*, and *Group Logo*.

### Assign phone number to a caller group

- 1 Recall the desired phone book entry, then press **Details**.
- 2 Scroll to the desired phone number, then press **Options**.
- 3 Scroll to **Caller groups**, then press **Select**.
- 4 Scroll to the desired caller group (for example **Family**), then press **Select**.



## Edit caller group options

You can edit various aspects of a caller group.

### SETTING A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Names**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Select**.
- 4 Scroll to one of the following functions and press **Select**.
  - **Rename group** – Enter the new name for the caller group and press **OK**.
  - **Group ringing tone** – Scroll to the desired tone and press **OK**. Default is the tone selected for the currently selected profile.
  - **Group logo** – Scroll to **On**, **Off**, **View**, or **Send graphic** (sent via SMS), and press **Select**.
  - **Group members** – Press **Select** to view group members. To add or remove a member, press **Options**, then select **Add name** or **Remove name**.



**Note:** If you selected **Send graphic**, enter the recipient's phone number or recall it from phone book and press **OK**. Check with your service provider for availability of this feature.

## • CHECK MEMORY STATUS

You can check the percentage of your phone's memory that is in use and the percentage that remains available.

 
- 1 Press **Names** and scroll to **Settings**.
- 2 Scroll to **Options**, then press **Select**.
- 3 Scroll to **Memory status** and press **Select**.

## 6 Call log



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Your phone keeps a log (record) of call-related information including phone numbers and call times. The call log keeps track of:

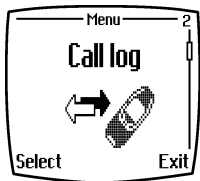

6

- Missed calls
- Received calls
- Dialed calls
- Time spent on calls
- Time spent on digital data/fax or minibrowser calls
- Amount of data transferred during data/fax or minibrowser calls

### REQUIREMENTS

Before your phone can log missed or received calls properly:

- 1 You must have a subscription to caller ID service.
- 2 Your phone must be turned on and in a digital service area.
- 3 The caller did not choose to block his/her caller ID.
- 4 Your phone's time and date must be set.





**Note:** If the incoming call has caller ID blocked, the number cannot be recorded in the call log. If you try to view the call log, the message **No new numbers** is displayed.



**Important:** The ability to make digital data/fax calls and minibrowser calls is based on the availability of these services and may require a subscription to these services. Check with your service provider for more information on digital data/fax calls and availability of wireless Internet services.

## • CHECK MISSED, RECEIVED, OR DIALED CALLS

Your phone records information about the ten most recently missed, received, and dialed calls (ten entries for each type of call). To view call log entries:

- 1 Press **Menu-2 (Call log)**.
- 2 Scroll to the desired call type (**Missed calls, Received calls, or Dialed numbers**), then press **Select**.
- 3 Use  and  to view the list of missed, received, or dialed calls.



**Note:** If the phone number recorded by the call log matches a number stored in your phone book, the name of the phone book entry is displayed.

### View call log options

The table below contains a list of options available for all call log entries. Scroll to the desired call log entry, then press **Options**. The following list of choices is displayed:

Option	Description
Call time	Shows the time when the call was missed, received or placed
Send message	Allows you to write and send a text message to numbers listed in the call log
View number	Displays the phone number when call log entry matches a number found in your phone book
Edit number	Allows you to edit the number shown on the screen
Save	Saves the number in your phone book
Add to name	Adds the number to an existing phone book entry

Option	Description
Erase	Removes the number from the call log
Call	Redials the displayed number

## Use call log shortcuts

### 6

#### MISSED CALLS

When you miss a call(s), the message **Missed calls** appears on your phone's screen, along with the number of calls missed.







**Important:** You are notified of missed calls only if your phone was turned on.




**Note:** If you chose the **Forward if not answered** option in **Call Forwarding**, your phone treats these forwarded calls as missed calls.

#### DIALED NUMBERS

You can view the list of dialed calls without having to access the **Call log** menu. From the Start screen:

- 1 Press . The most recently dialed call is displayed.
- 2 Use  or  to view the other call log entries.
- 3 Press  again to redial the number displayed, or press **Options** to work with the selected call log entry.



**Tip:** To redial the last number, press  twice.

## • CLEAR CALL LISTS



Your phone's **Call log** uses **call lists** to store numbers of incoming, outgoing, and missed calls. Use the **Clear call lists** menu to erase the log of phone numbers dialed, received, or missed.

The **All** option clears all numbers in all lists, whereas the other options clear only the numbers associated with that option.



**Caution!** This operation cannot be undone. Clearing the **Dialed numbers call list** clears the list of dialed calls accessed by pressing



- 1 Press Menu 2-4 (Call log > Clear call lists).
- 2 Use  or  to highlight the desired option: **All**, **Missed**, **Received**, and **Dialed**.
- 3 Press Select to confirm your selection.



## • USE CALL TIMERS

Your phone uses **call timers** to track the amount of time you spend on each call. You can review phone use by checking the phone's call timers.



**Important:** The actual time invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, and so forth.

### ACCESS THE VARIOUS CALL TIMERS:

- 1 Press Menu 2-5 (Call log > Call timers).
- 2 Use  or  to scroll through the options described in the following list:

Option	Description
Duration of last call	Displays elapsed time of the last call you made
Duration of dialed calls	Displays total time for all outgoing calls
Duration of received calls	Displays total time for all incoming calls

Option	Description
<b>Duration of all calls</b>	Displays sum total for all incoming and outgoing calls
<b>Life timer</b>	Shows the time used for all calls for the life of your phone. This option cannot be reset.
<b>Clear timers</b>	Clears (erases) all call timers except Life timer

## • TURN ON A CURRENT CALL TIMER

Your phone can display a call timer showing elapsed time of the current call. When the call is completed, the timer displays the call length.

- 1 Press Menu 2-5-1-1 (Call log > Call timers > Duration of last call > Show call time on display).
- 2 Scroll to **On** and press **OK**.



**Tip:** After a call has ended, press any key on your phone to clear the current call time from the screen.

## • CLEAR CALL TIMERS

To erase all call timers:

- 1 Press Menu 2-5-6 (Call log > Call timers > Clear timers).  
The Security code field appears.
- 2 Enter your security code and press **OK**.



**Caution!** This action cannot be undone.



**Tip:** If you use the call timers to log the amount of time spent on calls, you may want to record the information from the call timers before you clear them.

## • DATA TIMERS (DATA/FAX AND MINIBROWSER)

The call log records and displays the length of digital data/fax calls, as well as meters the amount of data transferred during data/fax calls. The call log also records this same information when you use the Minibrowser to access the wireless Internet.

### Access data-related call timers

- To access the data/fax call timers, press **Menu 2-6 (Call log > Data/fax calls)**.
- To access the minibrowser call timers, press **Menu 2-7 (Call log > Minibrowser calls)**.

### Data-related call timer options

The following call timer options are available for data/fax and browser calls:

- **Last sent (or received) data/fax** - amount of data displayed in kilobytes (KB)
- **All sent (or received) data/fax** - amount of data displayed in KB
- **Duration of last data/fax call** - length of time spent on last data call or browser session.
- **Duration of all data/fax calls** - running total of all calls.
- **Clear all data/fax logs** - clears all timers and data logs.

### Minibrowser timer options

 
The available options for the minibrowser call timers are similar to those listed above for data/fax calls.

## 7 Voice mailbox



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Voice mail is a feature that enables those who call you to leave a voice message, in the event you are unable to answer your phone. Using your phone in conjunction with your service provider's voice mail system, you can retrieve your messages at any time.

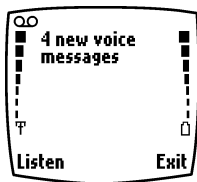

7

### • STORE YOUR VOICE MAILBOX NUMBER

Before you can retrieve any voice messages, you need to store your voice mailbox number in your phone:

- 1 Press Menu 01-2-3 (Messages > Voice messages > Voice mailbox number).
- 2 Enter your voice mailbox phone number, then press OK.

Your voice mailbox number can be up to 32 digits long.



**Note:** If your phone number changes, you may need to reenter your voice mailbox number.



**Tip:** You can store your voice mailbox password and/or PIN number as a part of your voice mailbox number. For more information, please see "Save touch tones as a phone book entry" on page 100.

### • SET GREETINGS

Voice greetings may vary in different wireless systems. If you need information about how to record your greeting, contact your service provider.



## • LISTEN TO YOUR VOICE MESSAGES

 


**Note:** The way you retrieve your voice messages varies, depending on your service provider. Call your service provider if you have any questions.

### LISTEN TO MESSAGES WHEN NOTIFIED

If your phone plays an alert tone and **New voice message** is displayed, press **Listen** and follow the prompts. If you'd rather listen to your messages later, press **Exit**.

### LISTEN TO MESSAGES LATER

- From the Start screen, press and hold  for two seconds.


-OR-

- Press Menu 01-2-1 (Messages > Voice messages > Listen to voice messages).

The message **Calling voice mailbox** appears on the screen. Follow the audio prompts from the voice mail system to review your messages.

## 8 Text messages

 You can use the **Messages** menu (Menu 1) and Short Message Service (SMS) to read, write and send text messages to another phone in your network. You may also be able to use the Minibrowser's e-mail feature to send text messages to phones in other networks.

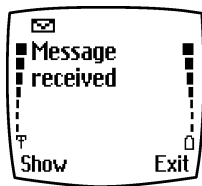

**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



**Important:** When sending SMS messages, your phone may display the words **Message Sent**. This is an indication that the message has been sent by your phone to the SMS network. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.



**Note:** Text messages and the Minibrowser are both network-dependent features and perform differently in different networks. You may also be required to subscribe to these services. Contact your service provider for more information about these features.

### • WRITE A TEXT MESSAGE

You can use the **Messages** menu to create and send text messages to another mobile phone in your network, to another mobile phone in another network, or to an e-mail recipient. You can also save a draft of your message in the **Outbox** folder for later use.

#### Create and send a text message



**Important:** Use this method when sending a message to recipients in the same wireless network. If the recipient has a different service provider, you must send the message as an e-mail (see "Create and send an e-mail message" on page 64).

- 1 From the Start screen, press **Menu**, then press **Select**.
- 2 Select **Text messages**, then select **Write message**.
- 3 Select either **Text** (up to 160 characters) or **Page** (message consists of phone number only).



**Note:** The ability to send a numerical page may be dependent on your wireless network. Please contact your service provider for more information on text messaging in your area.

- 4 Scroll to **Add number**, then press **Select**.
- 5 Enter the phone number of the recipient, then press **OK**.  
OR  
Press **Search**, highlight the desired number stored in your phone book, then press **Select**.
- 6 Press **Options**, scroll to **Enter text**, then press **Select**.
- 7 Enter your message.
  - For more information on how to enter text via traditional text entry, please see "Write using ABC and 123 modes" on page 37.
  - For more information about using predictive text, please see "Write with predictive text" on page 40



**Tip:** Since the network limits the number of characters in a message, a character counter appears in the upper right-hand corner of your phone's display.

- 8 To send the message, press **Options**, then select **Send**.

## USE OTHER OPTIONS

You may consider using the following as a shortcut for sending a new text message:

- 1 Enter the recipient's phone number from the keypad, then press **Options**.
- 2 Scroll to **Send message**, then press **Select**.

Continue the creation process as described above.

## View message options

The table below lists several options available while creating a text message. To view these options, press **Options** at the text entry screen.

Option	Description
Send	Sends the current text message to the recipient(s)
List recipients	Allows to you add or remove recipients to the message
Settings	Allows you to mark a message as urgent, to request a delivery receipt, or to specify a callback number
Save message	Saves the current message to the desired folder
Clear text	Clears the screen of all text and characters
Exit editor	Used to return to the Messages menu
Insert name, Insert number	Used to insert a phone book entry into the text message, or to enter the phone number directly.
Use template	Adds text from a template to the current message
Insert picture, Erase picture	Allows you to add a picture to the current message or erase a picture that you've already attached
Predictive text	Allows you to enable or disable predictive text entry. Also used to select language of dictionary used
Insert word, Edit word	Allows you to insert a word not found in the dictionary, or edit a word then add it to the dictionary
Insert symbol	Used to enter punctuation or special characters into the current text message.
Matches	Displays a list of other options for the word currently displayed by predictive text

## • USE MESSAGE TEMPLATES

Templates are short, pre-written messages which can be recalled and inserted into new text messages when you're short on time.

- 1 Create a new text message as described in steps 1 - 6 in the section, "Create and send a text message" on page 61.
- 2 Instead of entering your own message, press **Options**, scroll to **Use template**, then press **Select**.
- 3 Scroll to one of the available templates:

"Please call"	"I am late. I will be there at"
"I'm at home. Please call"	"See you in"
"I'm at work. Please call"	"See you at"
"I'm in a meeting, call me later at"	"Sorry, I can't help you on this."
"Meeting is canceled."	"I will be arriving at"

- 4 Press **Select** to enter the text into your new message.
  - 5 Complete the process described earlier to send your message.
- You can also create a new message while browsing the Templates folder.

- 1 Press **Menu 01-1-5 (Messages > Text messages > Templates)**.
- 2 Scroll to the desired template, then press **Select**.
- 3 Press **Options**, then select **Edit message** to modify the message or **Add number** to select a recipient.
- 4 From the message options list, select **Send** to send your message.

## • LEARN ABOUT E-MAIL TEXT MESSAGES

You can also use the Messages menu to write and send text messages to a person's Internet or corporate e-mail account or to phones in other networks.

### Create and send an e-mail message

Use the same procedure for creating and sending e-mail messages as found in the section, "Write a text message" on page 60. However, select **Add e-mail**, then enter the e-mail address (or press **Search** and recall an e-mail address stored in your phone book).

## 8

### Messages to phones in other networks

Most service providers now have the ability to route e-mail messages to your phone (appearing as text messages). The following are just a few examples of how your phone's e-mail address may appear:

```
2135551234@myserviceprovider.com  
username@serviceprovider.com  
2135551234@mobile.myserviceprovider.com
```


It is virtually impossible to send messages to phones outside your service provider's network using traditional text messaging. However, it is possible to send a text message as an e-mail to phones outside your service provider's network (provided the recipient's phone is capable of receiving e-mail text messages).

Follow the instructions, "Write a text message" on page 60 but select **Add e-mail**. Enter the e-mail address associated with the recipient's phone number (or press **Search** and recall the e-mail address stored in your phone book).




**Important:** This feature may require subscription to special services. Please check with your service provider for more information and for the e-mail address assigned to your phone.

## • PICTURE MESSAGES


 **Note:** This function can be used only if it is supported by your service provider. Only phones that offer picture message features can receive and display picture messages.

Your phone comes with 5 pre-loaded pictures and can also store any new pictures you create (using PC Suite) or receive. You can also overwrite any of the 5 pictures that come with your phone. Pictures can be attached to a message and sent via SMS to compatible phones. Picture messages behave the same as text messages, but pictures take up more space than text. Pictures are stored in the "Templates" folder (Messages - Templates).

 **Note:** You cannot send a picture message using e-mail SMS messages.

### Download pictures

Your phone can download pictures, or receive them from compatible phones via SMS to use in messages. You can also create pictures and send them to your phone using Nokia PC Suite.

 **Note:** This function can be used only if it is supported by your service provider. Only phones that offer picture message features can receive and display picture messages. Contact your service provider for details.

### When you receive a picture message

When you receive a picture SMS message, your phone beeps and **Message received** appears in the display.

- 1 Press **Show** to read the message (or press **Exit** to view the message later from your **Inbox**).
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.
- 3 Use the scroll keys to view the whole message if necessary.



**Tip:** Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you're finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

### TO SAVE THE PICTURE

If you'd like to save the picture to your Templates folder for later use:

- 1 Press **Options**, scroll to **Save picture**, then press **Select**.
- 2 Edit the name of the picture (if necessary), then press **OK**.



**Note:** If your templates folder is full of pictures, just scroll to the picture you'd like to replace and press **Select**.

## 8

### Compose and send a picture message

One picture message is the equivalent in size (and cost) of 3 text messages. When you attach a picture to a message, you'll have enough remaining space for about 121 characters in the message. If you try and attach a picture to a message which is almost full of text, a beep sounds and you're prompted to erase some text before proceeding.

- 1 Follow steps 1 - 6 on page 61, "Create and send a text message".
- 2 At the text entry screen, press **Options**. Scroll to **Attach picture** and press **Select**.



**Tip:** Attach pictures before adding text. You can then check remaining space for text in the upper right corner of the display.


- 3 Scroll to a picture and press **View**.
- 4 Press **Attach** to insert the picture into your message (or press **Back**, scroll to another picture, and press **View** again).
- 5 Once the picture is attached, enter the text of your message.
- 6 To send the picture message, press **Options**, scroll to **Send**, and press **Select**.



## PREVIEW, CHANGE, OR ERASE A PICTURE MESSAGE

- 1 After a picture has been attached to your message, press **Options** at the message edit screen.
- 2 Scroll to one of the following options and press **Select**.
  - a) **Preview** - Previews the attached message before sending. Press **Back** to return to the list of options.
  - b) **Change picture** - Takes you back to the picture list. Scroll to highlight a new picture, press **View** and then press **Attach** to replace the previous picture in your message.
  - c) **Erase picture** - Press **OK** to erase the picture from your message, or press **Back** to return to the list of options.

## • RECEIVE TEXT MESSAGES



When you receive a text message, the  indicator and the text: **(#) Message(s) received** appears on the screen (where # is the number of new messages received).

- 1 Press **Show** to read the message or press **Exit** to view it later.
- 2 While reading the message, press **Options** to view the list of message options, then press **Select** to choose the desired option.

## READ MESSAGES LATER

- 1 Press **Menu**, then select the **Messages** menu.
- 2 Scroll to **Inbox**, then press **Select**.
- 3 Scroll to the desired message, then press **Select** to read the message.



**Note:** The  icon in front of the message header indicates the message has not been read.  in front of the message header indicates you have already viewed the message.

## • RESPOND TO A TEXT MESSAGE

You have several options when reading a text message. Pressing **Options** displays the following list of choices:

Option	Description
Erase	Erases the current message
Reply	Allows you to reply to the current message
Save message	Saves current message to Archives folder
Edit	Used to edit message before saving or forwarding
Use number	Captures phone number in the message (or from the message sender) with the option to <b>Save</b> (as new phone book entry), <b>Add to name</b> , <b>Send message</b> , or <b>Call</b> .
Use Web link	Captures the URL in the message and allows you to go directly to that site (via the Minibrowser) or to save it as a bookmark
Save address	Captures an e-mail address in the message (or the sender of an e-mail text message)
Forward	Use to forward current message to another user
Move	Used to move message to user-defined folder
Rename	Used to rename existing message title as seen in the message list
Save picture	Used to save the picture from a picture message



**Note:** Some of these options may not be visible. For example, **Use Web link** appears only when a URL is present in an SMS message.


## • REPLY TO A MESSAGE

You can reply to a text message either by a traditional text message or by an e-mail message. The origin of the message or the sender's wireless network affects how you reply to the incoming message.

### Replying via SMS

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Reply** and press **Select**.
- 3 Scroll to one of the following reply types and press **Select**:
  - **Clear screen** - gives you an empty text buffer.
  - **Original text** - original message is included in the reply message.
  - **Template** - allows you to select a template from the **Templates** folder.
  - **Standard answer templates** (including: **Yes, No, OK, Thank you, Congrats, Happy birthday, I love you too, Hugs and kisses, Sorry, and Sorry, I'm late**).
- 4 After you write your reply, press **Options**, then select **Send**.

A copy of all sent messages remain in your Outbox, unless you turn this feature off in **Message settings**.

Press **Back** to return to the Messages menu, or press  to return to the Start screen.

### Replying to an e-mail message

Use the methods described above for replying to SMS messages sent from an e-mail address



**Note:** If the incoming e-mail message is improperly formatted, you may be required to re-enter the e-mail address. Press **Options**, then select **Add e-mail** to reenter the e-mail address.

## • ERASE MESSAGES

You have several options for erasing individual messages or erasing the contents of an entire folder. You may need to erase older or unwanted messages in order to free up your phone's memory for new messages.

### Learn about erase options

The **Messages** menu has an option that allows you to erase the entire contents of your folders as described below.

- **All read** - erases all read messages from all folders (unread messages in **Inbox** remain intact)
- **Inbox** - erases read messages in this folder (unread messages remain intact)
- **Outbox** - erases all messages in this folder
- **Archive** - erases all messages in this folder, plus user-defined folders

### Erasing messages in the message folders

- 1 At the Start screen, press **Menu 01-1-6 (Messages > Text messages > Erase messages)**.
- 2 Highlight the folder whose contents you wish erased and press **OK**.
- 3 Enter your security code (if prompted) and press **OK**.

### Erasing individual text messages

- 1 From the **Inbox**, **Outbox**, **Archive**, or from a user-defined folder, highlight the message you wish to erase.
- 2 Press **Options**, scroll to **Erase** and press **Select**.
- 3 Press **OK** to confirm your choice.

### Forward a message

You can forward any incoming text messages, whether they were sent as traditional text messages or as e-mail messages. You can forward a message to a single user or to a list of users.



**Tip:** When forwarding a message to multiple users, your recipient list can contain both phone numbers and e-mail addresses.

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Select **Add e-mail** or **Add number**, then address the message.  
For multiple recipients, press **Options** again, then add additional e-mail addresses or phone numbers.
- 4 Press **Options**, scroll to **Send**, then press **OK**.

If you want to edit the forwarded message, select **Edit text** from the options menu prior to sending the message.

## View a message's settings

You can assign several settings to the text messages (new messages, replies, or forwarded messages). The following settings are available from the message's **Options** menu:

- **Urgent** - sends the message marked *urgent*, and appears in recipient's **Inbox** with higher priority than other messages
- **Delivery note** - lets you know when your message has been delivered
- **Callback no.** - includes your number (or a number that you enter or recall from the phone book) in the body of the message

### ASSIGN MESSAGE OPTIONS


- 1 After entering text, press **Options**. Scroll to **Settings** and press **Select**.
- 2 Scroll to the desired setting, then press **Mark**.
- 3 Press **Done**, then press **Yes** to save changes to your message.
- 4 Scroll to **Send**, then press **Select** (or select a different menu option).

## Learn about message memory

Messages are stored in the following locations:

- **Inbox** - stores new messages and read messages

- **Outbox** - saves copies of all sent messages or messages waiting to be sent (in the event the network is temporarily unavailable)
- **Archive** - used to file read messages and sent messages for long-term storage
- **My folders** - used to create and organize your own folders for message storage

A blinking  icon indicates the text message memory is full. Before you can receive, save, or send any new messages, you must delete older messages from your **Inbox**, **Outbox**, or the **Archive** folder.

## 8

### • MESSAGE SETTINGS

You can specify several settings that affect the overall way your phone handles text messaging. Use the **Message settings** menu (Menu 01-1-9) to configure the following:

- **Sending options** - used to specify normal or urgent priority, request delivery notification, or specify that a callback number be sent automatically.
- **Other settings** - used to specify the font size used to display messages. Also used to configure how your phone automatically handles incoming messages when your **Inbox** or **Outbox** are full, and saving copies of sent messages automatically.

### • ORGANIZE TEXT MESSAGES USING FOLDERS

You have several options for storing and organizing your text messages. The following pages explain further about the various folder options.

- **Inbox** - Text messages you receive remain stored in your **Inbox** until you erase them or move them to the **Archive** folder, or to a custom folder that you create.
- **Outbox** - Messages that can't be sent immediately can be saved so

you can come back to it later. Your phone stores the message in the **Outbox**.

If you try to send a text message and the network is unavailable, the outgoing message will be saved in the **Outbox**.

### WORK WITH MESSAGES SAVED IN THE OUTBOX

- 1 From the **Text messages** menu, scroll to **Outbox** and press **Open**.
- 2 Scroll to the desired message, then press **Read**.
- 3 Press **Options**, then press **Resend** (or **Edit message** if the message was a saved draft).

From this point, you have several options, including:

- Select **Edit message** and continue working with the message.
- Scroll to **Add e-mail**, **Add number**, or **Add list** to add additional recipients.
- Scroll to **Send**, then press **Select** to send the message.

### Archive

When you select **Save message** from a text message's **Options** menu, the message can be moved to the **Archive** folder. Moving messages out of the **Inbox** frees up the phone's inbox for more incoming text messages.

When you create new picture messages using PC Suite, any messages sent to your phone via cable or IR are stored in the **Archives** folder as well.

 
## 9 Personalization



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

### • LEARN ABOUT PROFILES

A **profile** refers to a group of settings you can use to customize the way your phone works. You can use the existing profiles, or you can customize a profile to suit your own preferences.

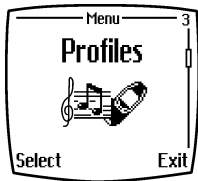




Some of the items you can customize are:

- Ringing options and vibrating alert
- Ringing tones and ringing volume
- Keypad and message alert tones
- Warning and game tones

Your phone comes with five profiles: **Normal** (default setting), **Silent**, **Meeting**, **Outdoor**, and **Pager**.

### • SELECT A DIFFERENT PROFILE

#### QUICK METHOD

- 1 Press the power key  briefly.
- 2 Use  and  to scroll to the profile you want to use.
- 3 Press **OK** to select a profile.

#### USE PROFILES MENU

- 1 Press **Menu-3 (Profiles)**.
- 2 Scroll to the profile you want to use, then press **Select**.
- 3 Press **Select** again to choose the highlighted profile.



## • USE A TIMED PROFILE

When selecting a different profile, you can specify an “expiration time” for the new profile. At the time you specify, your phone returns to the previous profile. Using timed profiles can help prevent missed calls.

For example: You're required to use the Silent profile before an event starts, but forget to return to the Normal profile until hours after the event is over. During this time, you've missed several calls because your phone's ringing tone was silent. A timed profile automatically returns your phone to the default profile at a time you specify.



**Tip:** Timed profiles can be set up to 24 hours in advance.

- 1 At the Start screen, press **Menu-3 (Profiles)**.
- 2 Scroll to the profile you wish to activate and set for timed expiration, then press **Select**.
- 3 Scroll to **Timed** and press **Select**.
- 4 Enter the time for the profile to expire and press **OK** (you may also be required to select either **am** or **pm**).

The profile you've set for expiration is now active and appears in the Start screen along with a small “clock” icon.

## • CUSTOMIZE A PROFILE

- 1 Press **Menu-3 (Profiles)**.
- 2 Scroll to the profile you want to customize, then press **Select**.
- 3 Scroll to **Customize**, then press **Select**.

The following sections describe each of the options you can customize.

### Set ringing options

You can choose the way your phone rings to notify you of incoming calls. This setting does not affect text message alert tones.

- 1 From a profile's **Customize** menu, scroll to **Ringing options**, then press **Select**.
- 2 Scroll to one of the ringing options described below, then press **Select**.

Option	Description
Ring	The phone rings normally.
Ascending	Ring volume begins softly, then increases in volume if the phone is not answered.
Ring once	The phone rings once to indicate an incoming call.
Beep once	The phone beeps once to indicate an incoming call.
Silent	The phone makes no sound.

## Set a ringing tone

A **ringing tone** is the melody your phone plays when you receive a call. You can set the ringing tone to a specific sound effect, or to a melody to personalize how the phone rings.



**Important:** The **Silent** or **Beep once** ringing option disables any melody you may chose. To hear a ringing tone while editing a profile, make sure one of the other ringing options is selected.

- 1 From a profile's **Customize** menu, scroll to **Ringing tone** and press **Select**.
- 2 Scroll through the options and listen. When you hear the ringing tone you want to use, press **Select**.

## Set ringing volume

You can set the default ringing volume for incoming voice calls and message alert tones.

- 1 From a profile's **Customize** menu, scroll to **Ringing volume** and press **Select**.

- 2 Scroll to an option and listen. When you hear the ringing volume you wish to use, press **Select**.

## Set a vibrating alert

Your phone has the ability to vibrate, indicating an incoming call (in addition to playing a ringing tone). Likewise, enabling a vibrating alert while selecting the Silent ringing option causes your phone to only to vibrate on incoming call.

- 1 From the selected profile's **Customize** menu, scroll to **Vibrating alert** and press **Select**.
- 2 Scroll to **On** and press **Select**.



**Important:** The phone does not vibrate when it is connected to or placed in any charging device.

## Set message alert tone

Several message alert tone options are available to indicate incoming text messages.

- 1 From the selected profile's **Customize** menu, scroll to **Message alert tone** and press **Select**.
- 2 Scroll through the options and listen. When you hear the message alert tone you want to use, press **Select**.

## Set keypad tones

Use the **Keypad tones** option to set the volume of the tones heard when pressing your phone's keys.

- 1 From the selected profile's **Customize** menu, scroll to **Keypad tones** and press **Select**.
- 2 Scroll to one of the levels and press **Select**.



**Important:** If you choose **Off**, no keypad tones are heard. The **Silent** profile automatically turns keypad tones off.

## Set warning and game tones

You can customize the way your phone plays warning tones and the tones used for the games. **Warning tones** include the tones played when there is an error, during confirmations, when a battery is low, and when you need to recharge the battery.

- 1 From the selected profile's **Customize** menu, scroll to **Warning and game tones** and press **Select**.
- 2 Scroll to **On** and press **Select**.

If you do not want to use warning or game tones, you can turn them off by scrolling to **Off** and pressing **Select**.

## 9

### • RENAME PROFILES

You can rename any of the profiles except **Normal**. You may want to use your own name for one of the profiles. When you select this profile, your name appears on the Start screen.

- 1 Press **Menu-3 (Profiles)**.
- 2 Scroll to the desired profile and press **Select**.
- 3 Select **Customize**, scroll to **Profile name** and press **Select**.
- 4 Enter the new name and press **OK**.



**Note:** You cannot rename the **Normal** profile.

## Select and customize an accessory profile



**Note:** You must have an accessory (such as a loopset) attached to your phone prior to selecting the **Accessory settings** menu.

To select and customize profiles for use with the headset, handsfree device (carkit), loopset, and TTY/TDD:

- 1 Press **Menu 4-4 (Settings > Accessory settings)**.

2 Scroll to one of the following Accessory profiles and press **Select**.

- **Handsfree**
- **Headset**
- **Loopset**
- **TTY**

#### **IF YOU SELECTED HANDSFREE**

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when your phone is connected to a carkit.
- **Automatic answer** - Calls are answered automatically after 1 ring when connected to a car kit. Scroll to **On** or **Off** and press **Select**.
- **Lights** - Choose to keep the phone lights always on, or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

9

#### **IF YOU SELECTED HEADSET**

The **Default profile** and **Automatic answer** options are your available choices. Please refer to "If you selected Handsfree" for more information.

#### **IF YOU SELECTED LOOPSET**

The **Default profile** and **Automatic answer** options are available. Please refer to "If you selected Handsfree" for a description of these options. In addition, the following option is available:

- **Use loopset** - Enable use of the LPS-1 mobile inductive loopset. Scroll to **Yes** or **No** and press **Select**.

#### **IF YOU SELECTED TTY/TDD**

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Use TTY** - Enable the use of a TTY/TDD device. Scroll to **Yes** or **No** and press **Select**.



**Note:** If the loopset is enabled, you'll be asked to disable the loopset before enabling TTY/TDD. Press **Yes** to disable the loopset (thus enabling TTY/TDD). Press **No** to leave the loopset enabled.

## • DOWNLOAD A RINGING TONE

Your phone can store up to ten new ringing tones (sent from an Internet Web site as an SMS or created using Nokia PC Suite).

### Play, save, or erase a ringing tone

Once your phone receives a new ringing tone, the phone displays the message **Ringing tone received**.

- 1 Press **Options**, then choose **Playback, Save, or Erase**.
- 2 Press **OK**.

If you chose to save the new ringing tone, it becomes part of the ringing tone list available to you when you customize a profile (see "Customize a profile" on page 75).

### Use PC Composer

You can use Nokia PC Suite's PC Composer to create new ringing tones and send them to your phone. For more information, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.


### Receive ringing tones from Minibrowser

You may also receive ringing tones from the Internet while in a Minibrowser session. To save your tone, follow the on-screen prompts. Please "Minibrowser" on page 131 for more information and availability of this service.

## • SET THE DISPLAY LANGUAGE

You can set your phone to display information in different languages.

 
Your possible choices are English, French, Spanish, Portuguese, Chinese (traditional), Chinese (simplified), and Hebrew.

 **Note:** Some languages may vary due to regional differences. All these languages may not be available in your phone.

- 1 Press Menu 4-2-1 (Settings > Phone settings > Language).
- 2 Scroll to the language you want to use and press Select.


## • SET THE CLOCK

Your phone contains a real-time clock that can be set two different ways: the clock can use the time and date information provided by the wireless system, or it can be set manually.

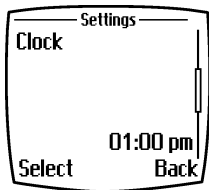

9

The clock will display the current time and date on the Start screen. You can also choose to hide the clock if you prefer. Please see "Displaying or hiding the clock" on page 82."

 **Note:** Your phone also has an alarm clock. See "Use the alarm clock" on page 114 for more information.

By default, the clock gets its information from the wireless network. If you wish to override the network clock, do the following:

### Manually setting the clock

- 1 Press Menu 4-3-1 (Settings > Time settings > Clock).
- 2 Scroll to Set the time, then press Select.
- 3 Enter the current time, then press Select. For example, to enter 7:30, enter 0730.
- 4 Scroll to am or pm, then press Select.


### Selecting time format


- 1 Press Menu 4-3-1 (Settings > Time settings > Clock).

- 2 Scroll to **Time format**, then press **Select**.
- 3 Scroll to either **24-hour** or **am/pm**, then press **Select**.

## Allowing the network to set the clock

- 1 Press **Menu 4-3-2** (**Settings > Time settings > Auto update of date & time**).
- 2 Scroll to **On** (or **Confirm first**), then press **Select**.

 
 **Important:** If you use the **Auto update...** option while outside your digital network, you may be prompted to enter your own time manually (see above). Network time will replace the time and date you set once you re-enter your digital network.

 **Note:** If your battery has been removed or has drained outside the digital network, you may be prompted to enter your own time (once the battery is replaced/recharged, and you're still outside of the digital network).

9


## Displaying or hiding the clock

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Depending on the current settings, either **Hide clock** or **Show clock** is highlighted.
- 3 Press **Select**.

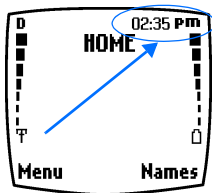

## • CUSTOMIZE THE WELCOME SCREEN

 You can set your phone to display a brief message each time you switch on your phone. The message can include your name or a reminder and can be up to 44 characters long.

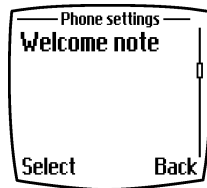



## Create a startup message

- 1 Press **Menu 4-2-3** (Settings > Phone settings > Welcome note).
- 2 Enter the text of the startup message (using traditional text entry).
- 3 Press **Options**, then select **Save**.

## • LEARN ABOUT VOICE COMMANDS

The voice command feature provides handsfree operation of certain menu options and commands. Just like voice dialing, you must create a voice "tag" for the commands you want to use (please read "Assign a voice tag to a phone number" on page 94 for detailed information on voice tags).

The following is a list of menu options for use with voice commands:

9

Option	Description
Profiles	Used to switch between the available profiles (Normal, Silent, Meeting, Outdoor, and Pager)
Voice mailbox	Used to execute the command <b>Call voice mailbox</b>
Infrared	Used to enable your phone's IR port
Voice recorder	Used to start recording a memo
Call log	Used to access the Call log menu


## Create a voice tag for a menu option



**Important:** Please see "Important notes about voice tags" on page 94 for more information on creating voice tags.

- 1 Press **Menu 7-2** (Voice > Voice commands).
- 2 Scroll to the menu option you wish to tag, then press **Select**.
- 3 Press **Options**, then select **Add command**.

- 4 Press **Start**, then speak the voice tag clearly into the microphone.

The phone replays then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

## Use a voice command



**Warning!** Do not use voice command in an emergency situation. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

- 1 At the **Start** screen, press and hold **Names** for one to two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.

9

You have two other options for initiating a voice command:

- Press and hold the volume down key for one to two seconds
- Pressing the headset button momentarily at the **Start** screen has the same effect as pressing **Names** for two seconds. The alert tones plays through the headset.

Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), re-record a voice tag, or erase an existing tag.

- 1 Press **Menu 7-2 (Voice > Voice commands)**.
- 2 Scroll to the menu option you wish to tag, then press **Select**.
- 3 Press **Options**, scroll to either **Playback**, **Change**, or **Erase**, and press **Select**.



**Note:** If you chose **Change**, press **Start** to begin rerecording. The new tag that is recorded replaces the old information.

# 10 Advanced features



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

This chapter describes advanced calling features such as conference calling, call waiting, and the use of calling cards for calls. Not all the features described here are available in all wireless network systems.

## • VIEW IN-CALL OPTIONS

Your phone allows you to use a number of features during a call. These features are known as **in-call options**.



**Note:** Some in-call options are network services features. Please contact your service provider for information and availability.

You cannot use all these options at all times. This section tells you when you can use a certain option.

- 1 To access an option during a call, press **Options**.
- 2 Scroll to one of the following options, then press **Select**:

Option	Description
Mute/End mute	Used to disable or enable the microphone. If mute has already been selected, <b>End mute</b> is displayed. These options affect any accessories connected to the phone (headset, car kit).
New call	Used to initiate a new call while in a call (call-waiting and three-way calling)
End all calls	Used to end all active calls (call-waiting or three-way calling)

Option	Description
Touch tones	Used to manually enter a touch tone string (series of tones) or search for a string in your phone
Names	Used to view phone book. Press <b>Back</b> to close phone book and return to call.
Menu	Used to display main menu

## • USE CALL FORWARDING

When you use **call forwarding**, your network redirects incoming calls to another phone number. Using this feature helps to prevent the missing of important phone calls.

10



**Important:** Call forwarding is a network-dependent feature and may not work the same in all networks. Contact your service provider for availability and for your network's feature codes.

### Learn about call forwarding feature codes

Your network requires separate codes for activating and cancelling the various types of call forwarding. Your carrier can provide you with the necessary feature codes for these network services.

Once you store these feature codes in your phone, they are sent automatically to the network when you select one of the call forwarding options from your phone's menu.

Your phone can store the following types of feature codes:


Feature code type	Description
Forward all calls	Forwards all incoming calls to the number you specify

Feature code type	Description
Forward if busy	Forward incoming calls when you're in a call
Forward if not answered	Forwards incoming calls to another number when you are unable to answer
Forward if out of reach	Forwards incoming calls to another number when you're out of the network or when the phone is switched off
Forward all data calls	Forwards all incoming data calls to the number you specify
Cancel all call forwarding	Cancels any and all call forwarding options you may have set

## Store a feature code

- 1 Press **Menu 4-6-5** (**Settings > Network services > Network feature setting**). The **Feature code** field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (example \*90 for activating **Forward if busy**), then press **OK**.
- 3 Press **Select** when **Call forwarding** is displayed.
- 4 Scroll to the type of forwarding that matches the feature code you entered (example: **Forward if busy**), then press **Select**.
- 5 Select **Activate**.

The **Activate** feature code is now stored in your phone, and you are returned to the **Feature code** field.

Continue entering other feature codes (example \*900 to cancel **Forward if busy**), or press  to return to the Start screen.



**Important:** Once you enter a network feature code successfully the feature becomes visible in the **Network services** menu.

## Activate/cancel call forwarding

After you store the correct feature codes, you can activate (or cancel) call forwarding as follows:

- 1 Press Menu 4-6-2 (Settings > Network services > Call forwarding).
- 2 Scroll to the desired call forwarding option, then press Select.
- 3 Highlight **Activate** and press Select.
- 4 Enter the number to which you want your calls forwarded (or press **Search** to recall a number from the phone book).
- 5 Press OK.


Your phone calls the network to activate (or cancel) the feature you've requested. The network sends a confirmation note when the feature has been activated (or cancelled) successfully.

## 10


### • USE CALL WAITING

This network service lets you receive an incoming call when you're already in a call. When you receive an incoming call, your phone displays the caller's phone number (or the caller's entry in your phone book). The phone also beeps, notifying you of the incoming call.

#### Answering a waiting call


Press the  key (or press **Answer**) to automatically place the current active call on hold and answer the new call.

#### Switch between the two calls

Accepting the waiting call puts the your first caller on hold. To put the second caller on hold and reconnect with the first caller, press .

#### End the active call

To end the active call, simply allow the other party to hang up; the call on hold then becomes the active call. OR:




- 1 Press  to terminate the active call.
- 2 The network redials your phone with the call on hold. Answer this as you would any normal incoming call.

## • MAKE A CONFERENCE CALL

This feature allows you to talk to two people at the same time. Conference calling is a network-dependent feature.




**Note:** Check with your service provider to make sure this service is available in your network.


- 1 Make a call to the first participant as usual. When you're ready to place a call to the next party,
- 2 Press Options, then press New call.
- 3 Enter the number and press  (or press Search to recall the number from the phone book).
- 4 Press  again to connect both parties.
- 5 To end the call, press . This action disconnects both parties.

10

### End calls

To end a conference call (disconnect with all callers), press . Or you can also press Options, then select End all calls.

### Disconnect second party

While all three parties are connected, pressing the  key disconnects the second caller, keeping the first party's call active.

### Disconnect first party

If you wish to disconnect with the first party and remain connected to the second party, have the first party terminate the call on his/her end.

## • SEND OWN CALLER ID WITH NEXT CALL

This feature allows you to block caller ID when you call someone (your number will not be displayed on their caller ID). This feature may only be effective when calling a number equipped with caller ID.



**Note:** This feature is available only when supported by the wireless network and may not function if you are roaming.



**Important:** This feature works on a call-by-call basis. You must enable this feature each time you want to block the sending of your own number to the recipient's caller ID.

### Store the feature codes

Before you can use the **Send own caller ID with next call** feature, you must store the feature codes for activating this feature. Once the code is stored in your phone, it is sent automatically to the network when you select this option from your phone's menu.

- 1 Press Menu 4-6-5 (Settings > Network services > Network feature setting). The Feature code field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (example \*67 for activating **Send own caller ID with next call**), then press **OK**.
- 3 Select **No** to assign the activation code.

### Place a call without sending your number

- 1 Press Menu 4-6-4 (Settings > Network services > Send own caller ID with next call).
- 2 Scroll to **No**, then press **Select**.
- 3 Enter the desired phone number, then press **OK** (or press **Search** to recall a phone number from the phone book).

The phone automatically inserts the feature code into the dialing string and dials the phone number. The person you're calling cannot see your phone number on their caller ID.




## • USE AUTOMATIC REDIAL

There are times when you may not be able to place a call (example: due to the high volume of traffic on the wireless network). When the wireless network is busy or unavailable, **Automatic redial** instructs your phone to retry the call.

### ACTIVATE AUTOMATIC REDIAL

- 1 Press Menu 4-1-1 (Settings > Call settings > Automatic redial).
- 2 Scroll to **On** and press **Select**.

 
If the system is busy, your phone makes three additional call attempts. If you want to stop the automatic redial process before the last attempt, press .



**Important:** This feature does not automatically retry a number when the number you are calling is busy.

## • CALLING CARD

If you wish to use a calling card for long distance calls, you must first save your calling card information into your phone. Your phone is equipped to handle up to four calling cards.

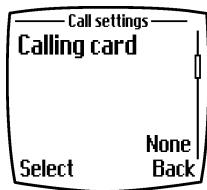

### Saving calling card information

- 1 Press Menu 4-1-6 (Settings > Call settings > Calling card).
- 2 Enter your security code, then press **OK**.
- 3 Scroll to one of the four memory locations, then press **Options**.
- 4 Scroll to **Edit**, then press **OK**.
- 5 Select **Dialing sequence**. Scroll to one of the three sequence types as

described in the following table, then press **Select**.

Dialing sequence	Use for cards that require you to:	Cards using this sequence
Access number + phone number + card number	Dial 1-800 access number, then phone number, then card number (+ PIN if required)	MCI, AT&T True Choice, Sprint Canada, Unitel
Access number + card number + phone number	Dial 1-800 access number, then card number (+ PIN if required), then phone number	networkMCI, WorldPhone MCI, AT&T
Prefix + phone number + card number	Dial the prefix (any numbers that must precede the phone number) and phone number you want to dial, then card number (+ PIN if required)	Verizon, PacBell, AT&T, Stentor

10

- 6 Enter the required information (access number or prefix and card number). Press **OK** to confirm your entries.
- 7 Press **OK** to save your changes.
- 8 Scroll to **Card name**, then press **Select**. Enter the card name, then press **OK**.




**Note:** This procedure might not work with all calling cards. Please look at the back of your calling card or contact your long distance company for more information.

## Choosing a calling card to use

Use Menu 4-1-6 (**Settings > Call settings > Calling card**) to select a calling card to use. You will be required to enter your security code.

## Making calling card calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

- 1 Enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call. See your calling card for instructions.
- 2 Press and hold  for a few seconds until your phone displays **Card call**.
- 3 Your phone displays **Wait for tone**, then press **OK**. When you hear the tone or system message, press **OK**.
- 4 Your phone displays **Wait for tone**, press **OK** again. When you hear the tone or system message, press **OK**.

## • VOICE DIALING

You can dial up to 25 of your phone book's stored numbers using the voice dialing feature. Before you can place a call using voice dialing, you must first assign a voice "tag" to the number.

10

Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, hold the phone in the normal position near to your ear.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.





**Important:** You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

## Assign a voice tag to a phone number

You must record a voice "tag" (up to two seconds) for a phone number before you can use the voice dialing feature to dial it.


### ADD A VOICE TAG TO A PHONE BOOK ENTRY

- 1 At the Start screen, press  or . Scroll to the desired phone book entry, and press **Select**.
- 2 Scroll to the phone number you want to tag and press **Options**.
- 3 Scroll to **Add voice tag** and press **Select**. (The phone displays **Press Start, then speak after the tone**).
- 4 Press **Start** and after the tone, speak the voice tag clearly into the phone's microphone.



**Note:** Your phone informs you if recording is not successful. Press **OK** to try again or **Back** to return to phone book.

10

The message **Voice tag saved** is displayed upon completion of the recording process. The  icon next to a phone number denotes that a voice tag exists for this number.

### IMPORTANT NOTES ABOUT VOICE TAGS

- The recording process stops automatically; pressing **Quit** aborts the recording attempt.
- Voice tags are sensitive to background noise. Record tags or use voice dialing in a quiet environment.
- Unique tags are recognized more accurately. Consider using first and last name or first name, last name, and number type (e.g. mobile, home, work, etc.) when tagging a number. For example, "John Smith, work."
- Avoid pauses or silence as you record the voice tag.
- If the voice tag memory is full, the phone displays **Erase an existing voice tag?** Press **OK**, scroll to locate a tag to erase, then press **Erase**.
- Deleting a phone number erases any associated voice tags.



**Warning!** Do not use a voice tag for dialing emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

## Dialing a number using voice dialing



**Note:** You must say the name exactly as you said it when you recorded it.

- 1 At the Start screen, press and hold **Names** for two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.



**Note:** If the voice tag is not recognized by the phone (or if you fail to speak a tag within three seconds after the tone), the message **Name not recognized** is displayed, and you are returned to the Start screen.

- 3 When the voice tag is recognized:
  - the phone book entry will be displayed on the screen for three seconds AND
  - the voice tag is replayed (via the ear piece).

After three seconds, the number is dialed.

You have two other options for initiating voice dialing:

- Press and hold the volume down key for one to two seconds
- Pressing the headset button momentarily at the Start screen has the same effect as pressing **Names** for two seconds. The alert tones plays through the headset.

Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), re-record a voice tag, or erase an existing tag.

- 1 At the Start screen, press **Names**. Scroll to **Voice tags**, then press **Select**.



**Note:** This option displays a list of only those names/numbers that have been assigned a voice tag.

- 2 Scroll to the phone number whose voice tag you want to edit, then press **Options**.


- 3 Scroll to either **Playback**, **Change**, or **Erase**, and press **Select**.




**Note:** If you chose **Change**, press **Start** to begin rerecording. The new tag that is recorded replaces the old information.

## • 1-TOUCH DIALING

When a phone number is assigned to one of the 1-touch dialing locations (2 - 9), you can call the phone number in either of the following ways:

- Press the number key that corresponds to a 1-touch dialing location and press .
- Press and hold the number key that corresponds to a 1-touch dialing location until the call is initiated.

 is pre-assigned to dial your voice mailbox number and cannot be reassigned.

### Set up 1-touch dialing

If you want to assign a number to one of the number keys (2-9), do the following:

- 1 Press **Names**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to the desired number key (keys **2** through **9**), and press **Assign**.



**Note:** If a phone number is already assigned to a key, the phone book entry name is displayed and the left selection key is **Options**.

- 4 Enter the phone number manually, or press **Search** to locate a phone book entry.
- 5 Select the desired name or entry from the phone book. If more than one number is stored for that entry, scroll to the desired number and press **Select**.

## 1-touch dialing options

You can change or erase (clear) numbers assigned to 1-touch dialing or view the number assigned to a key from the 1-touch dialing menu.

- 1 Press **Names**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to a key that is assigned a number, then press **Options**.
- 4 Scroll to either **View number**, **Change**, or **Erase**, then press **Select**.



## • LEARN ABOUT CALLER GROUPS

10

You can “group” phone book entries using one of the existing categories (**Family**, **VIP**, **Friends**, **Business**, and **Other**). Each group has its own unique ringing tone and logo.

When you receive a call from a number assigned to a caller group, the ringing tone for that caller group is used, and the caller group's logo is displayed on the screen. This feature can help you identify incoming calls more quickly.

### ADD A NUMBER TO A CALLER GROUP

- 1 At the Start screen, press  or . Scroll to the desired phone book entry, and press **Select**.
- 2 Scroll to the phone number you want to use and press **Options**.
- 3 Scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the desired caller group (for example **Friends**), and press **Assign**.

## SELECT A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Names**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Options**.
- 4 Scroll to one of the following options and press **Select**:

Option	Description
Rename group	Used to rename the selected caller group
Group ringing tone	Used to select a ringing tone for this group. Scroll through list of ringing tones, then press <b>OK</b>
Group graphic	Used to select the graphic to be displayed with group ringing tone. Select <b>On</b> , <b>Off</b> , <b>View</b> , or <b>Send graphic</b> (sent via SMS).
Members	Used to assign other phone book entries to the selected caller group



**Note:** If you select **Send graphic**, enter the recipient's phone number (or recall it from phone book) and press **OK**.



**Important:** You can also receive graphics via SMS. Once you receive a new graphic, scroll to **View graphic** or **Save graphic** and press **OK**. If you selected **Save graphic**, select the desired caller group for the new graphic and press **OK**.

## • USE TOUCH TONES

Touch tones (sometimes known as DTMF tones) are those tones produced when you press the keys on your phone's keypad. You can use touch tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.



Touch tones are sent during an active call. You can send them manually from your phone's keypad, or send them automatically by saving them in your phone.



**Warning:** If you send touch tones while in analog mode, be careful not to send confidential information. Check your phone's display for the **D** icon, indicating the presence of a digital network

## Set manual touch tone options

You may need to customize how your phone sends the touch tones for optimum performance with the system you're calling.

### SET TOUCH TONE TYPE

- 1 Press Menu 4-2-2-1 (Settings > Phone settings > Touch tones > Manual touch tones).
- 2 Select one of the following options, then press Select:

Option	Description
<b>Continuous</b>	Tone sounds for as long as you press and hold a key
<b>Fixed</b>	Used to send tones of the duration you specify in the Touch tone length option.
<b>Off</b>	Used to turn off tones. No tones are sent when you press a key.

### SET FIXED TOUCH TONE LENGTH

You can also specify touch tone length when using the Fixed option.

- 1 Press Menu 4-2-2-2 (Settings > Phone settings > Touch tones > Touch tone length).
- 2 Scroll to Short (0.1 seconds) or Long (0.5 seconds), then press Select.

## Send touch tone string manually

Before you begin, make sure that **Manual touch tones** is not set to **Off**.

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones** and press **Select**.
- 2 Enter the touch tone string from your phone's keypad as required by the service you're calling, then press **Tones**.

## Send touch tone string from phone book

You can save a touch tone string as a separate phone book entry, then recall and send the string using the in-call menu option **Touch tones**.

### SAVE TOUCH TONES AS A PHONE BOOK ENTRY


Save the touch tone string (including any pause or wait characters that may be required) to a new entry in the phone book. For more information on saving names and number to your phone book, see "Saving names and numbers" on page 44.

### RECALL TOUCH TONE STRING FROM THE PHONE BOOK

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones** and press **Select**.
- 2 Press **Search**, scroll to the touch tone string entry in your phone book, then press **OK**.
- 3 Press **Tones** to send the touch tones.

## Store touch tone string with phone number

You can store touch tone strings (for example: voice mailbox number and PIN code) as a part of a phone book entry. Once the string is stored, it is sent automatically (instead of entering the touch tones from the keypad).

- 1 Enter the phone number of the automated service.
- 2 Use the  key to enter a w or p after the number.
  - w (wait) - The phone waits for you to press **Send**. When you press **Send**, the phone sends the touch tone string you've saved.
  - p (pause) - The phone pauses for 2.5 seconds, then automatically sends the touch tone string you've saved.

- 3 Enter the touch tone string after the **w** or **p** characters as required by the service.

Example: 214-555-1234w1234#p5678#

- 4 Save this phone book entry as you normally would.

Once the touch tone string is stored with the phone number, you can now call the number and have the touch tone strings sent automatically.

## • LINK PHONE BOOK ENTRIES

This feature allows you to store a phone number in one phone book location and link it to another phone book entry.

For example, linking the phone number of an automated service (example: automated banking service) with a touch tone string entry in your phone book (example: account and PIN numbers) automatically recalls and sends the touch tone string when you call the service.

10

### USE LINKING OPTIONS

- 1 Store the touch tone string into your phone book.
- 2 Assign the phone book entry with the touch tones to a one-touch dialing location (example: location 3). For more information on 1-touch dialing, see "1-touch dialing" on page 96.
- 3 Edit the automated service's phone number by adding +n to the end of the phone number (where n is the 1-touch dialing location).

Example: 214-555-1234+3

- 4 Press **OK** to save your changes.
- 5 Dial the automated service's number from your phone book. Your phone automatically sends the touch tones when the call connects.



**Important:** You may need to enter a pause (**p**) before the + in order to account for delays in the automated system answering your call (example: 214-555-1234p+3).

## • LEARN ABOUT VOICE RECORDER

Recorder allows you record audio "memos" and store them in your phone. Use this feature to record things like phone numbers and personal memos.

Total time available for all memos is three minutes (up to 180 seconds). Maximum length of a single message is up to 60 seconds.

The maximum number and length of remaining memos depends on how much memory is still available. A count-down timer is displayed while recording and shows remaining record time.

### Record a memo

- 1 Press Menu 7-3-1 (Voice > Voice recorder > Record).
- 2 After the tone, begin recording your memo.
- 3 When you finish recording, press **Stop**.
- 4 Enter the subject of the voice memo, then press **OK**.

#### NOTES

- Pressing **Back** instead of entering a subject discards the memo without saving.
- Pressing **OK** without entering a subject assigns the default name (**Recording**) to the memo.

### Work with recorded memos


To view a list of recorded memos:

- 1 Press Menu 7-3-2 (Voice > Voice recorder > Recordings list).
- 2 Scroll through the list of memos, then press **Options**.

The following options are available:

Option	Description
Playback	Plays back the selected message through the earpiece (phone or headset).
Edit title	Used to edit the memo's subject, or to rename memo.
Erase	Erases selected voice memo.
Add alarm/ Alarm	Used to add (edit, or remove) a reminder alarm for the memo.

 
## Notes about voice recorder

- An incoming call interrupts voice memo playback. When call is complete, the phone returns to the **Options** menu for the selected voice memo.
- An incoming call stops voice memo recording. The recorded memo is automatically saved with the default name.
- You can enter numbers from the keypad during memo playback (example: when voice memo contains a phone number). Pressing  interrupts voice memo playback and places the call.

# 11 Security and System settings

Your phone has a variety of security features that help prevent some of the following:

- Placing accidental or unintentional calls.
- Unauthorized use of your phone.
- Placing and accepting calls from certain phone numbers
- Accidental erasing of information or restoring factory settings.

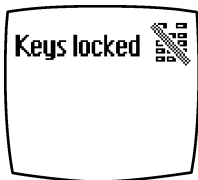

**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

## • LOCK KEYPAD (KEYGUARD)

11

With keypad lock (Keyguard) you can temporarily lock your phone's keypad and prevent the accidental placing of calls or pressing of the keypad (for example, when the phone is in your pocket or in your purse).

### Activate/deactivate Keyguard

Press **Menu** followed by (within three seconds) to activate Keyguard.



**Important:** appears at the top of the display. The left softkey is also labeled **Unlock**.

### UNLOCK KEYPAD

Press **Menu** followed by (within three seconds) to deactivate Keyguard and unlock your phone's keypad.

It is possible to answer a call, even though Keyguard is activated. Press to answer the call. When the call has ended, the keypad remains locked.



**Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## • SECURITY CODE

Your phone prompts you for a five-digit **security code** for certain features and commands. Access is granted only after the correct security code has been entered successfully.

Your phone's default security code is **12345**. It's highly recommended that you change this code at once, write it down, and store it in a safe place away from your phone.



**Important:** When entering your security code, **\*\*\*\*\*** is displayed on the screen to keep others from viewing your code.

### Correct entry errors


You can erase the last entered digit by pressing **Clear** (or by pressing and holding **Clear** to delete all the digits more quickly). Enter the correct code or press **Back** to exit.

If you enter an incorrect security code (**Code error** will appear) five times in a row, your phone won't accept any entries for the next five minutes.

### Change your security code

 
- 1 Press **Menu 4-5-2-4** (**Settings > Security settings > Access codes > Change security code**) and press **Select**.
- 2 Enter existing (or default) security code and press **OK**.
- 3 Enter new five-digit security code and press **OK**.
- 4 Reenter your new five-digit security code for verification, then press **OK**.

Your phone displays the confirmation message **Security code changed**.

-  **Important:** If you change your security code and don't remember the new code, contact your service provider. Once you change your security code, the default code is no longer valid.



## • PHONE LOCK

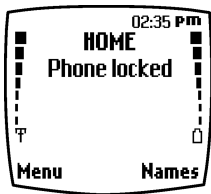This feature protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the phone. When phone lock is activated, **Phone locked** is displayed each time you turn your phone on or off.



After pressing either **Names** or **Menu**, you must enter your lock code. Once your lock code has been accepted, your phone will function normally.

11

-  **Important:** **Call not allowed** is displayed if you attempt to place a call while phone is locked.
-  **Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## Learn about the lock code

In addition to a security code, your phone also has a **lock code**. You'll need the lock code to activate and deactivate the phone lock feature, or to change your lock code.

The default lock code is **1234**. If you enter an incorrect lock code five times in a row, your phone will prompt you for the security code (see page 105).

### CHANGE YOUR LOCK CODE

- 1 Enter **Menu 4-5-2-3** (**Settings > Security settings > Access codes > Change lock code**) and press **Select**.



- 2 Enter current (or default) lock code and press **OK**.
- 3 Enter new lock code and press **OK**.
- 4 Reenter new lock code for verification, then press **OK**.



**Important:** When you change your lock code, make sure you store it in a safe place, away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

## Activating and deactivating phone lock

- 1 Press Menu 4-5-2-1 (Settings > Security settings > Access codes > Phone lock).
- 2 Enter the lock code, then press **OK**.
- 3 Scroll to **On** or **Off**, then press **Select**.
- 4 Turn your phone off and back on to complete the phone lock activation (or deactivation).

## Answer a call with phone lock on

Press  or **Answer**.

## Allowed number when phone locked

When phone lock is on, the only outgoing calls that can be made are to the following numbers:




- The emergency number programmed into your phone (for example: 911 or other official emergency number).
- The number stored in the **Allowed number when phone locked** location.


## Store the unlocked phone number

- 1 Press Menu 4-5-2-2 (Settings > Security settings > Access codes > Allowed number when phone locked).
- 2 Enter lock code and press **OK**.

- 3 Enter phone number (or press **Search** and recall the number from the phone book), then press **Select**.

 
## Calling the allowed phone number

At the Start screen, press  or . The number is displayed. Press  to place the call.

 **Important:** Your phone must be locked via the phone lock to use this feature.

## • CALL RESTRICTIONS

This feature allows you to restrict incoming and outgoing calls. You can restrict all calls, or create a custom list of numbers or area codes to restrict.

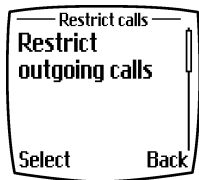


### Learn about restriction options

When you select either **Restrict outgoing calls** or **Restrict incoming calls** from the **Security settings** options, your options are:

- **Select** - Used to display a list of all available restricted numbers. Select those numbers you want to restrict from this screen.
- **Add restriction** - Used to create your own list of restricted numbers

Once you have added at least one restriction to either the outgoing or incoming calls list, the following options become visible:

- **Edit** - Used to edit an existing outgoing call restriction
- **Erase** - Used to erase call restrictions from the list

 **Important:** When calls are restricted, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## Adding a call restrictions

You can add up to ten restrictions for outgoing calls. The maximum number of characters you can enter for each restriction is 15.

 
- 1 Press **Menu 4-5-1** (**Settings > Security settings > Call restrictions**).
- 2 Enter the security code and press **OK**.
- 3 Select either **Restrict outgoing calls** or **Restrict incoming calls**.
- 4 Scroll to **Add restriction** and press **Select**.
- 5 Enter the number string you wish to restrict and press **OK**. For example:
  - If you wish to restrict all calls that begin with 1, enter 1.
  - If you wish to restrict all calls that begin with 1972, enter 1972.
  - If you wish to restrict all calls that begin with 214, enter 214.
- 6 Enter a name to identify this restriction, or just press **OK**.



**Note:** When creating a new restriction, that restriction is automatically selected (enabled) at the time it is saved.


## Select call restrictions

- 1 Press **Menu 4-5-1** (**Settings > Security settings > Restrict calls**).
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Select** and press **Select**.
- 5 Scroll to each restriction you wish to use and press **Mark**; press **Unmark** to deactivate existing restrictions.
- 6 Press **Done**, then press **Yes** to save the changes you've made.

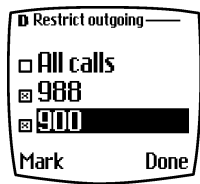

## Edit call restrictions

You can edit the name or number of an entry in the call restrictions list.

- 1 Press **Menu 4-5-2** (Settings > Security settings > Restrict calls).
  - 2 Enter your security code and press **OK**.
  - 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
  - 4 Scroll to **Edit** and press **Select**.
  - 5 Scroll to the restriction you wish to edit, then press **Select**.
-  **Note:** If no name has been entered for a restriction, the restricted number will be displayed.
- 6 Edit the number (as needed), then press **OK**.
  - 7 Edit name (as needed), then press **OK**.

## Erasing call restrictions

You may want to delete a restriction that is no longer needed.

 
- 1 Press **Menu 4-5-1** (Settings - Security settings - Restrict calls).
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Erase** and press **Select**.
- 5 Scroll to the restriction you wish to erase, then press **OK**.
- 6 Press **OK** again to erase restriction.

## • AUTOMATIC UPDATE OF SERVICE

Your phone is capable of receiving updates to wireless services sent to your phone by your service provider. Use **Menu 4-1-4** (Settings > Call settings > Automatic update of service) to turn this feature on or off.

## • LEARN ABOUT SYSTEM SELECTION

The **System** menu (Menu 5) allows you to customize the way your phone chooses a system in which to operate while you are within or outside of your primary or home system.

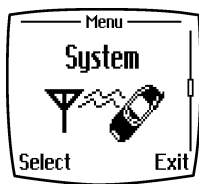

Your phone is set to automatically search for the most cost-effective system. If your phone can't find a preferred system, it selects a system based on the option you choose in the **System** menu.



**Important:** Before selecting an item in the **System** menu, contact your service provider to find out how your selection will affect your service charges.

### View Roaming options

The menu options you see in your phone are based on your service provider's network. Their network determines which options actually appear in the phone's menu. The following is a description of the options that may appear in your phone:

11

Option	Description
Home only	You can make and receive calls in your home area only. While roaming, <b>No Service</b> appears and you cannot make or receive calls.
Automatic	Your phone automatically selects the best available system.
Automatic A	Your phone searches for system A. If system A is not available, it searches for an available analog system
Automatic B	Your phone searches for system B. If system B is not available, it searches for an available analog system (for most service providers, this is the default selection).

## View mode options

You can customize how your phone handles digital and analog calls while outside your home area. When in analog mode, digital services such as caller ID may not be available.

Depending on your service provider, the following options may be available:

Option	Description
Digital pref.	Both analog and digital networks are recognized. When digital service is not present, your phone switches to analog mode.
Digital only	Your phone is limited to making and receiving calls using the digital network. If a digital system is not available, <b>No Service</b> appears.
Analog only	Your phone searches for an available analog system. If an analog system is not available, <b>No Service</b> appears.
Analog per call	Your phone switches to an available analog system until you complete your next call. When the call is complete, your phone reverts to <b>Digital preferred</b> .  If you do not make or receive a call within a few minutes, your phone automatically reverts to <b>Digital preferred</b> .

## Restore settings from analog modes

Any analog settings you select using the System menu are reset to default when you power your phone off and back on again.




# 12 Organizer

Your phone has a calendar, to-do list, alarm clock, stopwatch, and contact database—everything you need in an organizer or personal digital assistant.



**Warning!** Your phone must be switched on to use all of the Organizer features. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

## • USE THE ALARM CLOCK

Your phone's alarm clock can be set to sound an alarm at a time you specify. The alarm clock uses the clock's time format (12-hour or 24-hour format). The  icon, displayed on the Start screen, indicates that an alarm is set. The alarm clock will work, regardless if the phone is on or off.



**Important:** The alarm clock works in conjunction with your phone's clock. Make sure your phone's time and date are correct before using this feature.


12

### Set the alarm

- 1 Press Menu 10-1 (Organizer > Alarm clock), then press Select.
- 2 Enter the alarm time, then press OK.
- 3 Select **am** or **pm**, then press OK.

### Respond to an alarm


At the time of the alarm, the phone sounds an alert tone, displays an animated message, and flashes its lights.

Pressing Stop or the  key stops the alarm from sounding, and returns you to the Start screen.



## SNOOZING

There are several ways you can enable the **Snooze** feature:

- 1 Press the **Snooze** selection key.
- 2 Press any key (except ) .
- 3 Allow the alarm to sound for one minute.

Once snooze is enabled, the alarm will sound again in ten minutes.

## Alarm when phone power is off

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.



**Warning!** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

## Alarm clock notes

- The alarm clock's volume is determined by the phone's current volume and tone settings.
- If you have selected the **Silent** or **Beep once** ringing tone, the alarm clock beeps once.

## • CALENDAR

You can use your phone's calendar to record "notes" to remind you of appointments such as meetings, phone calls, birthdays, or general reminders. Alarms can also be set to notify you of your appointments or notes.

You can also use Nokia PC Sync to synchronize your PIM application's calendar with your phone's calendar, keeping you up-to-date when you're away from your office or PC.



## Calendar Options menu

 
The calendar's Options menu displays a list of calendar options: **View day**, **Make a note**, **Go to date**, and the calendar's **Settings** menu.

## Learn about Calendar views






### WEEK LIST

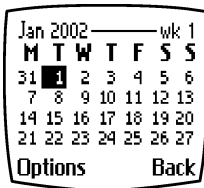From the **Organizer** menu, scroll to **Calendar**, and press **Select**. Use the week list to view your calendar four weeks at a glance.

When you view the calendar, notice that today's date is highlighted. Use the  or  key to move to a different date.



**Tip:** Your phone supports four-way scrolling in the calendar week list:


- Use  to scroll up
- Use  to scroll down
- Use  to scroll left
- Use  to scroll right
- Use  to Select your choice

### Day view

 From the week list, scroll to the desired day. Press **Options**, then select **View day**. The day view allows you to scroll through the notes made for the selected day.

The Options list for day view includes:

- **View** the highlighted note.
- **Erase**, **Edit**, **Move**, or **Repeat** the highlighted note (every day, every week, biweekly or every year).

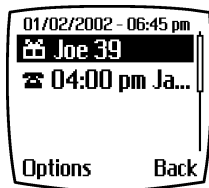

- **Make a note** - used to create a new note for the selected day
- **Go to date** - used to jump to a specific date.
- **Copy** - allows you to copy the note to another day.
- **Send note** - provides various options for sending the current note (via IR, or via SMS. Please check for available in your network).
- **Settings** - allows you to set the date, time, date format, time format and week format for the calendar. The **Auto erase** setting allows you to delete old notes after a specified period of time. However, repeat notes (for example, birthday or anniversary notes) will not be deleted.

### NOTE VIEW

From the day view, scroll to the desired note. Press **Options**, scroll to **View** and press **Select**. The details of the selected note are displayed.

The **Options** list for note view include:

- **Erase, Edit, Move, or Repeat** the current note (every day, every week, biweekly or every year).
- **Make a note** - used to create a new note for the selected day
- **Go to date** is used to jump to a specific date.
- **Copy** - allows you to copy the note to another day.
- **Send note** - provides various options for sending the current note (via IR, via SMS, or as an SMS text message. Please check for available in your network).
- **Settings** - allows you to set the date, time, date format, time format and week format for the calendar. The **Auto erase** setting allows you to delete old notes after a specified period of time. However, repeat notes (for example, birthday or anniversary notes) will not be deleted.




### Add a calendar note




**Note:** Predictive text input is available for Calendar notes.


- 1 From the day list view, scroll to the desired day and press **Options**.
- 2 Select **Make a note**.
- 3 Scroll to one of the following note types and press the roller:
  - **Meeting** - Enter the note (or press **Search** to recall a name from the phone book) and press **OK**. Enter the time and press **Options**.
  - **Call** - Enter the desired phone number (or press **Options** then **Search** to recall it from phone book) and press **OK**. Enter the time and press **OK**.
  - **Birthday** - Enter the person's name (or press **Options** then **Search** to recall it from phone book) and press **OK**. Press **Options** then **Save** and enter date of birth and year (optional). Press **OK**.
  - **Memo** - Enter the note. Press **Options** then **Save**. Enter a date for the memo, then press **OK**.
- 4 Scroll to the desired alarm option, then press **Select**.

The presence of an alarm is indicated by  when you view the notes.

## 12

 
### WHEN THE ALARM SOUNDS FOR A NOTE

The phone flashes its lights, beeps, and displays the note. When a Call note is displayed, you can call the number by pressing .

To stop the alarm, press Exit or .

### • USE THE TO-DO LIST

Use this feature to create a list of tasks or "to-do's" that you can prioritize. The predictive text input feature is available in the to-do list, so adding or editing to-do list notes should go more quickly.

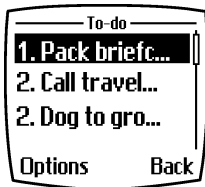


#### ADD A TASK

- 1 From the **Organizer** menu, scroll to **To-do** list and press **Select**.
- 2 Press **Options**, then select **Add**.

- 3 Enter the subject of the to-do note, then press **Options**.
- 4 Select **Save**, then select the desired priority (1, 2 or 3),  
You can change the priority later using the **Options** menu.

## View task details

 - 1 From the to-do list, scroll to an item and press **Options**.
- 2 Select **View** to view the note's details.

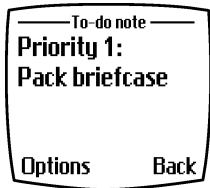

## Work with a to-do note

While viewing a to-do note's details, press **Options**. From the **Options** menu you can add, erase or edit the note. There are also options for:

- Changing the note's priority
- Saving the to-do note to the calendar as a calendar note.
- Sending the note via SMS to another phone (Please check for availability in your network).
- Sort the list by priority (using **Go to priority** option).

Just follow the instructions as the phone guides you through the option you select.

## • CALCULATOR


 



You can use your phone's calculator to add, subtract, multiply or divide numbers and convert currencies.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

## Use the calculator

- 1 From the **Organizer** menu, scroll to **Calculator**, and press **Select**.

- 2 Enter the first number in the calculation (press  for decimal point).
- 3 To add, press  once (+ appears); to subtract, press  twice (-); to multiply, press  three times (\*); to divide, press  four times (/).
- 4 You can also press **Options**, scroll to **Add, Subtract, Multiply, Divide, Square**, or **Square root**, and press **Select**.
- 5 Enter the second number. Repeat steps three and four as many times as necessary.



**Note:** A subtotal is shown after you enter the next operand (+, -, \*, or /).

- 6 For a total, press **Options** twice.
- 7 To start a new calculation, press and hold **Clear** for two seconds.




**Note:** This calculator has limited accuracy and rounding errors may occur, especially in long divisions.


## Use calculator for currency conversion

12

### SETTING THE EXCHANGE RATE

- 1 From the **Organizer** menu, scroll to **Calculator**, and press **Select**.
- 2 Press **Options**. Select **Exchange rate**.
- 3 Scroll to **How many visited units to a home unit** or **How many home units to a visited unit** (depending on how you wish to convert the currency), and press **Select**.
- 4 Enter the appropriate exchange rate and press **OK** (use the  key for decimals). **Exchange rate** is displayed.

### CURRENCY CONVERSION

- 1 Once you have set the exchange rate, enter the amount to be converted (use  to enter a decimal point).
- 2 Press **Options**. Select either **To home** or **To foreign**.

The phone displays the converted amount.



**Tip:** If you chose **Foreign units converted to home units** while saving the exchange rate, the **Home units converted to foreign units** option is automatically calculated and saved (or vice versa).

## • STOPWATCH

You can use your phone's **Stopwatch** feature to time an event in hours, minutes and seconds. The event's time can be saved, viewed, or erased.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



**Important:** Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

## Time an event using split timing

The split time function allows you to measure the total time for an event, yet allows you to capture the elapsed time at various intervals. To measure split time:

- 1 From the **Organizer** menu, scroll to **Stopwatch** and press **Select**.
- 2 Scroll to **Split timing**, then press **Select**.
- 3 Press **Start**. The running time appears on the display.

Once the split timer has started, you can:

- Press **Split**. The split time is displayed and the timer continues to display elapsed time.
- Press **Stop** to stop the timer and view the total elapsed time.

If you continue pressing **Split**, the most recent split time appears at the top of the list of split times. You can scroll to review previous times.

## View timing options

Once you have stopped timing an event (using lap or split), you have the option to save the information, reset the stopwatch, or continue timing (split timing only).

While stopwatch is running, press **Stop**, then press **Options**. Select one of the following:

- **Save** - used to save the current timing data. Enter a name, then press **OK**.
- **Reset** - clears the current timing data and resets the timer.
- **Start** - restarts the split timer from the point the timer was stopped.

## Time an event using lap timing

The lap time function allows you to measure the amount of time it takes to complete a cycle or lap. To measure lap time:

- 1 From the **Organizer** menu, scroll to **Stopwatch** and press **Select**.
- 2 Scroll to **Lap timing**, then press **Select**.
- 3 Press **Start**. The running time appears on the display.

Once the lap timer has started, you can:

- Press **Stop** to stop the timer and view the elapsed time.
- Press **Lap**. The lap time is displayed and the timer restarts from zero.

If you continue pressing **Lap**, the most recent lap time appears at the top of the list of lap times. You can scroll to review previous times.

Press **Stop** to stop the timer. The final lap's time is displayed.



## Choose other stopwatch options

You can choose the following options from the **Stopwatch** menu.

Option	Description
Continue	Used to re-display active timer (example: if you receive a call while the timer is still running).
Show last time	Allows you to view the last measured time.
View times	Allows you to view the list of saved times.
Erase times	Allows you to delete the saved times. You can delete the saved times one by one or all at once.



**Note:** If you receive a call while using the Stopwatch, the timer continues running in the background. After ending the call, you can re-display the timer by doing the following:

- 1 Press **Menu 10-5-1 (Organizer > Stopwatch > Continue)**.
- 2 Press **Select**.

# 13. Games

You can use your phone not only for communication but also for some serious fun. Your phone offers you four games from which to choose.

- In **Snake II**, you are to feed the snake with as many goodies as possible. The longer the snake's tail grows, the higher your score is.
- In **Pass 'n Rush**, play the role of head coach. Select the plays for your team and watch the action unfold. Choose from a quick match, full game, or scenario.
- In **Space Impact**, you must destroy the falling asteroids before they destroy you.
- In **Bumper**, you can play an exciting game of pinball. Increase your score by keeping the ball on the table using the flippers.
- In **Racket**, you will play the traditional game of tennis. Use the scroll keys to control the racket.







**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

13

## Game control

Your phone supports four-way scrolling while playing the games:

- Use  to scroll up
- Use  to scroll down
- Use  to scroll left
- Use  to scroll right

## Start a new game

- 1 Press **Menu 6-1** (**Games > Select game**), scroll to the desired game and press **Select**.

- 2 Select **New game** or **1-player** and press **Select**.

### LEARN ABOUT GAME OPTIONS

Use the option **Instructions** to learn how to play the game. With the option **Level** you can choose the difficulty level of the game.

In **Snake II** you can pause the game by pressing either selection key and resume a paused game with **Continue** option. Use **Top score** (available in some games) to check the high score in your phone.

### USE 2-PLAYER OPTION

You can play **Snake II** and **Pass 'n Rush** with another Nokia phone user via infrared.

- 1 Both users need to align the infrared ports of their phones.
- 2 Both players need to simultaneously select the **2-player** option from the selected game's options menu.

## Game settings

The following settings are available for all games:

Option	Description
Game sounds	Used to turn game sound effects <b>On</b> or <b>Off</b> .
Game lights	Used to turn screen lights <b>On</b> or <b>Off</b> during game play only.
Shakes	Used to turn game vibrating effects <b>On</b> or <b>Off</b> .

You may also be able to play online games using the Minibrowser.

# 14 Your phone and other devices

Your phone is capable of interacting with, or connecting to a variety of devices using IR (infrared) or the DLR-3P serial cable.

Your phone can exchange information with other phones, desktop and laptop PCs, and handheld devices. Your phone can also function as a wireless modem when connected to PCs and handheld devices.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

## • IR BASICS

Your phone can send and receive certain types of data by way of the phone's IR port. Transmission and reception must be to or from an Infrared Data Association (IrDA) compatible phone or device.

Your Nokia phone is a Class 1 Laser Product.




**Important:** The preferable distance between two devices in an IR connection is from three inches to three feet. There must be no obstructions between the two devices and both IR ports must be pointed at each other.

14

## Enable IR communications

Before you can receive information (business cards, calendar or to-do list notes) or make an IR connection to a PC or handheld device:


- 1 Make sure that the IR ports of the two devices are pointing at each other.
- 2 Press Menu 9-1 (Mobile link > Infrared), then press Select.




The message **IR reception activated** is displayed, and the IR icon  appears on the Start screen.

- 3 Have the user of the sending device select the desired IR function to start data transfer.

If data transfer does not start within two minutes, the connection is cancelled. You must activate IR communications on your phone again.

## Check the status of an IR connection

The status of an IR connection is shown by the IR icon .

- When  appears steady, there is an IR connection between your phone and the other device.
- When  doesn't appear, no IR connection exists.
- When  blinks, your phone is trying to connect to the other device or the connection has been lost.

## Send and receive information using IR

You can send and receive phone book entries as "business cards" (v.card 2.1 format) using IR between compatible phones, between your phone and a compatible PC running the appropriate software, or between other compatible IR-equipped handheld devices.

## Send a business card to another device

First, make sure the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications and receiving data over IR.

- 1 Recall the phone book entry you would like to send by IR.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Send bus. card** and press **Select**.
- 4 Align the IR ports of the two devices.
- 5 Scroll to **Via infrared**, then press **Select**.

The message **Sending business card** appears on the screen.



**Tip:** Selecting **Via infrared** automatically enables IR communications.



**Note:** If you have more than one number or text information to send, choose **Send default no.** or **Send all details**, then press **Select**.

## Send calendar notes

You can send and receive calendar notes using the same basic procedures as those found in the section "Send a business card to another device" on page 127.

### SEND A CALENDAR NOTE TO ANOTHER DEVICE

From the selected calendar day's day list:

- 1 Scroll to the note you wish to send and press **Options**.
- 2 Scroll to **Send note**, then press **Select**.
- 3 Align the IR ports of the two devices.
- 4 Scroll to **Via infrared** and press **Select** to start data transfer.

## Receive business cards or calendar notes from other devices

You can receive business cards and calendar notes from another compatible phone or handheld device.

Before the user of the other phone or devices sends you a card:

- 1 Align the IR ports of the two devices.
- 2 Press **Menu 9-1 (Mobile link > Infrared)**, then press **Select**.
- 3 When you see the message **Business card received**, press **Show**.
- 4 Press **Options** to select **Save** or **Discard**, and press **Select**.
  - If you press **Save**, you see the confirmation message **Business card saved**.
  - If you press **Discard**, you see the question **Discard business card?**. Press **OK** to discard the information.

## • PC CONNECTIVITY – CABLE AND IR

You can make a serial connection between your Nokia phone and compatible PC using either the DLR-3P (RS-232) or DKU-6 (USB) serial cable. Both cables are available for purchase as an accessory, or may be included in your sales package.

You can also make a serial connection between your phone and an IR-equipped laptop or IR-equipped desktop PC using your phone's IR port.

Once your phone and PC are connected, you can access your phone's information from your PC, or use your phone as a wireless modem for digital data/fax calls.



**Important:** Digital data/fax services (including IS95, IS2000 2G and 3G packet data) are network-dependent features and may require a subscription to these services. Please check with your service provider for the availability of digital data/fax services.

### Nokia PC Suite™

Once your phone is connected to your PC, you can use the various components of Nokia PC Suite to:

- make a backup copy of the data in your phone (Content Copier).
- edit phone book names and numbers, profiles, and settings via your PC's keyboard (Phone Editor).
- create new ringing tones and transfer them to your phone (PC Composer).
- create new caller group icons or picture for use with picture messaging (PC Editor).
- synchronize your phone book and reminders with Personal Information Manager (PIM) applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync).

Please refer to the document *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for installation and setup instructions.

## Modem setup

You can use your Nokia phone as a wireless modem with your laptop computer or handheld device, giving you access to the Internet (for e-mail and Web browsing) or corporate networks wherever you are.

For more information on modem setup for PCs and handheld devices, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.

## Download software

PC Suite, the PC Suite/PC connectivity user guide, and all related software is provided to you free of charge on the CD-ROM found in your sales package. These items can also be downloaded from the US mobile phone products section of:

<http://www.nokia.com>



# 15 Minibrowser



**Important:** This feature is available only if your service provider's network supports wireless internet access. Your service provider may also require that you subscribe to this additional service. For more information, contact your service provider.



The Minibrowser feature allows you to access special Internet content designed specifically for viewing from your mobile phone. You can use your phone's minibrowser to view news, get weather reports, check flight times, access financial information, download new ringing tones or graphics, etc. The browser's menu allows you to save addresses of Web sites as bookmarks, so you can return to your favorite sites quickly and easily.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.


## • UNDERSTAND BROWSING SESSIONS AND INDICATORS

When you launch the minibrowser, two icons appear on the screen:

-  - Minibrowser icon (you are in a minibrowser session)
-  - Active call icon (you are being billed accordingly)

15

The minibrowser disconnects you from the network after a period of inactivity. This is normal and is designed to minimize your bill. You may find, however, that you are billed for several network connections within a single session.

When the minibrowser disconnects from the network, only the browser icon  remains. While browsing, you can still access pages stored in memory without being connected to the Internet.

However, if you navigate to a page that is not stored in memory, a new connection is established and you'll be billed accordingly.

## • LAUNCHING THE MINIBROWSER


The first time you launch the minibrowser, you go through a security setup process that takes three to five minutes (follow the on-screen prompts).

- 1 Press **Menu**, scroll to **Minibrowser**, then press **Connect**.


A message appears, reminding you that you may be billed for the connection time. (You can disable this message. See "Disable minibrowser confirmations" on page 137.)

- 2 Press **Yes**. After a few seconds, the **Home Page** appears. (Your menu may vary according to your service provider.)

**Home Page**  
1 **News**  
2 **Yahoo**  
3 **Weather**  
4 **Finance**


You can also launch the minibrowser by pressing and holding the  key from the Start screen.

### END A BROWSING SESSION

To end a minibrowser session, press and hold the  key.

## • MINIBROWSER MENU

15

While browsing, press and release the  key to display the minibrowser menu:

Option	Description
Reload	Reloads information for current page
Home	Returns you to the Home page.
Bookmarks	Displays a list of bookmarks you've saved.
Bookmark site	Used to save a bookmark for the current page.

Option	Description
Version	Displays information about the minibrowser's software version and developers
Advanced	Displays a several advanced browser options.
Download tones	Used to view or access ringing tones you've downloaded
Exit Minibrowser	Exits the minibrowser and ends your browsing session.
Switch off!	Turns the phone off.



## ABOUT WEB PAGE CONTENT

The following items may appear on web pages:

- Menu choices (may appear as a numbered list).
- Hyperlinks (appear as underlined text).
- Input fields (for text or numbers) - appear as [...].
- Standard text (for reading only-no action required).

## • NAVIGATE IN THE MINIBROWSER


### SCROLL THROUGH THE MENUS AND CONTENTS OF A PAGE

Press  or  to scroll through menus or the contents of a page (contents may not fit on one screen). To scroll more quickly, press and hold the scroll key.





**Important:** Unlike other menus in the phone, there is no "circular scrolling" in minibrowser menus or pages. In other words, when you get to the end of a list or a body of text, the minibrowser does not automatically return you to the top of the list to begin scrolling again.

## GO BACK (PREVIOUS PAGE)

To go back to a previous page, press .

## GO TO THE HOME PAGE


- Press  repeatedly to move back through previously viewed pages until the Home Page appears. OR,
- Press  to display the minibrowser menu, scroll to Home, then press OK.


## SELECT OR OPEN AN ITEM (FOR EXAMPLE, A LINK)

- Press the appropriate number key on your phone's keypad (if the item on the page is numbered), OR
- Scroll to the item, then press the appropriate selection key (for example, to select or open a link).

## SELECTION KEYS

To navigate to different screens or select special functions, use the selection keys. The function of each selection key can change with each page and depends on each highlighted item.

 (Left selection key) - Usually selects the highlighted item, but its function may change depending on what you are doing.

 (Right selection key) - Usually selects a secondary option or displays a menu of secondary options.


## • LINKS

Links usually appear as items in a numbered list. Depending on its type, when activated, a link will:

- Take you to another page or site
- Make a phone call (Some sites support this feature).

When you make the call, the browser connection terminates and the page you were viewing is stored in memory. When you end the call, the page you were viewing is displayed again and you can continue browsing.


## ACTIVATE/SELECT A LINK

- 1 Scroll to highlight the desired link.
- 2 Press the appropriate selection key. (If the link is a phone number, in some cases, you can also press  to make the call.)

## • BOOKMARKS

You can create a bookmark for a page so that you can quickly return to that page later. (You may also be able to create bookmarks via your personal account at your service provider's web site.)



### BOOKMARK A PAGE

- 1 Go to the page for which you want to set a bookmark.
- 2 Press the  key to access the minibrowser menu.
- 3 Scroll to **Bookmark page**, then press **Select**. (A message may appear asking you to confirm this action.)

### GO TO A BOOKMARKED PAGE

- 1 From the **Home Page**, scroll to **Bookmarks**, then press **OK**. A list of your bookmarks appears.
- 2 Scroll to the bookmark you want to use, then press **Select**.




**Tip:** The first ten bookmarks are assigned to keys  - . Press and hold the number associated with the desired bookmark to go to the bookmarked site at any time during a browser session.

15

## • RECEIVE MESSAGES VIA THE MINIBROWSER

Depending on your service provider, you may be able to receive text messages via the minibrowser. Unlike SMS text messages, minibrowser messages are not stored in the phone and must be accessed via the minibrowser's homepage.

## Notification of new minibrowser messages

When a new minibrowser message is received, the  icon appears in the status bar. Depending on the message priority, you may also hear an alert tone and/or see **New message from:** displayed on your screen.

- If you receive the message while browsing, press **View** to read the message or **Skip**, allowing you to view the message later.
- If you receive the message while phone is idle, press **Connect** to launch the browser and view the message, or press **Back** to return to the Start screen.



You can use the **Minibrowser messages** menu (Menu 01 - 4) to read your messages at a late time.

## Web links in minibrowser messages

You can receive minibrowser messages containing Web links. If you receive a message containing a link, select **Use Web link** from the message's **Options** menu to open the link and go to the Web site.

You can also receive Web links in standard SMS messages. Selecting **Use Web link** from the message's **Options** menu launches the minibrowser and takes you to the link's Web site.

## • END THE MINIBROWSER SESSION

- Press and hold . OR,
- Press , scroll to **Exit Minibrowser**, then press **OK**.

## • DISABLE MINIBROWSER CONFIRMATIONS

You can specify whether or not you want your phone to display messages when you begin or end a browser session.

To modify minibrowser confirmations settings

- 1 Press Menu 4-1-5 (Settings > Call settings > Minibrowser confirmation). The following options appear:


Option	Description
Both	Confirmation required before connecting to the Internet, and before you terminate a browser session.
None	No confirmation notes are displayed.
On connection	Phone asks you to confirm your awareness to possible charges incurred for Internet access.
On exit	Phone asks you to confirm your wish to end browsing.

- 2 Scroll to the appropriate option, then press **OK**.



**Tip:** To prevent unintentional exiting of the minibrowser session, select either the **Both** or **On exit** options. This ensures that a confirmation message appears before exiting.



If you press and hold , the minibrowser session ends without confirmation (regardless of the minibrowser confirmation setting).

# 16 Reference information

## • USE ACCESSORIES SAFELY

This section provides information about the phone's batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7U, an ACP-8U, LCH-8 or an LCH-9 charger. Other usage could invalidate any approval given to this apparatus and may be dangerous.



**Warning:** When you purchase batteries, chargers, and accessories for your phone, use *only* batteries, chargers, and accessories that have received approval from Nokia. The use of any other type of phone-related hardware may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your service provider.



**Note:** For information on how to charge and recharge your battery, please see "Charge the battery" on page 14.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime. If left unused, a fully-charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.



Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Battery performance is particularly limited in temperatures below freezing.

Do not dispose of batteries in a fire!



**Warning!** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.

## • IMPORTANT SAFETY INFORMATION

This section provides additional safety information. A brief overview of safety can be found in the section "For your safety" on page 1.

### Traffic Safety

Do not use a wireless telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

### Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

### Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of at least 6 inches (approximately 20 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 6 inches (20 cm) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Switch off the phone immediately if you have any reason to suspect that interference is taking place.

## HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

## Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic antiskid/antilock braking systems, electronic

speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **POSTED FACILITIES**

Switch your phone off in any facility where posted notices so require.

### **Potentially explosive atmospheres**

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in property and/or bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

### **Vehicles**

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action or both.



## Emergency calls



**Important:** This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

## Make an Emergency Call

- 1 If the phone is not on, switch it on.
  - 2 Press  as many times as needed (for example, to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
  - 3 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
  - 4 Press .
- If certain features are in use, you may first need to turn those features

off before you can make an emergency call. Consult this user guide and your local cellular service provider.

- When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not end the call until given permission to do so.

## • CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.13 W/kg and when worn on the body, as described in this user guide, is 0.38 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of

<http://www.fcc.gov/oet/fccid> after searching on FCC ID GMLNHP-2AX .

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the Nokia accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at:

<http://www.nokia.com>.

## • CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside and may damage electronic circuit boards.
- Do not attempt to open the phone. Nonexpert handling may damage it.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them are not working properly, take them to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## • ACCESSORIES

If you want to enhance your phone's functionality, a range of accessories is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.



### A FEW PRACTICAL RULES FOR ACCESSORY OPERATION

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by Nokia. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous. Refer to "Use accessories safely" on page 138 for important battery usage information.

16

## • BATTERY INFORMATION



**Note:** The phone has a lithium ion (Li-Ion) battery. Dispose of batteries according to local regulations (for example, recycling). Do not dispose as household waste.



This section provides information about the phone's battery. Be aware that the information in this section is subject to change.

The tables shown in this section provide information about the battery that is available for your phone, charging times with the Rapid Travel Charger (ACP-8U), the Standard Travel Charger (ACP-7U), talk and standby times. Consult your service provider for more information.

## Charging Times

Charging times for the BLB-3 Li-ion Battery (1000 mAh) are approximate:

Device:	ACP-7U	ACP-8U	LCH-9
Charger only	4 hrs 15 min	2 hrs 15 min	2 hours
DCH-8	4 hrs 15 min	2 hrs 15 min	n/a
DDC-1	4 hours	2 hrs 10 min	n/a

## Standby and Talk Times

Mode	Talk time	Standby time
Digital	Up to 4 hours	Up to 400 hours
Analog	Up to 90 minutes	Up to 4 hours

Mode	Talk time	Standby time
Digital	Up to 3.2 to 4 hours	Up to 7 days to 15 days



**Note:** Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of

time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

## Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 72 hours, since overcharging may shorten its lifetime. If left unused, a fully charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Battery will not charge at temperatures above 140°F (60°C).

## • CHARGERS AND OTHER ACCESSORIES

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the devices listed on the following pages.



**Warning:** Use only batteries, chargers, and accessories approved by Nokia for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

## Learn about chargers and other accessories

This section provides information about the phone's chargers and accessories. Be aware that the information in this section is subject to change as the chargers and accessories change.

The chargers and accessories that are described in this section are available for your phone. Contact your dealer for details. Also, refer to the accessories brochure that was included in your sales package for the entire line of Nokia Original Accessories.

 


**Note:** When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week, since prolonged maintenance charging of the battery could shorten its lifetime. If left unused, a fully charged battery will discharge over time.

### Standard Travel Charger (ACP-7U)

This is a lightweight (187 g) and durable AC charger.

To use the Standard Travel Charger, plug it into a standard 120 V AC wall outlet and connect the lead from the charger to the base of your phone.

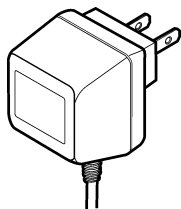


**Note:** If the battery is completely empty, you cannot use the phone until it has enough charge to operate.

### Rapid Travel Charger (ACP-8U)

 This is a lightweight (100 g) and durable AC charger. Calls can be made during charging, even with a fully discharged battery.

To use the Rapid Travel Charger (ACP-8U), plug it into a standard 120 V or 220 V AC wall outlet, and connect the lead from the charger to the base of your phone.

The charger can also be used together with the optional Desktop Charging Stand. Approximate charging times for discharged batteries are shown in "Charging Times" on page 147.

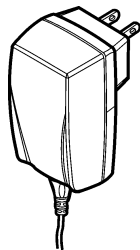


## Rapid Cigarette Lighter Charger (LCH-9)

You can charge your phone's battery from your vehicle battery by using the Rapid Cigarette Lighter Charger (LCH-9).

Calls are possible during charging. A green light indicates that the charger is ready for charging (when not charging). The battery charging times are the same as those for the Rapid Travel Charger (ACP-8U).

 The input voltage range is from 11 V to 32 V DC, negative grounding. Avoid prolonged charging with the Rapid Cigarette Lighter Charger (LCH-9) when the car engine is not running; this could cause your car battery to drain. Note also, that in some cars, the cigarette lighter plug is not provided with electricity if the ignition is not switched on.

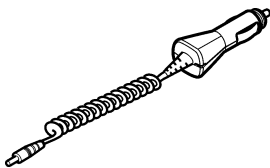


## Compact Desktop Charging Stand (DCH-8)

Used together with the Standard Travel Charger (ACP-7U) or the Rapid Travel Charger (ACP-8U), the Compact Desktop Charging Stand (DCH-8) is an economical choice when you need your phone close at hand. Also available: Connectivity Deskstand (DCH-8D)



## Headset (HDC-9P)

 Small and lightweight, the headset kit allows easy and convenient handsfree operation. The headset has a foam ear piece cover for a comfortable fit and has a clip to hold it firmly in place. A remote control button located in the microphone makes the headset convenient to use while answering or receiving calls.

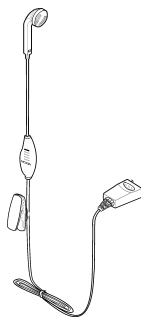

## Headset (HDE-1)

Similar in design and function to the HDC-9P. However, this headset does not have the remote control button on the microphone.

 
## Data Cable (DLR-3P)

Easy and convenient connection to your PC or laptop computer for wireless modem functionality. Compatible with Connectivity Deskstand (DCH-8D)




## Spare battery charger (DDC-1)

Used together with the Standard Travel Charger (ACP-7U) or the Rapid Travel Charger (ACP-8U), this lightweight and stylish charger provides a convenient way to charge your spare battery.

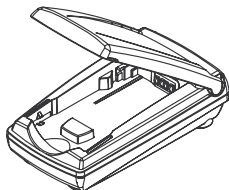

## Loopset (LPS-1)

 
With the Nokia Loopset, people who use a T-coil equipped hearing aid have the freedom to talk on a digital mobile phone. The loopset goes around your neck - so it can be worn comfortably and discreetly.

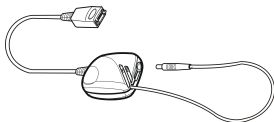

- **COMPLETE CAR KIT (CARK-91H)**


Provides handsfree use and connection to an external antenna. Includes Privacy Handset (HSU-1) for private conversations.

 Also available: Complete Car Kit, without privacy handset (CARK-91)

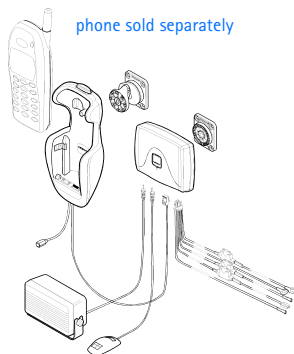

## Mobile Holder (MBC-1)

 Holds phone securely in place while driving or during charging. Can be used with Rapid Cigarette Lighter Charger (LCH-9).

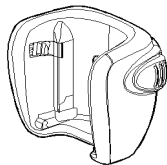

## • FREQUENTLY ASKED QUESTIONS (FAQ)

This section lists and answers the questions that you most frequently ask. Where necessary, the answers refer you to the appropriate text within this guide.



**Note:** Some of the answers tell you to use menu shortcuts. For a complete listing of these shortcuts, refer to "Menu shortcuts" on page 4.

### Q. How do I lock my phone?

- A. Press **Menu 4-5-2-1**, then press **Select**. Enter your lock code, scroll to **On**, and press **OK**.

Refer to "Phone lock" on page 106 for more information.

### Q. How do I unlock my phone?

- A. Press **Menu 4-5-2-1**, press **Select**, enter your lock code, scroll to **Off**, and press **OK**.

Refer to "Phone lock" on page 106 for more information.

### Q. What is my lock code?

- A. The lock code enables you to lock your phone, thus preventing someone else from using it. The default lock code is 1234. However, it is suggested that you change this code **immediately**.

Refer to "Phone lock" on page 106 for more information.

### Q. What is my security code?

- A. The default security code is 12345. However, it is suggested that you change this code **immediately**. Certain features can be used *only* after the correct security code has been successfully entered.

 
Refer to "Security code" on page 105 for more information.

**Q. How do I lock the keypad?**

- A. Press **Menu** followed by .

Refer to "Lock keypad (Keyguard)" on page 104 for more information.

**Q. How do I unlock the keypad?**

- A. Press **Unlock**, followed by .

Refer to "Lock keypad (Keyguard)" on page 104 for more information.

**Q. How do I make the phone ring louder?**

- A. Press **Menu 3-1-2-3**, press **Select**, then choose a volume level.

Refer to "Set ringing volume" on page 76 for more information.

**Q. How do I change the ringing tone?**

- A. Press **Menu 3** and scroll through the list of profiles until you find the one for which you want to change the ringing tone, then press **Select**.

Highlight **Customize** and press **Select**.

Scroll to **Ringing tone**, then press **Select**.

Scroll through the options. After you hear the tone you want to use, press **Select**.

Refer to "Set a ringing tone" on page 76 for more information.

**Q. How do I store my voice mailbox number?**

- A. Press **Menu 01-2-3**, enter your voice mailbox phone number, and press **OK**. The screen tells you that the number is saved.


This voice mailbox number is valid unless your phone number changes. If your phone number changes, you will have to save a new voice mailbox number.

Refer to "Store your voice mailbox number" on page 58 for more information.

**Q. How do I call my voice mailbox number (retrieve voice messages)?**

- A. When your phone alerts you to new voice messages, press **Listen** and follow the prompts. If you'd rather listen to your messages later, press **Exit**.

To listen to your voice messages at a later time, perform one of the following actions:

- Press and hold the  key.
- Press **Menu 01-2-1**. The message **Calling voice mailbox** appears on the screen. Follow the prompts to access your messages.

**Q. How do I find my phone's model number?**

- A. Turn your phone off, then remove the battery from the back of the phone. Your phone's model number is printed on the sticker that is on the rear cover, and is labeled, "Model." You may also have recorded this information on the title page of this user guide. Please refer to "User Guide for Nokia 6385 Phone" on page 1.

**Q. How do I redial the last-dialed number.**

- A. Press  twice.

Refer to "Dialed numbers" on page 54 for more information.

**Q. How do I assign a key to 1-touch dialing?**

- A. Press **Names** and scroll to **1-touch dialing**.

Press **Select**.

Scroll to the first number that includes the message (**empty**) and press **Assign**.

Scroll to the name/number to which you want to assign to this key and press **Select**.

Repeat these steps as many times as necessary.



Refer to "1-touch dialing" on page 96 for more information.

**Q. How do I find out how many memory locations the phone has?**

- A. Press **Names** and scroll to **Settings**.

Press **Select**.

Scroll to **Memory status** and press **Select** again. A message appears that says **Phone: xx free, xx used** where xx indicates the percent of memory used.

For more information, refer to "Check memory status" on page 51 and "Technical information" on page 161.

**Q. How do I find my phone's ESN (electronic serial number)?**

- A. Turn your phone off, then remove the battery from the back of the phone. Your phone's ESN number is printed on the sticker that is on the rear cover, and is labeled, "ESN."

**Q. How can I change the contrast of my phone's display?**

- A. Press **Menu 4-2-5** and press **Select**. Scroll up or down to adjust the contrast, then press **OK**.

For more information, refer to "Adjust screen contrast" on page 35.

**Q. How do I clear my call timers?**

- A. Press **Menu 2-5-6** and press **OK**. Enter your security code and press **OK**. Please refer to "Clear call timers" on page 56 for more information.



**Warning:**The clearing of call timers *cannot* be undone

## • GLOSSARY

Term:	Definition:
<b>analog network</b>	A network where the signal is conveyed by varying the frequency, amplitude or phase of the transmission.
<b>antenna</b>	The portion of your phone designed to transmit and receive the wireless signal.
<b>antenna jack</b>	The connector used to attach an external antenna to your mobile phone (typically used by the CARK-91US car kit).
<b>battery</b>	The source of power for your mobile phone when the phone is not connected to a charger.
<b>bookmark</b>	A way to save a web site address (or URL) to your phone's memory. Use bookmarks to store the addresses of your favorite web sites, then recall them so you can return to the location quickly and easily.
<b>browser</b>	A software program used to view and navigate a portion of the Internet called the World Wide Web, or Internet locations developed for the minibrowser.
<b>data call</b>	A call in which your Nokia phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or infrared port.
<b>digital network</b>	Network where the signal is converted to a digital or binary code before transmission.
<b>earpiece</b>	The portion of your phone that contains the speaker. Used to play the audio portion of a voice call as well as any other audible tones (for example: ringing, warning, etc.).
<b>earpiece volume</b>	The sound level of the earpiece's speaker during a call.

Term:	Definition:
e-mail	Electronic Mail. A written form of communication in which text (and other types of information) is transmitted between recipients electronically via special electronic mail systems managed by corporations and/or Internet service providers.
END key	Used to terminate an active call or reject an incoming call. Also used to return to the Start screen from the phone book or from within the phone's menu.Functions as "back" key while using the Minibrowser.
ESN	Electronic Serial Number. Used by wireless service providers to identify your phone on the wireless network.
fax call	A call in which your Nokia phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or infrared port.
home system	Refers to the wireless system to which you are subscribed.
home type system	Refers to the same type of system to which you are subscribed, but a system that is not your primary home system.
Internet	An elaborate system of interconnected public and private computer networks around the world, used to provide access to information and enable communication between users worldwide.
keypad tones	The sound heard when a key on your phone's keypad is pressed.
message alert tone	The sounds that are heard upon receipt of a text or system message (e.g. call waiting notification) by your phone.

Term:	Definition:
microphone	The electronic element in the base of your phone that picks up your voice and other sounds.
navigate	A term that refers to the act of moving from one Internet site or page to another, or to the act of moving from one area of your phone's memory or menu to another.
network services	A term referring to those features and functions offered by wireless service providers (in addition to voice call services).
non-home type system	Any system that does not use the same wireless "format" as your home system.
number keys	The numbered keys on your phone's keypad.
power key	A key on the front of the phone that allows you to turn the phone on or off. This key can also be used to recall and switch your phone's profiles.
predictive text input	A system developed for rapid text entry using your phone's keypad.
preferred system	Refers to a system that is the same "format" as your home system, but is not the system to which you have subscribed.
ringing option	Refers to the way your phone plays (or <i>if</i> it plays) a ringing tone when you have an incoming call.
profile	Refers to the various settings relating to your phone's audible, visible and vibrating alerts, and the ability to have multiple configurations to match your location or environment.

Term:	Definition:
ringing tone	The tone or melody that is heard when you have an incoming call.
ringing volume	Refers to the volume of your phone's ringing tone.
roaming	The state of your phone when you are no longer in your home system. Additional charges may result.
screen	Your phone's display.
scroll	To move through a list of names, menu items, etc. by using the phone's scroll keys. Each new selection or option is highlighted as you scroll to it.
selection keys	Refers to the keys under the lower left and lower right corners of your phone's screen.
SMS	Short Message Service. A service whereby you can send and receive short text messages (typically around 160 characters) with your phone.
system	Another way to refer to your service provider's wireless network.
TALK key	The key used to make or answer a call.
text message	See SMS.
URL	Universal Resource Locator. A URL is a Web site's specific address or location on the Internet (for example: <b>http://www.nokia.com</b> ).
voice dialing	The ability to dial numbers in your phone using the phone's voice recognition feature. (see voice tags)

Term:	Definition:
voice mail	A system maintained by your service provider, used to record voice messages when you are unable to answer a call.
voice mailbox	The location on your service provider's network used to store voice mail messages.
voice tag	A recording of a user's voice that is assigned to a phone book entry. Voice tag is used in conjunction with voice dialing feature (see voice dialing).
volume	See earpiece volume or ringing volume.
warning tones, game tones	The tone played when your phone displays a warning, or those tones that are heard when you are playing one of the phone's games.
wireless network	Your service provider's operating environment, including various types of hardware, software, and landline connections, which makes wireless calls possible.
World Wide Web (WWW)	The part of the Internet that is viewed using a software application called a <i>web browser</i> . The browser in your Nokia phone can access many sites on the World Wide Web, plus sites designed specifically to be browsed from a mobile phone.

## • TECHNICAL INFORMATION

Wireless system	Dual-band CDMA and AMPS	
Weight	4.5 oz / 127 grams	
Dimensions	Length:	5 in./ 129 mm (min)
	Width:	1.8 in / 53 mm (max)
	Thickness	0.8 in / 21 mm (max)
Frequency range	Lowband	824.04 - 848.97 MHz (TX) 869.04 - 893.97 MHz (RX)
	Highband	1850.04 - 1909.92 MHz (TX) 1930.08 - 1989.96 MHz (RX)
Battery voltage	3.6v nominal	
Charging current	850mAh max	
Operating temp.	-22°F to + 140°F (-30°C to + 60°C)	
No. of channels	832 lowband; 1150 highband	
No. of NAMs	2	
Memory capacity	Phone book:	up to 500 entries with up to 5 numbers and 4 text fields per name
	Calendar:	up to 500 entries
	To-do list:	up to 30 entries
	Text messages:	up to 100 messages
Digital data	circuit-switched data/fax	14.4 KBps Group 3 fax
	packet-switched data (IS-2000)	up to 153.6 kbps
	packet-switched data (IS-2000)	up to 153.6 kbps

## • TROUBLESHOOTING

Problem	Possible cause	Possible solution
<b>My phone isn't charging.</b>	Charger and phone are not properly connected.	Check connection between charger and phone/charger stand and phone.
	Charger is not properly plugged in.	Make sure charger is properly plugged into wall outlet.
<b>My phone isn't making/answering calls.</b>	Battery is not charged.	Charge the battery.
	Poor signal strength	Extend whip antenna.
	Outside of service area.	Change locations until the phone displays service available.
<b>I can't listen to my voice messages.</b>	You don't have voice mail service.	Call your wireless service provider.
	You have not set up your voice mailbox with your service provider.	Call your wireless service provider.
	You have not saved your voice mail number in your phone.	See "Store your voice mailbox number" on page 58.
	The voice mail number you have saved is incorrect.	Call your wireless service provider.
	You have forgotten your password or are entering it incorrectly.	Call your wireless service provider.



Problem	Possible cause	Possible solution
<b>My SMS messages are not being delivered.</b>	You don't have SMS service.	Call your wireless service provider.
<b>I can't successfully tag a phone book entry or menu command.</b>	Excessive background noise during the recording process.	Find a quiet location and try again.
	Voice tag memory is full.	Follow screen prompt to erase an existing tag, making room for new voice tag.
<b>Voice dialing or voice command does not recognize my voice.</b>	Voice tag was recorded by someone other than yourself.	Re-record voice tag using your voice.

# 17 Nokia One Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end- user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
  - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
  - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
  - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
  - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
  - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.

- 8** Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a)** The Consumer shall return the Product to the place of purchase for repair or replacement processing.
  - b)** If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:  
Nokia Inc., Attn: Repair Department  
795 West Nasa Blvd.  
Melbourne, FL 32901
  - c)** The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
  - d)** The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
  - e)** Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 YOU (THE CONSUMER) UNDERSTAND THAT THE PRODUCT MAY CONSIST OF REFURBISHED EQUIPMENT THAT CONTAINS USED COMPONENTS, SOME OF WHICH HAVE BEEN REPROCESSED. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between the Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:  
Nokia Inc.  
Attn: Customer Service  
7725 Woodland Center Blvd., Ste. 150  
Tampa, FL 33614  
Telephone: 1-888-NOKIA-2U (1-888-665-4228)  
Fax: 1-813-249-9619  
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

Nokia is a registered trademark of Nokia Corporation.

## Appendix A: A message from the CTIA

*Safety is the most important call you will ever make.*

## **A Guide to Safe and Responsible Wireless Phone Use**

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense---keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

### **Wireless Phone "Safety Tips"**

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.



- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

*The wireless industry reminds you to use your phone safely when driving.*

For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036. Phone: (202) 785-0081



## Appendix B: A message from the FDA<sup>1</sup>

---

1 . July 18, 2001. For updates: <http://www.fda.gov/cdrh/phones>

# Consumer Update on Wireless Phones

U.S. Food and Drug Administration

## 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## 2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones; which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has FDA done to measure the radiofrequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## **9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### **11. What about wireless phone interference with medical equipment?**

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

### **12. Where can I find additional information?**

For additional information, please refer to the following resources:

- FDA web page on wireless phones  
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program  
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection  
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project  
<http://www.who.int/emf>
- National Radiological Protection Board (UK)  
<http://www.nrp.org.uk/>



# 18 Index

## Numerics

- 1-touch dialing 96
  - setup 96
- 3-way conference calls 89

## A

- ABC and 123 modes 37
- access codes
  - lock code 106
  - security code 105
- accessibility
  - alternate formats 8
  - features 8
  - mobile inductive loopset 9
  - solutions 8
  - TTY contact 8
  - website 8
- accessories 146
  - battery 147
  - cigarette lighter charger 150
  - complete car kit 151
  - data cable 151
  - data cable dlr-3p 151
  - desktop charging stand 150
  - loopset lps-1 151
  - mobile holder 152, 152
  - spare battery charger 151
- accessory
  - cigarette lighter charger 150

- headset kit 150
- rapid travel charger 149
- standard travel charger 149
- accessories
  - complete car kit 151
- activate
  - automatic redial 91
  - call forwarding 86, 88
  - loopset 79
  - TTY/TDD 78
- adjust the volume 35
- advanced calling features 85
- alternate formats
  - audiocassette 8
  - e-text 8
  - large print 8
  - requesting 8
- antenna
  - contact with 13
  - location 13
- automatic redial 91
- Automatic update of service 110

## B

- battery
  - charging 14
  - important information 15
  - indicator 14
  - installing 13
  - prolonged charging 138
  - prolonging life 16
  - removal 15

- battery low indication 138
- braille user guides 8
- business cards
  - receiving 128
  - sending 127
- C**
- cable
  - connecting to a PC 129
- calculator 119
  - currency conversion 120, 120
  - using 119
- calendar
  - 4-way scrolling 116
  - alarms 118
  - day view 116
  - make a note 117
  - note types 118
  - note view 117
  - set the date 117
  - week list view 116
- call forwarding 86, 88
  - activate 88
  - cancel 88
  - feature codes 87
- call lists, clearing 54
- call restrictions 108
  - adding 109
  - editing 109
  - erasing 110
  - selecting 109
- call timers
  - clearing 56
  - turning on 56
- call waiting 88
  - answer a new call 88
  - switch between calls 88
- caller groups 50
  - assign a number 50
  - edit options 51
  - phone book menu 46
- calls
  - 1-touch dialing 96
  - 3-way calls 89
  - answer a call 19
  - call waiting 88
  - end a call 19
  - ignoring 3
  - make a call 19
  - phone lock 107
  - redial last 3
  - reject a call 19
- car kit 151
- certification information 143
- change letter case 38
- characters, entering 39
- charge the battery 14
- clock
  - automatic settings 82
  - displaying the clock 82
  - hiding the clock 82
  - set the time 81
  - time format 81
- compose a picture message 66

connecting to a PC 129  
contacting Nokia 9  
contacting your service provider 11  
Content Copier (PC Suite) 129  
contrast, adjusting 35  
currency conversion 120

## D

data cable 151  
Data call timers 57  
Data Synchronization (PC Sync) 129  
desktop charging stand 150  
dialed calls, checking 53  
dictionary, add words 43  
Digital Data 130  
display language 80  
dlr-3p 151  
download  
    pictures 65  
download a ringing tone 80  
download pictures 65  
Download software 130

## E

edit a name or number 47  
e-mail 64  
emergency calls 142  
enter  
    characters 39  
    numbers 38  
    punctuation 39  
enter a space 38

enter letters 37  
entering letters and numbers 37  
Entering text  
    change letter case 38  
    enter a space 38  
    erase a mistake 38  
erase  
    mistakes 38  
    names and numbers 49  
erase mistakes 38  
erase names or numbers 47  
ESN number 10

## F

FAQ 152  
Fax call timers 57

## G

games 124  
    starting 124  
glossary of terms 156

## H

headset  
    connect 34  
    setup 34  
    use 34  
Headset Kit 150  
hearing impaired solutions 9  
help 22

## I

- icons 6
- in-call options 85
- Infrared connections 126
- IR
  - activating 126
  - connecting to a PC 129
  - receiving a business card 128
  - sending a business card 127
  - sending a reminder note 128
  - status 127

## K

- keyguard 104
- keypad 12
  - about 17
  - lock 104
- keypad tones, setting 77
- keys and features 12
- keys, selection 21

## L

- label 10
- language setting 80
- letters, entering 37
- lock code 106
  - changing 106
- lock keypad 104
- loopset 9
  - description 151
- loopset (LPS-1) 9

LPS-3 9

## M

- memory status, checking 51
  - menu
    - shortcuts 24
  - menu number and scroll bar 23
  - menu shortcuts 24
  - menu tips 23
  - menus, phone 22
  - message alert tone, setting 77
  - messages
    - e-mail messages 64
    - options 62
    - picture 65
    - receiving via minibrowser 136
    - text 60
    - using templates 63
    - writing 60
  - Minibrowser
    - receiving messages via 136
  - Minibrowser timer options 57
  - missed calls, checking 53
  - mistakes, erasing 38
  - mobile holder 152
  - model number 10
  - Modem Setup 130
- 
- N
  - name or number edit 47
  - names or numbers, erasing 49
  - navigate phone menus 23

- network services 7
  - subscribing 7
- Nokia PC Suite 129
- number type, changing 48
- number types 47
- numbers, add to message 43
- numbers, entering 38

## O

- one-touch dialing 96
- options
  - in-call menu 85

## P

- PC Composer (PC Suite) 129
- PC Connectivity 129
- PC Suite
  - Content Copier 129
  - Instructions 129
  - PC Composer 129
  - PC Sync 129
- PC Suite (application) 129
- PC Sync (PC Suite) 129
- phone
  - certification information 143
  - radio frequency signals 143
- phone book
  - add entries 44
  - add number to entry 47
  - add other info 50
  - caller groups 50
  - change number type 48

- change views 46
- edit entry 47
- erase names 49
- erase numbers 49
- erasing 49
- menus 45
- opening 45
- primary number 48
- recall name or number 45
- phone book menu 32
- phone book menu options 32
- phone help 22
- phone lock 106
  - activating/deactivating 107
  - allowed number 107
  - lock code 106
  - making a call 107
- phone menus 22
- phone symbols 20
- picture messages
  - about 65
  - compose and send 66
  - modifying 67
  - receiving 65
  - when received 65
  - write 66
- power on your phone 16
- predictive text 40
  - tips for 42
  - turning off 42
  - turning on 42
- primary number, specifying 48

- profile
  - customizing 75
  - defined 74
  - renaming 78
  - selecting 74
- profiles
  - headset 79
  - loopset 79
  - tty/tdd 79
- punctuation, entering 39

## Q

- quick save 44

## R

- Racket 124
- Rapid Cigarette Lighter Charger 150
- Rapid Travel Charger 149
- received calls, checking 53
- reminders 128
- remove the battery 15
- restrict calls 108
- ring options, setting 75
- ring volume 76
- ring volume, setting 76
- ringing tone, setting 76
- ringing tones, download 80
- rings and tones 74

## S

- SAR 143

- save
  - e-mail address 50
  - phone book entry 44
  - street address 50
- scroll keys 12, 18, 23
- scroll through menus 23
- security 104
  - lock keypad 104
  - phone lock 106
  - security code 105
- security code
  - changing 105
- security settings
  - call restrictions 108
  - phone lock 106
- selecting call restrictions 109
- selection keys 21
- sending
  - picture messages 65
- serial number 10
- service provider
  - differences 7
  - signing up 7
- service provider, contacting 11
- set the date 117
- set the ring volume and tone 76
- set up
  - your headset 34
  - your phone 13
- Setting time (manual) 81
- Setting time (network) 82
- shortcuts 24

- shortcuts, list of 24
- Snake II 124
- Software download 130
- spaces, entering 39
- special characters 39
- specify a primary number 48
- Standard Travel Charger 149
- start screen
  - about 16
  - indicators 17
  - menu number 23
- starting a game 124
- strings, touch tone 100
- switch on your phone 16
- symbols displayed on your phone 20
- symbols, inserting 43

## T

- TDD 9
- technical information 161
- templates 63
- terms 5
- text conventions 6
- text messages
  - e-mail messages 64
- touch tones
  - length 99
  - manual 99
  - sending 100
  - storing 100
- troubleshooting 162
- TTY 9, 79

- turn on your phone 16

## U

- underlined words 42
- understanding wireless network services 7
- unlock keypad 104
- updates to this guide 7
- use the headset 34

## V

- vibrating alert, setting 77
- view
  - calendar note 117
  - dialed calls 53
  - missed calls 53
  - new text messages 67
  - picture messages 65
  - received calls 53
  - to-do list note 119
- voice command
  - shortcut 4
- Voice commands 83
- voice commands
  - create a voice tag 83
  - using 84
- voice dialing 93
  - dialing a number 95
  - important notes 94
  - voice tags 94
  - working with tags 84, 95
- voice mail greetings 58

- voice mail, setting up 58
- voice messages, listening to 59
- voice tags
  - add 94
  - change or erase 95
- volume, adjusting 35

## W

- warning and game tones, setting 78
- web address for updates 7
- welcome note, adding 82
- wireless modem setup 130
- wireless network services 7



---

Para obtener un manual del usuario en español favor de llamar o enviar un fax al teléfono 1-888-NOKIA-2U, fax 813-249-9619.

---