

Nokia 8390

User Guide

Phone notes

	Notes	Where to get information
My number		Wireless service provider
Number to call for voice mail		Wireless service provider
Wireless provider's number		Wireless service provider
Provider's customer care		Wireless service provider
Model number		
Phone type		Back of title page
Electronic serial number (IMEI)		

The wireless phone described in this guide is approved for use in GSM networks.

Legal information

Part No. 9353521, Issue No. 1

© 2001 Nokia Inc. All rights reserved.

Nokia is a registered trademark of Nokia Corporation.

Printed in Canada XX/2001

Nokia, Nokia Connecting People and the Original Accessories logos are trademarks of Nokia Corporation and/or its affiliates.

US Patent No 5818437 and other pending patents.

T9 text input software Copyright © 1999-2001. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for Nokia phone NPW-1. The right to make changes and improvements to any of the products described in this guide without prior notice is reserved.

Export Controls

This product may also be subject to United States export controls. The United States export laws currently prohibit the export of certain technical data and software into Cuba, Iran, Iraq, Libya, North Korea, Sudan, and Syria, or any national or resident of those countries, or to anyone on the United States Treasury Department's list of Specially Designated Nationals or the U.S. Commerce Department's Table of Deny Orders. You agree that you shall not export this product in contravention of United States export laws.

FCC/Industry Canada Notice

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

1	Safety first	1
	Safety guidelines	1
	Safety tips	2
	Your phone's label	3
2	Welcome	4
	Get the most out of this guide	4
	Understand wireless network services	6
	Learn about Accessibility solutions	7
	Find information about your phone	8
	Contact Nokia	8
	Contact your service provider	9
3	Before you begin	11
	Install the SIM card	11
	Notes about SIM cards	12
	Install the battery	12
	Charge the battery	13
	Remove the battery	13
	Set up your headset	14
	use the carrying case	14
4	About your phone	15
	Keys and features	15
	Switch on your phone	17

	About the Start screen.....	17
5	Make and answer calls.....	21
	Make a call.....	21
	End a call.....	22
	Answer a call.....	22
	Reject a call.....	23
	Redial the last-dialed number.....	23
6	The menu.....	24
	Use the menus.....	24
	Menu shortcuts.....	25
	List of menu shortcuts.....	26
	Phone book menu.....	33
7	Enter letters and numbers.....	34
	Standard text input.....	34
	Predictive text input.....	37
8	Use the phone book.....	42
	Save names, numbers, and email addresses.....	42
	Find names in the phone book.....	44
	Edit names and numbers.....	44
	Erase names and numbers.....	44
	About phone book memory.....	45
9	Check call history.....	46
	Call log.....	46

Call timers	48
Call costs	49
Data calls	51
10 Advanced calling features	53
Active call options	53
Call forwarding	59
anykey answer	61
Automatic redial	61
Calling card	61
Send your own number in caller ID	63
1-touch dialing	63
Make an international call	65
Use the phone book	66
11 Use voice features	67
About voice mail	67
Save the voice mailbox number	68
Listen to your voice messages	68
Voice memo	68
Voice dialing	70
voice commands	73
12 Personalize your phone	76
Profiles	76
Volume control	81
Welcome note	81

Choose the display language.	82
Set up the clock	82
Caller groups.	83
Download ringing tones.	85
Download Profiles.	86
Restore factory settings.	87
Nokia Xpress-on™ color covers	87
13 Manage phone security	89
Lock the keypad (Keyguard).	89
About security codes	89
Security code	92
Fixed dialing	93
Call restrictions.	93
Set up a closed user group	95
14 Select a system.	96
15 Communicate with text messages	97
Set up messaging	97
Write messages.	98
Resend a message from the outbox	100
Read text messages	101
Erase a message	101
Reply to a message.	101
Forward a message.	102
Reply to an e-mail message	102

	Forward an e-mail message	103
	Retrieve a number	104
	Message settings	104
	Message storage	105
	Picture messages	106
	Chat with other phone users	108
16	Your personal WAP Browser	110
	Notes on wireless internet access	110
	Set up for browsing	111
	Sign on to the internet	111
	Use browser options	111
	Navigate the wireless Internet	112
	Use Bookmarks	113
	Disconnect from the internet	114
	Security issues	115
	Notes on GPRS	116
17	Your personal digital assistant	117
	Calendar	117
	To-do list	120
	Alarm clock	121
	Countdown timer	122
	Stopwatch	123
	Business cards	125
	PC Suite	127
	Calculator	127

18	Your phone and other devices.....	129
	Dialup connections.....	129
	Fax and data calls.....	129
	Send information via IR.....	129
	Print using IR.....	131
19	Fun and games.....	132
	Game rules.....	132
20	Reference information.....	134
	Batteries, chargers, and accessories.....	134
	Important safety information.....	135
	Emergency calls.....	139
	Accessories.....	143
	Batteries.....	143
	Chargers and other accessories.....	144
21	Technical information.....	147
22	Troubleshooting.....	148
23	Frequently asked questions (FAQ).....	149
24	NOKIA One-Year Limited Warranty.....	153

1 Safety first



Read these simple guidelines before you use your phone. Failure to comply with these guidelines may be dangerous or illegal.

• SAFETY GUIDELINES

Following are important safety precautions for phone use.



Road safety comes first

Do not use a hand-held phone while driving. Park the vehicle first.



Switch off in hospitals

Follow any regulations or rules. Switch your phone off near medical equipment.



Switch off while aboard aircraft

Mobile phones can cause interference. Using them on aircraft is illegal.



Switch off when refueling

Do not use your phone at a refueling point. Do not use it near fuel or chemicals.



Switch off near blasting

Do not use your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



Observe infrared precautions

Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices.



Emergency calls

Make sure the phone is switched on and in service. If the word **Clear** appears on the screen above the right selection key, press and hold it to clear the display. Enter the emergency number, then press End [need icon here]. Give your location. Do not end the call until told to do so.

• SAFETY TIPS

Observe these brief guidelines to get the best performance from your mobile phone.



Be aware of interference

All wireless phones may get interference that could affect performance.



Use your phone sensibly

Use your phone only in the normal position (next to the ear). Do not touch the antenna unnecessarily.



Use only qualified service personnel

Equipment must be installed or repaired only by qualified service personnel.



Use approved accessories and batteries

Use only approved accessories and batteries. Do not connect incompatible products.



Read instructions before you connect to other devices

When you connect your phone to any other device, read the device's user guide for detailed safety instructions. Do not connect incompatible products. Remember to make backup copies of all important data.



Make sure the phone is on

1

Before you make a call, be sure your phone is switched on. To make and receive calls, you must sign up with a cellular service provider.

- **YOUR PHONE'S LABEL**

If you remove your battery (refer to "Remove the battery" on page 13) you can find the phone's label on the back portion of the phone. This label includes various information about the phone, such as the model number.

If you ever have to call Nokia (refer to "Contacting Nokia" on page 18) or your service provider you might be asked for this information. Therefore, do *not* remove the phone's label.

2 Welcome

You'll find that your Nokia XXXX mobile phone has many useful features for everyday use, such as a calendar, to-do list, text messaging, and chat. Before you get started, review this chapter to find out more about:




- How to use this guide
- Cellular network services
- Accessibility solutions
- How to contact Nokia

• GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you get the most from this guide as you learn to use your phone.

Understand the terms

This guide uses certain terms for certain actions.

- **Press** means to briefly press and then release a key. For example, *press*  means "Press the zero key."
- **Press Menu** means to press the key that is below the word **Menu** on the phone's screen.
- **Press and hold** means to press and hold a key for 1 to 3 seconds (depending on the feature you're using), and then release the key.
- You use the **selection keys**  and  to choose an option on a menu.
- **Highlighted** means that an option you see on the screen is enclosed in a dark bar. Choices you make with the two selection keys act on the highlighted option.

Notice text conventions

This user guide provides text clues to help make instructions clear and easy to follow. These clues are called **conventions**.

Convention	What it means
bold	The word or phrase appears on the phone's screen.
bold and blue	The word is an address on the World Wide Web.
<i>italic</i>	Italics indicate emphasis. Pay close attention to any information in italics.

Follow graphic clues

This guide uses certain icons (small pictures) to alert you to important information.



Tip: Provides information about a shortcut or an alternate method of doing something.



Note: Explains a feature or points out an important concept.



Important: Alerts you to information critical to using a feature correctly.



Caution: Warns you when you may lose information.



Warning: Helps you avoid personal injury, damage to the phone, or property damage.

Look for updates

From time to time, Nokia updates this user guide to reflect changes or corrections. The latest version may be available at the Nokia site on the World Wide Web:

<http://www.NokiaUSA.com>

2

- 1 On the home page, click **Nokia Phones**, scroll to the section about your phone, and click **Phone details**.
- 2 Click an item to download the user guide, quick guide, or interactive guide (if available).

• UNDERSTAND WIRELESS NETWORK SERVICES

A wireless network service provides the connections you need to use your mobile phone. The network also can give you access to special wireless services, including:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Text and picture messages
- Ability to send your own number
- News and information services
- Notifications on SIM update
- Cell info display
- Service command editor
- Email over SMS
- Selected Internet access services

Sign up with a service provider

Before you can take advantage of any of the network services, you must sign up with a wireless service provider. Your service provider will make available descriptions of its services and instructions for using them.

Note differences among service providers

Wireless network providers differ from each other in certain ways. For example, some networks may not support all language-dependent characters. When you sign up for service, make sure your provider offers the services you need.

• LEARN ABOUT ACCESSIBILITY SOLUTIONS

2

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information about phone features, accessories, and other Nokia products designed with your needs in mind, visit the Nokia World Wide Web site at

www.nokiaaccessibility.com.

Alternate format user guides

This user guide is available in alternate formats, including:

Braille

Large print

Audiocassette

E-text (electronic documents on a 3.5-inch disk, in Microsoft Word or WordPerfect format).

To request any format, call Nokia Customer Care at (888) 665-4228.

Hearing-impaired and other TTY users can contact Nokia at (800) 246-6542.

LPS-3 Mobile Inductive Loopset

The LPS-3 Loopset is a Nokia accessory designed to make the xxxx phone more accessible to hearing-aid users. Also compatible with the Nokia 8200- and 8800-series digital phone, the Loopset gives hearing-impaired users clear access to digital telephony for the first time. With the Loopset, people who use a T-coil equipped hearing aid can make and receive calls without noise interference.



The loopset is easy to use. You wear the loopset around your neck, connect it to your phone, and speak directly toward the microphone.

 
For detailed instructions on using the loopset, refer to the booklet that comes with the LPS-3.



Note: The Loopset can be purchased separately as an accessory.

Accessible features

The xxxx has many accessible features, including:

- Nibs above and below the  key for quick reference to the keypad
- Tactile feedback when a you press a key
- Ability to send and receive short text messages
- Convenience of one-touch dialing
- Ability to define ring tones for different caller groups
- Voice dialing and voice commands for handsfree operation

• FIND INFORMATION ABOUT YOUR PHONE

If you ever need to call Nokia Customer Service or your cellular service provider, you will need to provide specific information about your phone. This information is provided on the phone's label. The label is on the back of the phone (under the battery). It shows the following:

- Model number
- Phone type (a technical designation)
- International Mobile Equipment Identification (IMEI)
- Do not remove or deface the label.

• CONTACT NOKIA

When you need help, the Nokia Customer Service department can provide information about Nokia products.

Have the right information available

We recommend that you have the following information available before you contact the Nokia Customer Service department:

- The phone's model number (xxxx)
- The IMEI (serial number)
- Your ZIP code

Have the phone or accessory handy

Whether you're calling about your phone or an accessory, have the equipment with you when you call. For example, if you're calling about a headset, please have it handy. That way, if a Nokia representative asks a specific question about the accessory, you will have it available for quick reference.


Nokia Customer Care Center, USA	Customer Service, Canada
Nokia Mobile Phones, Inc. 7725 Woodland Center Boulevard, Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA2U (1-888-665-4228) Fax: 1-813-249-9619 TTY: 1-800-24NOKIA (for the hearing impaired only) (1-800-246-6542)	Nokia Products Ltd. 575 Westney Rd. South Ajax, Ontario L1S 4N7 Tel: 1-888-22NOKIA (1-888-226-6542) Fax: 1-905-427-1070

- **CONTACT YOUR SERVICE PROVIDER**

Some service providers program a one-key customer support number into the phone. This number can be useful if you're having trouble dialing a number, especially when you're traveling outside your home area.

This one-key feature might not be available on all systems. Contact your service provider for availability.

 When you need to get in touch with your wireless service provider:

- Press and hold the  key (or the key that your service provider instructed you to use) for 2 seconds.

Your phone will automatically dial the provider's customer support number if your provider offers this feature.

2

If your service provider determines that the problem is Nokia-related, their representative will direct you to the Nokia Customer Care Center (USA) or Nokia Customer Service (Canada).

3 Before you begin


3

Before you begin using your phone, you need to perform several tasks which are described in the following sections:


- Install the SIM card
- Install the battery
- Charge the battery
- Connect the headset

• INSTALL THE SIM CARD


- 1 Switch off the phone.
- 2 With the back of the phone facing you, press the top of the back cover and the back cover release button, then slide the back cover off.

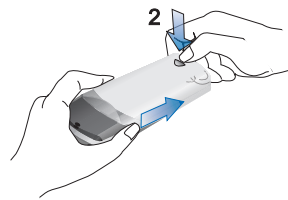

- 3 Lift out the battery.

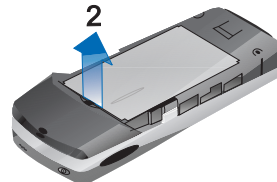


- 4 Lift the SIM card holder.

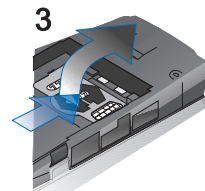


3

- 5 Insert the SIM card into the SIM card holder:
Beveled corner on the right
Gold contact area downward.

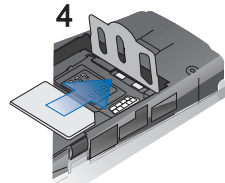

- 6 Lower the SIM card holder.

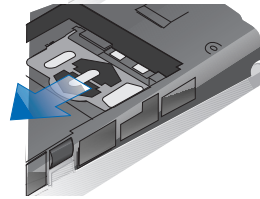

• NOTES ABOUT SIM CARDS

- Keep all miniature SIM cards out of the reach of small children.
- The SIM card and its contacts are easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.
- You must remove the battery to access the SIM card. Always make sure that the phone is switched off before you remove the battery.


• INSTALL THE BATTERY

- 1 Place the battery in the compartment with the label side facing up and the golden contact area aligned with the contact prongs.
- 2 Slide the battery into place.
- 3 Slide the cover back into place



• CHARGE THE BATTERY

- 1 Connect the lead from the charger to the bottom of the phone.

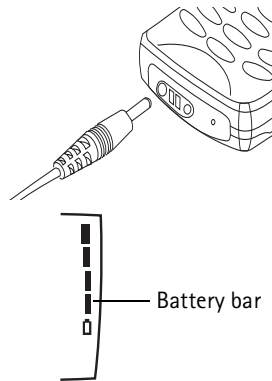

- 2 Connect the charger to a standard wall outlet. The battery power indicator (or battery bar) appears on the screen and starts scrolling. If the phone is on, **Charging** appears also.

If the battery is completely empty, it might take a few minutes before the battery bar appears on the screen.

Tip: You can use the phone while it's charging.

- 3 When the battery bar stops scrolling, the battery charge is complete. **Battery full** appears also, if the phone is on.

Note: The charging time depends on the charger and battery that you use. For example, the charging time for the BLB-2 battery with the ACP-8U charger is about 1 hour and 40 minutes.

- 4 Disconnect the charger from the phone.

• REMOVE THE BATTERY

- 1 Switch off the phone.
- 2 Press the top of the back cover and the back cover release button, then slide off the cover.

3


3 Lift out the battery.



• SET UP YOUR HEADSET

[modify graphic to fit 8390]

Your phone comes with a headset you can use while talking on your phone. The headset provides convenient hands-free use of the phone.

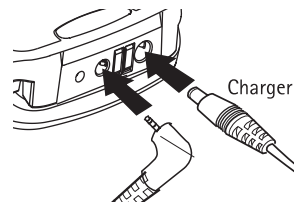

Connect the headset

- 1 Plug the headset jack into the bottom of your phone.
- 2 Put the round ear plug into one ear.

Use the headset

With the headset connected, you can make and answer calls as usual, using the keypad to press [send] and [end] or to enter numbers to call.

Note: The microphone for the headset hangs at the side of your head. Although the microphone may seem far from your mouth, you can speak at a normal volume.

• USE THE CARRYING CASE

Your phone comes with a carrying case that protects the phone against accidental key presses when you're not using it.

Nokia recommends that you keep the phone in its case when you're not actively using it for calls.

4 About your phone


4

• KEYS AND FEATURES


Front

- 1- Power key
- 2- Earpiece
- 3- Display
- 4- Selection keys and scroll keys
- 5- Talk key
- 6- End key
- 7- Number keys
- 8- Microphone

Note: When any key is pressed, the keypad and display lights stay on for up to 15 seconds.

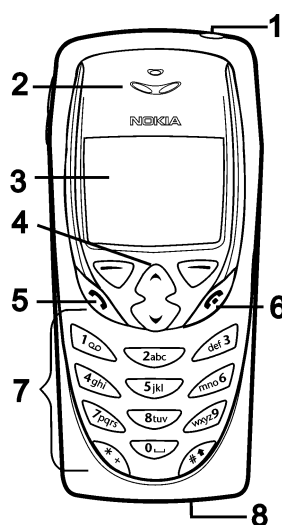


Bottom

 


Charger connection Headset/car kit connection

4


Left side

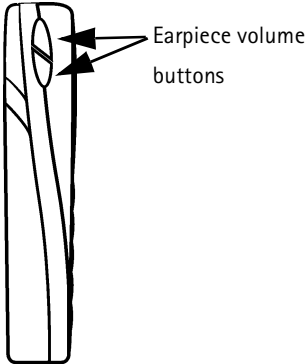


Right side

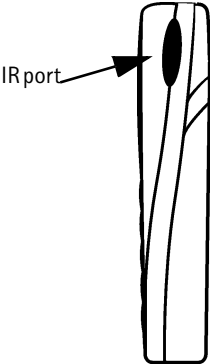

Back bottom

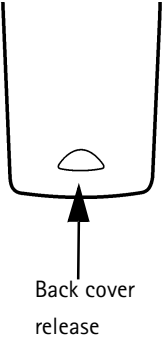


Back top

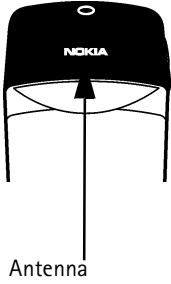

• SWITCH ON YOUR PHONE


- Press and hold power for more than a second.

The phone might ask for a Personal Identification (PIN) code or a security code. See “about security codes” on page 89 for more information.

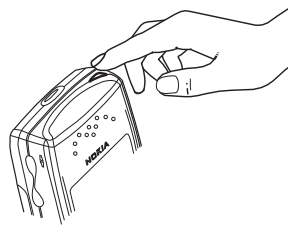

Warning! Do *not* switch on the phone in places where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

Tip: As with any other radio transmitting device, do *not* touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and might cause the phone to operate at a higher power level than needed.

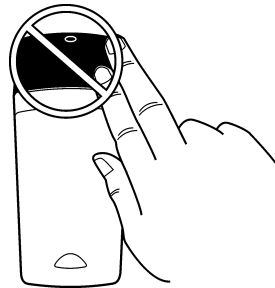

• ABOUT THE START SCREEN

When you turn on your phone, the first screen that appears is the Start screen. In the middle of the Start screen, you may see information indicating which wireless network your phone uses. This information can vary between phones. Other indicators and icons appear on this Start screen and are described in the next section.




About indicators and icons


On your phone, you have two types of identifiers: indicators and icons.

INDICATORS


Indicators show the status of something. The phone uses three types of indicators:

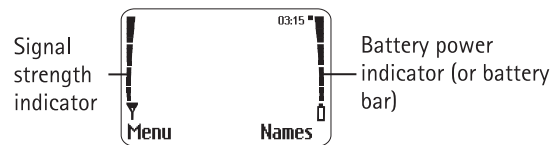



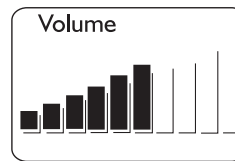
















 - Signal strength indicator: Shows the strength of the signal to your phone.
- Battery power indicator: Shows how much power is left in your phone's battery.
- Volume indicator: Shows the earpiece volume level. Adjust the volume level with the earpiece volume buttons on the left side of the phone (see "Adjust the earpiece volume during a call" on page 22).



ICONS


Icons are graphical representations of a specific item or situation. For example, this icon  appears when you have a voice message waiting to be heard. (Some systems use a different method.)

The rest of this section shows examples of each icon that can appear on your phone and tells you what these icons indicate.

-  Line 1 is selected for outgoing calls.
-  Line 2 is selected for outgoing calls.
-  You have an active call.
-  You have one or more new voice messages.
-  You have one or more new text messages.
(If blinking, text message memory is full.)
-  Keypad lock is on. Your phone will not accept any key presses.
-  The alarm clock is set.
-  The **Silent** profile is selected.
-  Incoming voice calls are being forwarded to another number.
-  You have forwarded all voice calls received on line 1.
-  You have forwarded all voice calls received on line 2.
-  You have forwarded all voice calls received on lines 1 and 2.
-  The phone is ready for you to enter a response.
-  Characters entered will be uppercase letters.
Press  to switch letter case.
-  Characters entered will be lowercase letters.
Press  to switch letter case.
-  Characters entered will be numbers. (When entering letters, switch to numbers by pressing and holding .)

4




You are in "special character" mode. Select a character, then press **Use**. (When entering letters, switch to special characters by pressing the  key.)




You are in predictive text mode.



You are in predictive text mode. Characters entered will be uppercase letters. Press  to switch letter case.



You are in predictive text mode. Characters entered will be lowercase letters. Press  to switch letter case.



You are in predictive text mode. Characters entered will be numbers.



Indicates the current call.



Indicates a call on hold.

[add GPRS indicators here]

5 Make and answer calls

This chapter tells you how to make and receive calls and how to adjust certain options.

• MAKE A CALL


Check the signal strength

The signal indicator on the left side of your phone's screen shows the strength of the network radio signal. The indicator scrolls as the signal strength increases and decreases. To get the strongest signal, try moving your phone slightly. If you're inside a building, move toward a window.




5

Use the keypad

- 1 Enter the area code and phone number.
- 2 Press .

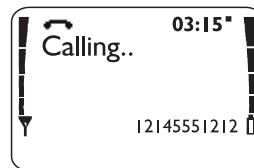


Hold the phone as you would any other telephone, with the antenna pointed up and over your shoulder.



Tip: As with any other radio transmitting device, do not touch the antenna when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Use the phone book

- 1 From the Start screen, press  or  and scroll to the number you want.
- 2 Press  to make the call.

Tip: To skip ahead quickly in the list, press the number key that matches the first letter of the name.

Advanced calling options

- Make an international call: see "Make an international call" on page 65.
- Make a call using the voice tag feature: see "Voice dialing" on page 70.
- Make a 1-touch call: see "1-touch dialing" on page 63.


Adjust the earpiece volume during a call

- To increase the volume of a call, press the upper part of the volume key.
- To decrease the volume, press the lower part of the volume key.

If an accessory with its own loudspeaker is connected to your phone, the volume keys adjust the volume for that accessory.




- **END A CALL**

- Press  .

- **ANSWER A CALL**

When someone calls you, the phone alerts you (see "Ringing options" on page 77) and **Calling** flashes on the display.

- To answer, press any key except Decline or  .

Caller ID

This is a network service that helps identify incoming calls. Contact your service provider for details.

When Caller ID is active, your phone may display the caller's phone number. The caller's name may also appear, if their name and number have been stored in the phone book (see "Use the phone book" on page 42), or if the wireless network supports it.



- **REJECT A CALL**

- Press Decline.

- **REDIAL THE LAST-DIALED NUMBER**

- Press  twice.

Dial any of the 10 last-dialed numbers

- 1 Press  .
- 2 Scroll to the number you want to redial.
- 3 Press  again.

6

6 The menu


Your phone offers many functions that are grouped in menus and submenus. Access these menus with the selection keys and scroll keys, or by entering the appropriate shortcut number.

• USE THE MENUS

Selection keys


Below the screen, you will find two selection keys. Their functions depend on the text above the keys.

For example, in this screen, the word **Menu** appears above the selection key. Press the key to enter the menu function. Similarly, press the key under **Names** to access phone book functions.

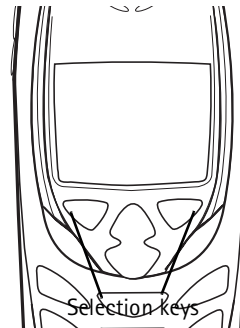

Scroll keys


Use the scroll keys, located just below the screen, to scroll through your phone's menus and phone book.

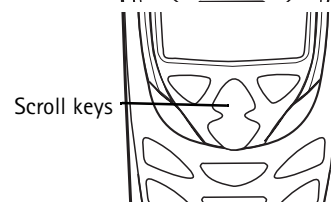

Scroll bar

While using your phone's menus, a scroll bar appears at the far right of the screen. This bar indicates where you are in the menu. Each numbered "tab" on the bar represents a different menu item.

For example, press **Menu** once. The scroll bar appears with the first (top) tab displayed. A different tab appears each time you press \wedge or \vee .

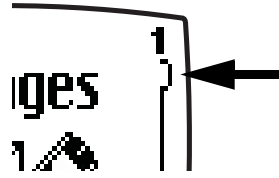


Help text

Many menu items have brief help text. To view the help text, scroll to the menu item and wait for about 15 seconds. Press **More** to see the next page of the text or **Back** to exit.

• MENU SHORTCUTS

When you scroll to a menu item, the menu number appears on the screen above the scroll bar. If you learn some of these menu numbers, you can use them to quickly get to different features instead of having to scroll to them through the menu.

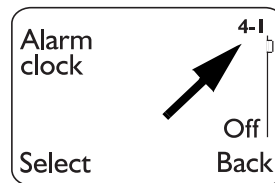

- To use a shortcut, press **Menu** and then the menu number.
- For faster access, press **Menu**, then 0, then the menu number. This is faster access only if Menu 10 is active.

For example, to get to **Alarm Clock**, press **Menu 0 4 1**.

6 • LIST OF MENU SHORTCUTS

Here is an abbreviated list of menu items and their menu shortcuts. Later chapters tell you how to work with the menus and explain their functions.

Note: Some items may not appear due to the SIM card configuration and service available.

Messages   1

- 1 Write message
- 2 Inbox
- 3 Chat
- 4 Outbox
- 5 Archive
- 6 Templates
- 7 My folders
- 8 Erase all
- 9 Distribution lists
- 10 Voice messages
 - 1 Listen to voice messages
 - 2 Voice mailbox number
- 11 Info messages
 - 1 Info service
 - 2 Topics
 - 3 Language
 - 4 Info topics on SIM card
 - 5 Read
- 12 Service command editor
- 13 Message settings
 - 1 Send settings
 - 1 Default profile (other sets may appear)
 - 1 Message center number
 - 2 Messages sent as
 - 3 Message validity
 - 4 Default recipient number

- 5 Delivery reports
- 6 Use GPRS
- 7 Reply to you via same center
- 8 Message profile name

2 Call log



- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Clear call lists
 - 1 All
 - 2 Missed
 - 3 Received
 - 4 Dialed
- 5 Call timers
 - 1 Duration of last call
 - 2 Duration of all calls
 - 3 Duration of received calls
 - 4 Duration of dialed calls
 - 5 Clear timers
- 6 Call costs
 - 1 Last call units
 - 2 All calls units
 - 3 Call cost settings
- 7 GPRS data counter
 - 1 Data sent in last session
 - 2 Data received in last session
 - 3 All sent data
 - 4 All received data
 - 5 Clear counters
- 8 GPRS connection timer
 - 1 Duration of last session
 - 2 Duration of all sessions
 - 3 Clear timers

3 Profiles

-
- 1 Normal
 - 1 Select
 - 2 Customize
 - 1 Ringing options
 - 2 Ringing tone
 - 3 Ringing volume
 - 4 Vibrating alert
 - 5 Message alert tone
 - 6 Keypad tones
 - 7 Warning tones
 - 8 Profile logo
 - 9 Accepted caller groups
 - 10 Profile name
 - 3 Timed
 - 2 Silent
 - 3 Meeting
 - 4 Outdoor
 - 5 My profile 1
 - 6 My profile 2

4 Settings

-
- 1 Alarm clock
 - 2 Time settings
 - 1 Clock
 - 2 Date
 - 3 Auto update of date and time
 - 3 Call settings
 - 1 Call Forwarding
 - 1 Forward all voice calls
 - 2 Forward if busy
 - 3 Forward if not answered
 - 4 Forward when phone off or no coverage

- 5 Forward when not able to take calls
- 6 Forward all fax calls
- 7 Forward all data calls
- 8 Cancel all call forwarding
- 2 Anykey answer
- 3 Automatic redial
- 4 1-touch dialing
- 5 Call waiting
- 6 Summary after call
- 7 Send own caller ID
- 8 Line for outgoing calls
- 4 Phone settings
 - 1 Language
 - 2 Cell info display
 - 3 Welcome note
 - 4 System selection
 - 5 Confirm SIM service actions
 - 6 Help text activation
 - 7 Wake up tone
- 5 Tone settings
 - 1 Ringing options
 - 2 Ringing tone
 - 3 Ringing volume
 - 4 Vibrating alert
 - 5 Message alert tone
 - 6 Keypad tones
 - 7 Warning tones
 - 8 Accepted caller groups
- 6 Accessory settings
 - 1 Headset
 - 1 Accessory profile
 - 2 Automatic answer
 - 2 Handsfree
 - 1 Accessory profile
 - 2 Automatic answer
 - 3 Lights
 - 3 Loopset

6


- 1 Use loopset
- 2 Accessory profile
- 3 Automatic answer
- 7 Voice commands
- 8 GPRS dial-up settings
 - 1 Active access point
 - 2 Edit active access point
 - 1 GPRS access point
 - 2 Alias for access point
- 9 Security settings
 - 1 PIN code request
 - 2 Call restrictions
 - 1 Outgoing calls
 - 2 International calls
 - 3 International calls except to home country
 - 4 Incoming calls
 - 5 Incoming calls if roaming
 - 6 Cancel all call restrictions
 - 3 Fixed dialing
 - 4 Closed user group
 - 5 Security level
 - 6 Change access codes
 - 1 Change security code
 - 2 Change PIN code
 - 3 Change PIN2 code
 - 4 Change restriction password
- 10 Restore factory settings

5 Games



- 1 Select game
 - 1 Snake II
 - 2 Snowboarding
 - 3 Bumper
 - 4 Pairs II
- 2 Game services

- 3 Settings
 - 1 Game sounds
 - 2 Game lights
 - 3 Shakes

6 Calculator 


7 To-do list 

8 Calendar 

9 Infrared 

10 Extras 

- 1 Voice memo
- 2 Countdown timer
- 3 Stopwatch

11 Services 

- 1 Home
- 2 Bookmarks
- 3 Service inbox
- 4 Settings
 - 1 Active service settings
 - 2 Edit service settings
 - 1 Settings name
 - 2 Homepage
 - 3 Session mode
 - 4 Connection security

6

Note: The following menu items appear depending on which data bearer is available. Your phone supports three data bearers: Data (CSD), USSD, and GPRS. Contact your service provider for more information about network features.

5 Data bearer

Data (CSD)	or	USSD	or	GPRS
6 Dial up number		14 Service code		18 GPRS connection
7 IP address		15 Address type		19 GPRS access point
8 Authentication type				20 IP address
9 Data call type				21 Authentication type
10 Data call speed				22 Login type
11 Login type				23 User name
12 User name				24 Password
13 Password				

3 Appearance settings

- 1 Text wrapping
- 2 Show images

4 Download settings

- 1 Caching
- 2 Cookies

5 Authority certificates

- 5 Go to address
- 6 Clear cache

12 SIM services



(If supported by your SIM card and service provider)

- **PHONE BOOK MENU**

- 1 For access to the phone book and its menus, switch back to the Start screen.

- 2 Press **Names**.

These options are available:

- 1 **Search**

- 2 **Add name**

- 3 **Edit name**

- 4 **Erase**

- 5 **Copy**

- 6 **Add number**

- 7 **Settings**

- 1 Memory in use

- 2 Phonebook view

- 3 Memory status

- 8 **1-touch dialing**

- 9 **Voice tags**

- 10 **Info numbers**

- 11 **Service nos.**

- 12 **Own numbers**

- 13 **Caller groups**

7

7 Enter letters and numbers

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:


- Standard text input, for making entries in the phone book, entering calendar notes, and renaming caller groups
- Predictive text input, for writing text messages and chat. [picture messages?] [which is the default mode? does it depend on the application?]

- **STANDARD TEXT INPUT**


ABC mode

The ABC icon appears as visual confirmation.

- 1 Find the key that has the letter you want to enter.
- 2 Press it as many times as needed for the letter to appear on the screen.

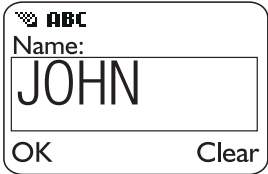

For example, to enter the name John:

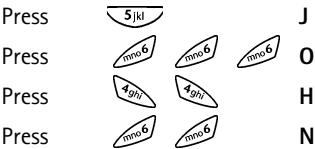



Depending on the selected display language, the following characters may be available.

Key	Characters	Key	Characters
1	. , ' ? ! - 1	7	PQRS7
2	ABC2	8	TUV8
3	DEF3	9	WXYZ9
4	GHI4	0	space, 0
5	JKL5	*	(See page 36 for details.)
6	MNO6	#	Changes letter case

Note: Some networks may not support all language-dependent characters.

 ENTER SPACES AND PUNCTUATION


- To enter a space, press  once.
- To enter punctuation, press  repeatedly until the character you want appears.

ERASE MISTAKES

If you make a mistake:

- Press **Clear** to erase that character.
- Press **Clear** as needed to erase more than one character, or press and hold **Clear** to erase the entire field of characters.

CHANGE LETTER CASE


- To switch between uppercase and lowercase letters, press  .

The **ABC** icon switches to **abc**, showing you are using lowercase letters.


7

123 mode

To enter numbers, you can:


- Press and hold  and switch to 123 mode. Your phone displays the **123** icon. Press the appropriate number key to enter a number.
- OR
- While in ABC mode, press and hold the corresponding number key until the number appears.

As with the ABC mode, if you make a mistake

- Press **Clear** to erase that character.
- To switch back to the ABC mode, press and hold  again.



Use special characters

IN ABC MODE

- 1 Press and hold . A screen appears with the following special characters available:
.,?!:; - + # * () ' " _ @ & \$ £ % / < > ; i \$ = □ € ¥
- 2 Use scroll keys to select the character you want, then press **Insert**.

IN 123 MODE:


You can access the following special characters only in 123 mode:

- * Use this character  to send command strings to the network. Contact your service provider for details.
- + Use this character as a prefix for dialing international numbers.
- p Use this character to create a pause that occurs when dialing a number. Numbers entered to the right of this special character are automatically sent as touch tones after a 2.5-second pause.
- w This character creates a wait; digits to the right of the **w** are not sent until you press .

• PREDICTIVE TEXT INPUT

This method allows you to write text using a built-in dictionary. You can also add new words to the dictionary. With predictive text input, you only need to press each number key once for each letter.

For example, to write *Nokia* with the English dictionary selected:

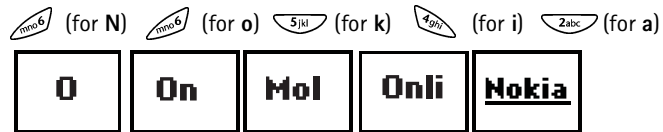

 










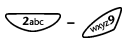




The display shows the above words for each key pressed.

Since the displayed word changes after each key stroke, disregard the word until you have keyed in all the characters.

7

Predictive text input tools


	Use for word entry. Press each key only once for each letter.
	Press to view the next matching word if the underlined word is not the word you intended.
Spell	Press to add a new word to the dictionary.
	Press once to accept a word and add a space.
	Press and hold to enter a number.  indicates that you can input numbers.
	Press to change the character case.  indicates uppercase.  indicates lowercase.
	Press to select predictive input or standard text input.  and  indicate standard text input.  ,  , and  indicate predictive text input.
Clear	Press once to delete the character to the left of the cursor.
	Press once to add a punctuation mark. To change the underlined symbol, press  repeatedly until the desired symbol appears.
160	Maximum number of characters available. Appears in the top right corner of the screen and counts down for each character added.

SELECT A LANGUAGE AND TURN ON PREDICTIVE TEXT INPUT



 
 
 
- 1 Press **Menu**, then press **Select**.




- 2 Scroll to **Write messages**, then press **Select**.
- 3 Press **Options**, scroll to **Dictionary**, then press **OK**.
- 4 Scroll to the language you want, then press **OK**.
T9 dictionary activated appears.


TURN OFF PREDICTIVE TEXT INPUT

- To switch from predictive text input to traditional text input, repeat steps 1 through 3 above, then select **Dictionary off**.
- OR
- While writing the message, press  to switch between predictive text input and standard text input.


WRITE WITH PREDICTIVE TEXT INPUT


1 Press each key once for each letter.
 For example, to write "hello" press , , , , .

- Do not pay attention to the word on the screen until you have finished writing the word.
- Refer to the character counter in the top right of the screen. The counter shows how many characters are available.
- Press **Clear** to delete a character.
- Press  to change the character case.
- Press and hold the respective number key to insert a number.
- Press  to insert a punctuation mark. If it is not correct, press  repeatedly to find the desired punctuation mark.

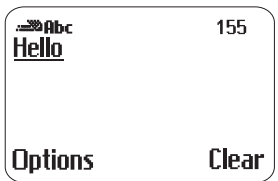


7

- To insert a symbol, press and hold . The symbol screen appears. Select the desired symbol and press Insert.

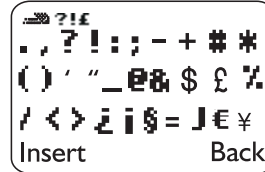



- 2 When you have finished writing, check the underlined word to see if it is the word you intended to write.

If the word is correct

- Insert a punctuation mark, if needed. Then press  to confirm the word, enter a space, and begin writing the next word.

If the word is not correct

- Press  repeatedly until the desired word appears, then press  to confirm the word.

OR

- Press **Options**, scroll to **Matches**, then press **OK**.
- Scroll to the correct word and press **Use**.
- Start writing the next word.

Note: When you enter a period to end a sentence, the phone switches to **abc** mode so that the first letter in the next word will be uppercase.

If the ? character appears after the word

The word you intended to write is not in the dictionary.

- To add the word to the dictionary press **Spell**. See "Adding the desired word to the match list."




ADD THE DESIRED WORD TO THE MATCH LIST

If no matches are found in the predictive text input mode, you can add the word to the dictionary.


- 1 Press  repeatedly until **Spell** appears in place of **Options**.

- 2 Press **Spell** and enter the word(s) using standard text input (see "Standard text input" on page 34).
- 3 Press **OK** to save the word(s).

INSERT NUMBERS

- 1 To add a number to the message, press and hold  until  appears.
- 2 Key in the desired numbers, then press and hold  to return to **ABC** mode.



INSERT SYMBOLS

- 1 Press and  hold until the symbol screen appears.
- OR

Press **Options** and scroll to **Insert symbol**.

- 2 Select the desired symbol and press **Insert**.

WRITE COMPOUND WORDS

- 1 Write the first part of the word and press  to accept it.
- 2 Write the last part of the compound word and press  to enter the word in memory.

8 Use the phone book

Use the phone book to store names and phone numbers.

- A phone book entry can consist of a number only, a name and number, or a name only.
 - Names are saved in the phone book memory and/or SIM memory. If you try to save a name that already exists, the phone asks if you want to replace the existing name.
- **SAVE NAMES, NUMBERS, AND EMAIL ADDRESSES**

Save a name, number, and Email address

- 1 Enter the phone number and press **Save**.

Note: For international dialing, see page 65.

- 2 Enter a name, then press **OK**.
The phone book list appears (and the name you just entered is highlighted?)
- 3 Press **Details**, then press **Options**.
- 4 Scroll to **Email address** and press **OK**.
- 5 Enter the email address and press **OK**.
Name is stored to phone memory appears.

Note: All Phone book entries that contain email addresses are automatically saved in phone memory. Email addresses cannot be saved in SIM memory.

Save a number only

- 1 Enter the phone number.
- 2 Press and hold **Save**.



The number is saved in your phone book. You can add a name or email address to it later.

Save a name and number while in a call

- 1 Press **Options**.
- 2 Scroll to **Names**, then press **Select**.
- 3 Scroll to **Add entry**, then press **Select**.
- 4 Enter the name, then press **OK**.
- 5 Enter the phone number, then press **OK**.

Save an Email address

- 1 Press **Names**.
Search appears highlighted.
- 2 Press **Select**.
The **Name** box appears.
- 3 Enter the name you want to add an email address to and press **OK**.
OR
Press **^** or **▼** to scroll through the name list until you find the name.
- 4 Press **Details**, then press **Options**.
- 5 Scroll to **E-mail address** and press **Select**.
- 6 Enter the email address, then press **OK**.
A confirmation message appears.

If your phone book is full

If your phone book is full, you can save the phone number to another memory or replace an existing entry.

- Scroll to the entry you want to replace, then press **OK**.

8

• FIND NAMES IN THE PHONE BOOK

From the Start screen

- Press \wedge or \vee .
OR
- Press **Names**. **Search** appears highlighted.
- Press the number key that matches the first letter of the name.

While in a call

- 1 Press **Options**.
- 2 Scroll to **Names** and press **Select**.
Search is highlighted.
- 3 Press the number key that matches the first letter of the name.
OR
- 4 Press **Select**.
- 5 When the box appears, enter the name and press **OK**. You can enter just the first few letters of the name, then press **OK**. Your phone will show the closest matching name.

• EDIT NAMES AND NUMBERS

At the Start screen:

- 1 Recall the stored name, press **Details**, then press **Options**.
- 2 Scroll to **Edit**, then press **Select**.
- 3 Edit the name, then press **OK**.
- 4 Edit the number, then press **OK**.

• ERASE NAMES AND NUMBERS

Erase stored names and numbers

At the Start screen:

- 1 Recall a stored name.
- 2 Press **Details**, then **Options**.
- 3 Highlight **Erase**, then press **Select**, then **OK**.

Note: You cannot undo Erase functions, so be careful!

Erase your entire phone book

Caution! This feature erases your entire phone book and can't be undone!

- 1 Press **Names**.
- 2 Scroll to **Erase** and press **Select**.
- 3 Scroll to **Erase all** and press **Select**.
- 4 Scroll to the memory (Phone or SIM card) you want to erase, then press **Select**.
- 5 When you see **Are you sure?**, press **OK**.
- 6 When the **Security code:** prompt appears, enter your security code and press **OK**.

• ABOUT PHONE BOOK MEMORY

Your phone has two types of memory: internal memory and SIM card memory. You can save names and numbers in either memory. The internal phone memory can store up to [500?] names and numbers. The amount of names and numbers you can store in SIM card memory is dependent on SIM card capacity. Please check with your SIM card provider or carrier.

Switch between internal memory and SIM memory

- 1 At the Start screen, press **Names**.
- 2 Scroll to **Options**, then press **Select**.
- 3 Scroll to **Memory in use**, then press **Select**.
- 4 Scroll to **SIM card** or **Phone**, then press **OK**.

Note: Whenever you insert a SIM card for the first time, or if you insert a different SIM card, SIM card memory is automatically selected.

9 Check call history

Your phone provides a call log that registers information about calls you make and receive. The call log keeps track of the following:

- Missed calls.
- Numbers from which you've received calls.
- Numbers you've dialed.
- The amount of time you've spent on calls.
- The amount of data sent and received over GPRS.
- The amount of time you've spent online for data transfers over GPRS.




• CALL LOG

Check dialed calls

Your phone saves the last 10 numbers you've dialed.

- 1 Press **Menu** 2 3.
- 2 Scroll to the number you want to see information about.
- 3 To dial the number, press ; for other options, press **Options** (see "Options in call lists[check against proto]" on page 47).

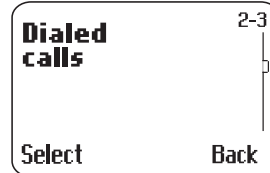

Check received calls

Your phone saves the phone numbers of the 10 most recent calls you've answered, if the caller's number was available.

- 1 Press **Menu** 2 2.
- 2 Scroll to the number you want to see information about.
- 3 To dial the number, press ; for other options, press **Options** (see "Options in call lists[check against proto]" on page 47).

Check for missed calls


Your phone saves the numbers and names (if available) of the last 10 callers that have tried unsuccessfully to reach you.

The screen tells you how many calls were missed. If the caller's name and number are stored in memory, that information appears on the display.


AFTER MISSING A CALL

- 1 Press **List**.

If you have missed more than one call, you can scroll through the list of numbers.

- 2 To dial the displayed number, press  .
- 3 For other options, press **Options**. (See "Options in call lists" on next page for more information.)
- 4 To exit, press **Back**.

AT ANY TIME

- 1 Press **Menu 2 1**.
- 2 Scroll to the number you want to see information about.
- 3 To dial the number, press  .
- 4 For other options, press **Options** (see "Options in call lists" below).

OPTIONS IN CALL LISTS [CHECK AGAINST PROTO]

When you view the missed calls, received calls, or dialed calls list and press **Options**, a list of options appears on your phone's screen.

Call time shows the date and time of the last call. Use the scroll keys to scroll through up to five recent call dates/times for the displayed phone number.

Edit number allows you to edit the displayed number and save it with a name to your phone book.

Save allows you to enter a name for the number and save both to your phone book.

Erase erases the number from the call list.

View number displays the phone number if the caller's name is stored in the phone book.

Clear call lists

This feature clears all the missed, received, and dialed call lists.

Caution: You cannot undo this operation.

- 1 Press **Menu 2 4**.
- 2 Scroll to **All, Missed, Dialed, or Received**, then press **OK**.


Note: Missed, received, and dialed calls lists are also erased when you change the phone security setting (see "Manage phone security" on page 89) or when you use a SIM card that is not one of the five most recent cards used with the phone.

• CALL TIMERS

Your phone automatically tracks the amount of time you've spent on calls.

If you have two phone lines

If you have subscribed to a second phone line (see "Work with two phone lines" on page 68), call timers are separate for each of your phone lines. When you view call timers, the call timers that are shown are for the currently selected outgoing line. However, if you view call timers while you are in a call, the call timers that are shown are for the line you are using at that moment.

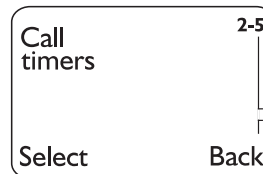

View the call duration

- 1 Press **Menu 2 5**.
- 2 Scroll to **Duration of last call, Duration of all calls, Duration of received calls, or Duration of dialed calls**.

Reset call timers to 0

- 1 Press **Menu 2 5**.

- 2 Scroll to **Clear timers**, then press **OK**.
- 3 Enter your security code, then press **OK** again.

Show call timer during calls

- 1 Press **Menu 2 5**.
- 2 Scroll to **Duration of last call**, then press **Details**.
Current call is displayed.
- 3 Press **Select**.
- 4 Scroll to **On**, then press **OK**.

During a call, the amount of time spent in that call is displayed.

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, and so forth.

• CALL COSTS

This network service allows you to check call costs. You can view the last call cost, or the total cost of all calls made or received since the counters were reset.

Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, taxes, and so forth.

View call costs

- 1 Press **Menu 2 6**.
- 2 Scroll to **Last call units** (cost of last call, or current call if applicable) or **All calls units** (cost of all calls since counters were last reset).

Clear call cost counters

- 1 Press **Menu 2 6 3**.
- 2 Scroll to **Clear counters**, then press **OK**.
- 3 Enter your PIN2 code, then press **OK**.

Show costs in units or currency

This feature allows you to choose whether you want to show call costs and set call cost limits in charging units or in dollars. (If you choose charging units, contact your wireless service provider for information about the cost of a charging unit.) This feature appears only if supported by your service provider and SIM card.

- 1 Press **Menu 2 6 3**.
- 2 Scroll to **Show currency** or **Show units**, then press **Select**.
- 3 If you selected **Currency**:
 - Enter the unit price, then press **OK**.
 - Enter the currency name, then press **OK**.
- 4 If you chose **Units**, call costs and call cost limits are measured in charging units as agreed to by your service provider.

Limit your call costs

This feature helps you limit the amount of money you spend on your mobile phone bills. When the limit you set is reached, no calls can be made except for emergency calls.

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, and so forth.

SET A LIMIT

- 1 Press **Menu 2 6 3**. Scroll to **Call cost limit**.
- 2 Enter your PIN2 code (see "about security codes" on page 89), then press **OK**.
- 3 Scroll to **Set**, then press **OK**.
- 4 Enter the number of charging units or dollars, then press **OK**.

Tip: Press **#** to insert a decimal point.

The number of remaining units is shown when the screen is clear.

REMOVE A LIMIT

- 1 Follow steps 1 and 2 above.
- 2 Scroll to **Off**, then press **OK**.

• DATA CALLS

In addition to keeping track of voice calls, your phone's call log records information about data calls. You can check the amount of data transferred over the network via GPRS. You can also keep track of how much time you spend online.

Check the data counter

Note: All data counters are displayed in bytes.

- 1 Press **Menu** 2 7.
- 2 Scroll to the information you are interested in viewing.

Your options include the following:

- Data sent in last session
- Data received in last session
- All sent data
- All received data

Clear the data counter

- 1 Press **Menu** 2 7.
- 2 Scroll to **Clear counter**, then press **OK**.
- 3 Enter your PIN2 code, then press **OK**. [the GPRS spec just says 'security code' but the spec for Advice of charge says PIN2 code if supported by SIM card -- which is correct here?]

Check the connection timer

Note: The time is displayed in hours:minutes:seconds format.

- 1 Press **Menu** 2 8.

9

2 Scroll to the information you are interested in viewing.

Your options include the following:

- Duration of last session
- Duration of all sessions

Clear the connection timer

- 1 Press **Menu 2 8**.
- 2 Scroll to **Clear timers** and press **OK**.
- 3 Enter your security code, then press **OK**.

10 Advanced calling features

10

• ACTIVE CALL OPTIONS

Use call waiting

This network service lets you receive an incoming call when you're already in a call. (Contact your service provider for availability.) The phone beeps to let you know of the incoming call.

ACTIVATE/CANCEL CALL WAITING


- 1 Press **Menu** 4 3 5.
- 2 Scroll to **Activate** or **Cancel**.
- 3 Press **OK**.


CONFIRM CALL WAITING STATUS

- 1 Press **Menu** 4 3 5.
- 2 Press **Select**.
- 3 Scroll to **Status** and press **OK**.

The display shows **Active: Voice calls**. Scroll to check the status of other features such as fax or asynchronous data services.

ANSWER A WAITING CALL

- 1 Your phone signals when you have a call waiting.
- 2 Press  to put the current call on hold and answer the waiting call.
OR
Press **Options**, then press **Select**.

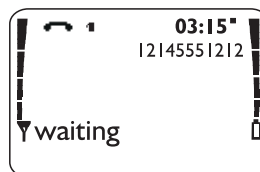


REJECT A WAITING CALL

You can just let the phone ring, or follow the steps below.

- Press Decline,



OR

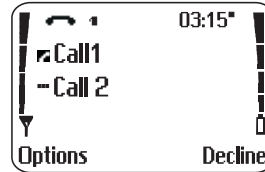- 1 Press Options and scroll to **Reject**.
- 2 Press Select.




SWITCH BETWEEN CALLS

- Press  or Swap.

The  icon represents the active call and the  icon represents the call on hold.

END THE ACTIVE CALL

- Press .

The held call becomes active.


OR

- 1 Press Options and scroll to **End active call**.
- 2 Press Select.

THIRD CALL WAITING

If you have both an active and a held call and a third call is waiting, choose one of the following options.

DROP AN ACTIVE CALL TO ANSWER THE WAITING CALL

- Press .

The held call is unaffected.

END THE ACTIVE CALL AND HELD CALL TO ANSWER THE WAITING CALL

- 1 Press Options.
- 2 Scroll to **End all calls**.
- 3 Press Select.

Use in-call options


During a call, press **Options** to see the In-call menu. Your choices are:

Choice	What it does
Hold or Unhold	Holds or releases a call.
New call	Makes a call when you have a call in progress.
Touch tones	Sends touch tones.
End all calls	Ends all calls.
Names	Switches you to the phone book.
Menu	Switches you to the menu.
Mute	Mutes a call.

Put a call on hold

- 1 To put a call on hold, press **Hold**.
- 2 To return to the call, press **Unhold**.

Make a new call

- 1 Enter the second phone number, or recall it from the phone book.
- 2 Press .


 
OR

- 1 Press **Options**.
- 2 Scroll to **New call**, then press **Select**.
- 3 Enter the second phone number, or recall it from the phone book.
- 4 Press **Call**.

With either method, the first call is automatically put on hold.

SWITCH BETWEEN TWO CALLS IN PROGRESS

- Press  or **Swap**.

The  icon represents the active call and the  icon represents the call on hold.

END THE ACTIVE CALL

- Press .

The held call becomes the active call.

Send touch tones

When you press the keys during a call, your phone generates sounds known as touch tones. Use touch tones to access many automated, over-the-phone services such as voice mail, checking airline arrival/departure times, and bank balances.

Note: You must be on an active call to send touch tones.

SET TOUCH-TONE LENGTH

- 1 Press **Menu** 4 5 5.
- 2 Scroll to **Short** (1/10 second) or **Long** (1/2 second)
- 3 Press **OK**.

SAVE TOUCH TONE STRINGS

A touch-tone string is a series of tones in a certain sequence. Use touch tone strings to send and receive information with your phone. For example, you can save your office voice mailbox number along with your password for easy access to your messages.

Store touch tone strings the same way you save phone numbers (see "Save names, numbers, and email addresses" on page 42).

For frequently used strings of numbers, you can save an entire sequence of digits in your phone book and send it as a touch tone string.

SEND A TOUCH TONE STRING

- 1 Press **Options**.
- 2 Scroll to **Touch tones** and press **OK**.

- 3 Enter a touch tone string or recall a touch tone string from the phone book and press **OK**.

10

End all calls

- 1 Press **Options**.
- 2 Scroll to **End all calls**, then press **Select**.

Access the phone book

This option appears in the menu as **Names**.

- 1 Press **Options**.
- 2 Scroll to **Names** and press **Select**. Now all your phone book functions are available. See "Use the phone book" on page 42. for details.

Access menus

- Scroll to **Menus** and press **OK** to access any of your phone's menus.

Mute/unmute the microphone

You can mute and unmute your phone's microphone while a call is in progress. The difference between *mute* and *hold* is that mute lets you hear the other caller.

- 1 Press **Options**.
- 2 Scroll to **Mute**, then press **Select**.
- 3 To unmute the microphone, press **Unmute**.


Muting and unmuting also affects the microphones of any accessories connected to the phone.

Conference calls

This network service allows you to make conference calls with your phone. Check with your service provider for details.

Make a conference call

- 1 Make a normal call to the first person.
- 2 Press **Options** and scroll to **New call**.

- 3 Press **Select**, recall or dial the number of the next party you want to include, then press **Call**.
- 4 After the other party answers, press **Options**.
- 5 Scroll to **Conference**, then press **Select**.
- 6 To add other parties to the call, repeat steps 2 through 5.
- 7 To end the conference call, press .

Have a private conversation with a participant

- 1 While in a conference call, press **Options**.
- 2 Scroll to **Private**, then press **Select**.
A list of the participants appears.
- 3 Scroll to the person you want to speak with, then press **OK**.
The other participants can continue talking with each other.
- 4 To rejoin the conference call, press **Options**.
- 5 Scroll to **Conference**, then press **Select**.

Drop a participant from the conference call

- 1 While in a conference call, press **Options**.
- 2 Scroll to **Private**, then press **Select**.
A list of the participants appears.
- 3 Scroll to the person you want to drop, then press **OK**.
The other participants can continue talking with each other.
- 4 Press **Options**.
- 5 Scroll to **End active call**, then press **Select**.

Transfer a call

When you have one active and one held call, you can connect the two calls and disconnect yourself from the call.





Note: Your network must support this feature.

- During a call, press **Options**, scroll to **Transfer**, then press **Select**.

• CALL FORWARDING

This network service lets you forward your incoming calls to another phone number.

Note: If you have subscribed to a second phone line, call forwarding works separately for each line. Make sure you have selected the line you want before you set up any call forwarding. The following icons appear on your phone's screen:

-  Incoming voice calls are being forwarded to another number.
-  You have forwarded all voice calls that are received on line 1.
-  You have forwarded all voice calls that are received on line 2.
-  You have forwarded all voice calls that are received on lines 1 and 2.

Activate call forwarding

- 1 Press **Menu 4 3 1** (Settings, Call settings, Call forwarding).

Scroll to one of the following options:

Forward all voice calls

Forwards all voice calls without ringing.

Forward if busy

Forward if not answered

Forward when phone off or no coverage

Forward when not able to take calls

Combines the previous three types, and lets you choose a delay time between 5 and 30 seconds.

Forward all fax calls

Forward all data calls

Cancel all call forwarding

- 2 Press **Select**.
- 3 **Activate** is highlighted; press **OK**.
- 4 Select **Voice Mail**
OR
Select **Other number**.
- 5 If you choose **Other number**, enter the phone number to which you want to forward calls, then press **OK**.

You can press **Number** to see if you entered the phone number correctly.

Cancel call forwarding

- 1 Press **Menu 4 3 1** (Settings, Call settings, Call forwarding).
- 2 Scroll to **Cancel** and press **OK**.

Note: Canceling all call forwarding may also cancel any automatic forwarding of calls to voice mail that your service provider has activated for you. Also, this option may cancel your call forwarding service. Contact your service provider for details.

Check call forwarding status

- 1 Press **Menu 4 3 1** (Settings, Call settings, Call forwarding).
- 2 Scroll to the call forwarding option you want to check, press **Select**.
- 3 Scroll to **Check status**, then press **OK**.

Note: Status is not available for **Forward when not able to take calls**.

You can press **Number** to see which phone number the calls are being forwarded to.

- **ANYKEY ANSWER**

- **AUTOMATIC REDIAL**

This feature redials the number you're trying to call up to ten times.

Note: Automatic redial will not work while you make or answer another call.

Activate automatic redial

- 1 Press **Menu** 4 3 3.
- 2 Scroll to **On**, then press **Select**.
- 3 Press and hold **Back** to return to the Start screen.

If the number you dial is busy, your phone immediately redials the number. If it is still busy, your phone will redial the number up to nine more times.

- **CALLING CARD**

You can store two calling card numbers in your phone's memory.

Save calling card information

- 1 Press **Menu** 4 4 2.
- 2 Scroll to the calling card information you want to change, then press **Options**.
- 3 Scroll to **Edit**, then press **OK**.
- 4 Enter your security code, then press **OK**.
- 5 At **Dialing sequence**, press **Select**. Scroll to the dialing sequence your card uses (see chart on the next page) then press **Select**.

Dialing sequence	Use for cards that require you to:
Access no. + Phone no. + Card no.	Dial the 1-800 access number, then phone number, then card number (+ PIN if required).
Access no. + Card no. + Phone no.	Dial the 1-800 access number, then card number (+ PIN if required), then phone number.
Prefix + Phone no. + Card no.	Dial the prefix (any numbers that must precede the phone number) and phone number you want to dial, then card number (then PIN, if required).


Note: The order of the following steps may vary, depending on which dialing sequence your card uses.

- 6 Enter the access number (usually the 1-800 number listed on the back of the calling card), then press **OK**.
- 7 Enter the card number and/or PIN, then press **OK**.
- 8 Your phone displays **Save changes?** Press **OK**.
- 9 Scroll to **Card name:** and press **Select**.
- 10 Enter the card name, then press **OK**.

Choose a calling card

- 1 Press **Menu 4 4 2**.
- 2 Scroll to the card you want to use, then press **Options**.
- 3 **Select** is highlighted; press **OK**.
- 4 Enter your security code, then press **OK**.

Make a calling card call

- 1 Enter the phone number, including any prefix (such as 0 or 1) that your calling card may require. See your calling card for instructions.
- 2 Press and hold  until your phone displays **Card call**.
- 3 Your phone displays **Wait for tone, then press OK**. Wait for the tone, then press **OK**.
- 4 Your phone displays **Wait for tone, press OK again**. Wait for the tone, then press **OK**.

This procedure may not work with all calling cards. Follow the directions on the back of your calling card or contact your long distance company for more information.

• SEND YOUR OWN NUMBER IN CALLER ID

You can determine, for each call you make, whether your telephone number appears on another phone's caller ID.

In most service areas, when you call others, your name is presented to their caller ID (if they subscribe to this service). With **Own number sending**, you can block or send the display of your number when you make a call.

Note: **Own number sending** might not be available in all wireless systems. Contact your service provider for details and availability. Also note that this feature is effective only when you call a number that is equipped with caller ID.

Set by network

On

Off

• 1-TOUCH DIALING

Assign a name and number to a 1-touch dial location so that when you press this key, the associated number automatically dials.

Note: The first nine numbers stored in SIM memory are automatically stored in keys 2 through 9 as 1-touch dial numbers. You can assign new numbers to the keys, but the names and numbers must be already stored in the phone book. Refer to "Use the phone book" on page 42 for more information.

Key 1 is used to access your voice mail. Check with your service provider for details. Also, any key can be set up to dial emergency numbers such as 911.

Assign a number to a 1-touch dial key


- 1 Press **Names** and scroll to **1-touch dialing**.
- 2 Press **Select**. **2 (empty)** appears.
If **Assign** appears, Key 2 does not have a phone number assigned to it. If **Options** appears, then the number shown is assigned to Key 2.
- 3 Press **Assign**. A list of names appears.
- 4 Scroll to the phone book entry you want to assign to this key, press **OK**, and **Options** appears.
Now you can edit the number if needed.




Activate 1-touch dialling



- 1 Press **Menu** 4 3 4.
- 2 Scroll to **On**, then press **Select**.

Call a 1-touch dial number

- Press and hold the appropriate key, or press the key then press . The phone dials the number.

1-TOUCH DIALING FOR KEY 1

- If your phone is set up for voice mail, you can press and hold  and your phone dials voice mail.

- If you assign a 1-touch number to key 1, press , then press . The phone dials the 1-touch number.

10



Change 1-touch dialing numbers


- 1 Press **Names**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to the key that you want to change and press **Options**.
- 4 Scroll to **Change** and press **Select**.
A list of names appears.
- 5 Scroll to the new name you want to assign to this key and press **OK**.

Erase 1-touch dialing numbers

- 1 Press **Names**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to the key that you want to erase and press **Options**.
- 4 Scroll to **Erase** and press **Select**.
- 5 Press **OK** to confirm.

• MAKE AN INTERNATIONAL CALL

- 1 Press  twice to enter the international dialing prefix (+).
- 2 Enter the country code, area code, and phone number, and press .

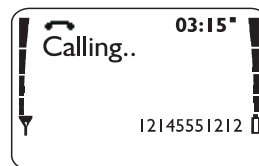

10 • USE THE PHONE BOOK

To use phone book menus, begin at the Start screen and press **Names**. Then, scroll through the menus to select a particular menu or option.

Option	Action
Search	Searches for a specific name.
Add entry	Enters a new name and number.
Erase	Erases names/numbers. You can choose to erase individual names/numbers, or you can erase all information at one time.
Copy	Copies names/numbers between your phone and SIM card.
Options	Chooses the memory source (SIM card or internal), phone book view, and shows the memory status.
1-touch dialing	Assigns up to nine 1-touch dial locations. Refer to "1-touch dialing" on page 63 for more information.
Voice tags	Programs voice-activated dialing
Caller groups	Renames or changes the ringing tone for a caller group.

11 Use voice features

11

The voice features in your phone make communication more convenient. You can check messages from friends or business associates, record a voice memo, and use voice dialing and voice commands for handsfree operation.

• ABOUT VOICE MAIL

Voice mail is a network feature that allows callers to leave a voice message for you when you are not able to take the call.

To use voice mail, you must have:

- A voice mail subscription
- A voice mailbox number
- A temporary password

These items are provided by your service provider. Your service provider should also tell you how to record a greeting for your voice mailbox and how to change the temporary password.

After you obtain this information from your service provider, you must then save the voice mailbox number to your phone

Voice mail indicators

When you receive a voice message, your phone lets you know by beeping, displaying an icon on the screen, or showing a text message. The method of notification depends upon your carrier.

Additionally, if you receive more than one voice mail message, your phone may display the number of messages that you have received. Finally, if you have subscribed to two different phone lines, the message would indicate the line to which the message was addressed.

Note: If you have difficulty using the voice mail feature, contact your service provider.

• SAVE THE VOICE MAILBOX NUMBER

- 1 Press Menu 1 9 2.
- 2 Enter your voice mailbox number, then press **OK**.

Note: The number can be up to 32 digits long.

Work with two phone lines

If your particular SIM card supports it, your phone can have two phone lines. Your service provider can tell you if your SIM card allows the use of this feature and give you access to two phone lines.



If you decide to use two phone lines, you can select one of the two lines for outgoing calls, but you can still answer calls on both lines.

If you use two phone lines, you will be given a voice mailbox number for each line. You need to save each phone line's voice mailbox number separately.

To do this, first select the outgoing line and save its voice mailbox number. Then, select the other line and save its number.

• LISTEN TO YOUR VOICE MESSAGES

If there's a notification message on your screen, you can get your voice messages using any of the following methods:

- If you've saved your voice mailbox number in your phone, press and hold  to call your voice mailbox.
- Press  to call your voice mailbox and follow the directions provided.
- Call your voice mailbox number as you would any other telephone number, then follow the directions provided.

• VOICE MEMO

You can use the voice memo feature when you want to record personal notes or reminders, or when you want to record an active phone conversation.

Record a memo

- 1 Press **Menu** 10 1 (Extras, Voice memo).
- 2 To begin recording, scroll to **Record**, then press **Select**.
- 3 Clearly state your note. When you are finished, press **Stop**.
- 4 **Title:** appears on the screen. Key in a name for the recording and press **OK** to save it.

Recording saved appears on the screen.

If you do not want to save the recording, then follow these steps:

- 1 Press **Clear** to erase the name. Then press **Back**.
- 2 **Recording not saved. Continue?** appears on the screen. Press **OK**.

Record a phone conversation

- 1 Place the call.
- 2 While in the call, press **Options**.
- 3 Scroll to **Record**, then press **Select**.

[would like a graphic here showing what happens on the screen while the conversation is being recorded]

- 4 When you are finished, press **Stop**.
- 5 **Recording saved** appears on the screen and the conversation is automatically saved under the name "Recording". You can edit the name later.

Listen to or edit a memo

- 1 To listen to or edit a recorded memo, press **Menu** 10 1 2 (Extras, Voice memo, Recordings list), then press **Options**.
- 2 Scroll to one of the following options:
 - Select **Playback** to listen to the memo.
 - Select **Edit title** to change the name of a memo. Key in the new name and press **OK**.

- Select **Erase** to delete the memo.

Set an alarm

You can set an alarm for a voice memo as a reminder to yourself.

Note: Voice memo alarms are played only when the phone is on. There is no snooze function.

- 1 Press **Menu** 10 1 2 (Extras, Voice memo, Recordings list).
- 2 Scroll to **Add alarm** and press **OK**.
- 3 Enter the date and time for the alarm, then press **OK**.

Alarm added appears on the display.

Notes about voice memos

- You have about 180 seconds, but the maximum length of the memo depends on available memory.
 - There are three audio cues to indicate the recording status to both parties in an active phone conversation. The start tone plays when recording begins. A recording tone plays every 5 seconds while the conversation is being recorded. An ending tone signals the end of the recording.
 - When the recording tone starts to beep every 2 seconds, you only have 10 seconds left for your voice memo.
 - If the memory is full when you try to record a new voice memo, **No space for new recording** appears on the screen. You have the choice to erase an existing voice memo to free up space for the new recording.
 - If you are recording an active phone conversation, and you receive a call on your second phone line, the voice memo ends and is saved automatically.
- **VOICE DIALING**

Your phone's voice dialing feature allows handsfree operation while placing a call. Before using this feature, you need to create entries in the phone book so you can associate a "voice tag" with a name and number.

Add a voice tag to a phone book entry

To create entries in the phone book, see "Save names, numbers and email addresses" in chapter X.

- 1 At the Start screen, scroll to the name you want to give a voice tag.
- 2 Press **Details**, then **Options**, and scroll to **Add voice tag**.
- 3 Press **Select**. The phone displays **Press Start, then speak after tone**.
- 4 Press **Start**.

You hear several beeps, and **Please speak now** appears. If you're using the headset, release the button.

- 5 Speak clearly into the microphone.

Note: Do NOT press **Quit** unless you want to cancel the recording.

The phone automatically stops recording and then saves and replays the voice tag.

If recording is not successful, your phone displays **Voice system error**.

Press **Options**, scroll to **Add voice tag**, and repeat steps 3 - 5.

Warning: Do not rely only on a voice tag for dialing emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing the command.

Notes about voice tags

- Voice tags are not language dependent. Any clearly spoken word or phrase can serve as a voice tag.
- It's easier for the phone to differentiate between long, unique voice tags. For example you might want to record a person's first and last names rather than only the first name.
- Voice tags must be shorter than 2 seconds.
- Voice tags are sensitive to background noise. For best results, record them in a quiet environment.
- If you delete a name, any associated voice tag is also deleted.


- The recording process stops automatically. Pressing **Quit** aborts the recording attempt.
- You cannot use the voice tag or voice dialing feature if you are actively sending or receiving data using the GPRS connection.

Make a call using voice recognition

- 1 Hold the phone up to your ear, then press and hold **Names**.

When you hear several beeps and **Please speak now** appears, release the button.

Note: If you have the optional headset attached, press and hold the headset button, then when the phone beeps and **Please speak now** appears, release the button.

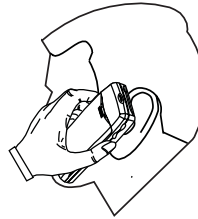

- 2 Pronounce the voice tag clearly into the microphone. **Searching** appears. When the phone finds the voice tag, **Found** appears, and the phone automatically dials the number.

If the phone does not locate a number, **No match found. Try again?** appears.

- 3 Press **Yes** to try again or **Exit** to cancel and return to the Start screen.
If you're using the headset and the phone does not locate the number, you will hear an error tone and **No match found** appears. To start voice dialing again, press and hold the headset button immediately after the error tone.

Play back a voice tag

- 1 Press **Names** and scroll to **Voice tags**.
- 2 Press **Select**, then scroll to the name with the voice tag you want to hear.
- 3 Press **Options**, select **Playback**, and press **OK**.

Change a voice tag

- 1 Press **Names** and scroll to **Voice tags**.
- 2 Press **Select**, then scroll to the name with the voice tag you want to change.
- 3 Press **Options**, scroll to **Change**, and press **OK**.
- 4 The phone displays **Press Start, then speak after tone**.
- 5 Press **Start**.
- 6 The phone repeats your voice tag, and **Voice tag saved** appears.

Erase a voice tag

- 1 Press **Names** and scroll to **Voice tags**.
- 2 Press **Select**, then scroll to the name with the voice tag you want to change.
- 3 Press **Options**, scroll to **Erase**, and press **OK**.
Erase voice tag? appears.
- 4 Press **OK** to erase the voice tag.

• VOICE COMMANDS

The voice command feature allows handsfree operation while using certain phone functions. Voice commands work similar to voice dialing. Before using voice commands, you must first associate a "voice tag" to the phone function.

View available functions

To see which functions in your phone work with voice commands:

- Press **Menu 4 7** (Settings, Voice commands) and scroll through the list of functions.

Phone feature	You can add a voice tag to select a profile, or activate a feature
Profiles	General
	Silent
	Meeting
	Outdoor
	Pager
	My profile 1
	My profile 2
Voice message	Call voice mailbox
Infrared	Activate infrared
Voice Memo	Record

Add a voice tag for the command

- 1 Press **Menu** 4 7 (Settings, Voice commands).
 - 2 Scroll to the phone function, then press **Select**.
 - 3 Press **Options**. **Add voice tag** appears on the display.
 - 4 Press **Select**.
- Press Start, then speak after tone** appears on the display.
- 5 Press **Start**, then speak the voice tag clearly into the microphone.

Note: Do **NOT** press **Quit** unless you want to cancel the recording.

The phone replays then saves the recorded tag. The [insert smiley face] icon appears next to commands which have voice tags assigned.

Activate a voice command

After you have associated a voice tag with a phone function, you can issue a command by speaking the voice tag. There are three ways to activate a voice command:

- 1 If you have the optional headset attached, press and hold the headset button. *OR*
 - Press and hold **Names**. *OR*
 - Press and hold the volume down key.
- 2 When **Please speak now** appears, pronounce the voice tag clearly into the microphone. When the phone finds the tag, **Found** appears, and the command is issued.

Note: You cannot use voice commands if you are actively sending or receiving data using the GPRS connection.

Work with an existing voice command tag

After you have associated a voice tag to a command, you can choose one of the following options:

- Listen to the tag
- Change the tag
- Erase the tag

For detailed instructions, refer to these sections on pages 72–73.

12 Personalize your phone

- **PROFILES**

Profiles let you set your phone's sound settings to whatever environment you find yourself in, whether it's a meeting or a soccer game. Each profile contains settings for your phone's ringing option, ringing tone, ringing volume, vibrating alert, message alert tone, keypad tones, and warning tones. Just pick the profile that suits your current environment: Normal, Silent, Outdoor, Meeting, or Pager.

Note: The Car and Headset profiles do not appear until you attach these accessories for the first time.

You can modify the settings in each profile, and (except for the Normal, Car, and Headset profiles) you can rename them.

Select a profile

- 1 Press **Menu 3**.
- 2 Scroll to the profile you want to use (for example, **Normal**) and press **Options**.
- 3 Scroll to **Select**, then press **OK**.

Customize the profile

- 1 Press **Menu 3**.
- 2 Scroll to the profile you want to customize (for example, **Normal**).
- 3 Press **Options**.

- 4 Scroll to **Customize**, then press **OK**.
The customize options appear.

RINGING OPTIONS

Choose how a profile notifies you of an incoming call.

- 1 Scroll to one of the following, and press **OK**.


Ring: The phone rings.

Ascending: The ringing volume starts low and increases with successive rings.

Ring once: The phone rings once.

Beep once: The phone makes a short beep.

Caller groups: Sets the phone to ring only if the call is from a person who belongs to the selected group(s). Scroll to the group(s) you want and press **Mark** to select or **Unmark** to deselect them.

Silent: The phone sounds no tone. Keypad tones, warning tones, and message alert tones are turned off, and the  icon appears at the top of the screen.

- Profile =
- Ringling option
 - Ringling tone
 - Ringling volume
 - Vibrating alert
 - Message alert tone
 - Keypad tones
 - Warning and game tone:
 - Automatic answer
 - Lights (Appears after connecting Car Kit first time)

- 2 Press **Back**, then **Yes** to save or **No** to ignore the changes.

RINGING TONE

Your phone comes programmed with 35 ringing tones. Also, there are slots available for downloading up to five more ringing tones. See "Download Ringing tones" at the end of this chapter for more information.


- 1 Press **Menu 3**.
- 2 Scroll to the profile for which you want to set the ringing tones, and press **Options**.
- 3 Highlight **Customize** and press **OK**.
- 4 Scroll to **Ringling tone**, then press **Select**.

- 5 Scroll to the tone you want, then pause to hear a sample of the tone.
- 6 Press **OK** to select the tone or continue scrolling to select a different tone.

RINGING VOLUME

This feature sets the ringing volume for incoming voice calls and message alert tones.

- 1 Press **Menu 3**.
- 2 Scroll to the profile whose ringing volume you want to set, then press **Options**.
- 3 Scroll to **Customize**, then press **OK**.
- 4 Scroll to **Ringling volume**, then press **Select**.
- 5 Scroll to the volume level you wish to use, then pause to hear a sample of the volume.
- 6 Press **OK** to select the volume or continue scrolling to select a different volume.

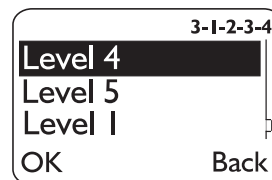

If you select Level 5, you see a note stating **VERY LOUD RINGING**. Press **OK** to confirm the setting. Also when you select Level 5, the phone starts ringing at Level 4, then ascends to Level 5.

VIBRATING ALERT

Your phone has an internal vibrating mechanism. No special battery is needed to make the phone vibrate when someone calls you.

- 1 Press **Menu 3**.
- 2 Scroll to the profile for which you want to set the vibrating alert, and press **Options**.
- 3 Highlight **Customize** and press **OK**.
- 4 Scroll to **Vibrating alert**, then press **Select**.
- 5 Scroll to **On** or **Off** and press **OK**.

If you choose **On**, your phone vibrates even if you have set **Ringing options** (see page 77) to **Silent**.

MESSAGE ALERT TONE

This option sets the tone your phone makes when you get a text message.

- 1 Press **Menu 3**.
- 2 Scroll to the profile whose message alert tone you want to set, then press **Options**.
- 3 Scroll to **Customize**, then press **OK**.
- 4 Scroll to **Message alert tone**, then press **Select**.
- 5 Scroll through the tones until you hear one you like, then press **OK**.

KEYPAD TONES

This option sets the volume of the tone you hear when you press the phone's keys.

- 1 Press **Menu 3**.
- 2 Scroll to the profile whose keypad tones you want to set, then press **Options**.
- 3 Scroll to **Customize**, then press **OK**.
- 4 Scroll to **Keypad tones**, then press **Select**.
- 5 Scroll through the choices until you hear the level you want, then press **OK**.

WARNING TONES

Warning tones are sounds your phone makes for conditions such as errors, confirmations, power on, battery low, and recharge battery. Game tones sound while you are playing one of the phone's games.

- 1 Press **Menu 3**.
- 2 Scroll to the profile for which you want to set the warning tones, then press **Options**.
- 3 Scroll to **Customize** and press **OK**.

- 4 Scroll to **Warning tones**, then press **Select**.
- 5 Scroll to **On** or **Off**, then press **OK**.

Rename a profile

- 1 Press **Menu 3**.
- 2 Scroll to the profile you want to rename and press **Options**.

Note: Remember, you cannot rename the Normal, Car, or Headset profiles.

- 3 Scroll to **Rename** and press **OK**.
- 4 Enter the new profile name, then press **OK**.

Accessory profiles

[NEED TO ADD LOOPSET AND OTHERS FROM MENU 4 6 ACCESSORY SETTINGS]

HEADSET AND CAR PROFILES

When you connect your phone to an approved headset or car kit, the phone automatically selects the **Headset** or **Car** profile. These profiles do not appear in the phone's menu until you connect the accessory. Also, you cannot choose a different profile while these accessories are connected.

Your phone remembers any changes you make to the sound settings while the headset or car kit is connected, and uses them again the next time you use that accessory.

SET FOR AUTOMATIC ANSWER

This profile lets your phone answer incoming calls after just one ring.

Note: This profile is available only when your phone is connected to a headset or to an approved car kit. This feature does not function with data calls.

- 1 Press **Menu 3**.
- 2 Scroll to **Car** or **Headset**, then press **Options**.
- 3 Choose **Customize** and press **OK**.

- 4 Scroll to **Automatic Answer**, then press **Select**.
- 5 Scroll to **On** and press **OK**.

Set up car profile

If you are using your phone with an approved car kit, you can set lights to **On** (lights stay on) or **Automatic** (after 15 seconds, lights turn off until the next key is pressed, phone rings, etc.).

- **VOLUME CONTROL**

Active noise control

- **WELCOME NOTE**

You can set your phone to show a brief welcome note each time you switch on your phone. You can use up to 45 characters for your note.

Add a note

- 1 Press **Menu** 4 4 3 (Settings, Phone settings, Welcome note).
- 2 Enter your note.

As you enter characters, they appear to the left of the cursor. Press **Clear** to delete characters to the left of the cursor. Press [up arrow] or [down arrow] to move the cursor right or left.

- 3 Press **Options**.
- 4 Scroll to **Save** and press **Select**.


If you ever want to erase the Welcome note, select **Erase** instead.

12

• CHOOSE THE DISPLAY LANGUAGE


You can choose your phone's display language.

- 1 Press **Menu** 4 4 1 1.
- 2 Scroll to the language you want, then press **OK**.

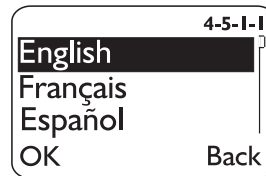

• SET UP THE CLOCK

Your phone has an internal clock that can be displayed on the Start screen. It also features an alarm clock (see "Alarm clock" on page 121).

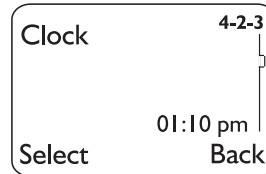

Set the clock

- 1 Press **Menu** 4 2 1 (Settings, Time settings, Clock).
- 2 Enter the current time, using two digits for both hours and minutes.
OR
Enter hours and minutes in 24-hour format.
- 3 Press **OK**.
- 4 Select **am** or **pm** and press **OK**.

Note: If you entered the time in the 24-hour format, **am** and **pm** do not appear.

If this is the first time you have set the clock, the phone asks you to enter the date. Enter the date in **mmddyyyy** format and press **OK**.

Select the time format

- 1 Press **Menu** 4 2 1 3 (Settings, Time settings, Clock, Time format).
- 2 Scroll to **24-hour** or **am/pm**.
- 3 Press **OK**.

Display the clock

This feature lets you continuously display the time on the Start screen.

- 1 Press **Menu** 4 2 1 (Settings, Time settings, Clock, Show clock).
- 2 Scroll to **Hide clock** or **Display clock** (only one choice appears, depending on the current setting).
- 3 Press **Select**.

Set automatic update of date and time

If this feature is supported by your wireless service provider, it automatically updates the clock in your phone in accordance with the current time zone. This might be helpful if you are traveling from New York to California, for example, and want to receive the local time from the wireless network.

Press **Menu** 4 2 3 and choose:

- **On:** Updates the date and time automatically.
- **Confirm first:** Requires you to confirm that you want the update.
- **Off:** Prevents the date and time from being automatically updated.

• CALLER GROUPS

You can create groups of names in your phone book and give each group a different ringing tone. When someone from that group calls, you'll know because of the ringing tone.

Add names to a caller group

The name you add to a caller group must first be stored in the phone book.

- 1 From the Start screen, scroll to the name or number you want.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Caller groups** and press **Select**.
- 4 Scroll to the group you want to give this name to and press **Select**.

Remove names from a caller group

- 1 Follow steps 1 through 3 above.

- 2 Scroll to **No group** and press **Select**.

Assign a ringing tone to a caller group

- 1 From the Start screen, press **Names**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to the group you want and press **Select**.
- 4 Scroll to **Group ringing tone** and press **Select**.
- 5 Scroll to the tone you want to hear when anyone from this group calls you and press **OK**.

Tip: You can set your phone to ring *only* when people from certain caller groups call you, and to be silent for all other call groups. See the "Caller group" description under "Ringing options" on page 77.

Rename a caller group

You can rename any call group with a name of your own.

- 1 Follow steps 1 through 3 above.
- 2 Scroll to **Rename group** and press **Select**.
- 3 Enter the group name, then press **OK**.

Assign group graphics

Each caller group has a graphic (picture) associated with it. When you get a call from someone whom you have assigned to a caller group, the graphic associated with that group flashes on the screen.

To turn the graphic on for a caller group:

- 1 Press **Names**, scroll to **Caller groups**, and press **Select**.
- 2 Scroll to the name of the group and press **Select**.
- 3 Scroll to **Group graphic** and press **Select**.

Note: To see the group graphic before you select it, scroll to **View graphic** and press **Select**. Press **Back** to return to the menu.

- 4 Scroll to **On** and press **Select**.

To turn the graphic off, follow the steps above, but scroll to **Off** in the last step.

SEND A GRAPHIC TO SOMEONE ELSE

- 1 Follow steps 1 through 3 above.
- 2 Scroll to **Send graphic**.
- 3 Enter the phone number or scroll to find it in your phone book, then press **OK**.

For more details on the **Send information via IR** command, see page 129.

VIEW A RECEIVED GRAPHIC

- 1 When you receive a graphic from someone else, **Group graphic received** appears.
- 2 Press **Options** and then choose **Show** to see the graphic, **Save** to save it (you must choose which caller group gets the new graphic), or **Discard** to discard it.

• DOWNLOAD RINGING TONES

You can download up to five ringing tones to replace the **Personal** entries in your list of ringing tones. For details about this network service, contact your wireless service provider.

Notification of received ringing tone

When your phone receives a ringing tone, it displays **Ringling tone received**.

Listen to received ringing tones

Note: If you press **Exit** at any time before saving the ringing tone, the ringing tone will be deleted!

- 1 When your phone displays **Ringling tone received**, press **Options**. **Playback** is selected.
- 2 Press **OK**.

The phone plays the ringing tone.

Save received ringing tones

- 1 After listening to the ringing tone, press **OK**.
- 2 Scroll to **Save**, then press **OK**.
- 3 Choose which ringing tone you want to replace (either an empty **Personal** place holder, if any are remaining, or a previously downloaded tone), then press **OK**.

The tone is saved to your list of ringing tones.

Discard received ringing tones

If you don't want to save the ringing tone, press **Exit** without saving it, or scroll to **Discard**, then press **OK**.

• DOWNLOAD PROFILES

You can customize your phone with personal profiles. Each profile contains a name, graphic and ring tone. For details about how to download profiles over the wireless network, contact your service provider.

Notification of received profile

When your phone receives a profile, it displays **Profile received** and sounds an alert tone.

Listen to received tone

Note: If you press **Exit** at any time before saving the profile, the profile will be deleted!

- 1 When your phone displays **Profile received**, press **Options**.
- 2 Scroll to **Details**, then press **OK**.
- 3 Scroll to **Ringing tone**, then press **Select**.

The phone plays the ringing tone.

View received graphic

- 1 Follow steps 1-2 above.

- 2 Scroll to **Profile logo**, then press **Select**.

Save a profile or replace an existing profile

- 1 After receiving the profile, select **Options**.
- 2 Scroll to **Save**.

Select location for profile appears on the display.

You have 2 open spaces for personal profiles.

- 3 Scroll to **My profile 1** or **My profile 2** and press **Save [or Select?]**

Delete received profile

If you don't want to save the profile, press **Exit** without saving it or scroll to **Discard**, then press **OK**.

• RESTORE FACTORY SETTINGS

You can use **Menu 4 10** to reset some of the phone settings to their original values. You must enter the security code.

Note: Restoring factory settings does not erase your phone book. However, it does erase all customized settings you may have entered.

• NOKIA XPRESS-ON™ COLOR COVERS

Your phone's Xpress-on cover is available in several fashion colors. Extra covers may be purchased from your authorized Nokia dealer.

- Always store the phone with the cover attached.
- Before changing the cover, always switch off the phone and disconnect the phone from the charger or any other device.

Remove the cover

[modify these instructions for 8390]

12

- 1 Using a coin, press the colored tab on the top of the phone.
- 2 Slide the cover forward.



 
Remove the keypad

- 1 Remove the keypad from the back of the cover.
- 2 Place the keypad into the back of the new cover.



Replace the cover

- 1 Place the bottom of the new cover against the bottom of the phone. Make sure both sets of plastic tabs line up with their slots, as shown at right.
- 2 Close the cover and snap it shut all the way around the edge of the phone.





13 Manage phone security


13

• LOCK THE KEYPAD (KEYGUARD)

The keypad lock (Keyguard) disables your keypad to prevent accidental key presses (for example, when your phone is in your pocket or purse).

Note: Keyguard does not prevent unauthorized use of your phone.

- To lock the keys, press **Menu**, then .
- To unlock the keys, press **Unlock**, then .

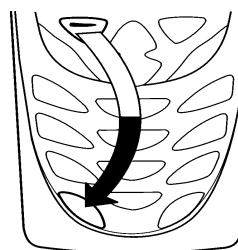

Note: Connecting your phone to a car kit automatically disables Keyguard.

• ABOUT SECURITY CODES

The following table summarizes how different types of security codes are used in your phone.

Code	Purpose	For more information
Security code	Required by several phone features. If phone security is on, the phone requests the security code the first time you use it after installing a new SIM card.	See entries for call timers, calling card, phone book, and phone security.

Code	Purpose	For more information
PIN code	If SIM card security is on, the phone requests the PIN code every time the phone is turned on.	See "about security codes" on page 89.
PIN2 code	Required by several phone features.	See entries for show call costs, call cost limit, fixed dialing, and PIN and PIN2 codes.
System password[?]	Required by the Restrict Calls feature.	.

PIN codes

The PIN (Personal Identity Number) and PIN2 codes are 4- to 8-digit numbers that usually come from your service provider along with the SIM card. Use the PIN code to protect your phone and SIM card against unauthorized use. The PIN2 code activates some of your phone's functions, such as Call Cost Limit (See "call costs" on page 49).

When the phone requires the PIN or PIN2 code, it displays **Enter PIN code:** or **Enter PIN2 code:**.

- Enter the code then press **OK**.

CHANGE YOUR PIN OR PIN2 CODE

You can change your PIN or PIN2 code to any 4- to 8-digit number.

- 1 Press **Menu 4 9 6**, scroll to the PIN code you want to change, then press **Select**.
- 2 Enter the current PIN code and press **OK**.
- 3 Enter the new PIN code and press **OK**.
- 4 Enter the new PIN code again to verify, and press **OK**.

Note: If you make a mistake while entering the code, **Code Error** appears. Start again at step 2 and be careful to enter the correct code. If you enter the wrong code three times in a row, the PIN code is blocked. To unblock the PIN code, see "PUK codes" on page 91.

SET PIN CODE REQUEST

This feature sets your phone to ask for the PIN code each time the phone is switched on and prevents unauthorized use of your phone.

- 1 Press **Menu** 4 9 1.
- 2 Enter the PIN code supplied by your service provider, and press **OK**.
- 3 Press (up or down) to highlight **On** and press **OK**.

To turn off this feature, repeat steps 1 through 3 above, but highlight **Off** in step 3.

Note: If you enter the wrong PIN or PIN2 code three times in a row, the SIM card is automatically blocked or you cannot activate the function. See "PUK codes" below to unblock the codes.

PUK codes

The PUK (Personal Unblocking Key) and PUK2 codes are 4- to 8-digit codes that also usually come from your service provider along with the SIM card. The PUK code unblocks a blocked PIN code, and the PUK2 code unblocks a blocked PIN2 code.

UNBLOCK A PIN CODE

[verify later with a proto and correct codes]

- 1 Press **Menu** 4 9 5, then press **Select**.
Change PIN code appears.
- 2 To unblock the PIN2 code, press (down) to select **Change PIN2 code**.
- 3 Press **Select**.
PIN code blocked appears.
- 4 Enter the PUK code, then press **OK**.

Note: If you enter a wrong PUK code ten times in a row, the SIM card becomes invalid and you must contact your service provider for a new card.

5 Enter the new PIN code, then press **OK**.

6 Enter the new PIN code again to verify, and press **OK**.

Note: You cannot change the PUK or PUK2 code, so keep a record of them in a safe place. If you lose them, contact your service provider.

If you try to change the PIN2 code, and you enter a wrong PUK2 code ten times in succession, you can't use functions requiring the PIN2 code. Contact your service provider for a new card.

• SECURITY CODE

Note: The default security code is 12345.

You need the security code to access some security features. When the phone requires the security code, it displays **Security code:**

- Enter the code then press **OK**.

If you enter an incorrect security code five times in a row, the phone will not accept the correct code for 5 minutes.

Change the security code

1 Press **Menu** 4 9 6.

2 Scroll to **Change security code** and press **Select**.

3 Enter the current security code, then press **OK**.

4 Enter the new security code, then press **OK**.

5 Enter the security code again to verify, then press **OK**.

Important: Keep the code secret and in a safe place, separate from the phone.

- **FIXED DIALING**

If supported by your SIM card, this feature lets you restrict your outgoing calls to phone numbers included in the fixed dialing list or beginning with the same digit(s) as an entry in the list.

Important: If you turn fixed dialing on and don't have any numbers in the fixed dialing list, you can't make any calls!

Note: When fixed dialing is set to on, calls may be possible to certain emergency numbers in some networks (such as 911 or other official emergency numbers).

Turn fixed dialing on or off

- 1 Press **Menu** 4 9 3.
- 2 Scroll to **On** or **Off**, then press **OK**.
- 3 Enter your PIN2 code, then press **OK**.

Add numbers to the fixed dialing list

- 1 Press **Menu** 4 9 3.
- 2 Scroll to **Number list**, then press **Select**.
- 3 Scroll to **Add**, then press **Select**.
- 4 Enter your PIN2 code and press **OK**.
- 5 Enter a name to go with the restricted phone number, then press **OK**.
- 6 Enter the phone number you want to restrict, then press **OK**.

Repeat steps 3 through 6 for each number you want to add to the list.

- **CALL RESTRICTIONS**

This is a network service that lets you restrict the calls your phone can make and receive. Check with your service provider for details.

Note: When calls are restricted, calls may be possible to certain emergency numbers in some networks (such as 911 or other official emergency number).

Turn on call restrictions

- 1 Press **Menu 4 9 2** (Settings, Security settings, Call restrictions).
- 2 Scroll through the types of calls you can restrict, and press **Select** when you see the one you want.

Outgoing calls: Calls cannot be made.

International calls: Calls cannot be made to foreign countries.

International except to home country: When abroad, calls can be made only within the current country and to your home country (that is, the country where your home network operator is located.)

Incoming calls: Calls cannot be received.

Incoming calls if roaming: Calls cannot be received outside your home area.

Cancel all call restrictions: Turns off all call restrictions. Calls can be made and received in the usual way.

Note: If you selected **Cancel all call restrictions**, the following steps are not available. Also, you can cancel call restrictions on each option, allowing restrictions on other options to stay in force.

- 3 Scroll to one of the following options:

Activate: Enter the restriction password and press **OK**.

Cancel: Enter the restriction password and press **OK**.

Status: The phone lists the call types with call restriction active.

- 4 Press **OK**.

About your restriction password

[does this info come from the service provider? or is the default 12345?]

Change your restriction password

- 1 Press **Menu 4 9 6** (Settings, Security settings, Change access codes).

- 2 Scroll to **Change restriction password**, then press **Select**.
- 3 Enter your new password, then press **OK**.

- **SET UP A CLOSED USER GROUP**

This network service specifies the group of people to whom you can call and who can call you. **Preset [or Default?]** resets the phone to use a user group that the SIM card owner has agreed upon with the service provider.

Note: When calls are limited to closed user groups, calls may be possible to certain emergency numbers in some networks (such as 911 or other official emergency number).

Turn on closed user group

- 1 Press **Menu** 4 9 4 (Settings, Security settings, Closed user group).
- 2 Scroll to **On**, then press **OK**.

Turn off closed user group

- 1 Press **Menu** 4 9 4 (Settings, Security settings, Closed user group).
- 2 Scroll to **Off**, then press **OK**.

14 Select a system

You can select how your phone chooses a wireless network, as there may be more than one available. The selection you make stays active until you change it or change the SIM card.

- 1 Press **Menu** 4 4 4.
 - 2 Scroll to **Automatic** or **Manual**, then press **Select**.
- **Automatic:** The phone automatically selects one of the available systems.
 - **Manual:** The phone searches for available systems and then lists them. Scroll to the one you want, then press **Select**. The phone looks for a network and displays the result. If you lose connection while in **Manual** mode, the phone asks you to select a network again.

15 Communicate with text messages

The text message network service allows you to send short text messages to other phones that have text message capability. You can also ask the service provider to convert the message to other formats such as email and fax.

[check these 8290 instructions against 8390 specs]

- **SET UP MESSAGING**

Before you can send and receive text you must:

- Have a text or instant message subscription through your service provider.
- Know your message center number.
- Save your message center number in your phone.

Save your message center number



Get this number from your wireless service provider.

- 1 Press **Menu** 1 13.

The **Messages settings** menu appears, followed by the settings programmed in your phone.

- 2 Scroll to the set of message settings you want to use (the first one is the default), then press **Select**.

Message center number appears.

- 3 Press **Select**.
- 4 Enter your message center number, then press **OK**.

Set the message mode

You must specify the way your phone sends messages: text messages, faxes, pages, or E-mail.

- 1 Press **Menu** 1 13.
- 2 Scroll to the set you want to change the settings for, then press **Select**.
- 3 Scroll to **Messages sent as** and press **Select**.
- 4 Scroll to **Text, Fax, Page, E-mail**, or Instant message, then press **OK**.
(In order to receive a converted message, the recipient needs to have the appropriate terminal device, such as a fax machine, pager, e-mail instant message account.)

Set message validity

Message validity is a network feature that determines the amount of time that your service provider's message center attempts to deliver a message.

- 1 Press **Menu** 1 13.
- 2 Scroll to the set you want to change the settings for, then press **Select**.
- 3 Scroll to **Message Validity** and press **Select**.
- 4 Choose a time, then press **OK**.

• WRITE MESSAGES

Save messages in the outbox

When you write a text message, it's a good idea to save it in the outbox. Then if there is a message delivery problem, you can easily resend the message.

- 1 While writing the message, press **Options**.
- 2 Scroll to **Save**, then press **OK**.

Send the text message

- 1 Press **Menu 1 1**.

Write messages appears briefly, followed by the message screen.

- 2 Enter a message of up to 160 characters.


The number of available characters appears in the top right corner of the screen.

- 3 Once you have finished writing, press **Options**, scroll to **Send**, then press **Select**.

- 4 Enter or recall the recipient's phone number, then press **OK**.

Sending message appears.

When the message is successfully sent, **Message sent** appears.

Note: If you need to exit while writing the message, press  anytime. Later, press **Menu 1 1** to return and finish writing the message. If you turn off the phone without saving the message, the message will be lost.

Send an email message

[confirm later]

- 1 Press **Menu 1 3**.

Write messages appears briefly, followed by the message screen.

- 2 Enter a message of up to 60 characters. [?]

The number of available characters appears in the top right corner of the screen.

- 3 Once you have finished writing, press **Options**, scroll to **Send**.



A screen appears with the choices:

As message



As e-mail

- 4 Select **As e-mail** and press **OK**.

The E-mail address box appears.

- 5 Enter the email address and press OK.
OR
Press  or  to scroll through the list and find the email address, then press OK.
The E-mail gateway number box appears.
- 6 Enter the gateway number and press OK.
The Subject box appears.
- 7 Enter a subject for the email and press OK.
Confirmation messages appear:
Sending e-mail
Sent as e-mail.
- 8 Then your message appears again briefly.
(Graphic with message on screen.)


• RESEND A MESSAGE FROM THE OUTBOX

Messages in the outbox have one of two icons in front of them. The  icon in front of a message heading shows that you have attempted to send the message to the text message center. The  icon shows that you have not yet tried to send the message.

- 1 Scroll to the message, then press **Read**.
- 2 Press **Options**.
- 3 Scroll to **Forward** and press **OK**.
- 4 Press **Options**.
Send appears already highlighted.
- 5 Press **OK**.
- 6 Enter the number and press **OK** to send the message.

- **READ TEXT MESSAGES**

- **Read new text messages now**

- When you receive a text message, the phone displays **Message received** and the  indicator, and makes a sound (depending on the "Message alert tone"; see page 79).

- 1 To read the message, press **Read**.



- This takes you to the Inbox, with the new message selected.

- 2 Press **Read** again to read the message.

- **Read new text messages later**

- 1 When you receive a text message, press **Exit**.

- 2 Later when you want to read the message, press **Menu 1 1 1**.

- A list of message headers is displayed. The  icon in front of the header indicates that a message has been read. The  icon indicates that a message has not yet been read.

- 3 Scroll to the message you want, then press **Read**.

- 4 If the message is long, use the scroll keys to scroll through the message.

- The text of the message is followed by the sender's name or phone number, reception date, and time

- **ERASE A MESSAGE**

- 1 While reading the message, press **Options**.

- 2 Scroll to **Erase**, then press **OK**.

- Your phone asks you to confirm that you want to erase the message.

- 3 Press **OK**.

- **REPLY TO A MESSAGE**

- 1 Press **Options**.

- 2 Scroll to **Reply**, then press **OK**.
- 3 Enter your message, then press **Options**.
- 4 Scroll to **Send**, then press **OK**.
The phone displays the return number.
- 5 Edit the number if needed, then press **OK**.

• FORWARD A MESSAGE

- 1 Press **Options**.
- 2 Scroll to **Forward**, then press **OK**.
The message text appears.
- 3 Edit the message if necessary, then press **Options**.
Send appears already highlighted.
- 4 Press **Send**.
The **Number** box appears.
- 5 Enter the recipient's phone number, then press **OK**.
OR
 - Press **Search** to recall a stored name and phone number, then press **OK**.
 - Press **OK** again to confirm.

• REPLY TO AN E-MAIL MESSAGE

- 1 Press **Options**.
- 2 Scroll to **Reply**, then press **OK**.
- 3 Enter your message, then press **Options**.
As message and As e-mail appear.
- 4 Scroll to As e-mail and press **Select**.
The E-mail address box appears.
- 5 Enter the e-mail address and press **OK**.

OR

Press \wedge or \vee . to scroll through the list and find the email address, then press OK.

The E-mail gateway number box appears.

- 6 Enter the gateway number and press OK.
The Subject box appears.
- 7 Enter a subject for the email and press OK.
Confirmation messages appear:
Sending e-mail
Sent as e-mail.
- 8 Then your message appears again briefly.
(Graphic with message on screen.)

• FORWARD AN E-MAIL MESSAGE

- 1 Press **Options**.
- 2 Scroll to **Forward**, then press OK.
The message text appears.
- 3 Edit the e-mail message if necessary, then press **Options**.
As message and As e-mail appear.
- 4 Scroll to **As e-mail** and press **Select**.
The E-mail address box appears.
- 5 Enter the e-mail address and press OK.
OR
Press \wedge or \vee . to scroll through the list and find the email address, then press OK.
The E-mail gateway number box appears.
- 6 Enter the gateway number and press OK.
The Subject box appears.
- 7 Enter a subject for the email and press OK.
Confirmation messages appear:
Sending e-mail

Sent as e-mail.

- 8 Then your message appears again briefly.
(Graphic with message on screen.)

- **RETRIEVE A NUMBER**

You can save or dial a phone number that is included in a message.

- 1 Press **Options**.
- 2 Scroll to **Use number**, then press **OK**.
- 3 If more than one number is shown, scroll to the one you want, then press **OK**.

The phone displays the number on the screen. You can dial it or save it as if you had entered it yourself.

- **MESSAGE SETTINGS**

You can specify some of the ways your phone handles text messages. Depending on your SIM card, you can have up to five "sets" of settings—for example, one for email messages, one for pages, one for faxes, and so on.

Change settings for some messages

- 1 Press **Menu 1 13**.
- 2 Scroll to the set you want to change the settings for, then press **Select**.
- 3 Scroll to one of these options:

Message center number: Get this number from your wireless service provider. Enter the message center phone number and press **OK**, or press **Search** to get the number from your phone book (if it is saved there).

Messages sent as: Scroll to **Text, Fax, Page, or E-mail**, then press **OK**. (In order to receive a converted message, the recipient needs to have the appropriate terminal device.)

Message validity: The amount of time that messages should be stored at the message center while the network attempts to deliver them. Choose a time, then press **OK**.

Default recipient number:

Use GPRS:

Message profile name:

- 4 Press **Select**.

Change common settings for all messages

- 1 Press **Menu 1 13**.
- 2 Scroll to **Common**, then press **Select**.
- 3 Scroll to **Delivery reports** or **Reply via same center**, then press **Select**.

Delivery reports: Scroll to **Yes** or **No**, then press **OK**. **Yes** means that the network tries to send delivery reports for the messages you send.

Reply via same center: The network tries to route the reply to this text message through your own message center.

• MESSAGE STORAGE

The inbox and outbox share a given amount of memory in your SIM card. When this memory is full and there is no more room to store messages, the message indicator blinks. If you are sent a text message when the memory is full, the phone displays the message **No space: message waiting**. You should delete one or more old messages to make room for the new message. The network waits and resends the message at a later time.

Note: Depending on your SIM card, the inbox and outbox can contain a total of up to 50 messages.

15 • PICTURE MESSAGES

Using **Menu 1 4** [?], you can send picture messages with your phone. There are several images included in your phone, and also space for one additional picture. All images can be replaced or deleted.

Note: Picture messaging must be supported by your service provider.

Send picture messages

- 1 Press **Menu**, then **Select**.
- 2 Scroll to **Picture Messages** and press **Select**.
- 3 Scroll to the picture you want to send, then press **View**.
The picture appears. To choose a different picture, press **Back**, scroll to another picture, then press **View**.
- 4 Press **Options** and scroll to **Forward**.
- 5 Recall or enter the phone number to which you want to send the picture message.

Note: The phone number you choose must be able to receive picture messages.

- 6 Press **OK**.

Send picture messages with text

- 1 Press **Menu**, then **Select**.
- 2 Scroll to **Picture Messages** and press **Select**.
- 3 Scroll to the picture you want to send, then press **View**.
The picture appears. To choose a different picture, press **Back**, scroll to another picture, then press **View**.
- 4 Press **Options**, scroll to **Edit text**, and press **Select**.
- 5 Write a message (up to 121 characters) to go along with the picture, then press **Options**.

Note: You can use predictive text input or standard text input to write the message. See "predictive text input" on page 37. for more information.

- 6 Scroll to **Send picture** and press **OK**.
- 7 Enter the phone number to which you want to send the picture message and press **OK**.

Sending picture message appears, followed by **Picture message sent**.

Note: The phone number you choose must be able to receive picture messages.

Receive picture messages

- 1 When your phone displays **Picture message received**, press **View** and the message appears.
- 2 If the picture has a text message with it, scroll up or down to see the entire message.
- 3 Press **Save** to keep the picture message, or press **Back** and **Exit** to delete it.

Other picture message options

Erase: Deletes the picture you select.

Use number: Automatically lets you save any phone number included in the text of the picture message.

Details: Shows the phone number of the person who sent you that picture message.

15 • CHAT WITH OTHER PHONE USERS

You can have a conversation with another person using text messages. Chat is designed for fast message sending through a connection between the sender and receiver. You can start by using the Chat menu or by selecting the Chat option while you're reading a received message. Chat is a network feature. Contact your service provider for more information.

Start a chat session

- 1 Press **Menu 1 3**, then press **Select**.
- 1 Enter the other party's phone number or recall it from the phone book and press **OK**.
- 2 At **Own chat name**:, enter your nickname and press **OK**.
- 3 Write your chat message, press **Options**, then press **Send**.
The reply from the other party is shown above your original message.
- 4 Press **OK** to clear the screen and reply to the message.

Note: You can start a chat session when replying to a regular text message as well. When reading the message, select **Options**, then select **Chat**.

Use predictive text for quick replies

When you are in a chat session, you can use the phone's dictionary to help speed up text entry. For more information on predictive text input, see Chapter X "Entering letters and numbers".

- 1 Press **Menu 1 3**, then press **Select**.
- 2 From the message screen press **Options**.
- 3 Scroll to **Dictionary**, then press **OK**.
- 4 Scroll to the language you want, then press **OK**.

T9 Dictionary activated appears on the screen.

View chat history

You can view messages sent and received during the active chat session.

- 1 From the message screen press **Options**.
- 2 Scroll to **Chat history** and press **Select**.

[graphic here to show chat history -- call outs to show nicknames, current message at top of screen & some slang 4 fun]

Change your nickname

- 1 From the message screen press **Options**.
- 2 Scroll to **Chat name**, press **Select**, then enter new nickname.

End your chat session

Note: Once you exit your chat session, the messages are deleted automatically. There is no way to save the chat history.

- 1 From the message screen press **Options**.
- 2 Scroll to **Exit** and press **Select**.

16 Your personal WAP Browser

Your phone has a built-in browser you can use to connect to selected services on the Internet. You can view weather reports, check news or flight times, view financial information, and much more.



- **NOTES ON WIRELESS INTERNET ACCESS**

This section gives a brief overview of wireless Internet technology.

Technology background

WAP

A technology called Wireless Application Protocol (WAP) is to mobile devices what the World Wide Web (WWW) is to personal computers. The mobile community began developing WAP several years ago to provide access to the Internet for mobile users.

Today, most WAP sites are made up of text and hyperlinks, and some sites can accept text input. Some pages even contain low-resolution graphics. Your service provider and others are free to design WAP sites as they choose, so the sites are as variable as Web pages on the Internet.

GPRS

General Packet Radio Service (GPRS) is a technology used to send and receive data over the wireless network. With GPRS, your phone can stay connected to the Internet. This "always online" concept allows you to access information quickly. Applications using GPRS include the WAP browser, text messaging and dial-up connections. See Chapter X "Your phone and other devices" for more information about dial-up connections.

- For availability, pricing, and subscription to GPRS services, contact your service provider.

The service provider's role

Because wireless Internet content is designed to be viewed from your phone, your wireless service provider now becomes your "wireless Internet service provider" as well.

It's likely that your service provider has created a home page and set up your browser to go to this page when you log on to the Internet. Once at your service provider's home page, you'll find links to a number of other sites.

- **SET UP FOR BROWSING**

You should not need to do anything to set up your phone for browsing. Your service provider usually modifies the appropriate settings when you subscribe to the feature. Contact your service provider if you have problems using the browser.

- **SIGN ON TO THE INTERNET**

You use the Services menu to connect to the Internet.

- 1 Press **Menu** 11.
- 2 Scroll to **Home**, then press **Select**.

Your phone connects to the Internet and to your service provider's home page.

- If you see the message **Check service settings**, the phone may not be set up for browsing. Contact your service provider to make sure that your phone is configured properly.

- **USE BROWSER OPTIONS**

The Services menu gives you the options shown in the following list.

Some service providers may have customized the options on the Services menu. Contact your service provider for more information if any of the options shown here are not available.

Choice	What it does
Home	Starts the browser and takes you to your service provider's home page.
Bookmarks	Shows a list of all saved bookmarks.
Settings	Provides options for changing connection settings, appearance settings, and security certificate.
Go to address	Accepts an address you enter.
Clear cache	Empties the browser's temporary memory and frees up space. It's advisable to empty your cache at the end of each session.

• NAVIGATE THE WIRELESS INTERNET

The pictures on this page show most of the elements you may find on a wireless Internet site. These are examples only.

Header line: The current Internet site.

Active hyperlink: Highlighted option ready to be chosen.

Inactive hyperlink: Scroll to select a link and press **OK** to switch to other pages on the current site or to other sites.



Use ^ and v to scroll through the list of links.

Selection list: Brackets [] mean you can press the link to show additional choices or links.



Options/Back: Press Options to go to the site's menu and/or the browser menu. Press Back to return to the previous page.

Data entry field: Brackets [] around three dots appear when you need to enter information. For example, you might enter a city name, an airline name or flight number, or a stock symbol.



[Will these screen shots be accurate for 8390?]

General guidelines for using the phone keys

- Use the scroll keys to browse the web page. ^ v
- To select a highlighted item, press ↵ .
- To enter letters and numbers, press the keys 0-9 .
- To enter special characters, press the key.

• USE BOOKMARKS

You can save addresses for your favorite sites as bookmarks. A bookmark helps you find a site again, just as a slip of paper helps you find a page in a book.

- If a wireless Internet site has a title, it appears in the bookmark (for example, Yahoo! News, ebay on WAP, Mapquest).
- If the site has no title, then the site's address appears in the list of bookmarks (for example, http://www.yahoo.com/news.wml).

Save an address as a bookmark

[confirm with testers or new sw in proto]

- 1 Press **Menu 11**.
- 2 Scroll to **Bookmarks**, then press **Select**.
- 3 Press **Options**.
- 4 Scroll to **Save as bookmark** and press **Select**.

The message **Bookmark saved** confirms your choice.

Enter a bookmark manually

- 1 Press **Menu 11**.
- 2 Scroll to **Bookmarks**, then press **Select**.
- 3 Press **Options**. Scroll to **New bookmark**.
- 4 Press **Select**.
- 5 Enter the site address (example my.yahoo.com) and press **OK**.
- 6 Enter a title for the bookmark and press **OK**.

Return to a bookmarked site

- 1 Press **Menu 11**.
- 2 Scroll to **Bookmarks**, then press **Select**.
- 3 Scroll to the bookmark you want, then press **Options**.
- 4 Scroll to **Go to**, then press **Select**.

If you are not currently browsing, the phone makes the connection to the Internet.

• DISCONNECT FROM THE INTERNET

- **SECURITY ISSUES**

Be sure to clear the cache memory

The information or services you access with the WAP browser are temporarily saved in the cache memory of the phone.

If you tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.

CLEAR THE CACHE

- 1 Press **Menu** 11.
- 2 Scroll to **Clear cache**, then press **Select**.

CLEAR THE CACHE WHILE BROWSING

- Press **Options**, scroll to **Clear cache**, then press **Select**.

About authority certificates

To use some WAP services, such as banking services, you need a security certificate. Using the certificate can help you to improve the security of connections between your phone and a WAP server.

You can download the certificate from a WAP page if the WAP ? supports the use of security certificates. After the download, you can view the certificate and then save or delete it. If you save the certificate, it is added to the list of certificates in the phone.

Your phone alerts you if the identity of the WAP server or WAP gateway cannot be verified or is not authentic.

VIEW THE LIST OF AUTHORITY CERTIFICATES

- 1 Press **Menu** 11.
- 2 Scroll to **Settings**, then press **Select**.
- 3 Scroll to **Authority certificates**, then press **Select**.

16 • NOTES ON GPRS

Icons here to explain what happens when you are online and you receive a phone call.

Receiving a call while online

Making a call while online

Making an emergency call while online

How to check timers -- see chapter on call history

17 Your personal digital assistant

17

• CALENDAR

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can even sound an alarm when it's time for you to make a call or go to a meeting.



Warning: Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

View the calendar

- Press Menu 8.

Enter the date

- 1 Press **Options**, scroll to **Set the date**, and press **Select**.
- 2 Enter the current month and day in **mmddyyyy** format, then press **OK**. (Example: Enter December 31, as **12312000**).

Date is set appears.

Enter the time

- Enter the time in **hhmm** format or in 24-hour format.

VIEW THE CALENDAR

Press Menu 8 to see the current day's calendar screen.

VIEW DAY NOTES

This option allows you to view, erase, edit, move, and send notes made for the selected day. Use the scroll keys to scroll through notes. Options available while viewing a note are **Erase**, **Edit**, **Move** (to another date), **Send note** to send the note, and **Send via IR** to copy the note to another compatible phone using the infrared port.

MAKE NOTE

With this option, you can choose from four note types: **Reminder**, **Call**, **Meeting**, or **Birthday**. Your phone asks you for more information depending on which one you choose.

- 1 Press **Options**, scroll to **Make note**, then press **Select**.
- 2 Scroll to the desired note type (for example, **Reminder**) and press **OK**.
- 3 Enter a subject for the reminder and press **OK**.
- 4 Enter the date for the reminder in **mmddyyyy** format and press **OK**.
- 5 When **Set an alarm for the note?** appears, choose **Yes** or **No**.

If you choose **Yes**:





- Enter the date for the alarm, then press **OK**.
- Enter the time for the alarm, then press **OK**.
- Choose **am** or **pm**, and press **OK**.

Calendar note saved appears briefly, and then the current day's calendar screen appears.

If you choose **No**:

- **Calendar note saved** appears briefly, and the current day's calendar screen appears.

When you set calendar notes for the displayed date, the appropriate icon(s) appear in the lower right-hand corner:

	Birthday reminder
	Meeting reminder
	Call reminder
	Other reminder

ERASE NOTES

- 1 Scroll to **Erase notes** and press **Select**.
- 2 Scroll to **Of chosen day**, **One by one**, or **All at once**, then press **OK**.

Of chosen day: Displays each note for the current day so you can delete the notes individually. Press **Erase** to delete the note, or press the scroll keys to view other notes.

One by one: Displays notes in chronological order, with birthdays first, so you can delete them individually. Press **Erase** to delete the note, or press the scroll keys to view other notes.

All at once: Allows you to delete all calendar notes at once. The phone asks you to confirm your decision before erasing the notes.

VIEW ALL NOTES

This option lets you scroll through all stored notes. Birthday notes appear first in chronological order, followed by other notes, also in chronological order.

GO TO DATE

This option takes you directly to the specified date instead of scrolling.

- Enter a date in **mmddyyyy** format, then press **OK**.

SET THE DATE

This option allows you to set the current date in your phone.

- Enter the date in **mmddyyyy** format, then press **OK**.

Send/receive calendar notes

When someone sends you a note, your phone displays **Calendar note received**. You can save the note in your calendar and work with it in the same way as any other note in your calendar, including setting an alarm. For information on sending calendar notes, see "Send information via IR" on page 129.

VIEW RECEIVED CALENDAR NOTES

Caution: If you press **Exit**, the calendar note will be deleted!

- 1 When your phone displays **Calendar note received**, press **Options**.
Show is selected.
- 2 Press **OK**.

- 3 Scroll through the note.

SAVE RECEIVED CALENDAR NOTES

- 1 After viewing the calendar note, press **Back**.
- 2 Scroll to **Save**, then press **OK**

DISCARD VIEWED CALENDAR NOTES

- After viewing the calendar note, press **Back**, then press **Back** again.

• TO-DO LIST

You can keep track of your tasks with the to-do list feature. You may be able to save up to 30 notes, depending on how long the notes are.

Add a to-do note

When you add a new note, the default priority is medium (2). You can change the priority to high (1) or low (3).

- 1 Press **Menu 7**, then press **Options**.
- 2 Scroll to **Add**, then press **OK**. [OK or Select?]

Subject: appears on the display.

- 3 Enter your note, press **Options**, then select **Save**.
- 4 Scroll to the priority you want, then press **OK**.

Choose other to-do options


When you view a to-do note, you have the following options:

Choice	What it does
View	Allows you to view the selected note.
Erase	Allows you to delete a note.
Edit	Allows you to modify the contents of a note.

Choice	What it does
Edit priority	Allows you to change the priority level of a note. Your choices are high, medium and low.
Go to priority	Allows you to view notes for a certain priority level. You can go to only the high priority notes, for example.
Save to calendar	Allows you to save the to-do note as a calendar note.
As text	Allows you to send the note as a text message to another phone.
Dictionary	Allows you to enter letters using predictive text input.

• **ALARM CLOCK**

The alarm clock feature is based on your phone's internal clock and sounds an alert at a time you specify. It even works if you switch the phone off!

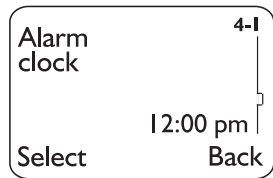

Set the alarm clock

- 1 Press **Menu** 4 1.
- 2 Enter the alarm time in **hhmm** format.
- 3 Press **OK**.
- 4 Select either **am** or **pm** and press **OK**.

The  icon appears at the top of the screen as a reminder.

Note: Step 4 is necessary only if you have selected am/pm format.

Manage the alarm

PHONE ON

- Press **Stop** to shut off the alarm.

OR

- Press **Snooze**.
- The alarm stops and sounds again in 5 minutes.

Note: If you let the alarm sound for 1 minute without pressing a key, it stops for 5 minutes, and then sounds again.

PHONE OFF

The phone switches itself on at alarm time, and then the alarm sounds. If you press **Stop**, the phone displays **Activate phone for calls?** Press **Yes** to keep it on or **No** to switch it off.

Warning: Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Turn off the alarm clock

- 1 Press **Menu 4 1**.
- 2 Scroll to **Off** and press **OK**.

• COUNTDOWN TIMER

The countdown timer is like an egg-timer or the timer on your microwave oven. You can enter a specified time, and when the time runs out, your phone sounds an alarm.

Note: The countdown timer only works when the phone is on. Once you turn off your phone, the timer is no longer active.

Set the countdown timer

- 1 Press **Menu 10 2**, then press **Select**.
- 2 Enter 2 digits for hours, then press **OK**.
- 3 Enter 2 digits for minutes, then press **OK**.
- 4 Enter a note, then press **Save**.

Change the time

After you've set the timer, you can change the time.

- 1 Press **Menu** 10 2, then press **Select**.
- 2 Scroll to **Change time**, then press **Select**.
- 3 Enter the time, then press **OK**.
- 4 Save the current note, or enter a new note and press **Save**.

Stop the timer

- When the time runs out, the phone sounds an alarm, and flashes the light on the display.
- Press any key during the alarm to stop the timer.
- After 30 seconds the timer alert expires automatically.

BEFORE THE ALARM SOUNDS

- 1 Press **Menu** 10 2, then press **Select**.
- 2 Scroll to **Stop timer**, then press **Select**.

Timer stopped appears on the display.

• STOPWATCH

Your phone has a stopwatch that can be used to track time at sporting events or other occasions. The stopwatch displays time in hours, minutes, seconds and fractions of a second. 00:00:00:0

Measure time

- 1 Press **Menu** 10 3.
- 2 Scroll to **Split timing**, then press **Select**.
- 3 Press **Start**.

The running time appears on the display.

Measure split time

You can use the split time function at a long distance race when you need to pace yourself.

- 1 Press **Menu** 10 3.

- 2 Scroll to **Split timing**, then press **Select**.
- 3 Take an intermediate time by pressing **Split**.

The clock continues to run.

The split time appears below the running time.

If you split the time more than once, the new measured time appears at the beginning of the list. You can scroll to see previous measured times.

Measure lap time

You can use the lap time function when you want to track how long it takes to complete each cycle or lap.

- 1 Press **Menu** 10 3.
- 2 Scroll to **Lap timing**, then press **Select**.
- 3 Press **Start**. The running time appears on the display.
- 4 Take a lap time by pressing **Lap**.

The clock stops, then starts immediately from zero.

The lap time appears below the running time.

If you take more than one lap time, the new measured time appears at the beginning of the list. You can scroll to see previous measured times.

Stop the clock

- Press **Stop** to end the time measurement.

Save the time

- 1 While the clock is running, press **Options**.
- 2 Scroll to **Save**, enter a name for the measurement, then press **OK**. If a name is not entered, the total time is used as a title.

Choose other stopwatch options

You can choose the following options when using the Stopwatch.

Choice	What it does
Continue	Shows up when the Stopwatch is working in the background.
Show last time	Allows you to view the last measured time.
View times	Allows you to browse the saved times.
Erase times	Allows you to delete the saved times. You can delete the saved times one by one or all at once.

Note: If you receive a call when using the Stopwatch, the clock continues to run in the background. After ending the call, you can return to the Stopwatch menu by taking the following steps:

- 1 Press **Menu** 10 3, scroll to **Continue**.
- 2 Press **Select**.

• BUSINESS CARDS

Your phone can send or receive electronic business cards consisting of a name and phone number. You can save received business cards to your phone book.

Send a business card

- 1 Recall the name from your phone book.
- 2 Press **Details**, if shown, or skip to Step 3.
- 3 Press **Options**.
- 4 Scroll to **Send bus. card**.
- 5 Press **Select**.

- 6 Enter or recall the phone number to which you want to send the business card.
- 7 Press **OK**.

Send a business card using IR

- 1 Recall the name from your phone book.
- 2 Press **Details**, if shown, or skip to Step 3.
- 3 Press **Options**.
- 4 Scroll to **Send via IR** and press **Select**.
- 5 Activate the IR port on the receiving phone.

The phone sends the business card through its IR port.

View a received business card

When you receive a business card, the phone displays **Business card received**.

Note: If you press **Exit** at any time before saving the business card, the business card will be deleted!

- 1 When your phone displays **Business card received**, press **Options**.
Show is selected.
- 2 Press **OK** to read the information.

Save a viewed business card

- 1 After viewing the business card, press **Back**, scroll to **Save**, then press **OK**.
- 2 At the **Name:** prompt, edit the name if you want to, then press **OK**.
- 3 At the **Number:** prompt, edit the number if you want to, then press **OK**.

Delete a viewed business card


After viewing the business card, press **Back**, then press **Exit**.

• PC SUITE

With the PC Suite you can write text messages or manage your phone's memory on a compatible PC. You can add, delete, and copy names and phone numbers in the PC Suite and then transfer the revised data to your phone via the infrared port.



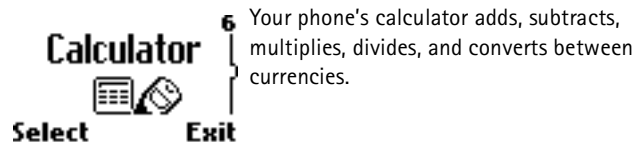


The setup software allows installation on any compatible PC running Windows 95/98. You can download the PC Suite and get more information at www.nokia.com.

• CALCULATOR



Warning: Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.


Use the calculator

- 1 Press **Menu 6**.
- 2 Enter the first number in the calculation.
 - Press  to enter a decimal point and press **Clear** to erase any mistakes.
 - To add, press  once (+ appears)
 - To subtract, press  twice (- appears)
 - To multiply, press  three times (* appears)
 - To divide, press  four times (/ appears)
- 3 Enter the second number, repeating steps as needed.
- 4 Press **Options**. **Equals** is selected.

- 5 Press OK.

Convert currency

SET THE EXCHANGE RATE

- 1 Press **Menu** 6, then press **Options**.
- 2 Scroll to **Exchange rate**, then press **Select**.
- 3 Scroll to **Home units converted to foreign units** or **Foreign units converted to home units**.
- 4 Press **Select**.
- 5 Enter the exchange rate (press  to enter a decimal point).
- 6 Press **OK**.

Note: The exchange rate remains in the phone's memory until you replace it.

CONVERT A CURRENCY AMOUNT

- 1 Enter the amount to be converted.
- 2 Press **Options**.
- 3 Scroll to **In domestic** to convert to domestic units or **In foreign** to convert to foreign units.
- 4 Press **OK**.

18 Your phone and other devices

18


- **DIALUP CONNECTIONS**

GPRS information

- **FAX AND DATA CALLS**

The phone can send and receive data through the PC Suite for the 8390 application (network service). For more details, refer to the documentation supplied with your PC Suite for the 8390 and communications applications.

Make a fax or data call

- 1 From the Messages menu, select **Fax and data** or **Also voice** and press **OK**.
Also voice allows you to switch from voice mode to data (or fax) mode during a call.
- 2 Enter or recall the desired phone number and press **OK**.
- 3 If you selected **Also voice** in step 1, to switch between voice and data/fax mode during a call, press **Options**, select **Voice Mode** or **Data Mode** (or **Fax Mode**), and press **OK**.
- 4 After the transmission, end the call by pressing  .

Receive a data or fax call

You can answer a data or fax call in the usual way, even when the phone keypad is locked.

- **SEND INFORMATION VIA IR**

You can set up your phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant.

Prepare the devices for infrared connection

- The IR ports of the two devices must point at each other.
- There must be no obstructions between the two devices.
- The two devices must be within 2 feet of each other.

Receive data via the IR port

To receive data from another compatible phone:

- 1 Make sure that the two devices are ready for the IR connection.
- 2 Select the **Infrared** menu to activate the IR port for data reception.
- 3 Have the user of the sending phone select the desired function to start data transfer.

If data transfer is not started within 45 seconds, the connection is cancelled and will have to be restarted.

Send data via the IR port

On a PC provided with an appropriate application, you can:

- Send a caller group graphic via IR.
- Copy and print names and numbers from the phone book.
- Print a text message on a compatible printer.
- Send a calendar note via IR.
- Print a calendar note on a compatible printer.

Check the status of an IR connection

The status of an IR connection is indicated by **IR**.

- When **IR** is displayed continuously, there is an IR connection between your phone and the other device.
- When **IR** blinks, your phone is trying to establish a connection with the other device or a connection has been lost.
- When **IR** is not displayed, no IR connection exists.

• PRINT USING IR

You can print stored text messages or phone book entries using any printer set up for printing through an IR port.

Print text messages

- 1 Press **Menu**, then press **Select**.
- 2 Scroll to where the text message is stored (inbox or outbox) and press **Select**.
- 3 Scroll to the message you want to print and press **Read**.
- 4 Press **Options** and scroll to **Print via IR**.
- 5 Align the phone's IR port with the printer's IR port.

Note: Be sure the phone is within 2 feet of the printer's IR port and that there are no obstructions between the printer's IR port and the phone's IR port.

- 6 Press **OK**. When the message is successfully transmitted to the printer, the phone displays **Message printed**.

Print phone book entries

- 1 Recall the name/number you want to print.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Print via IR**.
- 4 Align the phone's IR port with the printer's IR port.

Note: Be sure the phone is within 2 feet of the printer's IR port and that there are no obstructions between the printer's IR port and the phone's IR port.

- 5 Press **Select**.

When the name/number is successfully transmitted to the printer, the phone displays **Business card printed**.

19 Fun and games

• GAME RULES

Challenge yourself or a friend to the four fun games in your phone.

Warning: Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

- To start a new game, press **Menu 5 1**, scroll to the desired game, and press **Select**.
- To download new levels for your game, check high scores or access other game services, press **Menu 5 2**.

Note: If you select Game services (**Menu 5 2**), the phone tries to connect to the WAP pages of Club Nokia by using the currently active connection settings. If the connection fails and **Check service settings** appears, try again or change the connection settings. See "Making a connection to a WAP service" on page X.

- To adjust game settings such as sound, lights or vibra, press **Menu 5 3**, scroll to the setting and press **Select**.

Snake 2

Feed the snake with as many goodies as possible and watch it grow. Use keys 2, 4, 6, and 8 to turn the snake toward food. The longer the snake's tail grows, the higher your score. You can choose to have a clear field, or select from five different mazes. If the snake runs into its own tail or the surrounding wall, the game is over.

START A TWO-PLAYER GAME[CHECK LATER]

Snake can be played as a two-player game using the IR ports of two phones.

Before starting a two-player game, make sure that the IR ports of the two devices are pointing at each other and that the IR connection is activated. Both players need to start the same game on their phones.

Snowboarding

The object of the game is to get a high score by pulling as many tricks as you can. While in the air, the trick indicator will appear. Try to complete tricks by using different key press combinations. Land using the 5 key. Tricks must begin and end on the markers.

- Big air mode

Catch huge air and go for your best combo tricks on the big ramp.

- Downhill mode

Ride to the bottom of the slope as fast as you can.

Use 4 to steer left and 6 to steer right, 5 to jump.

- Halfpipe mode

Ride the half-pipe pulling as many tricks as you can for the most points. Use 4 to steer left and 6 to steer right, 5 to jump

Visit Nokia games services on the Internet for hints and tips.

Bumper

Bumper is like the arcade game pinball. The object of the game is to get a high score by keeping your ball on the table for as long as you can by using the flippers. Press 5 to launch the ball. Hold down the 5 key to get more power. Use keys 1 and 3 to control the flippers. Use the keys 4 and 6 to nudge the table - but not too much or the game will tilt.

Visit Nokia games services on the Internet to download new tables.

Pairs 2

Uncover pictures to find pairs, but use as few tries as possible. In Arcade mode, you must find all the pairs before the bomb explodes. Move the cursor with keys 2, 4, 6, and 8. Press 5 to reveal the pictures.

20 Reference information

• BATTERIES, CHARGERS, AND ACCESSORIES

This section provides information about the phone's batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7U, an ACP-8U, LCH-8 or an LCH-9 charger. Other usage could invalidate any approval given to this apparatus and might be dangerous.



Warning! When you purchase batteries, chargers, and accessories for your phone, use *only* batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.

Note: For information on how to charge and recharge your battery, refer to "Charge the battery" on page 13.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging could shorten its life span. If left unused, a fully-charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the back of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with objects such as a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F).

A phone with a hot or cold battery might not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below 0°C (32°F).

The following list provides guidelines that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries *must* be recycled or disposed of properly. Do *not* dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

• IMPORTANT SAFETY INFORMATION

This section provides additional safety information. A brief overview of safety can be found in "Safety first" on page 1.

Traffic safety

Do not use a handheld telephone while driving a vehicle. Always park the vehicle before using the phone.

After completing your phone conversation, always secure the phone back into its holder; do *not* place the phone on the passenger seat or place it where it can break loose in a collision or during a sudden stop.

Note: The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

Remember: Safety—Your most important call.

Operating environment

Remember to follow any special regulations that are in force in any area, and always switch off your phone wherever it is forbidden to use it. Otherwise, the use of your phone could cause interference or danger.

When connecting the phone or any accessory to another device, read the associated user guide first and obtain detailed safety instructions.

Note: Do *not* connect incompatible products.

As with other mobile radio transmitting equipment, you are advised that, for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the phone should *only* be used in the normal operating position. This position is when the phone is held to your ear with the antenna pointing over your shoulder.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment might not be shielded against the RF signals from your wireless phone. The following four subsections provide more information about this topic.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 6 inches (20 cm) should be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 6 inches (20 cm) from their

pacemakers when the phone is switched on.

- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

Note: If you have any reason to suspect that interference is taking place, switch off your phone immediately.

HEARING AIDS

Some digital wireless phones could interfere with some hearing aids. In the event of such interference, you might want to consult your service provider.

OTHER MEDICAL DEVICES

Operation of any radio transmitting equipment, including cellular phones, could interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy. Also contact these authorities if you have any questions.

Switch off your phone in health care facilities or where any posted regulations instruct you to do so. Hospitals or health care facilities could be using equipment that is sensitive to external RF energy.

VEHICLES

RF signals could improperly affect installed or inadequately shielded electronic systems in motor vehicles. These could include electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, or air bag systems.

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone if you are in any area that has a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or even death.

You are advised to switch off the phone while at a refueling point (service station). And, you are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often—but not always—clearly marked. These areas include the following: below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service could be dangerous and might invalidate any warranty that could apply to the unit.

Regularly check that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or its accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both the installed or the portable wireless equipment, in the area over the air bag or in the air bag deployment area. If the in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, may disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions could lead to the suspension or the denial of telephone services to the offender, or it could result in legal action, or both scenarios could apply.

• EMERGENCY CALLS

IMPORTANT!




This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should *never* rely solely on any wireless phone for essential communications (for example, medical emergencies).

Remember, to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

Always make sure that your phone is properly charged before attempting any emergency calls. If you allow your battery to become empty, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

Make an Emergency Call

- 1 If the phone is not on, switch it on.
Some networks may require that a valid SIM card is properly inserted in the phone.
- 2 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
- 3 Press .

If certain features are in use (Keyguard, fixed dialing, restrict calls, and so on), you might first need to turn those features off before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident—*do not* terminate the call until given permission to do so.

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.05 W/Kg and when worn on the body, as described in this user guide, is 1.10 W/Kg. (Body worn measurements differ among phone models, depending upon available accessories and FCC requirements.) While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID LJP NSB-8.

For body-worn operation, to maintain compliance with FCC RF exposure guidelines, use only Nokia approved accessories. When carrying the phone while it is on, place the phone in the carrying case (CBU-3, CSM-10, CSL-18, or CSH-3) that has been tested for compliance.

Use of non-Nokia-approved accessories may violate FCC RF exposure guidelines and should be avoided.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years.

When using your phone, battery, charger, or any accessory:

- Keep it and all its parts and accessories out of the reach of small children.
- Keep it dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which could damage the phone's electronic circuit boards.
- Do not attempt to open it. Non-expert handling of the device could damage it.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.

If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

• ACCESSORIES

If you want to enhance your phone's functionality, a range of accessories is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.



A FEW PRACTICAL RULES FOR ACCESSORY OPERATION

- Keep all accessories out of reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories *must* be made by qualified personnel only.

Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone, and could be dangerous. Refer to "Batteries, chargers, and accessories" on page 134 for important battery usage information.

• BATTERIES

This section provides information about the phone's batteries. Be aware that the information in this section is subject to change.

Note: This is a lithium ion (Li-Ion) battery. Dispose of used batteries in accordance with any local regulations.

The tables shown in this section provide information about battery options that are available for your phone, charging times with the Rapid Travel Charger (ACP-8U), the Standard Travel Charger (ACP-7U), talk times, and standby times. Consult your service provider for more information.

Note: The charging times listed in the next section are approximate.

CHARGING TIMES

Battery option	ACP-7U Charger	ACP-8U Charger
BLB-2 Li-ion Battery 650 mAh	2 hrs 25 min	1 hr 40 min

Note: The times displayed above allow your battery to obtain approximately 80% of its capacity. When this happens, the battery scroll bars on your phone's screen stop scrolling. If you want to obtain 100% battery capacity, allow another 2 hours for a "trickle" or "maintenance" charge.

STANDBY AND TALK TIMES

Battery option	Digital talk time	Standby time
BLB-2 Li-ion Battery 650 mAh	2 hrs to 3 hrs 20 min	50 to 150 hrs

Note: The above times are approximate. Battery operation times vary according to signal conditions, network parameters that are set by the service provider, temperature, and how you use your phone.

• CHARGERS AND OTHER ACCESSORIES

This section provides information about the phone's chargers and accessories. Be aware that the information in this section is subject to change as the chargers and accessories change.


The chargers and accessories that are described in this section are available for your phone. Contact your dealer for details. Also, refer to the accessories brochure that was included in your sales package for the entire line of Nokia Original Accessories.

Note: When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week, since overcharging the battery could shorten its life span. If left unused, a fully charged battery will discharge itself over time.

STANDARD TRAVEL CHARGER (ACP-7U)

This is a lightweight (187g) and durable AC charger.


To use the Standard Travel Charger, plug it into a wall outlet and connect the lead from the charger to the base of your phone.

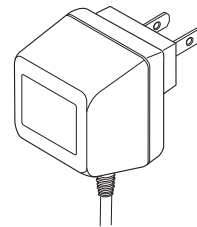

RAPID TRAVEL CHARGER (ACP-8U)

This is a lightweight (100g) and durable AC charger. Calls can be made during charging, even with a fully discharged battery.


To use the Rapid Travel Charger (ACP-8U), plug it into a standard 120V or 220V AC wall outlet, and connect the lead from the charger to the base of your phone.

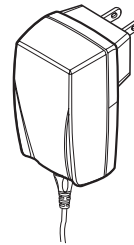

The charger can also be used together with the optional Desktop Charging Stand. Approximate charging times for discharged batteries are shown in "Charging Times" on page 144.

RAPID CIGARETTE LIGHTER CHARGER (LCH-9)

You can charge your phone's battery from your vehicle battery by using the Rapid Cigarette Lighter Charger (LCH-9). You can also use this lightweight charger with the Desktop Charging Stand.

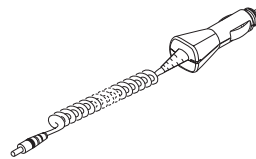

Calls are possible during charging. A green light indicates that the charger is ready for charging (when not charging) or finished charging (if it has been charging). The battery charging times are the same as those for the Rapid Travel Charger (ACP-8U).

The input voltage range is from 11 to 32V DC, negative grounding. Avoid prolonged charging with the Rapid Cigarette Lighter Charger (LCH-9) when the car engine is not running; this could cause your car battery to drain. Note also, that in some cars, the cigarette lighter plug is not provided with electricity if the ignition is not switched on.

COMPACT DESKTOP CHARGING STAND (DCV-1B)

Used together with the Standard Travel Charger (ACP-7U) or the Rapid Travel Charger (ACP-8U), the Desktop Charging Stand is an economical choice when you need your phone close at hand, always ready for calls.



This charging stand allows you to charge your phone's battery in an upright, obtainable position on your desk.

21 Technical information

[confirm later]	
Weight	3.2 oz. with BLB-2 battery
Transmitting power	GSM1900, 1 W nominal
Operating voltage	3.6V DC 12V DC for car kit
Networks	GSM 1900
Frequency band	GSM1900 1850 to 1910 MHz (TX) 1930 to 1990 MHz (RX)
Memory locations	250 in phone

22 Troubleshooting

This section provides a table that lists some of the most commonly encountered problems and provides possible solutions.

Problem	Possible cause	Possible solution
My phone isn't charging.	The charger and the phone are not properly connected.	Securely connect the charger to the phone.
	The charger is not properly plugged in.	Make sure that the charger is plugged in correctly.
My phone isn't making/answering calls.	The battery is not charged.	Charge the battery.
	The signal strength is poor.	If you are indoors, move toward a window.
I can't listen to my voice messages.	You don't have voice mail service.	Call your wireless service provider.
	You have not set up your voice mailbox with your service provider.	Call your wireless service provider.
	You have not saved your voice mail number in your phone.	Refer to "Use voice features" on page 67.
	The voice mail number you have saved is incorrect.	Call your wireless service provider.
	You have forgotten your password or are entering it incorrectly.	Call your wireless service provider.

23 Frequently asked questions (FAQ)


23

[from 8290, confirm menu shortcuts and contents later]

This section lists and answers the questions that you most frequently ask. Where necessary, the answers refer you to the appropriate section within this guide.

Note: Some of the answers tell you to use menu shortcuts. For a complete listing of these shortcuts, refer to "List of menu shortcuts" on page 26.

Q. Why doesn't the phone answer a call when I press any keys?

A. Make sure the keypad is not locked. Then you can press any key - except  or **Decline** - to answer a call.

Q. How do I unlock my phone?

A. Press **Menu** x x x, enter your PIN code, and press **OK**. Scroll to **Off** and press **OK**.

Refer to "about security codes" on page 89 for more information.

Q. How do I lock my phone?

A. Press **Menu** x x x, enter your PIN code, and press **OK**. Scroll to **On** and press **OK**.

Refer to "about security codes" on page 89 for more information.

Q. What is my lock code?

A. The lock code enables you to lock your phone, thus preventing someone else from using it. The default lock code is 1234 (depending on your service provider). However, it is suggested that you change this code *immediately*.


Refer to "about security codes" on page 89 for more information.

Q. What is my security code?

- A. The default security code is 12345. However, it is suggested that you change this code *immediately*. Certain features can be used *only* after the correct security code has been successfully entered.


Refer to "Security code" on page x for more information.

Q. How do I lock the keypad?

- A. Press Menu .

Refer to "Lock the keypad(Keyguard)" on page x for more information.

Q. How do I unlock the keypad?

- A. Press Menu .

Refer to "Lock the keypad(Keyguard)" on page x for more information.

Q. How do I make the ringing louder?

Refer to "Profiles" on page 76 for more information.

Q. How do I change the ringing tone?

Refer to "Profiles" on page 76 for more information.

Q. How do I store my voice mailbox number?

- A. Press Menu x x. Enter your voice mailbox number, then press OK. This number can be up to 32 digits long.

 
This voice mailbox number is valid unless your phone number changes. If your phone number changes, you will have to save a new voice mailbox number.

Refer to "Save the voice mailbox number" on page 68 for more information.

Q. How do I call my voice mailbox number (retrieve voice messages)?

When your phone alerts you to new voice messages, press **Listen** and follow the prompts. If you'd rather listen later, press **Exit**.

To listen to your voice messages at a later time, perform one of the following actions:


- If you've saved your voice mailbox number in your phone, press and hold  to call your voice mailbox.
- Call your voice mailbox number as you would any other telephone number, then follow the directions provided.

See "Use voice features" on page 67. for more information.

Q. How do I find my phone's model number?

- A. Turn off your phone, then remove the battery from the back of the phone. Read the sticker that is inside and you will find, after the word *Model*, your phone's model number.

Q. How do I redial the last-dialed number?

- A. Press  twice. See "Redial the last-dialed number" on page 23.

Q. How do I assign a key to 1-touch dialing?

- A. Press **Names**, scroll to **1-touch dialing**, and press **Select**.

Scroll to the number you want to assign a 1-touch dial number and press **Assign**.

Note: If you have numbers saved in SIM memory, the first nine numbers are stored automatically stored in keys 1 through 9 as 1-touch dial numbers.

Scroll to the phone book entry that you want to assign to this key and press **Select**.

Repeat these steps as many times as necessary. Refer to "1-touch dialing" on page 63 for more information.

Q. How do I find out how many memory locations the phone has?

- A. Press **Names** and scroll to **Options**.

Press **Select**.

Scroll to **Memory status** and press **Select** again. A message appears that says **Phone: xx free, xx in use** where xx indicates the amount of memory locations. Scroll to see SIM card memory status.

Q. How do I find my phone's IMEI number?

- A. Turn your phone off, open the rear sliding cover, then remove the battery. Your phone's IMEI number is printed on the sticker inside the battery cover, under the first bar code.

Or press *#06* .

Q. How can I change the contrast of my phone's display?

- A. The contrast of your phone's display is fixed and *cannot* be changed.

24 NOKIA One-Year Limited Warranty

24

Nokia Mobile Phones, Inc. ("NMP") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

1. The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product.
2. The limited warranty extends to the original purchaser of the Product ("Consumer") and is not assignable or transferable to any subsequent purchaser/end-user.
3. The limited warranty extends only to Consumers who purchase the Product in the United States.
4. During the limited warranty period, NMP will repair, or replace, at NMP's option, any defective parts, or any parts that will not properly operate for their intended use with new or factory rebuilt replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. NMP will also pay for the labor charges incurred by NMP in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. NMP's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. NMP shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.
5. Upon request from NMP, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.

6. The Consumer shall bear the cost of shipping the Product to NMP in Melbourne, Florida. NMP shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
7. The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subject to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of NMP, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, or damage caused by the connection to other products not recommended for interconnection by NMP.
 - c) NMP was not advised by the Consumer in writing of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system, by inadequate signal reception by the external antenna, or by viruses or other software problems introduced into the Product.
8. Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
 - a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.

b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:

Nokia Mobile Phones, Inc.
Attn: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901

c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.

d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.

e) NMP will repair or authorize the repair of the Product under the limited warranty within 30 days after receipt of the Product by NMP or an NMP authorized service center. If NMP cannot perform repair covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, NMP at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage.

f) If the Product is returned to NMP during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to NMP after the expiration of the limited warranty period, NMP's normal service policies shall apply and the Consumer will be responsible for all shipping charges.

9. The Product consists of newly assembled equipment that may contain used components that have been reprocessed to allow machine compliance with Product performance and reliability specifications.

10. ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NMP SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NMP KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NMP SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

11. Some states do not allow limitation of how long an implied warranty lasts, so the above one-year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.

12. NMP neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.

13. This is the entire warranty between NMP and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, and all communications relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.

14. This limited warranty allocates the risk of failure of the Product between the Consumer and NMP. The allocation is recognized by the Consumer and is reflected in the purchase price of the Product.

15. Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following delivery of the Product.

16. Questions concerning this limited warranty may be directed to:

Nokia Customer Service
7725 Woodland Center Blvd., Ste. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA2U (1-888-665-4228)
Facsimile: (813) 287-6612
TTY Users: 1-800-24NOKIA (1-800-246-6542)

17. The limited warranty period for NMP supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

©Nokia is a registered trademark of Nokia Corporation.