

Nokia 6340i User Guide

Phone notes

My Nokia 6340i information		Information source
My number		Wireless provider
Phone serial number (ESN)		On back of your phone, beneath the battery
International Mobile Equipment Identifier (IMEI)		
Voicemail number		Wireless provider
Wireless provider customer care		Wireless provider
Message center number		Wireless provider
Default recipient number (e-mail gateway number)		Wireless provider

The wireless phone described in this guide is approved for use in GSM 850/1900, TDMA 800/1900, and AMPS networks.

LEGAL INFORMATION

Part No. 9355059, Issue No. 1

Copyright ©2002 Nokia. All rights reserved.

Nokia, Nokia Connecting People, the Nokia Original Accessories logos, Nokia 6340i, Snake II, Pass 'n Rush, Bumper, and Pairs II are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada 09/2002

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information contained in this user guide was written for the Nokia model 6340i phone. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you

require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Contents

1	Safety first	1
	About accessories	2
2	Quick guide	3
	Menu shortcuts	4
3	Welcome to Nokia	5
	Get the most out of this guide	5
	Sign up with a wireless provider	6
	Register your phone	6
	E-Newsletters	6
	Before you contact Nokia	7
	Dynamic memory use	8
	About the antenna	8
4	The Nokia 6340i at a glance	9
	Remove the back cover	10
	Install the SIM card	10
	Install the battery	11
	Charge the battery	11
	Remove the battery	13
	Remove the SIM card	14
	Switch on the phone	15
	Switch off the phone	15
	Set the time and date	15
	The Start screen	16
	Use the selection and scroll keys	18
	The volume key	19
	Make and answer calls	19
	Help text	20
	Navigate your phone's menus	20
	Accessibility solutions	21
	Full menu shortcuts	23

5	Your phone's keypad	27
	Enter characters and numbers	27
6	The Phone book	29
	Open the Phone book	29
	Customize the Phone book	35
	Your phone's memory	37
	Copy Phone book entries	38
	View service numbers	39
7	Call log	40
	Call log options	40
8	Use voicemail	44
	Save your voice mailbox number	44
	Call and setup your voicemail	44
	Automate voicemail	45
9	Advanced features	47
	In-call options	47
	Call waiting	49
	Send own caller ID with next call	50
	Call forwarding	50
	Voice dial	52
	Voice commands	54
	Voice recorder	56
	1-touch dialing	58
	International dialing	59
10	Customize your phone	60
	Set the display language	60
	USE A SCREEN SAVER	60
	Profiles	61
	Accessibility options	63
	Optional headsets	66
	Audio settings	67
	Download a ringing tone	69

11	Manage phone security	70
	Lock and unlock the keypad (Keyguard)	70
	Security levels	70
	Fixed dialing	71
	Access codes	73
12	Messages	76
	Tips for composing a message	77
	Write and send a text message	80
	Read messages	80
	E-mail	82
	Picture messages	84
	Templates	86
	Organize messages with folders	88
	Erase messages	90
13	Your personal organizer	91
	Calendar	91
	Make a to-do list	96
	Wallet	97
	Create a Wallet card	100
	Set the time and date	103
	Alarm clock	105
	Use the Calculator	106
14	Your phone and other devices	109
	Infrared basics	109
	Send and receive information	110
	Business cards	110
	PC Connectivity	112
15	The wireless Internet	114
	The Services menu	114
	WAP settings	115
	Launch the browser	115
	On-line purchases	120

16	Fun and games	122
	Games main menu	122
	Start a game	123
17	Accessories	124
18	Reference information	127
	Batteries and chargers	127
	Important safety information	129
19	Care and maintenance	135
	Troubleshooting	136
20	Frequently Asked Questions (FAQ)	137
21	Glossary	139
22	Technical information	143
23	Nokia One-Year Limited Warranty	144
	Appendix A	
	Message from the CTIA	149
	Appendix B	
	Message from the FDA	153
	Index	160

1 Safety first

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Do not use your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



OBSERVE INFRARED PRECAUTIONS

Do not point the IR beam at anyone's eyes or allow it to interfere with other IR devices.

1



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



BACKUP COPIES

Remember to make backup copies of all important data.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Make sure the phone is switched on and in service. Press and hold to return to the Start screen where an emergency call can be made. Enter the emergency number and press . Give your location. *Do not* end the call until told to do so.







• ABOUT ACCESSORIES

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7U and ACP-8U chargers.




Warning: Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous. For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.


2 Quick guide

Make a call	Enter phone number, press 
Answer a call	Press 
Answer a call with call waiting	Press  or Options and select Answer call
End a call	Press 
Ignore a call	Press Silence when your phone rings
Redial	Press  twice
Adjust call volume	Press up or down on the side volume key
Use the in-call menu	While in a call, press Options
Use 1-touch dialing	Press and hold any key 2 through 9
Save a name and number	Enter a number, press Options and select Save , then enter a name and press OK
Recall a name/number	Press Names , select Find . Enter name and press Find or List
Recall a name/number during a call	Press Options , scroll to New call , press Select , press Find , enter the first letter of the name to find
Check voice mail	Press and hold  OR dial your voice mailbox number
Send a text message	Press Menu 01-1 . After a pause, write the message. Press Options , scroll to Send , press Select , enter the recipient's number, press OK
Send an e-mail message	Press Menu 01-2 . Select Write e-mail , enter the recipient's address, press OK , enter the subject, press OK , write the message, press Options , select Send e-mail , enter the Gateway number, press OK
Read new message	Press Show , then press Select
Reply to a message	Press Options , select Reply , write the reply, press Options , select Send , and press OK
Reply to an e-mail message	Press Options , scroll to Reply , press OK , choose As e-mail , press Select , then follow instructions for sending an e-mail
Send a business card	Recall a name from the Phone book. Press Details , then press Options , select Send bus. card , select Via text msg. . Enter the recipient's number or press Find to retrieve a number from the Phone book. Press OK .




• MENU SHORTCUTS


2 1 **MESSAGES** 

 **Note:** Messages menu requires pressing "0"


Write message..... 01-1
 Write e-mail..... 01-2
 Inbox..... 01-4
 Outbox..... 01-4
 Archive..... 01-5
 Templates..... 01-6
 My folders..... 01-7
 Erase messages..... 01-8
 Message settings..... 01-8
 Voice messages..... 01-9
 Sending profile..... 01-12

2 **CALL LOG** 

Missed calls..... 2-1
 Received calls..... 2-2
 Dialed numbers..... 2-3
 Clear call lists..... 2-4
 Call timers..... 2-5

3 **PROFILES** 

Normal..... 3-1
 Silent..... 3-2
 Meeting..... 3-3
 Outdoor..... 3-4
 Pager..... 3-5

4 **SETTINGS** 

Alarm clock..... 4-1
 Time settings..... 4-2
 Call settings..... 4-3
 Phone settings..... 4-4
 Tone settings..... 4-5

¹Accessory settings..... 4-6
 Security settings..... 4-7
 Restore factory settings..... 4-8

5 **VOICE** 

Voice recorder..... 5-1
 Record..... 5-1-1
 Recordings list..... 5-1-2
 Voice commands..... 5-2
 Profiles..... 5-2-1
 Voice mailbox..... 5-2-2
 Infrared..... 5-2-3
 Recorder..... 5-2-4

6 **ORGANIZER** 

Calendar..... 6-1
 To-do list..... 6-2
 Wallet..... 6-3

7 **CALCULATOR** 

8 **GAMES** 

Select game..... 8-1
 Snake II..... 8-1-1
 Pass 'n Rush..... 8-1-2
 Bumper..... 8-1-3
 Pairs II..... 8-1-4
 Settings..... 8-2

9 **INFRARED** 

Infrared..... 9

10 **SERVICES** 

1 Menu 4-6 appears only when an accessory, such as TTY or headset is connected.



3 Welcome to Nokia

3

Congratulations on your purchase of the Nokia 6340i mobile phone. The Nokia 6340i can be connected to a PC, laptop, or other device using the data cable or built-in IR port. For more information, please refer to the PC Connectivity Guide.

The PC Connectivity Guide, Nokia PC Suite, and all related software can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.

• GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you get the most from this guide as you learn to use your phone.

Follow graphic clues

Icons appear throughout this guide to alert you of important information or to provide useful tips.



Tip: Indicates a shortcut or alternate method of doing something.



Note: Explains a feature or points out an important concept.



Important: Indicates critical information on using a feature.



Caution: Warns you when you may lose information.



Warning: Helps you avoid personal injury, damage to the phone, or property damage.

Look for updates

From time to time, this guide is updated to reflect changes. The latest version may be available at the U.S. Mobile Phone products section of www.nokia.com.

Also, an interactive version of this guide may be available at www.nokiahowto.com.

3

- **SIGN UP WITH A WIRELESS PROVIDER**

To use the network services available in your phone, you'll need to sign up with a wireless provider. In many cases, the wireless provider will make available descriptions of their services and instructions for using features such as:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Messaging
- News and information services
- Selected Internet services

Wireless providers may differ in their support of features. Before you sign up, make sure a wireless provider supports the features you need.

- **REGISTER YOUR PHONE**

Make sure to register your phone at www.warranty.nokiausa.com or 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should need to call the center or have your phone repaired.


- **E-NEWSLETTERS**

When you register your phone, you can sign up for Nokia's e-newsletter **Nokia Connections** if you would like. You will receive tips and tricks on using your phone, accessory information, and special offers.

• **BEFORE YOU CONTACT NOKIA**

If you need help, Nokia Customer Care is available for assistance. Before calling, however, please read “Frequently Asked Questions (FAQ)” on page 137.

We also recommend that you write down the following information on the inside cover of this guide and have it available if you call. The information can be found on your phone’s label, which is on back of the phone, beneath the battery.

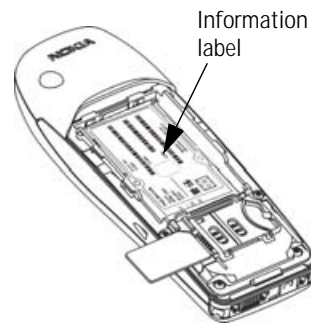

3

- The International Mobile Equipment Identifier (IMEI)
- The Electronic Serial Number (ESN)

We also ask that you write down your zip code.

Have your phone or accessory handy

Please have your phone or accessory with you when contacting either of the numbers below.

Nokia Customer Care Center, USA	Customer Interaction Center, Canada
Nokia, Inc. 7725 Woodland Center Boulevard Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)	Nokia Products Ltd. 601 Westney Road South Ajax, Ontario L1S 4N7 Tel: 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-427-1070

3

- **DYNAMIC MEMORY USE**


Some features in your Nokia 6340i phone use a common pool of memory (storage capacity) called shared memory. When any of these features is used, there is less available memory for other features, which are also dependent on shared memory. This is especially true with heavy use.

For example, entering a large number of Phone book entries may use most of the available shared memory. Consequently, if you attempt to create a calendar note or save a business card, your phone may display a message saying **Memory full**. To proceed, you would need to delete some of the information or entries occupying the available dynamic memory.

- **ABOUT THE ANTENNA**

Your phone has a built-in antenna. As with any other radio transmitting device, avoid touching the antenna while the phone is powered up.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than necessary.

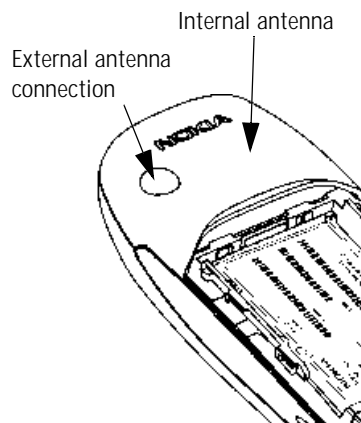


4 The Nokia 6340i at a glance



• REMOVE THE BACK COVER

- 1 With the phone facing away from you, grip the bottom end with one thumb while pressing the cover release with the other.
- 2 Slide the cover toward the bottom end of the phone (about 1/4 inch) until it stops. Lift the cover to remove.

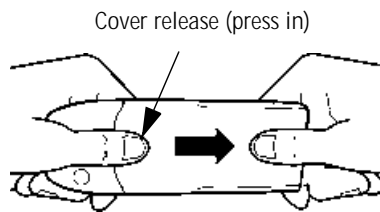

• INSTALL THE SIM CARD

The SIM slot is between the battery compartment and the bottom end of the phone.




Warning: If the battery is in the phone, remove the battery before attempting to install the SIM card. See "Remove the battery" on page 13 for battery removal instructions.




Note: The SIM card should be inserted beveled corner first with the gold contacts facing down.


- Slide the SIM card into the empty SIM slot until the SIM card retaining latch closes behind the SIM card.

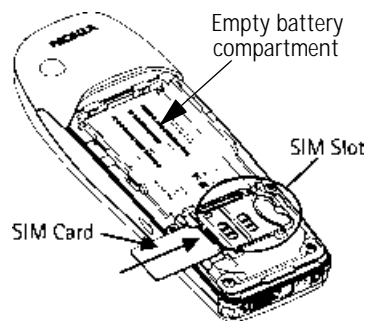



- **INSTALL THE BATTERY**

 **Note:** The SIM card must be installed *before* installing the battery.

- 1 Position the battery so the gold contacts match up with those on the phone. The battery label should be facing *away* from the phone.
- 2 Insert the battery, contact end first into the battery slot.
- 3 Press the other end of the battery into place.

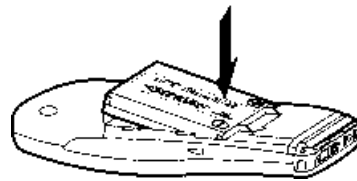


- 4 Replace the cover and slide it toward the top of the phone until it locks into place.

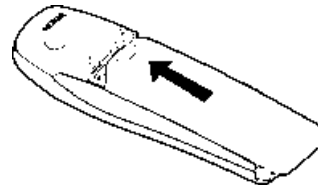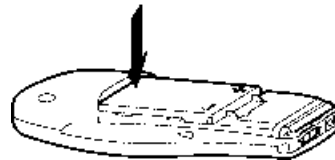

- **CHARGE THE BATTERY**

- 1 Plug the charger transformer into a standard AC outlet.

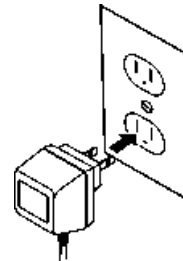

2 With your phone on or off, insert the charger's output into the round connector at the bottom end of the phone.

- After a few seconds, the battery indicator in the display starts to scroll from bottom to top.
- When the battery is 80% full, the bar on in the display stops scrolling and **Battery full** appears (if the phone is on).
- Unplug the phone and charger once charging is complete.



IMPORTANT BATTERY INFORMATION



Important: Your phone is powered by a rechargeable battery.

Use only batteries approved by Nokia and recharge your battery only with the chargers approved by Nokia. Never use any charger or battery which is damaged.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

The BLB-3 battery doesn't need a full discharge before recharging.

PROLONG THE BATTERY

Use the following guidelines to obtain the best performance from your battery:

- With your phone turned off, charge your new battery for three hours before its first use. Use the battery until it is fully discharged. Repeat this procedure twice for a total of three charging cycles.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles. Battery operation time may be less than the estimated times during the first charges. This condition is normal.

The Nokia 6340i at a glance

- You can use your phone while the battery is charging. However, if the battery is completely empty, it may need to recharge a few minutes before you can make or receive calls or the battery indicator appears.
- After the first charge, you can make and receive calls during the charging cycle, but the calls interrupt the charge. When the phone call ends, the charge will resume.
- The bars on the screen stop scrolling and remain constant when the phone is fully charged. If you leave the phone connected to the charger, the battery receives an additional charge. If you switch the phone on when charging is complete, the message **Battery full** momentarily appears in the display.

4



Note: The battery will accept a "trickle charge" for an additional two hours.

Charging time depends on the charger and battery. For example, charging time for the BLB-3 battery with the ACP-7U charger is about 4 hours.

• REMOVE THE BATTERY

- 1 Remove the back cover as described on page 10.
- 2 Pull the battery out with your fingers from the top end, as shown in the illustration.




Warning: Only use your hands to remove the battery. Don't use an object such as a coin or knife, as either can damage both the phone and the battery.


- REMOVE THE SIM CARD

- 1 Remove the back cover and battery as described on page 10 and page 13.


4


- 2 Push the SIM card out of the slot as far as you can (about 1/4 of an inch) with your thumb.

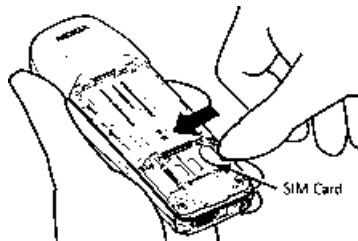

-  **Note:** Keep your thumb in place to prevent the SIM card from sliding back into the slot while you perform the next step.

- 3 Pull the SIM card from the open end of the slot with your fingers.

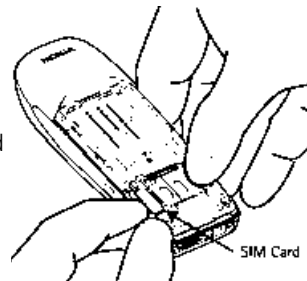


-  **Warning:** Keep all SIM cards out of reach of small children.

- **SWITCH ON THE PHONE**

- Press and hold the power key on top of the phone for at least 2 seconds.



Warning: Don't power-up the phone where wireless phone use is prohibited or where the use of the phone could cause interference or danger.

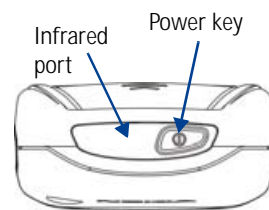

- **SWITCH OFF THE PHONE**

- Press and hold the power key on top of the phone for at least 2 seconds.

- **SET THE TIME AND DATE**

When you power-up your phone for the first time, or when you remove and replace the battery, you'll be prompted to set the time and date.



Note: If "PIN code request" is set to "On," you'll need to enter the 4-digit PIN code and press OK. See "PIN code request" on page 74 for more information.

- 1 Enter the correct time and press OK.
- 2 Enter the correct date and press OK. After a brief pause, the Start screen appears in your display.






- **THE START SCREEN**

The Start screen is the “home base” for your phone and indicates it is in idle mode.






 
 








 










4

What's on the Start screen

HOME	Your wireless provider's name may appear here.
	Signal strength - Left side of the Start screen. A higher bar indicates a stronger signal.
	Battery charge level - Right side of the Start screen. A higher bar indicates more power in the battery.
Menu	Press the left selection key () under Menu to enter the menu list.
Names	Press the right selection key () under Names to enter the Phone book.
	Press either one of the scroll keys at the Start screen to display any entries in your Phone book.

Indicator icons

Your phone uses icons to indicate status, alert you of a message or meeting, and more.





Icon	Indicates...	Icon	Indicates...
	You are in an active call		The Silent profile has been selected
	You are in lowercase text entry mode (predictive text off)		Keyguard is active
	You have voice messages waiting		You have a text or picture message
	You have a call waiting (when blinking)		You are in uppercase text entry mode (predictive text off)
	You are in sentence case text entry mode (predictive text off)		You are in number entry mode
	Encryption is on		An alarm is set
	A Memo note is in your Calendar		A birthday note is in your Calendar
	A note is in your calendar to call someone		You have a meeting scheduled in your Calendar
	Predictive text is on		The highlighted entry (in Phone book) exists on the SIM card
	A message that you've composed has <i>not</i> been sent		A picture is attached to your message
	You are in a secure connection on-line		When steady, IR is connected to a device
	When blinking, IR is searching for a device		Encryption is off


4



Return to the Start screen from any activity

  
- Press 

4 • USE THE SELECTION AND SCROLL KEYS

The left and right selection keys ( ) are beneath each corner of the display. The scroll keys ( ) are centered below the selection keys. A selection key's function is always defined by the text that appears above it in the display.

Press the left selection key () when **Menu** appears above it to display the Messages menu.

Page through the other main menus using the scroll keys ( )

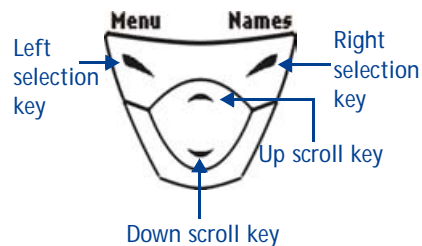

Press the right selection key () when **Names** appears above it to enter the Phone book.

 **Tip:** Press either scroll key ( ) from the Start screen to view any entries in your Phone book.


• **THE VOLUME KEY**

With the phone facing you, the volume key is located on the left side of the phone.

Adjust earpiece volume



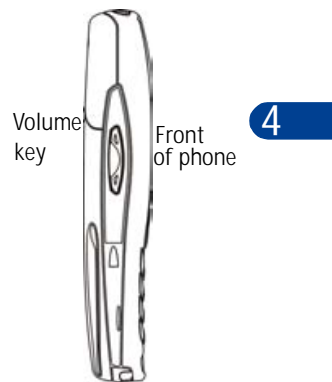

When you press the volume key, a bar chart appears in the display indicating the present volume level.



- Press the top portion of the volume key to increase your call volume.
- Press the bottom portion of the volume key to decrease your call volume.



• **MAKE AND ANSWER CALLS**

Use the following table as a quick guide for basic functions.

Switch the phone on	Press and hold the power key on top of the phone for 2 seconds.  Warning: Do not power-up the phone when wireless use is prohibited or when the phone may cause interference or danger.
Make a call	<ol style="list-style-type: none"> 1 Enter the area code and phone number. 2 Press  3 Hold the phone with the earpiece over your ear and microphone near your mouth, or connect and use the headset before entering the number.
Answer a call	When your phone rings or vibrates, press 
End a call	Press  .

Turn Keyguard on	Press Menu  . Keyguard prevents accidental calls.
Turn Keyguard off	Press Unlock 
Silence a call OR Decline a call	You can mute the ringing tone of an incoming call without terminating the call. Press Silence and the ringing tone is muted. After pressing Silence, you then have the option to Decline the call. When you decline a call, the calling party hears a busy signal.



- **HELP TEXT**

The Nokia 6340i displays brief descriptions for most menu items. When you arrive at a feature or menu, pause for about 10 seconds. Use the scroll keys to page through the full help text, if necessary.

- **NAVIGATE YOUR PHONE'S MENUS**


You can navigate the menus and submenus in your phone using the *scroll method* or a *shortcut*.

Use the scroll method





- 1 At the Start screen, press Menu. The Messages menu appears in the display.
- 2 Page through the remaining menus using the scroll keys ( .

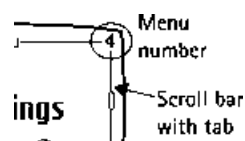THE MENU NUMBER AND SCROLL BAR

As you page through menus, the **menu number** appears in the upper right corner of the display. A **scroll bar** with a tab appears below the menu number. This tab moves up or down as you page through the menus, and indicates your position within the menu structure.



- When the menu you want appears in the display, press Select.

- 3 Once inside the menu, use the scroll keys ( ) to highlight an item or page through submenus. Press  to open a highlighted item or to enter a submenu. Press  to exit or return to the previous menu.

Use a shortcut

4

You can also go to almost any feature, option, or submenu directly from the Start screen using a "shortcut."

Press **Menu**, and within 3 seconds, enter the first number of the menu function you'd like to access. Keep going until you've entered all the numbers.

For example: To turn on the **Alarm clock**, press **Menu 4-1-1**
(Menu - ⁴Settings - ¹Alarm clock - ¹On).

A complete list of shortcuts begins on page 23. Some features may not appear depending on service availability, or may require subscription to the feature in question. In such cases, the phone displays an error message. If you wish to subscribe to a feature that is currently disabled, contact your wireless provider.

• ACCESSIBILITY SOLUTIONS

Nokia is committed to pursuing accessibility solutions for all people, including individuals with disabilities. We maintain a site on the Internet that is dedicated to accessibility solutions. For more information about features, accessories, and other Nokia products designed with accessibility in mind, visit the Nokia Internet site at

www.nokiaaccessibility.com

Or, contact Nokia Customer Care at 1-800 24-NOKIA

Alternate format user guides

This user guide is also available in Braille, large print, audiocassette, and on disk in a format that can be read by a screen reader.

To request a User Guide in any of these formats, call Nokia Customer Care at (888) 665-4228. TTY/TDD users can contact Nokia at (800) 246-6542.

LPS-1 Mobile Inductive Loopset


The LPS-1 loopset gives hearing-impaired users access to digital telephony. People using a T-coil equipped hearing aid can make and receive calls without noise interference.


HOW THE LOOPSET WORKS

The LPS-1 transmits sound to any hearing aid equipped with a T-coil. The sound from the phone is amplified and background noise is eliminated.

Wear it around your neck, connect it to your phone, and speak directly toward the microphone on the loopset.

For more details, refer to the booklet that comes with the LPS-1.

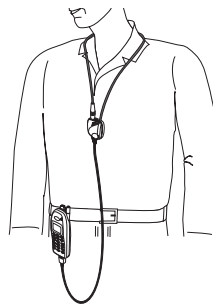


 **Note:** The Loopset can be purchased separately as an accessory.


Other accessibility features


Besides an intuitive interface and TTY/TDD capabilities, other accessibility features of the Nokia 6340i include:

- A nib, or raised dot on *top* of the five key for keypad reference
- Tactile feedback whenever you press a key
- The ability to send and receive short messages
- 1-touch dialing
- The ability to amplify higher frequencies using the equalizer function
- Caller groups to aid in caller identification


 **Note:** For instructions on setting up accessory profiles, and connecting and using a TTY/TDD device, see "Accessibility options" on page 63.

• FULL MENU SHORTCUTS

1 MESSAGES 


 Note: Messages is the only menu that requires pressing "0"

Write message 01-1
 Write e-mail 01-2
 Inbox 01-4
 Outbox 01-4
 Archive 01-5
 Templates 01-6
 My folders 01-7
 Erase messages 01-8
 All read 01-8-1
 Inbox 01-8-2
 Outbox 01-8-3
 Archive 01-8-4
 Own folders 01-8-5
 Voice messages 01-9
 Listen to voice messages 01-9-1
 Voice mailbox number 01-9-2
 Sending profile 01-12

2 CALL LOG 

Missed calls 2-1
 Received calls 2-2
 Dialed numbers 2-3
 Clear call lists 2-4
 All 2-4-1
 Missed 2-4-2
 Received 2-4-3
 Dialed 2-4-4
 Call timers 2-5
 Duration of last call 2-5-1
 Duration of dialed calls 2-5-2
 Duration of received

calls 2-5-3
 Duration of all calls 2-5-4
 Clear timers 2-5-5

3 PROFILES 

Normal 3-1
 Select 3-1-1
 Customize 3-1-2
 Ringing options 3-1-2-1
 Ring 3-1-2-1-1
 Ascending 3-1-2-1-2
 Ring once 3-1-2-1-3
 Beep once 3-1-2-1-4
 Silent 3-1-2-1-5
 Ringing tone 3-1-2-2
 Ringing volume 3-1-2-3
 Level 1 3-1-2-3-1
 Level 2 3-1-2-3-2
 Level 3 3-1-2-3-3
 Level 4 3-1-2-3-4
 Level 5 3-1-2-3-5
 Vibrating alert 3-1-2-4
 On 3-1-2-4-1
 Off 3-1-2-4-2
 Message alert tone 3-1-2-5
 No tone 3-1-2-5-1
 Standard 3-1-2-5-2
 Special 3-1-2-5-3
 Beep once 3-1-2-5-4
 Ascending 3-1-2-5-5
 Personal 3-1-2-5-6
 Keypad tones 3-1-2-6
 Off 3-1-2-6-1
 Level 1 3-1-2-6-2
 Level 2 3-1-2-6-3
 Level 3 3-1-2-6-4

4

Warning tones	3-1-2-7
On	3-1-2-7-1
Off	3-1-2-7-2
Alert for	3-1-2-8
All calls	3-1-2-8-1
Family	3-1-2-8-2
VIP	3-1-2-8-3
Friends	3-1-2-8-4
Business	3-1-2-8-5
Other	3-1-2-8-6
Timed	3-1-3
Silent	3-2
Meeting	3-3
Outdoor	3-4
Pager	3-5

4 SETTINGS

Alarm clock	4-1
On	4-1-1
Off	4-1-2
Time settings	4-2
Clock	4-2-1
Show/Hide clock	4-2-1-1
Set the time	4-2-1-2
Time format	4-2-1-3
24 hour	4-2-1-3-1
am/pm	4-2-1-3-2
Auto update date/time	4-2-2
On	4-2-2-1
Confirm first	4-2-2-2
Off	4-2-2-3
Call settings	4-3
Call forwarding	4-3-1
Fwd all voice calls	4-3-1-1
Activate	4-3-1-1-1
Cancel	4-3-1-1-2
Check status	4-3-1-1-3

Fwd if busy	4-3-1-2
Activate	4-3-1-2-1
Cancel	4-3-1-2-2
Check status	4-3-1-2-3
Fwd if not answered	4-3-1-3
Activate	4-3-1-3-1
Cancel	4-3-1-3-2
Check status	4-3-1-3-3
Fwd if out of reach	4-3-1-4
Activate	4-3-1-4-1
Cancel	4-3-1-4-2
Check status	4-3-1-4-3
Fwd when not able to take calls	4-3-1-5
Activate	4-3-1-5-1
Cancel	4-3-1-5-2
Set delay	4-3-1-5-3
10 sec	4-3-1-5-3-1
15 sec	4-3-1-5-3-2
20 sec	4-3-1-5-3-3
25 sec	4-3-1-5-3-4
30 sec	4-3-1-5-3-5
Fwd all fax calls	4-3-1-6
Activate	4-3-1-6-1
Cancel	4-3-1-6-2
Check status	4-3-1-6-3
Fwd all data calls	4-3-1-7
Activate	4-3-1-7-1
Cancel	4-3-1-7-2
Check status	4-3-1-7-3
Cancel all call forwarding	4-3-1-8
Equalizer	4-3-2
Normal	4-3-2-1
Bright	4-3-2-2
Dark	4-3-2-3
Loudness	4-3-2-4

Set 1	4-3-2-5	Vibrating alert	4-5-4
Set 2	4-3-2-6	On	4-5-4-1
International prefix	4-3-3	Off	4-5-4-2
Automatic redial	4-3-4	Message alert tone	4-5-5
On	4-3-4-1	No tone	4-5-5-1
Off	4-3-4-2	Standard	4-5-5-2
Summary after call	4-3-5	Special	4-5-5-3
On	4-3-5-1	Beep once	4-5-5-4
Off	4-3-5-2	Ascending	4-5-5-5
Phone settings	4-4	Personal	4-5-5-6
Language	4-4-1	Keypad tones	4-5-6
Automatic	4-4-1-1	Off	4-5-6-1
English	4-4-1-2	Level 1	4-5-6-2
Français	4-4-1-3	Level 2	4-5-6-3
Español	4-4-1-4	Level 3	4-5-6-4
Português	4-4-1-5	Warning tones	4-5-7
System selection	4-4-2	On	4-5-7-1
Automatic	4-4-2-1	Off	4-5-7-2
Manual	4-4-2-2	Alert for	4-5-8
New search	4-4-2-3	Accessory settings	4-6
Touch tone length	4-4-3	Headset	4-6-1
Short	4-4-3-1	Default profile	4-6-1-1
Long	4-4-3-2	Current profile	4-6-1-1-1
Tone settings	4-5	Normal	4-6-1-1-2
Ring options	4-5-1	Silent	4-6-1-1-3
Ring	4-5-1-1	Meeting	4-6-1-1-4
Ascending	4-5-1-2	Outdoor	4-6-1-1-5
Ring once	4-5-1-3	Pager	4-6-1-1-6
Beep once	4-5-1-4	Automatic answer	4-6-1-2
Silent	4-5-1-5	On	4-6-1-2-1
Ring tone	4-5-2	Off	4-6-1-2-2
Ring volume	4-5-3	Handsfree	4-6-2
Level 1	4-5-3-1	Default profile	4-6-2-1
Level 2	4-5-3-2	Automatic answer	4-6-2-2
Level 3	4-5-3-3	On	4-6-2-2-1
Level 4	4-5-3-4	Off	4-6-2-2-2
Level 5	4-5-3-5	Lights	4-6-2-3

4

- On 4-6-2-3-1
- Off 4-6-2-3-2
- Automatic 4-6-2-3-3
- Loopset 4-6-3
- Use loopset 4-6-3-1
 - Yes 4-6-3-1-1
 - No 4-6-3-1-2
- Default profile 4-6-3-2
- Automatic answer 4-6-3-3
 - On 4-6-3-3-1
 - Off 4-6-3-3-2
- TTY/TDD 4-6-4
- Use TTY 4-6-4-1
 - Yes 4-6-4-1-1
 - No 4-6-4-1-2
- Security settings 4-7
 - PIN code request 4-7-1
 - Fixed dialing 4-7-2
 - On 4-7-2-1
 - Off 4-7-2-2
 - Number list 4-7-2-3
 - Security level 4-7-3
 - Off 4-7-3-1
 - Memory 4-7-3-2
 - Phone 4-7-3-3
 - Access codes 4-7-4
 - Change security code 4-7-4-1
 - Change PIN code 4-7-4-2
 - Change PIN2 code 4-7-4-3
- Restore factory settings 4-8

5 VOICE 

- Voice recorder 5-1
 - Record 5-1-1
 - Recordings list 5-1-2

- Voice command 5-2
 - Profiles 5-2-1
 - Voice mailbox 5-2-2
 - Infrared 5-2-3
 - Recorder 5-2-4

6 ORGANIZER 

- Calendar 6-1
- To-do list 6-2
- Wallet 6-3

7 CALCULATOR 

8 GAMES 

- Select game 8-1
 - Snake II 8-1-1
 - Pass 'n Rush 8-1-2
 - Bumper 8-1-3
 - Pairs II 8-1-4
- Settings 8-2
 - Game sounds 8-2-1
 - On 8-2-1-1
 - Off 8-2-1-2
 - Game lights 8-2-2
 - On 8-2-2-1
 - Off 8-2-2-2
 - Shakes 8-2-3
 - On 8-2-3-1
 - Off 8-2-3-2


9 INFRARED 

- Infrared 9


10 SERVICES 

5 Your phone's keypad

• ENTER CHARACTERS AND NUMBERS

 **Note:** The following focuses on entering text into messages, but applies to any screen that accepts keypad entry, such as web addresses or names in the Phone book.

1 At the Start screen, press Menu 01-1 (Messages - Write message). The message entry screen opens in text entry mode.

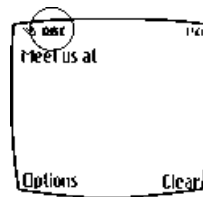




2 To enter numbers, press and hold  until the Abc icon in the upper left corner of the display changes from Abc to 123.



 **Note:** There are three types of text entry modes:

- ABC - Any text you enter is capital letters
- Abc - The first letter of each sentence is capitalized
- abc - Any text you enter is lower case

Enter text

- Press any key once to insert the first letter on the key, twice for the second letter, and so on. When you pause, the letter appearing in the display is accepted and your phone awaits the next entry.
- Press  to accept a word and enter a space
- Press  to enter a period (.)
- Press  to display special characters. More about special characters on the following pages
- Press Clear to backspace and erase a character
- Press and hold Clear to backspace continuously, and erase
- Use predictive text to write messages faster. See "Use predictive text" on page 78 for more information

Use special characters

While entering text, press (or *press and hold*, if predictive text is on)  to display special characters. Press  again to cycle through all available characters.





Available special characters

5


.	,	'	?	!	"	-	()	@	/
:	_	;	+	&	%	*	=	<	>	£
€	\$	¥	¤	[]	{	}	\	~	^
ı	ı	§	#		┌	⬅				

 Use four-way scrolling


Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press  to insert the character into your message.

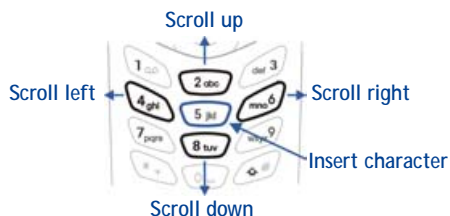

SWITCH BETWEEN ABC AND 123 MODES

Press and hold  until the icon in the upper left corner of the display switches from *Abc* to *123* (or from *123* to *Abc*).

SWITCH BETWEEN UPPERCASE AND LOWERCASE TEXT

Press  to alternate between upper case (ABC), lower case (abc), and sentence case (Abc) while in text mode.

6 The Phone book




One of the most useful features in the Nokia 6340i is its powerful Phone book. You can store up to 500 names and their associated web, e-mail, and street addresses within the Phone book. Each name, or entry as it is called, has room for multiple numbers and text entries.



Note: This feature utilizes dynamic memory. See “Dynamic memory use” on page 8 for more information.

6

• OPEN THE PHONE BOOK

- 1 At the Start screen, press Names. The submenus in the following table appear in the display.
- 2 Use the scroll keys ( ) to highlight an option. Press Select () to activate an option or enter its submenu.

Phone book menu


Find	Search for a name in your Phone book or list the names and select from the list
Add entry	Add a new entry (name and number) to your Phone book
Edit name	Edit an existing name in your Phone book
Add number	Add a number to an existing entry in your Phone book
Erase	Erase names and numbers in your Phone book one by one or all at once
Copy	Copy entries from SIM card to Phone or vice versa. You have the option to copy entries one by one or all at once
Settings	Change how you view the Phone book, check your memory status, and select which memory to use

6

Phone book menu

1-touch dialing	Show a list of 1-touch dialing numbers, if you've assigned any to keys 2-9
Voice tags	Show a list of voice dialing numbers, if you've assigned voice tags to any Phone book entries
Service nos.	List the fax, data, and voice numbers saved to your SIM card by your wireless provider
Own numbers	Display the phone number assigned to your phone, if the number is saved to the SIM card by your wireless provider
Caller groups	Setup a caller group. You can define ringing tones and graphics for up to five groups in your Phone book. See "Caller groups" on page 36 to setup a caller group

Add an entry to the Phone book

- 1 At the Start screen press **Names**, scroll to **Add entry**, and press **Select**.
 - 2 Enter a name for the entry and press **OK**.
 - 3 Enter the area code and number for the entry and press **OK**. The name and number are saved to the memory in use.
OR
 - 1 At the Start screen, enter the area code and number you wish to save and press **Options**.
-  **Tip:** Always save numbers with a + in front to simplify international dialing. See "International dialing" on page 59 for more information.
- 2 Ensure **Save** is highlighted and press **Select**.
 - 3 Enter a name for the number and press **OK**. The name and number are saved to the memory in use.

Number types

Phone numbers are sub-entries of an entry, or a name. Each entry can hold multiple numbers, and you can assign a different "type" to each. Once assigned, a number type is easily identified by the icon to the left of the number. The following number types are available:

 General  Mobile  Home  Work  Fax





Important: If you plan on using Nokia PC Sync to synchronize your Phone book and your PC's PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.

6

ASSIGN OR CHANGE A NUMBER TYPE



Note: This function is not available for numbers stored only on your SIM card.




- 1 At the Start screen, press one of the scroll keys ( ) to display your Phone book entries.
- 2 Scroll to the entry containing the numbers you wish to change and press **Details**.
- 3 Use the scroll keys to highlight the number you wish to change and press **Options**.
- 4 Scroll to **Change type** and press **Select**.
- 5 Scroll to the number type of your preference and press **Select**.
A confirmation message appears in the display.

Add an address or note to a Phone book entry



Note: This function is not available for numbers stored only on your SIM card.


- 1 With an entry in your Phone book highlighted, press **Details**.

- 2 Press **Options**, scroll to **Add info**, and press **Select**.
- 3 Scroll to **E-mail**, **Web address**, **Street addr.**, or **Note** and press **Select**.
- 4 Enter text with the keypad and press **OK**.
 - Press **Clear** to backspace and delete text
 - Press and hold **Clear** to backspace continuously and delete text
 - Press  to switch between letter case (**ABC**, **Abc**, or **abc**)
 - Press and hold  to switch between text and numbers
 - Press  to display special characters (such as **@**, **#**, and more)

 
Save a number (only)


- 1 At the Start screen, enter the area code and number you'd like to save.
- 2 Press and hold **Options**. The number is saved to your Phone book as a stand-alone entry.

Display Phone book entries quickly

Display any entries in your Phone book with the press of a key. Just press one of the scroll keys () at the Start screen.




Tip: Any entries which display the SIM card icon ( in the upper right corner of the display) indicate that entry is saved to the SIM card.

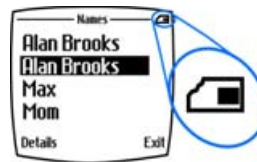



Note: Any entries which appear twice in the display (as in this illustration), indicate the entry is saved to both phone memory and SIM memory.

Search the Phone book quickly

- 1 At the Start screen, press one of the scroll keys () to display any entries in your Phone book.
- 2 Press the key which contains the first letter of the entry you're

 searching (example; press  twice to search for "Evelyn").

Any entries that begin with "E" appear in the display, as well as a search box with the magnifying glass icon (.

- 3 Continue entering letters to locate the entry, or move through and highlight other entries using the scroll keys.
- 4 Once you've highlighted the desired entry, press  to dial the number. Or, press Details, then press Options to display the options listed in the following table.
- 5 Scroll to an option. Press Select to activate an option or to enter its submenu.

6

Options while displaying a Phone book entry

Add voice tag	Add a voice tag to the highlighted entry
Edit number	Edit the highlighted number
Erase number	Erase the highlighted number
View	View the highlighted number
*Change type	Change the number to one of the 5 available types: General, Mobile, Home, Work, or Fax *Only works with numbers stored in phone memory
*As primary no.	Assign the number as your primary number. See "Assign a primary number" on page 35 for more information. *Only works with numbers stored in phone memory
Add number	Add another number to the selected entry
Add info	Add an e-mail address, web address, street address, or note to the selected entry
Caller groups	Add the selected entry to one of the 5 available caller groups, or select No group.
Send bus. card	Send a business card containing the selected entry's information to a compatible phone via IR or SMS
Send message	Send a message to the entry via SMS or e-mail

Options while displaying a Phone book entry

1-touch dialing	Assign the number to a 1-touch dialing location
Edit name	Edit the name of the entry
View name	View the name of the entry
Copy	Copy the entry to another memory location
Erase	Erase the entry and all information it contains

6

Edit names

- 1 At the Start screen, press **Names** and scroll to **Edit name**.
- 2 Press **Select** and scroll to the name you wish to change.
- 3 Press **Edit**, modify the name as desired, and press **OK** once you've finished.
 - Press **Clear** to backspace and delete text
 - Press and hold **Clear** to backspace continuously (and delete)

Erase names and numbers

You can erase single entries in your Phone book or all entries at once.

ERASE A SINGLE ENTRY


- 1 At the Start screen, press **Names**, scroll to **Erase**, and press **Select**.
- 2 Ensure **One by one** is highlighted and press **Select**.
- 3 Scroll to the entry you wish to erase and press **Erase**.
- 4 Press **OK** again to confirm the erasure, or **Back** to select another.

ERASE ALL NAMES AND NUMBERS

- 1 At the Start screen, press **Names**, scroll to **Erase** and press **Select**.
- 2 Ensure **Erase all** is highlighted and press **Select**.
- 3 Scroll to **Phone** or **SIM card** and press **Erase**.
- 4 Press **OK** to confirm or **Back** to select from **Phone** or **SIM card** again.

If you pressed OK, you're prompted to enter the security code (default is 12345).



- 5 Enter the security code and press OK to erase or Back to select from Phone or SIM card again.

 **Important:** If you enter the wrong security code 3 times in a row, the phone is blocked and won't accept a code for 5 minutes.

Assign a primary number

For names containing more than one number, assign the most-dialed number as the *primary number*. The primary number is the number dialed when you select a name for dialing that contains multiple numbers.

6

- 1 At the Start screen, press  or  to display a list of Phone book entries.
- 2 Scroll to a name containing multiple numbers and press Details.
- 3 Scroll to the number you'd like to assign as the primary number (or change to the primary number) and press Options.
- 4 Scroll to As primary no. and press Select. The primary number is set.

• CUSTOMIZE THE PHONE BOOK

Change the Phone book view



You can view the contents of your Phone book as a list or view each entry as a full display (larger text).

- 1 At the Start screen, press Names, scroll to Settings, and press Select.
- 2 Scroll until Phone book view appears in the display and press Select.
- 3 Scroll to Name list or Name+number and press Select.

Caller groups



You can add Phone book entries to one of 5 caller groups, and then assign a unique ringing tone or graphic to that group. This enables you to identify callers from that caller group by their unique ringing tone or graphic. A caller group can be as small as one person or as large as your entire Phone book. Caller groups can be renamed to suit your preference.



CALLER GROUP OPTIONS

- 1 At the Start screen, press **Names**, scroll to **Caller groups**, and press **Select**. The following Caller groups are available.
 - Family • VIP • Friends • Business • Other
- 2 Use the scroll keys ( ) to highlight a group. Press **Select** to display the following caller group options:

Rename group	Rename the group to your preference
Group ringing tone	Set the ringing tone for the group
Group logo	Turn the graphic for the caller group on or off
Group members	Add or remove members from the caller group


Setup a caller group

- 1 At the Start screen, press  or  to display a list of entries in your Phone book.

 **Tip:** Perform a “quick find” when Phone book entries are displayed by entering the first letter of a name.  appears in the bottom of the display to indicate you’re performing a search.
- 2 Scroll to a name you’d like to add to a caller group and press **Details**.
- 3 Press **Options**, scroll to **Caller groups**, and press **Select**.
- 4 Scroll to the caller group to which you’d like to add the name and press **Select**. A confirmation message appears in the display.

• **YOUR PHONE'S MEMORY**


Your phone has three options for the use of its memory; **Phone**, **SIM**, and **Phone and SIM** combined. Only names and numbers saved to the memory in use will appear in the display.

 **Note:** With **Phone and SIM** memory selected, entries saved to both memories appear in the display. Therefore, you may see the same entry twice when you view the contents of your Phone book.

Memory specific information

6

Feature	Phone	SIM	Phone and SIM
*Name capacity	Up to 500 names	Up to 250 names (varies with SIM card)	Up to 750 names (both SIM and phone entries are displayed)
*Number capacity	Multiple numbers per name	One per name	Multiple numbers per name (stored in phone memory)
Can use Voice dialing?	Yes	Yes	Yes
Can transfer names/numbers to another phone?	Via IR or PC Suite	Via IR, PC Suite, and SIM	Via IR, PC Suite, and SIM
*Can store text information such as street address, e-mail address, note?	Multiple text entries per name	No	Multiple text entries per name (stored in phone memory)

 **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

View memory in use

You can view the memory available in your Phone or SIM card by doing the following:

- 1 At the Start screen, press **Names** and scroll to **Settings**.
- 2 Press **Select** and scroll until **Memory status** appears in the display.
- 3 Press **Select**, scroll to **Phone** or **SIM card**, and press **Select** again.

Depending on which memory you've selected, either a graphic or numeric representation of memory usage appears in the display.

6

Select a memory

- 1 At the Start screen, press **Names**, scroll to **Settings**, and press **Select**.
- 2 Scroll until **Memory in use** appears in the display and press **Select**. The following options are available:

Phone and SIM	Data is saved to Phone memory, but SIM <i>and</i> Phone entries appear in the display.
Phone	Data is saved to Phone memory. Only entries saved to Phone memory appear in the display.
SIM card	Data is saved to the SIM card. Only entries saved to the SIM card appear in the display.

- 3 Scroll to the memory option of your choice and press **Select**.




Tip: If you wish to save multiple numbers to a name, or information such as an e-mail or street address, choose **Phone** or **Phone and SIM**.

• COPY PHONE BOOK ENTRIES


- 1 At the Start screen, press **Names**, scroll to **Copy**, and press **Select**.
- 2 Scroll to **From phone to SIM card** or **From SIM card to phone** and

press Select. The following options appear in the display:

One by one	Select and copy entries one by one
All	Copies all entries from the SIM card or Phone
*Primary nos.	Copies only primary numbers. This appears only if you select From phone to SIM.

- 3 Scroll to the copy method of your choice and press Select.
 - a) If you selected One by one, go to step 4.
 - b) If you selected All or Primary nos., go to step 6.
- 4 Scroll to the entry you wish to copy and press Copy.
- 5 Scroll to Keep original or Move original and press Select. The entry is copied and you're returned to the list of Phone book entries.
- 6 If you selected All or Primary nos. in step 3, scroll to Keep original or Move original and press Select.
- 7 Press OK to confirm your choice. All entries are copied to the selected destination. Press Back to return to the list of Phone book entries, or press  to exit and return to the Start screen.


6

 **Caution:** Select Keep original if you're unsure of which copy method to use. This ensures original entries are merely copied to the new location. Move original deletes files after copying.

• VIEW SERVICE NUMBERS

Your wireless provider may have saved service numbers to your SIM card. To view these numbers:

- 1 At the Start screen, press Names, Scroll to Service nos. and press Select. A list of numbers, if available, appear in the display.
- 2 To view details of a number, scroll to the number and press Details.

 **Note:** This feature may not be supported by your SIM card. If so, contact your wireless provider if you wish to have it enabled.

7 Call log

Call log stores information about the last 20 missed, received, or dialed calls. It also adds the total duration of all calls. When the number of calls exceed 20, the most recent call replaces the oldest. For Call log to work properly:

- Your wireless provider must support caller ID, and it must be enabled
- Your calls can't be blocked
- Your phone must be on and within the service area

7

• CALL LOG OPTIONS

Whether you are viewing missed, received, or dialed calls, each of the menu options will be the same. Please refer to the following table regarding menu options for these features.

Missed, received, and dialed call options

Call time	Display the date and time of the call
Send message	Send a message to the number
View number	Display the number
Edit number	Edit the number and associate a name with the number
Save	Enter a name for the number and save it to your Phone book
Add to name	Add the number to an existing entry in your Phone book, if the number is not associated with a name
Erase	Clear the number from memory
Call	Call the number

View missed calls

Missed calls are calls that were never answered. You can check for missed calls two ways:

- 1 If **# missed call** appears in the display, press **List**. The phone number appears in the display.
- 2 Press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.

OR

- 1 At the Start screen, press **Menu 2-1 (Call log - Missed calls)**.
After a brief pause, a list of missed calls appear in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or to enter its submenu.




View received calls

Received calls are calls that have been answered.

- 1 At the Start screen, press **Menu 2-2 (Call log - Received calls)**.
After a brief pause, a list of received calls appears in the display (if any exist).
- 2 Scroll to a number and press **Options** to display the options listed in the table on page 40.
- 3 Scroll to an option, press **Select** to activate the option or enter its submenu.


View dialed numbers

You can view dialed numbers one of two ways:

- 1 At the Start screen, press . Your most recently dialed numbers appear in the display.
OR
- 2 At the Start screen, press Menu 2-3 (Call log - Dialed numbers).
After a brief pause, your most recently dialed numbers appear in the display.
- 3 Scroll to a number and press Options to display the options listed in the table on page 40.
- 4 Scroll to an option, press Select to activate the option or enter its submenu.

Call times

You can receive up to five calls from the same number, and view the time each call occurred. Your clock must be set for this feature to work accurately. See "Set the time and date" on page 103 for instructions on setting your clock.

- 1 While viewing a missed or received call, press Options, scroll to Call time, and press Select.
- 2 The time that the last call occurred appears in the display.
- 3 Press  to view other call times from this number. Press Back to return to the options list.

Clear call lists

To clear any missed, dialed, or received calls from your phone's memory:

- 1 At the Start screen, press Menu 2-4 (Call log - Clear call lists).
After a brief pause, All, Missed, Received and Dialed appear in the display.
- 2 Scroll to the call type you'd like to clear and press Select.

View call duration

- 1 **Duration of last call.** At the Start screen, press **Menu 2-5-1** (Call log - Call timers - Duration of last call). The duration of your last call appears in the display.
- 2 **Duration of dialed calls.** At the Start screen, press **Menu 2-5-2** (Call log - Call timers - Duration of dialed calls). The duration of all dialed calls appears in the display.
- 3 **Duration of received calls.** At the Start screen, press **Menu 2-5-3** (Call log - Call timers - Duration of received calls). The duration of all received calls appears in the display.
- 4 **Duration of all calls.** At the Start screen, press **Menu 2-5-4** (Call log - Call timers - Duration of all calls). The duration of all calls (missed, dialed, and received) appears in the display.



Activate/deactivate summary after call

To show (or not show) the duration of each call after you hang up:

- 1 At the Start screen, press **Menu 4-3-5** (Settings - Call settings - Summary after call).
After a brief pause, **On** and **Off** appear in the display.
- 2 Scroll to **On** or **Off** and press **Select**.

Clear call timers

- 1 At the Start screen, press **Menu 2-5-5** (Call log - Call timers - Clear timers).
After a brief pause, you're prompted to enter the security code. The default is 12345.
- 2 Enter the security code and press **OK**. A note confirming the timers have been cleared appears in the display.



Important: Clear timers resets the duration timers for all call types and is irreversible.

8 Use voicemail

If you subscribe to voicemail, your wireless provider will furnish you with a voice mailbox number. You need to save this number to your phone to use voicemail. When you receive a voice message, your phone lets you know by beeping, displaying a message, or both. If you receive more than one message, your phone shows the number of messages received.

• SAVE YOUR VOICE MAILBOX NUMBER

Your wireless provider may have already saved your voice mailbox number to your phone. If so, the number will appear in the display in step 2. Press OK to leave the number unchanged.


8

- 1 At the Start screen, press Menu 01-9-2 (Messages - Voice messages - Voice mailbox number).
- 2 After a brief pause, the mailbox number screen appears in the display.
- 3 If the box is empty, enter the voice mailbox area code and number.
- 4 Press OK. Your phone confirms the number has been saved.




Tip: Save yourself the trouble of entering the mailbox codes each time you dial voicemail. See "Automate voicemail" later in this section for more information.

• CALL AND SETUP YOUR VOICEMAIL

- 1 Once you've saved the voice mailbox number, press and hold .
- 2 Once you connect and the pre-recorded greeting begins, follow the automated instructions to setup your voicemail.

Listen to your voice messages

Once you've setup voicemail, you can dial the number one of 4 ways:

- Dial the number using the keypad
- Press and hold 

Use voicemail

- Press Listen if there's a notification message in the display
- Press Menu 01-9-1 (Messages - Voice messages - Listen to voice messages). After a brief pause, your phone dials the voicemail number.

Once you connect and the pre-recorded greeting begins, follow the automated instructions to listen to your voice messages.

• AUTOMATE VOICEMAIL

You can insert special characters called "dialing codes" into phone numbers such as voicemail and then save the number to a 1-touch dialing location. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string.





Note: Each voicemail service can vary. The examples and steps that follow are for clarification. Check with your wireless provider if you have specific questions about your voicemail service.

8

Write down some information


- 1 Write down your voice mailbox number.
- 2 Call and check your voicemail as you normally would.
- 3 Write down your interaction with the recorded prompts step-by-step. Keep in mind that each voicemail service may vary. However, it should look something like this:


Dial 2145551212, pause 5 seconds, press , pause 2 seconds, enter 1234, press .




Important: Be precise, you'll need this information in "Setup voicemail with dialing codes" on page 46.

LEARN HOW TO INSERT DIALING CODES

Press  repeatedly to cycle through dialing codes. Once the desired code appears, pause briefly to insert the code into your dialing string.

For example, press  four times to display "w" (wait character). Pause briefly to insert the wait character into your dialing string. Available dialing codes are as follows:

Dialing codes

*	Bypasses a set of instructions
+	Precedes an international telephone number
p	Pauses for 2.5 seconds before sending any numbers that follow
w	Wait. Your phone waits for you to press  before it sends any numbers or codes that follow.

8


Setup voicemail with dialing codes

- 1 At the Start screen, press Names, scroll to 1-touch dialing, and press Select.
- 2 Scroll to an empty 1-touch dialing slot and press Assign.
- 3 Enter your voice mailbox number, including the area code.
- 4 Refer to the table entitled "dialing codes," and enter any codes as necessary using the information that you wrote down earlier.
For example, if you pause for 5 seconds after connecting to voicemail, enter **p** twice *after* the voice mailbox number, such as 2145551212**pp**.
- 5 Enter any remaining pauses, PIN codes, and other information that allows you to listen to your messages, then press OK.
- 6 Enter a name (such as Voicemail) and press OK. A message appears in the display confirming your 1-touch dialing location has been saved.
Now, to dial and listen to your voicemail, just press and hold the assigned 1-touch dialing key at the Start screen. No other keypresses should be necessary.

9 Advanced features

• IN-CALL OPTIONS

You have numerous options while in a call. The options listed on the following pages are those available in the most common situations, such as when you are in a call or when a call is on hold.

 **Note:** Some options are network dependent. Check with your wireless provider if you have questions regarding availability.

- 1 Press **Options** while performing any of the following in-call activities.
- 2 Use your scroll keys to highlight an option.
- 3 Press **Select** to activate an option or enter the option's submenu.

9

With one call active

Record	Record the current phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the call
New call	Place a new call
Touch tones	Enter touch tones manually or recall a string from your Phone book
Phone book	Display the Phone book menu
Menu	Return to the main menus
Mute	Mute the current call. You can hear the other person but they can't hear you
Hold	Place the current call on hold

With a call on hold **(See Note regarding in-call options)*

Record	Record the current phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the call
New call	Place a new call
Phone book	Display the Phone book menu
Menu	Return to the main menus
Mute	Mute the current call. You can hear the other person but they can't hear you
Unhold	Activates the held call

With one call active and another on hold **(See Note regarding in-call options)*

Record	Record the active phone conversation
Equalizer	Select an equalizer set or create a custom set of your own
End call	Terminate the active call
End all calls	End all calls
Conference	Connect all parties in a conversation
Touch tones	Enter touch tones manually or recall a string from your Phone book
Phone book	Display the Phone book menu
Menu	Return to the main menus

With one call active and another on hold *(See Note regarding in-call options)

Mute	Mute the current call. You can hear the other person but they can't hear you
Swap	Switch from the active call to the one on hold.
Transfer calls	Transfer your calls (on hold or otherwise) to another number


• **CALL WAITING**

If supported by your wireless provider, call waiting notifies you of an incoming call while you're in a call. You can then accept, reject, or ignore the incoming call.



When you receive an incoming call

- 1 At first, the name or number appears in the display. After a few seconds, Call 2 appears below Call 1 in the display.
- 2 Press Answer or to pick up the call. The first caller is put on hold and Swapped appears in the display.
- 3 If you don't pick up the call within 30 seconds, the call is dropped.

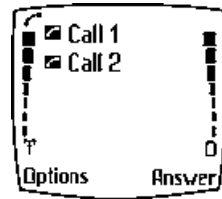

Switch between calls

- Press Swap or

End the active call

- Press




End both calls

- Press Options, scroll to End all calls, and press OK

Reject a waiting call

- Press **Options**, scroll to **Decline call** and press **Select**

Place a new call with one on hold

- While in a call, enter the number for the second call and press . The first caller is put on hold.
- Switch between the two calls by pressing **Swap** or .
- End the active call by pressing .
- To end both calls, press **Options**, scroll to **End all calls**, and press **Select**

9

• SEND OWN CALLER ID WITH NEXT CALL

You can prevent your number from being displayed on the receiving party's caller ID. This feature is network dependent and works on a call-by-call basis. Contact your wireless provider for more information.

• CALL FORWARDING

Call forwarding tells your network to redirect incoming calls to another number.



Important: Call forwarding is network-dependent and may not work the same in all networks. Contact your wireless provider for availability.

Activate call forwarding

- 1 At the Start screen, press **Menu 4-3-1** (**Settings - Call settings - Call forwarding**).

Advanced features

- 2 After a brief pause, the forwarding options listed in the following table appear in the display.

Forward all voice calls	Forward all calls to the number you specify
Forward if busy	Forward incoming calls when you're in a call
Forward if not answered	Forward incoming calls to another number if you're unable to answer. You can also set a delay before forwarding takes place
Forward if out of reach	Forward incoming calls when your phone is off reach
Forward when not able to take calls	Forward calls that aren't picked up. You can also set a delay before forwarding takes place
Forward all fax calls	Forward all fax calls to a fax mailbox
Forward all data calls	Forward all data calls to a data mailbox
Cancel all call forwarding	Cancel any call forwarding options you may have set


9

- 3 Scroll to the option of your choice and press Select.
- 4 Scroll to **Activate** and press Select.
- 5 Scroll to the destination to which your calls will be forwarded (such as **To other no.**) and press Select.
- 6 Enter the number to which your calls, data, or other information will be forwarded and press OK.

Your phone calls the network to activate the feature you've requested. The network sends a confirmation note when the feature has been activated successfully.

Cancel call forwarding

- At the Start screen, press Menu 4-3-1-8 (Settings - Call settings - Call forwarding - Cancel all call forwarding).

 **Note:** Cancel all call forwarding may affect your ability to receive voice mail messages. Contact your wireless provider for specific details.

Automatic redial

Occasionally, your network may experience heavy traffic, resulting in a "fast" busy signal when you dial. With automatic redial activated, your phone redials the number up to 10 times, and notifies you once the network becomes available.

ACTIVATE OR DEACTIVATE AUTOMATIC REDIAL

- 1 At the Start screen, press Menu 4-3-4 (Settings - Call settings - Automatic redial).
- 2 After a brief pause, On and Off appear in the display. Scroll to your choice and press Select.


9

• VOICE DIAL



You can select up to 10 entries in your Phone book to dial by voice. Before you can do this, you'll need to assign each entry a "voice tag."

Notes about voice tags

- Voice tags can be no longer than 1.5 seconds
- You cannot use voice dial while in a call
- Press Quit to abort recording the voice tag
- Choose a quiet location for recording voice tags
- Unique tags are best. For example, "John Smith, work"
- Avoid pauses or silence as you record the voice tag
- If memory is full, Erase an existing voice tag? appears in the display. Press OK, scroll to locate a tag to erase, and then press Erase

 **Important:** *Do not* use voice tags to dial in emergencies. Stress can cause changes in your voice and prevent the phone from recognizing your commands!

Assign a voice tag

- 1 At the Start screen, press either scroll key ( ) to display the entries in your Phone book.
- 2 Scroll to the entry you'd like to assign a voice tag, and press **Details**.
- 3 If the entry has multiple numbers, scroll to the number you wish to tag and press **Options**.
- 4 Scroll to **Add voice tag**, press **Select**, and then press **Start**.
- 5 After the phone beeps, pronounce the voice tag clearly into the microphone.
 - If the recording is successful, the voice tag is replayed through the earpiece and a confirmation note appears in the display.
 - If the recording fails, the phone asks if you want to try again. Press **OK** to try again or **Back** to exit.

9

Voice dial a number

- 1 At the Start screen, press and hold **Names**. The phone beeps and **Please speak now** appears in the display.
- 2 Within 3 seconds, pronounce the tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

VOICE DIAL WITH THE HEADSET

After you've assigned voice tags to those entries you wish to dial, you can also voice dial a number using the optional HDC-9P headset.

- 1 At the Start screen, press and hold the remote button on the headset. Your phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the voice tag into the microphone.

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

Display voice tagged entries


- 1 At the Start screen, press Names.
- 2 Scroll to **Voice tags** and press Select. In alphabetical order, the first voice tagged name and number appear in the display.
- 3 Press the scroll keys (⤴ ⤵) to view other voice tagged entries.

Change or erase a voice tag

- 1 At the Start screen, press Names, scroll to **Voice tags**, and press Select. The first voice tagged entry in your Phone book appears in the display. Entries appear in alphabetical order.
- 2 Scroll until the voice tag you wish to change or erase appears in the display, then press Options.
- 3 Scroll to **Change or Erase** and press Select.


• VOICE COMMANDS

You can command your phone to perform up to 5 different functions with your voice. Voice commands work similar to voice dialing, so you'll need to associate a voice tag with each command.

 **Note:** Voice commands cannot be used during a call, or when the data cable is attached.


Add a voice tag for a command

- 1 At the Start screen, press Menu 5-2 (Voice - Voice commands). After a brief pause, the options listed in the following table appear in the display.

 **Note:** You can select more than 1 profile to command by voice.

Profiles	Activate up to 5 profiles
Voice mailbox	Dial your voice mailbox
Infrared	Activate infrared
Recorder	Record a voice memo

- 2 Scroll to the command you wish to tag and press **Select**.
- 3 Press **Options**. **Add command** is highlighted, press **Select**.
- 4 Press **Start**, and when the phone beeps, pronounce the voice tag into the microphone. The phone replays and saves the tag.

 **Note:** Don't press **Quit** unless you want to cancel the recording.

Execute a voice command

After you've associated a voice tag with a command, execute the command as follows:

- 1 Press and hold **Names**. **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands. **Found:** <command> appears in the display and the command is executed.

9

EXECUTE VOICE COMMANDS WITH THE HEADSET

After you've associated a voice tag with a command, you can also execute voice commands using the optional HDC-9P headset.

- 1 At the **Start** screen, press and hold the remote button on the headset. The phone beeps and **Please speak now** appears in the display.
- 2 Pronounce the tag for one of the 5 available commands.
Found: <command> appears in the display and the command is performed.



Tip: You can also execute voice commands by pressing and holding the *down* volume key on the side of the phone.

Change or erase an existing voice commands tag

- 1 At the **Start** screen, press **Menu 5-2** (Voice - Voice commands).
- 2 After a brief pause, the list of voice commands appear in the display.
- 3 Scroll to the voice command you wish to modify and press **Select**.
- 4 When the command you wish to modify appears in the display, press **Options**.

- 5 Scroll to **Change** or **Erase** and press **Select**.
 - If you selected **Change**, press **Start**, then record the new tag.
 - If you selected **Erase**, press **OK** and the tag for the selected command is erased.

• VOICE RECORDER

The Nokia 6340i can record both voice memos and phone conversations. The total of all recordings stored in your phone can't exceed 3 minutes. If you're running out of memory and try to record, you're asked to erase a recording before proceeding.

Record a memo

- 1 At the Start screen, press **Menu 5 -1-1** (Voice - Voice recorder - record).
- 2 After a brief pause, your phone begins recording and a progress bar appears in the display to indicate recorded time versus time left.
- 3 After you're finished recording, press **Stop**, enter a title for the recording, and press **OK**.

View recorded memos

- At the Start screen, press **Menu 5 -1-2** (Voice - Voice recorder - Recordings list).
After a brief pause, your oldest recorded memo appears in the display.

Playback a memo

- 1 At the Start screen, press **Menu 5 -1-2** (Voice - Voice recorder - Recordings list).
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you wish to play appears in the display and press **Options**.
- 4 Scroll to **Playback** and press **Select**.

Advanced features

The memo begins playing, and a progress bar appears in the display indicating the amount of play time left. If necessary, adjust the volume using the side volume key.

PLAYBACK A MEMO WHILE IN A CALL

You can playback a memo while in a call. All participants in the call can then hear the memo as it's played back.

- 1 While in a call, press **Options**, scroll to **Menu**, and press **Select**.
- 2 Scroll until **Voice** (menu) appears in the display and press **Select**.
Voice recorder appears in the display.
- 3 Press **Select**, scroll to **Recordings** list and press **Select** again.
- 4 Scroll until the memo you wish to playback appears in the display and press **Options**.
- 5 Scroll to **Playback** and press **Select** to play the memo.

9

Erase a memo

- 1 At the Start screen, press **Menu 5 -1-2** (Voice - Voice recorder - Recordings list).
- 2 After a brief pause, your oldest recorded memo appears in the display.
- 3 Scroll until the memo you'd like to erase appears in the display and press **Options**.
- 4 Scroll to **Erase** and press **Select**. You're asked to confirm the erasure.
- 5 Press **OK** and the memo is erased.

Record a phone conversation

- 1 While in a call, press **Options**, scroll to **Record**, and press **Select**.
- 2 Your phone begins recording the conversation. A progress bar and timer appear in the display, indicating the amount of time left. Also, a beep sounds every 5 seconds to notify both parties the conversation is being recorded.
- 3 Press **Stop** to abort the recording. The recording is saved as the time and date.



Note: It may be illegal in some jurisdictions to record a phone conversation without the permission of all participants.

• 1-TOUCH DIALING


You can associate any entry in your Phone book with keys 2 through 9, and then dial those entries by pressing and holding the assigned key.

Assign a key to 1-touch dialing

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to any empty slot and press **Assign**.
- 3 Enter the number (including the area code) and press **OK**, or press **Find** to retrieve a number from your Phone book.
- 4 Enter a name for the number and press **OK**.

9

Make a call with 1-touch dialing

- Press and hold the key to which an entry has been assigned, *or* press the key to which an entry is assigned and press . Your phone dials the entry assigned to the key.

CHANGE 1-TOUCH DIALING NUMBERS

- 1 At the Start screen, press **Names**, scroll to **1-touch dialing** and press **Select**.
- 2 Scroll to the 1-touch dialing location you wish to change and press **Options**.
- 3 Scroll to **Change** and press **Select**.
- 4 Enter the new number, or press **Find** to retrieve a number from your Phone book, and press **OK**.
- 5 Enter a name for the entry and press **OK**.

ERASE 1-TOUCH DIALING NUMBERS

- 1 At the Start screen, press Names, scroll to 1-touch dialing and press Select.
- 2 Scroll to the 1-touch dialing location you wish to erase and press Options.
- 3 Scroll to Erase and press Select. You're asked to confirm the erasure.
- 4 Press OK to erase the key assignment.

• INTERNATIONAL DIALING

International numbers require a prefix specific to the country *from which you're calling*. Ensure your phone always has the correct home prefix by doing *both* of the following.

Save international numbers with a + in front

9

Save all international numbers with a + in front. For example, a number to Finland from the U.S. would look as follows: (+358 123456789).

Set the international prefix

- 1 Press Menu 4-3-3 (Settings - Call settings - International prefix). After a brief pause, an entry box appears in the display.
- 2 Enter the prefix specific to the country from which you are calling and press OK. For example, in the United States, enter 011.

10 Customize your phone

The Nokia 6340i can be easily customized to fit your life-style. The display language, ringing tones, audio, and accessory settings (among others) can all be modified to suit your needs. Now, it's even possible to use a TTY or TDD device with your phone in all modes of operation (analog or digital).

• SET THE DISPLAY LANGUAGE

- 1 At the Start screen, press Menu 4-4-1 (Settings - Phone settings - Language).

After a brief pause, **Automatic**, **English**, **Français**, **Español**, and **Português** appear in the display.

- 2 Scroll to the language of your choice and press Select.



Note: The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.

• USE A SCREEN SAVER

Choose a digital or analog clock format as a screen saver for your display. When you activate screen saver, a picture appears on the display after your phone has been inactive for a time that you set. You can choose a timeout duration only 5 seconds or as long as 59 minutes. Then, the picture stays visible until you press any key.

Choose a screen saver

- 1 Press Menu 4-3-3 (Settings - Phone settings - Screen saver).
- 2 Scroll to Clocks and press Select.
- 3 Scroll to the clock format you want and press Select. The screen saver menu appears again.
- 4 Scroll to On and press Select. A message appears in the display confirming your selection.

• PROFILES

Profiles define how your phone reacts when you receive a call or a message, the sounds your keypad makes whenever you press a key, and more. Ringing options, keypad tones, and other settings for each of the 5 available profiles can be left at their default setting, or customized to suit your needs. Select and customize the most suitable profile for your situation, such as when you are in a meeting or outdoors. The following profiles are available:

- Normal • Silent • Meeting • Outdoor • Pager



Note: Profiles are also available for accessories such as a headset, TTY device, and car kit. See “Select and customize an accessory profile” on page 64 for more information about accessory profiles.

Select a profile

10

- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appear in the display.
- 2 Scroll through the available profiles and press **Select** once the profile of your choice is highlighted.
- 3 Scroll to **Select** and press **Select**.




Tip: You can briefly press the power key to display the list of profiles. Each press of the power key thereafter scrolls through the list. Once a profile is highlighted, press and hold the power key to select the profile.

Customize a profile

You can customize any of the profiles a variety of ways.

- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to customize and press **Select**.
- 3 Scroll to **Customize** and press **Select**.

- 4 Use the scroll keys to display each of the options in the following table. Once you arrive at the option you'd like to customize, press Select.

 **Note:** You cannot rename the Normal profile.

Custom profile options


Ring options	Select the ringing tone style
Ring tone	Select the ringing tone for incoming calls
Ring volume	Set the volume of your ringing tone
Vibrating alert	Turn the vibrating alert on or off
Message alert tone	Select the tone for received messages
Keypad tones	Set the volume of your keypad tones (or turn them off)
Warning tones	Turn warning and confirmation tones on or off
Alert for	Define which caller groups the selected profile will accept or decline. See "Caller groups" on page 36 for more information.
Profile name	^a Rename the profile (up to 16 characters)

10

- a. You cannot rename the Normal profile

Set a timed profile

Timed profiles can be used to prevent missed calls. For example, suppose you attend an event that requires your phone be set to **Silent** before the event starts, but you forget to return it to **Normal** until long after the event. During this time, you've missed several calls because the ringing tone was silent. A timed profile can prevent this by automatically returning your phone to the default profile at a time you specify.

 **Note:** Timed profiles can be set up to 24 hours in advance.


- 1 At the Start screen, press **Menu 3** (Profiles).
After a brief pause, the list of profiles appears in the display.
- 2 Scroll to the profile you wish to activate and set for timed expiration, then press **Select**.
- 3 Scroll to **Timed** and press **Select**.
- 4 Enter the time for the profile to expire and press **OK**.
The profile you've set for expiration is now active and appears in the Start screen along with a small "clock" icon.

• ACCESSIBILITY OPTIONS

For TTY users

10


Until now, most mobile phones were incompatible with TTY devices in digital mode. Your Nokia 6340i is compliant with TTY devices *in all modes*.

 **Note:** TTY/TDD is a network dependent feature. Check with your wireless provider for availability and description of services.


WHAT YOU'LL NEED

In addition to your phone, you'll need the following for TTY communication:

- A TTY device that is "cellular ready" or "cellular compatible"
- A cable for connecting the TTY to your phone; usually supplied by the manufacturer of the TTY device
- The Nokia TTY adapter HDA-8, which can be purchased as an accessory

 **Important:** The Nokia TTY adapter HDA-8 is for use with compatible TTY devices and headsets only. Please check your TTY device or headset to ensure that the connection is compatible. Nokia original headsets attach directly to the phone and do not require this adapter. Nokia does not endorse, warrant, or authorize use of any accessories not manufactured or licensed by Nokia.

Select and customize an accessory profile

 **Note:** You must have an accessory (such as a loopset) attached to your phone prior to selecting the **Accessory settings** menu.

To select and customize profiles for use with the headset, handsfree device (car kit), loopset, and TTY/TDD:

- 1 Press **Menu 4-6** (Settings - Accessory settings).
After a brief pause, the list of accessory profiles appear in the display.
- 2 Scroll to one of the following Accessory profiles and press **Select**.
 - Headset • Loopset • TTY/TDD • Handsfree

10

IF YOU SELECTED HEADSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when a headset is connected
- **Automatic answer** - Calls are answered automatically after 1 ring when a headset is connected. Scroll to **On** or **Off** and press **Select**

IF YOU SELECTED HANDSFREE

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile** - Choose the profile you wish to be automatically activated when your phone is connected to a car kit.
- **Automatic answer** - Calls are answered automatically after 1 ring when a car kit is connected. Scroll to **On** or **Off** and press **Select**.
- **Lights** - Choose to keep the phone lights always on, or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

IF YOU SELECTED LOOPSET

The following options are available. Scroll to the option of your choice and press Select to enter the option's submenu and modify its settings.

- **Use loopset** - Enable use of the LPS-1 mobile inductive loopset. Scroll to Yes or No and press Select.
- **Default profile** - Choose the profile you wish to be automatically activated when a loopset is connected.
- **Automatic answer** - Calls are answered automatically after 1 ring when a loopset is connected. Scroll to On or Off and press Select.

IF YOU SELECTED TTY/TDD

The following options are available. Scroll to the option of your choice and press Select to enter the option's submenu and modify its settings.

- **Use TTY** - Enable the use of a TTY/TDD device. Scroll to Yes or No and press Select.


10




Note: If the loopset is enabled, you'll be asked to disable the loopset before enabling TTY/TDD. Press Yes to disable the loopset (thus enabling TTY/TDD). Press No to leave the loopset enabled.

Connect TTY hardware


- 1 The TTY device comes with a cable. Plug the larger end of this cable into the input jack on the TTY.
- 2 Plug the other end of the cable into the TTY adapter HDA-8.
- 3 Plug the HDA-8 into the connector on the bottom of your phone.

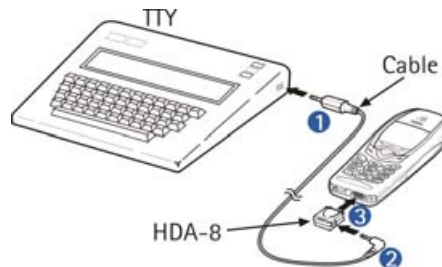



Make a call with TTY

 **Note:** You must have an accessory attached to your phone prior to selecting the accessory settings menu.

- 1 At the Start screen, press **Menu 4-6-4-1-1** (Settings - Accessory settings - TTY/TDD - Use TTY - Yes). After a brief pause, a confirmation message appears in the display.

 **Note:** After selecting Yes, this becomes the default and you won't have to do it again unless you turn TTY/TDD off.



- 2 Press  to return to the Start screen.
- 3 Enter the number you wish to call (on the phone) and press .
- 4 When the receiving party answers, begin typing your conversation on the TTY.

10

End a TTY call

- Press  on the phone

Receive a TTY call

- 1 Make sure the TTY and phone are connected.
- 2 When the phone vibrates (if vibrate is on), press  to answer the call, and then type your response on the TTY.
- 3 To hang up, press  on the phone.

• OPTIONAL HEADSETS

The HDC-9P and HDE-1 headsets can be purchased separately as accessories.



Connect the headset

- 1 Plug the headset jack into the accessory connection on the bottom end of your phone.
- 2 Place the round headset ear plug in your ear.



Customize your phone

With the headset connected, you can make, answer, and end calls as usual.

- Use the keypad to enter numbers
- Press  to place a call
- Press  to end a call

When in use, the headset microphone hangs at the side of your head. Although it may seem far from your mouth, you can speak at normal volume.



VOICE DIAL A NUMBER WITH THE HDC-9P HEADSET

Once you've voice tagged entries in your Phone book, you can make a call with the HDC-9P headset by simply pressing and holding the remote button on the microphone. See "Assign a voice tag" on page 53 for information on setting up voice tags if you haven't already.

- 1 At the Start screen, press and hold the remote button on the headset. Your phone beeps and Please speak now appears in the display.
- 2 Within 3 seconds, pronounce the voice tag into the microphone.

10

Once the voice tag is recognized, the tagged entry appears in the display, replays through the earpiece, and the number is dialed.

• AUDIO SETTINGS

Much like a stereo, your phone's audio can be customized to your preference. You can choose from a list of 4 equalizer presets or create up to 2 custom sets of your own.

Choose an equalizer set



- 1 At the Start screen, press Menu 4-3-2 (Settings - Call settings - Equalizer). After a brief pause, the following equalizer sets appear in the display.


Normal	Switches the Equalizer off
Bright	Amplifies higher frequencies
Dark	Amplifies lower frequencies

Loudness	Amplifies both higher and lower frequencies
Set 1	Customizable equalizer setting
Set 2	Customizable equalizer setting

- 2 Scroll to the equalizer set of your choice and press Select. A graphic of the equalizer set you have chosen appears in the display.
- 3 Press OK to activate the set or Back to return to the list of sets.

Create a Custom equalizer set

- 1 At the Start screen, press Menu 4-3-2 (Settings - Call settings - Equalizer). After a brief pause, a list of equalizer sets appears in the display.
- 2 Scroll to Set 1 (or Set 2) and press Select.
- 3 Scroll to Edit and press Select. Set 1 appears in the display with the first bar highlighted.
- 4 Press Adjust, then use the scroll keys to adjust the setting. When you're finished, press OK.
- 5 Press  to select the next bar. Press Adjust, and use the scroll keys to adjust the setting. When you're finished, press OK.
- 6 Press  to select additional bars. Press Adjust and use the scroll keys to modify each bar's setting. Press OK to accept any settings before continuing to the next bar.
- 7 Once you're finished, press Back, where you can Activate the setting, return to Edit, or Rename the setting.

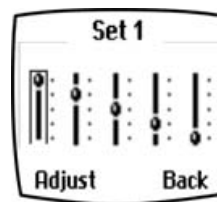

CHOOSE AN EQUALIZER SET WHILE IN CALL

- 1 While in a call, press Options, scroll to Equalizer, and press Select.
- 2 Scroll to one of the 6 equalizer settings and press Activate.

- **DOWNLOAD A RINGING TONE**

In addition to 30 ringing tones that come with your phone, you can download up to 10 more over the Internet, or have them sent to your phone via SMS. You can also create ringing tones of your own and send them to your phone or other compatible phones using Nokia PC Suite. For more information on PC Suite, see the PC Connectivity Guide.



Note: This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer download features can receive ringing tones. Contact your wireless provider for details.

When you receive a ringing tone

Ringing tone received appears in the display.

LISTEN TO THE TONE

- 1 Press **Options**, scroll to **Playback**, and press **Select**.
- 2 To stop playing the tone, press **Quit** or

10

DISCARD THE TONE



- Press **Options**, scroll to **Discard**, and press **Select**.

SAVE THE TONE

- 1 Press **Options**, scroll to **Save**, and press **Select**.
- 2 Scroll to an available slot and press **Replace**.

11 Manage phone security


You can lock your keypad, restrict selective calls, and use security codes to secure your phone against accidental or unauthorized use.

 **Important:** When Keyguard is on, calls may be possible to dial emergency numbers (for example, 911 or other official emergency numbers). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.


- **LOCK AND UNLOCK THE KEYPAD (KEYGUARD)**

Remember to lock your phone's keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call the lock automatically reactivates.

LOCK THE KEYPAD (KEYGUARD)

- At the Start screen, press Menu . Keys locked appears in the display.

UNLOCK THE KEYPAD

- At the Start screen, press Unlock . Keys unlocked appears in the display.

- **SECURITY LEVELS**

The security level determines your access to features when a "non-owner" SIM card is used. A "non-owner" SIM card is one (other than the original) that is inserted after you power off the phone. There are 3 security levels:

Security levels

Off	Owner and Non-owner cards are treated the same
Memory	Non-owner cards can access SIM memory. Any changes to the memory setting requires the security code.
	The owner card has access to all features, but the security code is required to change a memory setting
Phone	The security code is required upon power-up

Set your security level

- 1 At the Start screen, press Menu 4-7-3 (Settings - Security settings - Security level).
- 2 After a brief pause, you're prompted to enter the security code. The default code is 12345. Enter the security code and press OK.
- 3 Scroll to Off, Memory, or Phone and press Select.

• FIXED DIALING

Once you setup and activate a fixed dialing list, your phone can make calls *only* to those numbers that you've defined in the fixed dialing list. Fixed dialing is a network feature and must be supported by your wireless provider.

Set up and activate a fixed dialing list

- 1 At the Start screen, press Menu 4 -7-2 (Settings - Security Settings - Fixed dialing).

11

The options in the following table appear in the display:



Note: If you activate fixed dialing and the number list is empty, all outgoing calls, except for emergency numbers such as 911, require entry of the PIN2 code.

Fixed dialing options

On	Activate fixed dialing (see note above)
Off	Deactivate fixed dialing
Number list	View the numbers in your fixed dialing list

- 2 Scroll to **Number list** and press Select. **Fixed dialing not active** and then **Fixed dialing list empty** appear in the display.
- 3 You're prompted to enter the PIN2 code. Enter the PIN2 code and press OK.

- 4 Enter the fixed dialing number, or press Find to retrieve a number from your Phone book, and press OK.
- 5 Enter a name for the number and press OK. A confirmation note appears in the display and you're returned to the fixed dialing number list.
- 6 Press Back, scroll to On and press Select to activate fixed dialing.

View or edit the fixed dialing list

- 1 At the Start screen, press Menu 4 -7-2 (Settings - Security Settings - Fixed dialing).
- 2 Scroll to Number list and press Select.
- 3 You're prompted to enter the PIN2 code. Enter the PIN2 code and press OK.
- 4 Any numbers which you've assigned to fixed dialing appear in the display.
- 5 Scroll to a number and press Options.
- 6 The options in the following table appear in the display.

Fixed dialing number options

View number	View the number for an entry
Add	Add a number to your fixed dialing list
Edit	Edit the highlighted entry
Erase	Erase the highlighted entry
Erase all	Erase all entries in your fixed dialing list

- Use the scroll keys to highlight an option
- Press Select to activate or enter an option's submenu

Notes about fixed dialing

- If a SIM card with fixed dialing that is activated is inserted into a phone that doesn't support fixed dialing, the SIM card is rejected
- If you try to add a name (without a number) to the fixed dialing list, you'll receive an error message
- If you try to browse the fixed dialing list, but haven't stored any numbers, **Fixed dialing list empty** appears in the display
- You cannot access SIM memory manually (view or copy numbers on the SIM card) while fixed dialing is active

• ACCESS CODES

Use access codes to change your security code, PIN code, and PIN2 code.



Note: Avoid using codes similar to emergency numbers such as 911 to prevent accidental dialing of the emergency number.

The security code

The security code controls access to features such as the security level and is supplied with the phone. The preset code is 12345.

11



Note: If you enter the wrong security code five times in succession, you won't be able to enter a code for five minutes, even if you power off the phone between incorrect entries.

CHANGE YOUR SECURITY CODE

Once you change the security code from its preset of 12345, keep the new code secret, and in a safe place separate from your phone.

- 1 Press **Menu 4 -7-4-1** (Settings - Security settings - Access codes - Change security code).
After a brief pause, you're prompted to enter the current security code (default is 12345).
- 2 Enter the current security code and press **OK**. You're prompted to enter the new security code.
- 3 Enter the new security code (up to 10 characters) and press **OK**. You're asked to re-enter the new security code for verification.

- 4 Enter the new security code again and press OK. A message appears in the display confirming your security code has been changed.

The PIN code

The PIN code protects the SIM card from unauthorized access. The PIN code can be 4- 8 digits in length. After three successive incorrect entries the PIN code is blocked and you'll be asked to enter the personal unblocking key (PUK) code.



Note: The PIN code must be obtained from your wireless provider. The PIN code is typically provided with your SIM card.

PIN CODE REQUEST

Enable your phone to request the PIN code upon power-up. This provides extra security in case your phone is lost or stolen.

- 1 Press Menu 4-7-1 (Settings - Security settings - PIN code request).
- 2 After a brief pause, you're prompted to enter the current PIN code. Enter the PIN code and press OK.
- 3 Scroll to On and press OK. A message appears in the display confirming your selection.

11

CHANGE YOUR PIN CODE

Before you can change your PIN code, you'll need to enable PIN code request. See "PIN code request" immediately preceding this section.

- 1 Press Menu 4-7-4-2 (Settings - Security settings - Access codes - Change PIN code).
- 2 After a brief pause, you're prompted to enter the current PIN code. Enter the PIN code and press OK.
- 3 You're prompted to enter the new PIN code. Enter the new PIN code and press OK.
- 4 You're prompted to re-enter the new PIN code for verification. Enter the new PIN code again and press OK.

A message appears in the display confirming your PIN code has

been changed.

The PIN2 Code

The PIN2 code is required for features such as Fixed dialing. If you enter an incorrect PIN2 code three times in succession, the PIN2 code is blocked and you'll have to enter the PUK2 code.



Note: The original PIN2 code must be obtained from your wireless provider.

CHANGE YOUR PIN2 CODE

- 1 Press **Menu 4-7-4-3** (Settings - Security settings - Access codes - Change PIN2 code). You're prompted to enter the current PIN2 code.
- 2 Enter the current PIN2 code and press **OK**. You're prompted to enter the new PIN2 code.
- 3 Enter the new PIN2 code and press **OK**. You're asked to verify the new PIN2 code by entering it again.
- 4 Enter the new PIN2 code again and press **OK**. A message appears in the display confirming you've changed the PIN2 code.

11

Personal unblocking key (PUK) codes


PUK and PUK2 codes are used to restore blocked PIN and PIN2 codes. Both PUK and PUK2 codes are eight characters in length and cannot be changed. PUK and PUK2 codes must be obtained from your wireless provider.




Important: If you enter an incorrect PUK or PUK2 code 10 times in succession, the message **SIM rejected** appears in the display and the SIM card can no longer be used. You must contact your wireless provider for a new SIM card.

12 Messages



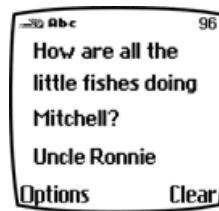

If you're subscribed to a message service, you can send and receive messages to compatible phones that also have a message service. You can also send and receive picture messages and e-mail if supported by your network. Composed messages can be up to 160 characters in length.



 **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

Message icons

Icons that precede the title of a message indicate the following:

	The message has not been read
	The message has been read
	A message (which you've composed) has not been sent
	The message is a delivery report

Before you can send and receive messages

You'll need the following to send and receive messages:

- A messaging service through your wireless provider
- A message center number, which must be saved to your phone (if your wireless provider hasn't done so already)

Save your message center number

Messages sent by your phone are routed through your wireless provider's message center. Normally, this number is saved to your phone by your wireless provider. To save the number manually, do the following:

- 1 At the Start screen, press Menu - Select, and scroll until Message settings appears in the display.
- 2 Press Select, scroll to Default profile, and press Select again.
- 3 Scroll to Message center number and press Select.
- 4 *If the box in the display is empty*, enter the number given by your wireless provider and press OK.
- 5 *If the box is full*, leave the number as it is and press OK.


• TIPS FOR COMPOSING A MESSAGE


Predictive text input

Predictive text allows you to write messages using a built-in dictionary. It's much faster than using the traditional "multi-tap" method. For each letter of the word that you're spelling, you only need to press the corresponding key on your keypad *once*. You can use predictive text to write a message, create a calendar note, make a to-do list, and more.

12



 

 
Activate/deactivate predictive text

- At any text entry screen, press and hold Options. Predictive text is turned on (or off), depending on its previous mode.
OR
- 1 At a text entry screen, press Options, scroll to Predictive text, and press Select.
- 2 Scroll to the language of your choice and press Select.
Predictive text is turned on. The predictive text icon () appears in the upper left corner of the display.

 **Note:** The Language setting affects the time and date formats of the Clock, Alarm clock, and Calendar.






Use predictive text




For example, to write *Nokia*, with the English dictionary selected, press each of the following keys *once*: (with predictive text on):



 (for N)  (for O)  (for K)  (for I)  (for A)

N **On** **Onl** **Onli** **Nokia**

The illustration above simulates your display each time a key is pressed.

- Press  to enter a space and begin writing the next word.
- If a displayed word is not correct, press  to see other matches. To return to the previous word in the list of matches, press **Previous**.
- If ? appears after a word, press **Spell** to add the word to the dictionary.
- Press  to insert a period into your message.
- Press and hold  to display special characters. Press  again to cycle through all available characters. See “Use special characters” in the following section for more information on special characters.

 **Note:** Press  to switch predictive text on or off and to use predictive text in various modes. As you press , the following icons (not the descriptions) appear in the upper left of the display:

ABC Uppercase text Predictive text is Off	 Abc Sentence case text Predictive text is On
abc Lowercase text Predictive text is Off	 abc Lowercase text Predictive text is On


Add new words to the dictionary

If you encounter a word that predictive text doesn't recognize, a question mark (?) follows the word and **Spell** appears in the lower left of the display.



Messages

- Press **Spell**, enter your new word using the keypad, and press **Save**. The word is added to the dictionary as well as the message you're writing.

NOTES ABOUT ADDING WORDS

- New words that you accept by pressing **Select**, , or deleting the space between two words are saved to the dictionary.
- Depending on the language and the length of the words, you may be able to add hundreds of words to the dictionary.
- When the dictionary is full, the most recent addition replaces the first.


Use special characters


While entering text, press and hold  to display the following special characters. Press  again to cycle through all available characters:

.	,	'	?	!	"	-	()	@	/
:	_	;	+	&	%	*	=	<	>	£
€	\$	¥	¤	[]	{	}	\	~	^
ı	¿	§	#		—	←				

12

 Use four-way scrolling

Navigate special characters using the 2, 4, 6, and 8 keys much as you would a joystick. Once a character is highlighted press  to insert the character into your message.

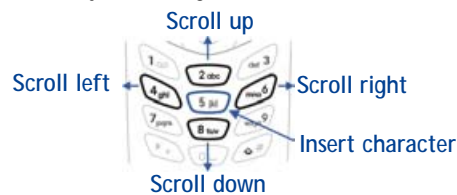

• WRITE AND SEND A TEXT MESSAGE

- 1 At the Start screen, press **Menu 01-1** (Messages - Write message).
- 2 After a brief pause, the message entry screen appears in the display.
- 3 Compose a message using the keypad and press **Options**.
- 4 Scroll to **Send** and press **Select**.
- 5 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book, and press **OK**. Your message is sent.

• READ MESSAGES

When you receive a message, your phone beeps and **Message received** appears in the display as well as the unopened letter icon (✉).

- 1 Press **Show** to read the message, or press **Exit** to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press **Select** to view the message.



Note: When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the Start screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you're finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

Read linked messages

Your phone can receive one long message (up to 459 characters) in sequences. You can start reading the first part before the phone has received the entire message.

While viewing the message, you may see **some text missing** on the display. This is normal, and the message content will be updated as soon as the missing sequence arrives.

If the memory is full, you may have to delete a message from your inbox or outbox before your phone can update the missing text.


Reply to a message

- 1 After reading a message, press **Options**.
- 2 Scroll to **Reply**, and press **Select**. Choose one of the following reply options.
 - As message
 - As e-mail
- 3 Once you've chosen your reply type, choose one of these options.
 - Blank screen
 - Original text
 - Template
 - Yes
 - No
 - OK
- 4 Edit your reply and press **Options**.
- 5 Scroll to **Send** and press **Select**. The return number appears in the display.
- 6 Edit the number if necessary, and then press **OK**. Your reply is sent.

12


Forward a message


- 1 After reading a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Scroll to **As message** or **As e-mail** and press **Select**.
- 4 Press **Options**, scroll to **Send**, and press **Select**.
- 5 Enter the recipient's phone number, or press **Find** to retrieve a number from your Phone book.
- 6 Press **OK**. The message is forwarded.


 **Note:** When sending messages via the SMS network service, your phone may display the words **Message Sent**. This is an indication that the message has been sent by your phone to the message center number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your wireless provider.

• E-MAIL

You can use your phone to send and receive e-mail messages. The e-mail feature may not be supported by all wireless providers.

 **Important:** The e-mail address is included in the total character count for an e-mail message, which is 160 characters. Leave enough space for the e-mail address while composing your message or you'll be taken back to the editor, where you'll have to delete some text before sending.

 **Note:** You cannot send picture messages with e-mail.

 **Note:** Service providers may customize the SMS message settings interface. For more details about SMS services, please contact your service provider.

12


Send an e-mail message

- 1 Press **Menu**, select **Messages**, then select **Write e-mail**. The e-mail address box opens.
- 2 Enter the e-mail address, or press **Find** to retrieve a number from your Phone book.
 - If you press **Find**, enter the first few letters of the name you want and press **OK** when you find the name. The address appears in the recipient address box. Press **OK**.
 - The phone lists all the names from your phone book. If you select a name for which there is no e-mail address, your phone displays the message, **No e-mail addresses found**.

- If you enter the e-mail address, press OK when you've finished. The Subject box opens.

3 Enter a subject and press OK.


4 When the message screen appears, enter your message.

 **Note:** The maximum number of characters for an e-mail message varies. Check with your wireless provider for details.

Tip: You can turn on predictive text input if you wish. For more information, see "Predictive text input" on page 77.

5 When you've finished composing the e-mail, press Options.

6 Scroll to **Send** and press **Select**. A message appears in the display that indicates your e-mail is being sent.

 **Note:** If your phone asks for an e-mail gateway number, contact your wireless provider.

Reply to or forward an e-mail message

1 If the message is not on the screen, press Menu 01-4 (Messages - Inbox) from the Start screen.

12

2 Scroll to the message you received and press **Select**.

3 Press **Options**, scroll to **Forward** or **Reply**, and press **Select**.

4 Scroll to **As e-mail** and press **Select**.

5 Follow steps 3 through 6 in "Send an e-mail message."

Receive an e-mail message


To receive e-mail messages, you need the special e-mail address provided by your wireless provider. You can give this address to people who need to reach you by e-mail. They can then send e-mail messages to you from their computers or other e-mail devices.

- Messages sent to you by e-mail arrive as regular text messages. You can use all the options described earlier to save, reply to, or forward a message.

- See your wireless provider to get the e-mail address for your phone and for more information about using e-mail on their network.


• PICTURE MESSAGES

The Nokia 6340i comes with 10 pre-loaded pictures and 5 empty storage slots (15 total). You can, however, over-write any of the 10 pictures that come with your phone. Pictures can be attached to a message and sent via SMS to compatible phones. Picture messages behave the same as text messages, but pictures take up more space than text. Pictures are stored in the "Templates" folder under Messages - Templates.

 **Note:** You cannot send a picture message via e-mail.

Download pictures

The Nokia 6340i can download pictures, or receive them from compatible phones via SMS to use in messages. You can also create pictures and send them to your phone or other compatible phones using Nokia PC Suite.


 **Note:** This function can be used only if it is supported by your network operator or wireless provider. Only phones that offer picture message features can receive and display picture messages. Contact your wireless provider for details.

12

When you receive a picture message

When you receive a picture message, your phone beeps and Message received appears in the display as well as the unopened letter icon (✉).

- 1 Press Show to read the message, or press Exit to move the message to your inbox.
- 2 If you have more than one message, scroll to the message of your choice and press Select to view the message.

 **Note:** When you have unopened messages in your inbox, ✉ is shown in the upper left corner of the Start screen as a reminder.

- 3 Use the scroll keys to view the whole message if necessary.



Tip: Keep scrolling to view other information, such as the sender number and time the message was sent.

- 4 Once you're finished, press **Back** to move the message to the Inbox, or press **Options** for other choices, such as **Reply** or **Forward**.

TO SAVE THE PICTURE

If you'd like to save the picture to your Templates folder for later use:

- 1 Press **Options**, scroll to **Save**, and press **OK**.



Note: If your templates folder is full of pictures, just scroll to the picture you'd like to replace and press **Select**.

Compose and send a picture message

One picture message is equivalent in size (and cost) to 3 text messages. When you attach a picture to a message, you'll have enough remaining space for about 121 characters in the message. If you try and attach a picture to a message which is almost full of text, a beep sounds and you're prompted to erase some text before proceeding.

- 1 At the Start screen, press **Menu 01-1** (Messages - Write message).
After a brief pause, the message edit screen appears in the display.
- 2 Write a message using the keypad (or enter nothing if you choose), and press **Options**.

12



Tip: Attach pictures before adding text. You can then check remaining space for text in the upper right corner of the display.

- 3 Scroll to **Attach picture** and press **Select**.
A list of pictures appear in the display.
- 4 Scroll to a picture and press **View**.
- 5 Press **Attach** to insert the picture into your message, otherwise:
 - a) Press **Back**, scroll to another picture, and press **View** again.
 - b) Press **Attach** to insert the picture into your message.
- 6 To send the picture message, press **Options**, scroll to **Send**, and press **Select**.

- 7 Enter the phone number for your recipient (or press **Find** to retrieve a number from your Phone book) and press **OK**. The message is sent.

PREVIEW, CHANGE, OR ERASE A PICTURE MESSAGE

- 1 After a picture has been attached to your message, press **Options** at the message edit screen.
- 2 Scroll to one of the following options and press **Select**.
 - a) **Preview** - Previews the attached message before sending. Press **Back** to return to the list of options.
 - b) **Change picture** - Takes you back to the picture list. Scroll to highlight a new picture, press **View** and then press **Attach** to replace the previous picture in your message.
 - c) **Erase picture** - Press **OK** to erase the picture from your message, or press **Back** to return to the list of options.

- **TEMPLATES**

Templates are short, pre-written messages which can be recalled and sent as original messages, or used as a quick reply when you're short on time. You can also customize and save an existing template or create a new one of your own. Templates are stored in the **Templates** folder.


12

Send a template message

- 1 At the Start screen, press **Menu 01-6** (Messages - Templates). After a brief pause, the templates folder opens to display a list of templates.
- 2 Scroll to the template of your choice and press **Select**. Available templates are as follows:

Message Templates

"Please call"	"I am late. I will be there at"
"I'm at home. Please call"	"See you in"
"I'm at work. Please call"	"See you at"
"I'm in a meeting, call me later at"	"Sorry, I can't help you on this."
"Meeting is canceled."	"I will be arriving at"

 **Note:** Pictures are also stored in the Templates folder.

- 3 If you'd like to send the template as it is, press **Options**, scroll to **Send**, and press **Select**. Then skip to step 4.

If you'd like to modify the template before sending:

- a) Scroll to **Edit** instead of **Send** and press **Select**. You're taken to the message edit display, where you're free to edit the template as you choose.
- b) Once you're finished editing, press **Options**, scroll to **Send**, and press **Select** if you'd like to send the message without saving.

To save the template before sending:

- c) Press **Options**, scroll to **Save message** (instead of **Send**), and press **Select**. **Replace original?** appears in the display.
 - d) Press **OK** to save over the template, or press **No** to save it as a new template to a folder of your choice.
- 4 Enter the recipient's number, (or press **Find** to retrieve a number from your Phone book) and press **OK**. The template is sent.

12

Insert a template into a message

You can also insert a template into a message that you're composing.

- While composing a message, press **Options**, scroll to **Use template**, and press **Select**.

Create a custom template

- 1 Press **Menu 01-1** (Messages - Write message). After a brief pause, the message entry screen appears in the display.
- 2 Compose your custom template and press **Options**.
- 3 Scroll to **Save message**, and press **Select**.
- 4 Scroll to the **Templates** folder and press **OK**. Your message is saved as a template.

• ORGANIZE MESSAGES WITH FOLDERS

Save messages to folders

You can save messages to an existing folder or to a folder you've created.


- 1 Press **Menu 01-1** (Messages - Write message). After a brief pause, the message entry screen appears in the display.
- 2 Write your message and press **Options**.
- 3 Scroll to **Save message** and press **Select**.
- 4 Scroll to the folder where you'd like to save the message and press **OK**. The message is saved.

View saved messages

- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until the folder containing the message you wish to view appears in the display and press **Select**.
- 3 Once the folder opens, scroll to the message you wish to view and press **Select**.

12

Inbox folder

Messages are automatically stored in the inbox after they've been read or if you press  when **Message received** appears on the Start screen.

Outbox folder

Store messages that you'd like to send at a later date in the **Outbox** folder.

Archive folder

Store messages that have been read in the **Archive** folder.

Templates folder

Pictures and pre-written templates are stored in the **Templates** folder.

My folders

Keep your messages organized by creating custom folders and saving some of your messages there.

ADD A FOLDER OF YOUR OWN

- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Press **Options**. **Add folder** is highlighted. Press **OK**.
- 4 Enter a name for the new folder and press **OK**. The folder is added.

REMOVE A FOLDER

Only folders created in **My folders** can be deleted. The **Inbox**, **Outbox**, **Archive**, and **Template** folders are protected. When you delete a folder, all messages in the folder are also deleted.


- 1 At the Start screen, press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll until **My folders** appears in the display and press **Select**.
- 3 Any folders that you've created appear in the display. Scroll to the folder you wish to remove and press **Options**.
- 4 Scroll to **Delete folder** and press **OK**. You're asked to confirm the deletion.
- 5 Press **OK** to delete or **Back** to exit.

12

Move a message to a folder

- 1 While viewing the message, press **Options**.
- 2 Scroll to **Move** and press **Select**.
- 3 Scroll to the destination folder and press **OK**. The message is moved.

• ERASE MESSAGES

If your message memory is full and you have more messages waiting at the network,  blinks in the Start screen. You can do the following to create more space:

- Read some of the unread messages and then erase them
- Erase some of these messages from your folders

Erase a single message

To erase a single message, you need to open it first.

- 1 Press **Menu 01** (Messages). After a brief pause, **Write message** appears in the display.
- 2 Scroll to the folder containing the message you wish to erase and press **Select**. A list of messages appears in the display.
- 3 Scroll to the message you wish to erase and press **Select**. The message opens.
- 4 Press **Options**, scroll to **Erase**, and press **Select**.
- 5 You're asked to confirm the erasure. Press **OK** to erase the message.

12

Erase all messages in a folder

- 1 At the Start screen, press **Menu 01** (Messages).
- 2 After a brief pause, **Write message** appears in the display.
- 3 Scroll until **Erase messages** appears in the display and press **Select**.
- 4 Scroll to the desired folder that you wish to erase and press **OK**. You're asked to confirm your erasure.



Important: If you select **All read**, it erases any messages which have been read in *all* of the folders.

- 5 Press **OK** to empty the folder.

13 Your personal organizer


The Nokia 6340i has many useful features for organizing your everyday life, including a calendar, to-do list, and alarm clock. It also has a calculator that can easily convert domestic and foreign currency, plus a new feature called Wallet for making purchases on-line. In this chapter you'll learn how to use your phone as a personal digital assistant.

- **CALENDAR**

The calendar keeps track of reminders, calls you need to make, meetings, and birthdays. It can even sound an alarm for any of these events.

Open the Calendar

At the Start screen, press Menu 6-1 (Organizer - Calendar). After a brief pause, the Monthly view appears in the display with the current date highlighted by a black box.

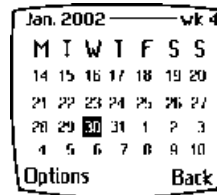


Monthly view

13

Use four-way scrolling

You can move the cursor in some calendar views using the 2, 4, 6, and 8 keys much the same as a joystick.

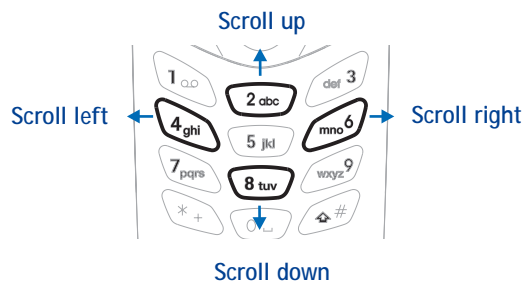


The Monthly view

The monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days that appear highlighted in bold font contain calendar notes such as a meeting or reminder.



Jump to a date

- 1 Press Menu 6-1 (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press Options, scroll to Go to date, and press Select.
- 3 Enter the date (for example 12/15/2002) and press OK. The monthly view appears in the display with the "jump date" highlighted.

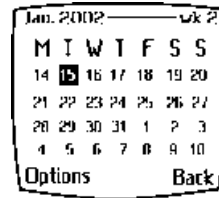

Make a note for a specific date

13



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

You can choose from four types of notes; Meeting, Call, Birthday, and Memo. Your phone asks for further information depending on which note you choose. You also have the option to set an alarm for any note that you select.

- 1 Jump to a date as outlined in the previous section.
- 2 From the monthly view (with the jump date highlighted), press Options.
- 3 Scroll to Make a note, and press Select.
- 4 Scroll to one of the following note types and press Select.



Your personal organizer

- 5 Enter your note, press **Options**, scroll to **Save**, and press **Select**.
 - For a **Meeting** note, you're prompted to enter a start and end time. You're then given the option to set an alarm.
 - For a **Call** note, you're prompted to enter a phone number, a name, and the time. You're then given the option to set an alarm.
 - For a **Birthday** note, you're prompted to enter the person's name, and year of birth. You're then given the option to set an alarm.
 - For a **Memo** note, you're prompted to enter a subject for the memo. You're then given the option to set an alarm.

View calendar notes - the Day view

After you've created some calendar notes, you can view them as follows:


- 1 At the Start screen, press **Menu 6-1** (Organizer - Calendar).

After a brief pause, the monthly view appears in the display with the current date highlighted. Any dates that contain calendar notes will be in bold font.
- 2 Jump, or scroll to the date containing the notes you wish to view.
- 3 Press **Options**, scroll to **View day**, and press **Select**. Any notes you have for the day will appear in a list format.

13

Options while viewing the notes list

- 1 Press **Options** while viewing the day's notes to display the options listed in the following table.

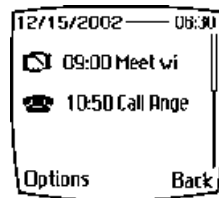

- 2 Scroll to an option. Press Select to activate the option or to enter its submenu.

Calendar note options

View	View the full note
Make a note	Make another note for the selected date
*Erase	Erase the note
*Edit	Edit the note
*Move	Move the note to another date on your calendar
*Repeat	Enable the note to recur on a regular basis (daily, weekly, bi-weekly, monthly, and yearly)
Go to date	Jump to another date on your calendar
*Send note	Send the note to another device via Infrared or SMS as text or in vCal format
*Copy	Copy the note. You can then "paste" the note to another date
*Settings	Set the date and time, date and time format, the day each week starts, and whether you want your notes to auto-erase after a specified time

13

*Indicates an option that is available only while viewing the body of a note (not the header).

Options while viewing a note

- 1 Press Options while viewing a note to display (only) those options which are marked by an asterisk in the *previous* table.
- 2 Scroll to an option. Press Select to activate the option or enter its submenu.

Send a Calendar note to another device

SEND A NOTE VIA INFRARED OR SMS



Note: If sending via IR (infrared), ensure the other device is set to receive data via IR. For more information on enabling the receiving device's IR, refer to the user guide for the receiving device.

- 1 At the Start screen, press Menu 6-1 (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Jump, or scroll to the date containing the note you wish to send.



Tip: Any days containing notes will be in bold font.

- 3 Press **Options**, scroll to **View day**, and press **Select**.
 - 4 Scroll to the note you wish to send and press **Options**.
 - 5 Scroll to **Send note** and press **Select**.
 - 6 Scroll to **Send via IR**, **Send as note**, or **Send as text**, and press **Select**.
 - 7 If you selected **Send via IR**, align the infrared ports of both devices and press **Select**. The note is sent.
 - 8 If you selected **Send as note**, enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.
- If you selected **Send as text**, the note appears in the display.
- 9 Press **Options**, scroll to **Send**, and press **Select**.
 - 10 Enter the number for the recipient (or press **Find** to retrieve a number from your Phone book), and press **OK**. The note is sent.

13

RECEIVE CALENDAR NOTES FROM ANOTHER DEVICE

When you receive a Calendar note, your phone displays **Calendar note received**. You can then save the note in your Calendar and set an alarm for any date and time.

VIEW RECEIVED CALENDAR NOTES

- 1 When your phone displays Calendar note received, press **Show**.
- 2 The text of your note appears in the display. Use the scroll keys to view the entire message, if necessary.

SAVE RECEIVED CALENDAR NOTES

- 1 After viewing the Calendar note, press **Options**.
- 2 Scroll to **Save** and press **Select**.

DISCARD VIEWED CALENDAR NOTES

- 1 After viewing the Calendar note, press **Options**.
- 2 Scroll to **Discard** and press **Select**.

• MAKE A TO-DO LIST

You can keep track of your tasks with the to-do list feature. You may be able to save up to 30 notes, depending on their length.



Note: This feature utilizes dynamic memory. See “Dynamic memory use” on page 8 for more information.



Note: To-do notes are not related to specific dates.

13

Add a to-do note

- 1 At the Start screen, press **Menu 6-2** (Organizer - To-do list).
- 2 After a brief pause, press **Options**. If this is your first time to use the to-do list, **Add** is highlighted.
- 3 Press **Select**, enter your to-do note and press **Options**.
- 4 Scroll to **Save** and press **Select**.
- 5 Scroll to **High**, **Medium**, or **Low** priority and press **Select**. The to-do note is saved.

Choose other to-do options


When you view a to-do note, you have the following options:

Options while viewing a note


View	View the selected note
Add	Create a note
Erase	Delete a note
Edit	Modify the contents of a note
Edit priority	Change the priority of a note to high, medium, or low
Go to priority	View notes for a specific priority level, such as all of your High priority notes
Save to cal.	Save the to-do note as a calendar note
Send as text	Send the note as a text message to another phone


- **WALLET**

Wallet allows you to store personal information, such as debit and credit card information to an encrypted area of your phone's memory. This information can then be used to make fast, secure purchases on-line. You can also use Wallet to sign and verify transactions (digital signature), if the proper security module is present in your SIM card. On-line purchases and digital signature capabilities are dependent upon your wireless provider.

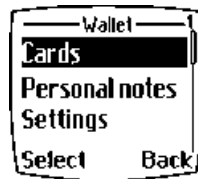

13

 **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

 **Note:** This section focuses mainly on Wallet setup. After you've entered the necessary credit, debit, and other information into Wallet, see "On-line purchases" on page 120 for instructions on using Wallet for transactions with your WAP browser.

Other Wallet features

You can also store important information in a Wallet personal note. Security features such as a password and data encryption make it ideal for storing personal information such as PIN codes and other sensitive data. See “Compose a personal note” on page 101 for more information about composing a personal note in Wallet.

Notes about Wallet security

- To protect yourself against unauthorized use of Wallet content, you can require a code to be entered each time you use Wallet. See “Activate code request” on page 99 for instructions.
- Your phone has other security features, including a PIN code that can protect your phone against unauthorized use. If you activate PIN code request, your phone asks for the code each time it is turned on. Without the proper code, your phone cannot be used (except for emergency calls). See “PIN code request” on page 74 for more info.

Wallet time-out


If Wallet is open for longer than 5 minutes without any user interaction (keypresses), a query appears in the display asking if you’d like to keep Wallet open, or exit. If you don’t respond within 5 seconds, Wallet application closes and your phone returns to the Start screen.

13

Create a Wallet code

The first time you access Wallet, you’ll be asked to create a personalized Wallet code. The Wallet code can be 4 -10 digits in length.

- 1 At the Start screen, press Menu 6-3 (Organizer - Wallet). After a brief pause, you’re prompted to enter a Wallet code.
- 2 Enter the 4 - 10 digit code of your choice and press OK.

 **Note:** Create a code that is unique, yet easy to remember. This will be your key to using Wallet’s features in the future. Also, keep your Wallet code in a secret place, separate from your phone.

- 3 Wallet prompts you to verify the code. Enter the code again for

verification and press **OK**. A message appears in the display confirming you've created a Wallet code.

Change your Wallet code

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter your Wallet code.
- 2 Enter your Wallet code and press **OK**.
- 3 Scroll to **Settings** and press **Select**.
- 4 Scroll to **Change code** and press **Select**.
- 5 Enter the original Wallet code and press **OK**.
- 6 Enter the new Wallet code and press **OK**.
- 7 Enter the new Wallet code again for verification and press **OK**. A message appears in the display confirming your change.

Activate code request


To protect yourself against unauthorized use of Wallet content, you can require the Wallet code to be entered each time you use Wallet.

- 1 At the Start screen, press **Menu 6-3** (Organizer - Wallet). After a brief pause, you're prompted to enter your Wallet code.
- 2 Enter your Wallet code and press **OK**.
- 3 Scroll to **Settings** and press **Select**.
- 4 Scroll to **Code request** and press **Select**. You're prompted to enter the Wallet code.
- 5 Enter the Wallet code and press **OK**.
- 6 Scroll to **On** (or **Off** to deactivate) and press **Select**. A message appears in the display confirming you've activated code request.

13

Reset the Wallet code

If you forget the Wallet code and wish to erase all the information stored in Wallet, follow these steps.

 **Caution:** Once you reset the Wallet code and clear the contents of Wallet, you cannot restore this information.

- 1 At the Start screen, enter `*#3925538#` (or `*#ewallet#`).
A message appears in the display asking if you want to clear your Wallet content and code.
- 2 If you want to permanently delete your Wallet code and its contents, press OK.
- 3 Enter the security code and press OK. Your Wallet code and content are erased.

• CREATE A WALLET CARD

Wallet cards contain data entry fields for shipping, billing, receipt, and card information. Wallet can hold up to 5 credit card sets.

- 1 At the Start screen, press Menu 6-3 (Organizer - Wallet). After a brief pause, you're prompted to enter the Wallet code.
- 2 Enter the Wallet code and press OK. Scroll to Cards and press Select.
- 3 Scroll to a card, press Select, then choose from the following options.

13

Card entry fields

Card info	Enter the card holder, type, number, verification value, expiration day, expiration month, and expiration year
User info	Enter your user name and password
Shipping info	Enter your first, middle, and last name, company name and street address 1, street address 2, city, state, zip code, and country, phone number, and e-mail address
Billing info	Enter your first, middle, last name, company name and street address 1, street address 2, city, state, zip code, country, phone number, e-mail address

Card entry fields

Receipt info	Enter the receipt to phone number and receipt to e-mail address
Clear card	Clear the contents of a card
Rename card	Rename the card

Compose a personal note

Wallet can store up to 30 personal notes, such as passcodes or other sensitive data. Your notes are protected by Wallet's security feature.

- 1 At the Start screen, press Menu 6-3 (Organizer - Wallet). After a brief pause, you're prompted to enter your Wallet code.
- 2 Enter your Wallet code and press OK.
- 3 Scroll to Personal notes and press Select.
- 4 Press Add new, compose your note, and press Options.
- 5 Scroll to Save and press Select.
- 6 Enter a title for the note and press Options.
- 7 Scroll to Save and press Select. Your note is saved.

13

OPTIONS WHILE COMPOSING A NOTE

Press Options while composing a note to display those options listed in the following table:

- Use the scroll keys to highlight an option.

- Use the selection keys to activate an option or to exit the list.

Options while composing a note (if predictive text is on)

^a Save	Save the note
Insert word	Return to composing the note. You can then edit the last word entered (highlighted by underscore __)
Insert symbol	Display a list of special characters to insert into your note
^a Predictive text	Turn on predictive text for the available languages. See “Use predictive text” on page 78 for more information

- If predictive text is off, only the options “Save” and “Predictive text” appear in the display

VIEW A WALLET NOTE

- 1 Select **Personal notes** from Wallet’s main menu. You’re presented with headers of the notes you’ve composed thus far.
- 2 Press **Options** with any note header highlighted to display the options in the following table.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit the list.

13

Options while viewing the notes list

View	View the contents of the selected note
Add new	Compose and save a new note
Sort	Sort the list of notes by name or date
Erase	Erase the selected note
Erase all	Erase all notes

OPTIONS WHILE VIEWING A NOTE

- 1 While displaying personal notes from the list view, press **Options**, (**View** is highlighted), and press **Select**.
- 2 Press **Options** and the following list of options appear in the display.
- 3 Use the scroll keys to highlight an option. Use the selection keys to select an option or exit.

Options while viewing the body of a Wallet note

Edit	Edit the note
Send as text	Send the note to a compatible phone via SMS
Copy to calendar	Copy the note to any date on your calendar
Use number	Capture any numbers within the note. The number can then be saved to your Phone book, used to place a call, or you can send a message to the number
Erase	Erase the note

• **SET THE TIME AND DATE**

Set the clock

- 1 Press **Menu 4-2-1-2** (Settings - Time settings - Clock - Set the time).
- 2 After a brief pause, you're prompted to enter the time. Enter the time (in hh:mm format) and press **OK**. The time is set.

Show/hide the clock

You have the option of displaying the clock on the Start screen, or hiding it from view.

- 1 Press **Menu 4-2-1-1** (Settings - Time settings - Clock - Show/Hide the clock). After a brief pause, a confirmation message appears in the display:

- If your clock was previously "hidden," (not shown on the display), it will now appear in the upper right corner of the Start screen.
- If your clock was previously shown in the display, it will now be hidden from view.

Change the time format

You can set the time format for am/pm or 24 hour format (military time).

- 1 Press **Menu 4-2-1-3** (Settings - Time settings - Clock - Time format). After a brief pause, **24-hour** and **am/pm** appear in the display.
- 2 Scroll to **24-hour** or **am/pm** and press **Select**.

Set the date

- 1 Press **Menu 6-1** (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.
- 3 Scroll to **Set the date** and press **Select**.
- 4 Enter the date and press **OK**. The date is set.

13

Set or change the date format

- 1 Press **Menu 6-1** (Organizer - Calendar). After a brief pause, the monthly view appears in the display.
- 2 Press **Options**, scroll to **Settings**, and press **Select**.
- 3 Scroll to **Date format** and press **Select**.
- 4 Scroll to the format of your choice and press **Select**.
- 5 Scroll to the date separator of your choice (period, slash, or hyphen) and press **Select**. A message appears in the display confirming your selection.

- **ALARM CLOCK**

The alarm clock is based on your phone's internal clock. It sounds an alert any time you specify and even works if the phone is off.



Set an alarm

- 1 At the Start screen, press Menu 4-1 (Settings - Alarm clock).

IF AN ALARM HAS PREVIOUSLY BEEN SET

After a brief pause, On and Off appear in the display.



- 2 Scroll to On and press Select. You're prompted to set the alarm time.
- 3 Enter the time for the alarm in hh:mm format and press OK. Alarm on appears briefly in the display.

 **Note:**  also appears in the Start screen.

IF AN ALARM HAS NOT BEEN SET

You're prompted to enter a time for the alarm.

- Enter a time for the alarm in hh:mm format and press OK. Alarm on appears briefly in the display.

 **Note:**  also appears in the Start screen.

When the alarm sounds


Your phone beeps, vibrates, and the display lights up. Stop and Snooze appear in the bottom of the display.


WITH THE PHONE ON

Press Stop to shut the alarm off.

OR

Press Snooze. The alarm stops for 10 minutes and Snoozing appears in the display.

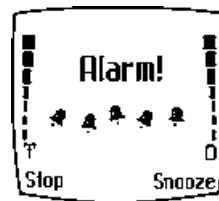

 **Note:** If you don't press a key, the alarm stops (snoozes) for 5 minutes, and then sounds again.

WITH THE PHONE OFF

- 1 The alarm sounds. If you press Stop the following appears in the display:

Switch the phone on?



Note: The phone will only power up if you select Yes when Switch the phone on? appears in the display.

- 2 Press Yes to power up the phone. Press No to keep it switched off.





Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Turn off an alarm

- 1 At the Start screen, press Menu 4-1 (Settings - Alarm clock).
- 2 After a brief pause, On and Off appear in the display.
- 3 Scroll to Off and press Select. Alarm off appears briefly in the display.

• USE THE CALCULATOR

- 1 At the Start screen, press Menu 7 (Calculator). After a brief pause, the calculator screen appears in the display.
- 2 Enter the first number in your calculation.
 - Press  to enter a decimal point
 - Press Clear to erase any mistakes
 - Press  to cycle through and select the add (+), subtract (-), multiply (*), and divide (/) characters
- 3 Enter the second number in your calculation.

Your personal organizer

- 4 Press **Options**. The following list of options appear in the display. Use the scroll keys to highlight an option. Press **Select** to confirm.

Calculator options

Equals	Displays the sum of your calculation
Add	Adds numbers in the calculation
Subtract	Subtracts numbers in the calculation
Multiply	Multiplies numbers in the calculation
Divide	Divides numbers in the calculation
Square	Squares numbers in the calculation
Square root	Square root of the numbers in the calculation
Change sign	Return to the previous display to select another sign for the calculation (plus sign, minus sign, etc.)

- 5 Press **Select** to complete the calculation as selected in the calculator options. The sum of your calculation appears in the display.

Currency conversion

13



You can convert foreign currency to domestic, or vice versa directly from the Start screen.

- 1 At the Start screen, enter a currency amount to convert.
- 2 Press **Options**, scroll to one of the following and press **Select**:

To home	Converts foreign currency to domestic currency
To foreign	Converts domestic currency to foreign currency



Note: If you haven't done so already, you're prompted to enter the exchange rate.

 **Tip:** To enter a decimal, press .

- 3 Enter the exchange rate and press OK. The converted amount appears in the display.

EDIT THE EXCHANGE RATE

- 1 At the Start screen, press Menu 7 (Calculator). After a brief pause, the calculator screen appears in the display.
- 2 Press Options (Exchange rate is highlighted), then press Select and scroll to highlight or display one of the following options:

Foreign units converted to home units	Enter the number of home units it takes to make one unit of foreign currency
Home units converted to foreign units	Enter the number of foreign units it takes to make one unit of your home currency

- 3 Press Select to edit your choice.
- 4 Enter the exchange rate and press OK. The exchange rate is saved.

14 Your phone and other devices

The Nokia 6340i is capable of interacting with, or connecting to a variety of devices using IR (infrared) or the DLR-3P serial cable.

The Nokia 6340i can exchange information with other compatible phones, desktop and laptop PCs, and handheld devices. It can also function as a wireless modem when connected to compatible PCs and handheld devices.

• INFRARED BASICS

Your phone can send and receive certain types of data by way of the phone's infrared (IR) port. Transmission and reception must be to or from an Infrared compatible phone or device.


The Nokia 6340i is a Class 1 Laser Product.



Important: The preferable distance between two devices in an infrared connection is from 3 inches to 3 feet. There must be no obstructions between the two devices and both IR ports must be pointed at each other.


Enable infrared communications




Before you can receive information (business cards, calendar or to-do list notes) or make an infrared connection to a PC or handheld device:

- 1 Make sure that the IR ports of the two devices are pointing at each other.
- 2 Press **Menu 9** (Infrared).
After a brief pause, **IR reception activated** appears in the display, and the IR icon  appears in the upper left corner of the Start screen.
- 3 Have the user of the sending device select the desired IR function to start data transfer.

If data transfer does not start within 2 minutes, the connection is canceled. You must activate IR communications on your phone again.

Check the status of an IR connection

The status of an IR connection is shown by the infrared icon .

- When  appears steady, there is an IR connection between your phone and the other device.
- When  doesn't appear, no IR connection exists.
- When  blinks, your phone is trying to connect to the other device or the connection has been lost.

• SEND AND RECEIVE INFORMATION

You can send and receive Phone book entries as "business cards" (v.card 2.1 format) using IR between compatible phones, between your phone and a PC running the appropriate software, or between other compatible IR-equipped handheld devices.



Note: This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

• BUSINESS CARDS

Create a business card

When you select and send a Phone book entry to a compatible device via IR or SMS, a business card is created.

Send a business card to another device


SEND A BUSINESS CARD BY INFRARED

First, make sure the other phone or device is set to receive data via its IR port. Refer to the user guide for the receiving device for more information on setting up IR communications and receiving data over IR.

- 1 Recall the Phone book entry you would like to send by IR.
- 2 Press Details, then press Options.
- 3 Scroll to Send bus. card and press Select.
- 4 Ensure the IR port of your phone and the other device are pointed at


one another and within range (3 inches to 3 feet).

- 5 Scroll to **Via infrared** and press **Select**. The business card is sent.

 **Note:** If your Phone book entry contains more than one number or text entry, you may be asked to choose **Primary no.** or **All details**. In this case, scroll to your choice and press **Select**.

SEND A BUSINESS CARD BY SMS

- 1 Recall the Phone book entry you would like to send by SMS.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Send bus. card** and press **Select**.
- 4 Scroll to **Via text msg.** and press **Select**.

 **Note:** If your Phone book entry contains more than one number or text entry, you may be asked to choose **Primary no.** or **All details**. In this case, scroll to your choice and press **Select**.

- 5 Enter the phone number of the recipient, or press **Find** to retrieve a number from your Phone book.
- 6 Press **OK**. The business card is sent.

Send calendar notes

You can send and receive calendar notes using the same basic procedures as those found in the section "Send a business card to another device" on page 110.


14

SEND A CALENDAR NOTE TO ANOTHER DEVICE

From the selected calendar day's day list:

- 1 Scroll to the note you wish to send and press **Options**.
- 2 Scroll to **Send note** and press **Select**.
- 3 Point the infrared ports at each other.
- 4 Scroll to **Send via IR** and press **Select** to start data transfer.

Receive business cards and calendar notes

 **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

You can receive business cards and calendar notes from another compatible phone or handheld device.

Before the user of the other phone or devices sends you a card:

- 1 Point the two IR ports at each other.
- 2 Press **Menu 9** (Infrared), after a brief pause **IR reception activated** appears in the display.
- 3 When you see the message **Business card received**, press **Show**.
- 4 Press **Options**, scroll to **Save** or **Discard**, and press **Select**.
 - If you press **Save**, you see the confirmation message **Card saved to phone**.
 - If you press **Discard**, you see the question **Discard business card?**. Press **OK** to discard.

• PC CONNECTIVITY

You can make a serial connection between the Nokia 6340i and a PC using the DLR-3P serial cable. This cable is available for purchase as an accessory, or may be included in your sales package. Once you establish this connection, you can access phone information from your PC, or use your phone as a wireless modem. It may also be possible to make this same serial connection between your phone and an Infrared-equipped laptop or IR-equipped desktop PC using your phone's infrared port.

Nokia PC Suite™

Once your phone is connected to your PC, you can use PC Suite to:

- Make a backup copy of the data in your phone (Content Copier)
- Edit Phone book names and numbers, profiles, and settings via your PC's keyboard (Phone Editor)
- Create ringing tones and transfer them to your phone (PC Composer)

Your phone and other devices

- Create caller group icons or pictures for use with picture messaging (PC Graphics)
- Synchronize the Phone book and reminders with PIM applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync)

Please refer to the *Nokia PC Suite Connectivity Guide* for installation and setup instructions.

Modem Setup

You can use the Nokia 6340i as a wireless modem with your laptop computer or handheld device, giving you access to the Internet (for e-mail and Web browsing) or corporate networks wherever you have service.

For more information on modem setup for PCs and handheld devices, please refer to the *Nokia PC Suite Connectivity Guide*.

Download PC Suite software

PC Suite software and documentation for the Nokia 6340i can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.


15 The wireless Internet

WAP is the mobile device's equivalent of the Internet. The mobile community began developing WAP in the late 1990s so that mobile device users could access the Internet. Today, most WAP sites are composed of text, hyperlinks, and low-resolution graphics. Because your wireless provider and others are free to design WAP sites as they choose, each WAP page can vary almost as much as a web page on the Internet.

- ➡ **Note:** Check with your wireless provider for WAP service availability.
- ➡ **Note:** WAP pages are designed using Wireless Markup Language (WML). Since web pages are designed using Hyper Text Mark-up Language (HTML), web pages cannot be viewed from your phone.

• THE SERVICES MENU

Use your WAP browser to get news, weather reports, access financial information, and more. WAP pages can be saved as bookmarks, the same as web pages on the Internet.

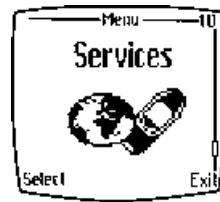

15

- ➡ **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.
- ➡ **Note:** You may need to subscribe to additional services before you can use the browser. Also, your wireless provider may have to configure your phone for browsing.
- 🔄 **Important:** Internet content received over a secure connection and stored in your browser's cache may be reused over non-secure connections and may create security issues. Please check with your wireless provider to determine if emptying your browser's cache after each browsing session or some other method should be used to avoid security issues.

- **WAP SETTINGS**

It shouldn't be necessary to manually configure the browser on your phone. Normally this is done by your wireless provider once you've subscribed to the feature. Contact your wireless provider if you have problems using the browser.

Your wireless provider and WAP

 
Because WAP content is designed to be viewed from your phone, your wireless provider now becomes your "wireless Internet provider" as well.

It's likely that your wireless provider has created their own home page and configured your browser to go there when you press **Home** on the browser's menu. Once you arrive at your wireless provider's home page, you should find links to a number of other WAP sites.

- **LAUNCH THE BROWSER**

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Home** and press **Select**.




Tip: To quickly launch the browser, press and hold  at the Start screen.

Your phone connects to the Internet and is directed to your wireless provider's home page.


15



Note: If your phone displays **Check service settings**, it may need to be configured for browsing by your wireless provider.



- Press  to terminate any active browser session and return to the Start screen.

EMERGENCY CALLS WHILE BROWSING


To exit the browser and place an emergency call, press  twice to return to the Start screen, then dial the emergency number.

Navigate a WAP page

ELEMENTS COMMON TO MOST PAGES

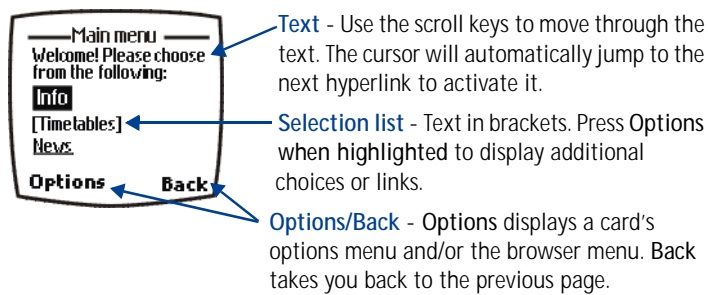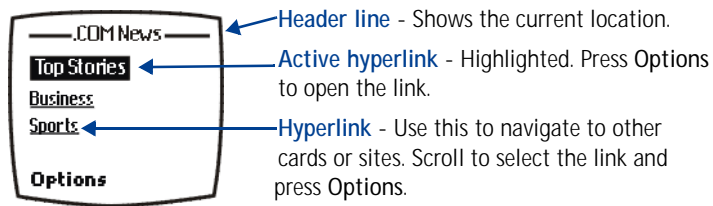

15

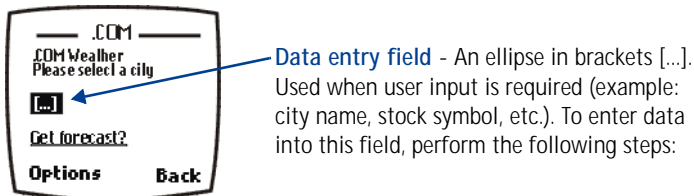

- 1 Highlight the data entry field and press Options, and scroll to Edit.
- 2 Enter the text requested by the data entry field and press OK. The text you entered is now displayed between the brackets.
- 3 Scroll to the link that requires an action (For example: get forecast?) And press Options.
- 4 Scroll to Open link and press OK.

The browser menu

- 1 At the Start screen, press Menu 10 (Services). After a brief pause, the options listed in the following table appear in the display.
- 2 Scroll to an option. Press Select to activate the option or enter its submenu.

Browser options (off-line)

Home	Start the browser and go to your home page
Bookmarks	Display a list of saved bookmarks
Service inbox	View messages from your wireless provider regarding new services and options
Settings	Modify your connection settings, appearance settings, and security certificate
Go to address	Go to the address of your choice
Clear the cache	Empty the browser's temporary memory and free up space. You should empty the cache after each session



Note: Some wireless providers may customize the options listed in the previous table. If any of the options are unavailable, contact your wireless provider for more information.

15

Options while browsing

Press Options while browsing. The following menus appear in the display:

Browser options on-line

Home	Go to your home page
Bookmarks	Display a list of saved bookmarks


Browser options on-line

Add bookmark	Add a bookmark
Go to address	Enter an address manually
Service inbox	View messages from your wireless provider regarding new services and options
Appearance settings	Choose text wrapping (on or off), and whether to load images or only text
Download settings	Choose whether you would like to allow (or not allow) cookies to be placed in your browser's cache
Use number	Captures numbers longer than 3 digits. You can save the number to your Phone book, Send a message to the number, or call the number directly.
Reload	Refresh the page you're currently viewing
Clear the cache	Empty the browser's temporary memory
Security info	View details about the security information for the current connection
Quit	Quit the current session and return to the Start screen
Use Wallet info	Use information previously saved to a Wallet card to make an on-line purchase
Close Wallet	Close the Wallet application if it is open. This option only appears if Wallet is open.

15




Note: Wireless providers may limit access to some menu options. Contact your wireless provider if you have difficulty accessing the options listed in the previous table.

 **Note:** The browser options listed in the previous table can change. WAP page designers are capable of creating additional options to those already listed.

Bookmarks


You can save the addresses of up to 25 of your favorite sites as bookmarks. If a WAP site's developers have included a title for the card, the name of the card appears in the bookmark list. If the site has no title, then the site's address will appear as a bookmark.

 **Note:** This feature utilizes dynamic memory. See "Dynamic memory use" on page 8 for more information.

SAVE AN ADDRESS AS A BOOKMARK

- 1 Navigate to the desired site and press **Options**.
- 2 Scroll to **Add bookmark** and press **Select**.

ENTER A BOOKMARK MANUALLY

 **Note:** Wireless providers may limit access to this option. Contact your wireless provider if you have questions regarding its use.


- 1 At the Start screen, press **Menu 10 (Services)**. After a brief pause, a list of options appear in the display.
- 2 Scroll to **Add bookmark** and press **Select**.
- 3 Enter the site's Internet address using the keypad (example: my.yahoo.com) and press **OK**.

 **Note:** It's unnecessary to enter http://. This is added automatically.

- 4 Enter a title for the new bookmark and press **OK**.

15

RETURN TO A BOOKMARKED SITE

 **Note:** Wireless providers may limit access to this option. Contact your wireless provider if you have questions regarding its use.

- 1 At the Start screen, press **Menu 10 (Services)**. After a brief pause, a list of options appear in the display.
- 2 Scroll to **Bookmarks** and press **Select**.

- 3 Scroll to the desired bookmark and press **Options**.
- 4 Scroll to **Go to** and press **Select**. If you aren't browsing already, your phone will connect to the Internet.

DOWNLOAD A RINGING TONE

Your phone can store up to 10 new ringing tones (sent from the Web, via SMS, or created using Nokia PC Suite). For more information about downloading ringing tones, contact your wireless provider.

PLAY, SAVE, OR ERASE A RINGING TONE

Once your phone receives a new ringing tone, your phone displays the message **Ringling tone received**.

- 1 Press **Options**, then choose **Playback**, **Save tone**, or **Erase**.
- 2 Press **Select**.

If you choose to save the new ringing tone, it becomes part of the ringing tone list available to you when customizing a profile (see "Customize a profile" on page 61).

USE PC COMPOSER

You can use PC Composer to create new ringing tones and send them to your phone. For more information, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for your phone. These documents can be downloaded from the U.S. Mobile Phone product section of www.nokia.com.

• **ON-LINE PURCHASES**

15



 
Important: On-line purchases and digital signature capabilities are dependent upon your wireless provider. This feature exists in your phone to support and simplify wireless payment services expected to launch in selected markets in the near future.

Once you've entered all of the necessary credit and debit information into a Wallet card, you can use your WAP browser to fetch this information and make fast, secure purchases on-line. See "Wallet" on page 97 for information on setting up Wallet.

The wireless Internet

- 1 At the Start screen, press **Menu 10** (Services). After a brief pause, a list of options appear in the display.
- 2 Scroll to **Home** and press **Select**.



Tip: To quickly launch the browser, press and hold  at the Start screen.

Your phone connects to the Internet and is directed to your wireless provider's home page.



Note: You can use **Wallet** for on-line purchases when the service supports ECML format.

- 3 When you are ready to make a purchase, press **Options**, scroll to **Use Wallet info** and press **Select**.
- 4 You're prompted to enter your **Wallet code**. Enter your **Wallet code** and press **OK**.
- 5 Scroll to **Cards** and press **Select**.
- 6 Scroll to the **Wallet card** you wish to use in this purchase (if you have more than one) and press **Select**.

A list of choices, such as **all details** or **only shipping details** appears in the display.

- 7 Scroll to your choice and press **Select**. **Wallet** automatically fills in the details as required by the on-line service.

Respond to any further queries as necessary to complete the transaction. You may receive a sign-in document from the wireless service. This document can be signed using a signing certificate and your personal signing PIN code. The digital signature authenticates your purchase. For more information, contact your wireless provider.

16 Fun and games

The Nokia 6340i is programmed with four interesting and challenging games, some of which can be played via IR against another opponent.



Warning: Do not switch on the phone to use this function when wireless phone use is prohibited or when it may cause interference and danger.

• GAMES MAIN MENU

 



Press Menu 8 (Games) at the Start screen. After a brief pause you're presented with the following menu.

- 1 Select game - Select from Snake II, Pass 'n rush, Bumper, and Pairs II.
- 2 Settings - Control game sounds, lights, and shakes.



Note: Game sounds only applies to games and doesn't affect other features in your phone.

Snake II


 




Feed the snake with as many goodies as possible and watch it grow. Use the , , , and  keys to maneuver the snake toward food. The longer the snake's tail grows, the higher your score. You can choose from a clear field, or select from five different mazes. If the snake runs into its own tail or one of the walls, the game is over. You can visit Nokia game services on the Internet to download new mazes. Contact your wireless provider for details.

  16

 

 


Pass 'n rush

Play the role of head coach. Select the plays for your team and watch the action unfold. Choose from a quick match, full game, or scenario.

Bumper

Get your highest score by keeping the ball on the table using the flippers. Press and hold  to launch the ball. Hold down  to get more launch power. Use keys  and  to control the flippers. Use  and  to nudge the table - but not too much or the game will tilt! You can visit games services on the Internet to download new tables. Contact your wireless provider for details.

Pairs II

Reveal pictures to find pairs with as few tries as possible. Use the , , , and  keys to move the cursor. Press  to reveal a picture. In Time trial, pair up all of the tiles before the dynamite fuse runs out.


• START A GAME


- 1 At the Start screen, press Menu 8 (Games).
- 2 After a brief pause, the games menu appears in the display.
- 3 Scroll to Select game and press Select.
- 4 Scroll to the game you wish to play and press Select. Press any key during the game animation to enter the selected game's menu, where you can choose from several game-dependent options.

17 Accessories

Extended 1000 mAh Li-Ion Battery (BLB-3)


Provides up to 2.5 - 4 hours of TDMA talk time and up to 3.5 - 6 hours of GSM talk time.
Provides up to 9 - 14 days of TDMA standby time and up to 10 - 25 days of GSM standby time.

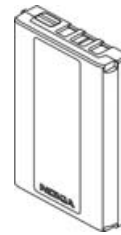

 **Note:** Operation times are estimates and may vary depending on network conditions, charging and phone use.

Rapid Cigarette Lighter Charger (LCH-9)

Quickly charges the phone's battery from your vehicle.

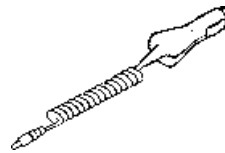

Compact Desktop Charging Stand DCH-8

Compact and stylish, this stand provides a convenient spot in which to charge the phone.

Compatible with:
Standard Travel Charger (ACP-7U)
Rapid Travel Charger (ACP-8U)

Also available:
Connectivity Deskstand (DCH-8D)
Handsfree Desktop Charging Stand (DCH-12K)




17

Spare Battery Charger (DDC-1)

Lightweight and stylish, this charger provides a convenient way to charge your spare battery.

Compatible with:
Standard Travel Charger (ACP-7U)
Rapid Travel Charger (ACP-8U)

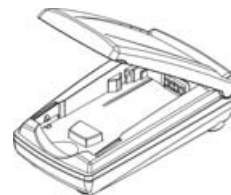

Accessories

Rapid Travel Charger (ACP-8U)

This lightweight rapid travel charger is ideal for active travelers. It plugs directly into the phone and can also be used with the compact Compact Desktop Charging Stand (DCH-8).

Also available:
Standard Travel Charger (ACP-7U)



Headset Kit (HDC-9P)

The headset provides handsfree operation and has an answer/end button located on the microphone. It connects directly to the phone, requiring no additional adapter.

Also available:
Headset (HDE-1)



Loopset (LPS-1)


With the Nokia Loopset, people who use a T-coil equipped hearing aid have the freedom to talk on a digital mobile phone. The loopset goes around your neck - so it can be worn comfortably and discreetly.

Also available:
Phone Adapter for TTY/TDD and Headsets (HDA-8)



Leather Carry Case (CSL-17)

Luxurious leather case protects your phone and has a convenient, integrated belt clip.

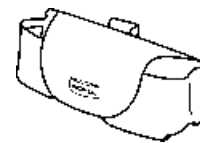

Leather Carry Case (CSL-27)

Includes Swivel Belt Clip



Data Cable (DLR-3P)

For e-mail, faxes, Internet and data transmissions. Easy and convenient connection with no modem or PC card needed.



Compatible with:
Connectivity Deskstand (DCH-8D)

(Phone not included)

Complete Car Kit (CARK-91H)

Provides handsfree use and connection to an external antenna. Includes Privacy Handset (HSU-1) for private conversations.

Also available:
Complete Car Kit, without privacy handset (CARK-91)



17

Mobile Holder (MBC-1)

Holds phone securely in place while driving or during charging. Can be used with Rapid Cigarette Lighter Charger (LCH-9).



18 Reference information

This section provides information about your phone's batteries, accessories, chargers, safety guidelines and technical information. Be aware that the information in this section is subject to change as batteries, chargers, and accessories change.

• BATTERIES AND CHARGERS

This phone is intended for use when supplied with power from the ACP-7U, ACP-8U, and LCH-9 chargers. Other usage could invalidate any approval given to this apparatus and might be dangerous.



Warning: When you purchase batteries, chargers, and accessories for your phone, use only batteries, chargers, and accessories that have received approval from the phone's manufacturer. The use of any other type of phone-related hardware will invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your dealer.

- When the battery is fully charged, the indicator will tell you that the battery is fully charged.
- When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging could shorten its lifespan. If left unused, a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches off.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object, like a coin, a clip, or a pen causes a direct connection of the + and - terminals of the battery, which are metal strips on the end of the battery.

An example of short-circuiting could occur if you carry a spare battery in your pocket or purse, where the battery could come into contact with such objects as a coin. Short-circuiting could damage either the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in either summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59° F and 77° F (15° C and 25° C).

A phone with a hot or cold battery might not work temporarily, even if the battery is fully charged. The performance of Li-Ion batteries is particularly limited in temperatures below 0° C (32° F).

The following list provides guidelines that you can follow:

- When the operating time (talk time and standby time) is noticeably shorter than normal, buy a new battery.
- Use the battery only for its intended purpose.
- Never use any charger or battery that is damaged and/or worn out.
- Batteries must be recycled or disposed of properly. Do not dispose of batteries by putting them in fire!
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

- **IMPORTANT SAFETY INFORMATION**

Traffic safety

Do not use a wireless telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations and always switch off your phone wherever forbidden, or when it may cause interference or danger.

When connecting the phone or accessory to another device, read its user's guide for safety instructions. Don't connect incompatible products.

As with other mobile radio transmitting equipment, users are advised to operate this equipment only in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Pacemakers

Pacemaker manufacturers recommend a distance of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid interference with the pacemaker. These recommendations are consistent with independent research and recommendations of Wireless Technology Research.

PERSONS WITH A PACEMAKER:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Should switch off the phone immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with hearing aids. In the event of such interference, consult your wireless provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if it is adequately shielded from external RF energy, or if you have any questions.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to RF energy.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals emanating from your wireless phone.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions regarding the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer/storage facilities, vehicles using liquefied petroleum gas (such as propane

Reference information

or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and invalidate the warranty.

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Ensure all wireless phone equipment in your vehicle is mounted and operating properly.

Don't carry or store flammable liquids, gases or explosive materials in the same compartment as the phone or its accessories.


For vehicles equipped with an air bag, remember that an air bag inflates with great force. Don't place any objects in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Aircraft

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.


Emergency calls


 **Important:** This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

This phone supports FCC mandated emergency location service. This feature may not be supported by emergency response numbers or wireless phone networks in all areas. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

MAKING AN EMERGENCY CALL:

1 If the phone is not on, switch it on.

 **Important:** Some networks may require that a valid SIM card be properly inserted in the phone.

2 Press and hold  to return to the Start screen.

3 Enter the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.

4 Press .

If certain features are in use (Keyguard, fixed dialing, and so on), you may first need to turn those features off before you can make an emergency call. Consult this guide and your local wireless provider for more information.

When making an emergency call, remember to provide all information as accurately and clearly as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - don't cut off the call until given permission to do so.

Certification Information

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.20 W/kg, and when worn on the body, as described in this user guide, is 0.58 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID LJP RH-13.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the Nokia accessories supplied or designated for this product. When carrying the phone while it is on, place the phone in the specific carrying case that has been tested for compliance.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at <http://www.nokia.com>.

19 Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years. When using your phone, battery, charger, or any accessory:



- Keep all parts and accessories out of small children's reach.
- Keep all parts and accessories dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Don't use or store parts or accessories in dusty, dirty areas. Moving parts can be damaged.
- Don't store parts or accessories in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Don't store parts or accessories in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Don't attempt to open. Non-expert handling could cause damage.
- Don't drop, knock or shake. Rough handling can break internal circuit boards.
- Don't use harsh chemicals, cleaning solvents, or strong detergents to clean parts or accessories. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Don't paint. Paint can clog moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- **TROUBLESHOOTING**

The following table lists some common problems and their solutions.

Problem	Possible cause	Possible solution
My phone isn't charging	The charger and phone aren't properly connected	Securely connect the charger to the phone
	The charger is not properly plugged into the wall	Ensure the charger is plugged in correctly
My phone isn't making/receiving calls	The battery isn't charged	Charge the battery
	The signal strength is poor	If you are indoors, move toward a window
I can't listen to my voice messages	You don't have voicemail service	Call your wireless provider
	You haven't setup your voicemail service with your wireless provider	Call your wireless provider
	You haven't saved your voicemail number to your phone	See "Call and setup your voicemail" on page 44
	You've forgotten your password or are entering it incorrectly	Call your wireless provider
	The voicemail number you've saved to your phone is incorrect	Call your wireless provider
When I insert my SIM card into another phone, it's rejected	You have fixed dialing activated on your SIM card and the receiving phone doesn't support fixed dialing	Deactivate fixed dialing on the SIM

20 Frequently Asked Questions (FAQ)

- Q. What if my phone is lost or stolen?**
A. Contact your wireless provider immediately.
- Q. Does the phone have to be on in order for me to receive a call?**
A. Yes.
- Q. What is my security code?**
A. Your default security code is 12345. If you've changed your security code and forgotten the new code, contact your wireless provider.
- Q. How do I lock the keypad?**
A. Press Menu .
- Q. How do I unlock the keypad?**
A. Press Unlock .
- Q. How do I keep track of my calls?**
A. Use the Call log feature (see page 40).
- Q. How do I turn off the ringer when I'm in a meeting or don't want to be disturbed?**
A. Briefly press the power key, scroll to Silent, and press Select. You can also set a timed profile (see "Set a timed profile" on page 62).
- Q. How do I make the phone ring louder?**
A. See "Customize a profile" on page 61.
- Q. How do I change the ringing tone?**
A. See "Customize a profile" on page 61.

- Q. How do I download a custom ringing tone?**
- A. You can send tones to your phone over the Internet, using SMS, or you can create custom tones and send them to your phone or another compatible phone using PC Suite. Call your wireless provider for more information.
- Q. Where is my phone's model number and Serial number?**
- A. On the information label, which is on back of the phone under the battery. The model number of this phone is 6340i.
- Q. What is the IMEI number?**
- A. International Mobile Equipment Identifier (IMEI). The IMEI number is on the information label, which is on back of the phone under the battery.
- Q. How do I change the contrast on the display?**
- A. The Nokia 6340i contrast is set for optimal performance at the factory and cannot be changed.
- Q. Can I replace the front cover?**
- A. The front cover should only be removed or replaced by qualified service personnel.
- Q. How do I make purchases on-line?**
- A. Setup Wallet with the necessary credit and debit information. See "Create a Wallet card" on page 100 and "On-line purchases" on page 120.
- Q. I forgot my Wallet code. Do I have to contact Nokia or my wireless provider to obtain another?**
- A. No. You can reset your Wallet code. However, all information previously entered will be lost and you'll need to setup a Wallet card again. See "Create a Wallet card" on page 100.

21 Glossary

Term	Definition
antenna	The portion of your phone designed to transmit and receive the wireless signal
antenna jack	The connector used to attach an external antenna to your mobile phone (typically used by the Handsfree kit)
battery	The source of power for your phone when its not connected to the charger
bookmark	An Internet site or address (URL) saved to your phone's memory
browser	An application used to access Internet sites or information on a network (such as the World Wide Web)
data call	A call that is placed or received where your phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR) port
delivery report	A message from your messaging service regarding the delivery status of a message that you have sent
dynamic memory	A common "pool" of memory used by multiple features. When any of these features are used, there is less available memory for other features dependent upon dynamic memory
earpiece	The portion of your phone that contains the audio speaker
earpiece volume	The audible level of the earpiece in an active call.

Term	Definition
E-mail	Electronic mail - a message sent electronically
ECML	Electronic Commerce Modeling Language. A universal format for on-line checkout form data fields
ESN	Electronic Serial Number. Used to identify your phone by the wireless provider
fax call	A call placed or received where phone functions as a data/fax modem, connected to your PC via the DLR-3P cable or Infrared (IR)
home system	The wireless system on which you are a subscriber
IMEI	International Mobile Equipment Identifier. Identifies your phone on the wireless network
Internet	An network that connects computer networks and organizational computer facilities around the world
keypad tones	The sounds you hear when a key on your phone's keypad is pressed
message alert tone	The sounds you hear upon receipt of a text or system message
navigate	To move from one Internet site to another, or from one phone menu to another
number keys	The numbered keys on your phone's keypad
power key	The button on the top of the phone that allows you to turn the phone on or off. It can also be used to recall and switch between profiles
predictive text input	A system developed for the rapid entry of text

Term	Definition
ringing option	The way your phone plays (or does not play) the selected ringing tone when you have an incoming call. For example; ascending, ring once
ringing tone	The tone that your phone plays (or doesn't play) when you have an incoming call. The Nokia 6340i has 40 available ringing tones
ringing volume	The audible level of your phone's ringing tones
screen or display	Your phone's display
scroll	To move through a list of names, menu items, and so on by pressing the scroll (up/down) key. Each new selection or option is highlighted as it is selected
selection keys	The keys under the lower left and right corners of your phone's display. These keys are defined by the text above them, inside the display
SIM	An acronym for Subscriber Identity Module
SMS	Short Message Service. A service whereby short messages (typically around 160 characters) can be sent and received via your phone
static memory	Memory that has been allocated to a specific feature. Heavy use of one feature does not affect the memory available for the other features that use static memory
URL	Universal Resource Locator. A specific address or location on the Internet such as www.nokia.com

Term	Definition
voice mail	A system maintained by your wireless provider to record voice messages when you're unable to answer a call
voice mailbox	The repository on your wireless provider's network for all voice mail messages
voice memo	A message recorded by your phone's internal recorder
warning tones	The collection of tones that are played when your phone alerts you to a variety of situations
WAP	Wireless Application Protocol. WAP is a new part of the Internet designed specifically for mobile device users
wireless network	Your wireless provider's operating environment, comprised of various types of hardware, software, and land-line connections
World Wide Web (WWW)	A part of the Internet designed to allow easier navigation through the use of graphical user interfaces and hypertext links between different addresses - also called Web

22 Technical information

Weight	125 grams (4.4 ounces) with BLB-3 1000 mAh Li-Ion Battery
Wireless networks	AMPS 800/TDMA 800 and 1900/GSM 850 and 1900
Size (volume)	6.7 cubic inches (110 cc)
Frequency range (Tx)	AMPS: 824 - 849 Mhz TDMA 800: 824 - 849 Mhz TDMA 1900: 1850 - 1910 Mhz GSM 850: 824 - 849 Mhz GSM 1900: 1850 - 1910 Mhz
Frequency range (Rx)	AMPS: 869 - 894 Mhz TDMA 800: 869 - 894 Mhz TDMA 1900: 1930 - 1990 Mhz GSM 850: 869 - 894 Mhz GSM 1900: 1930 - 1990 Mhz
Tx output power	1 W (Max)
Battery voltage	3.6 vdc
Talk/Standby time	GSM: Up to 3.5 - 6 hours talk time Up to 10 - 25 days standby time
	TDMA: Up to 2.5 - 4 hours talk time Up to 9 - 14 days standby time
	AMPS: Up to 1 - 1.5 hours talk time Up to 1 - 2 days standby time

Battery operation times

Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.



23 Nokia One-Year Limited Warranty

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end- user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or Internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.



- 8 Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.
 - b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:
Nokia Inc., Attn.: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901
 - c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
 - d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
 - e) Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 YOU (THE CONSUMER) UNDERSTAND THAT THE PRODUCT MAY CONSIST OF REFURBISHED EQUIPMENT THAT CONTAINS USED COMPONENTS, SOME OF WHICH HAVE BEEN REPROCESSED. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between the Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:
Nokia Inc.
Attn.: Customer Service
7725 Woodland Center Blvd., Suite. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA-2U (1-888-665-4228)
Facsimile: (813) 287-6612
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6452)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

*Nokia is a registered trademark of Nokia Corporation.

Appendix A Message from the CTIA

Appendix A
Message from the CTIA
(Cellular Telecommunications
& Internet Association)
to all users of mobile phones.

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.
Phone: (202) 785-0081

Safety is the most important call you will ever make.

A Guide to Safe and Responsible Wireless Phone Use

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense---keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the

Appendix A Message from the CTIA

- call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
 - 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
 - 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
 - 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
 - 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
 - 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

The wireless industry reminds you to use your phone safely when driving.

For more information, please call 1-888-901-SAFE.
For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036. Phone: (202) 785-0081

Appendix B Message from the FDA

**Appendix B Message from the
FDA (U.S. Food and Drug
Administration) to all users
of mobile phones.**

July 18, 2001..... For updates: <http://www.fda.gov/cdrh/phones>

Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the

Appendix B Message from the FDA

RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones, which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineers (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole

Appendix B Message from the FDA

body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project
<http://www.who.int/emf>
- National Radiological Protection Board (UK)
<http://www.nrpb.org.uk/>

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Appendix B Message from the FDA

Index

Numerics

1-touch dialing

- assign a key 58
- change numbers 58
- erase numbers 59
- make a call 58

6340, illustrated 9

A

abc and 123 modes

- switching between 28

access codes 73

accessibility

- accessibility solutions 21
- alternate formats 21
- contact 21
- customize audio settings ... 68
- features 22
- mobile inductive loopset ... 22
- other features 22
- TTY 22
- website 21

accessories

- about 2
- battery (BLB-3) 124
- cigarette lighter charger (LCH-9) 124
- complete car kit (CARK-91H) . 126
- data cable (DLR-3P) 126
- desktop charging stand (DCH-8) 124
- headset kit (HDC-9P) 125

- leather carrying case (CSL-17/ CSL-27) 125, 126
- loopset (LPS-1) 125
- mobile holder (MBC-1) ... 126
- rapid travel charger (ACP-8U) . 125
- spare battery charger (DDC-1) . 124

accessory profiles 64

activate

- automatic redial 52
- call forwarding 50
- loopset 64
- TTY/TDD 64
- voice command 54
- voice recorder 56
- your wireless service 6

adding folders 89

advanced features 47

alarm

- setting 105
- snooze 105
- turning off 106
- with phone off 106
- with phone on 105

alarm clock 105

antenna

- about 8
- contact with 8
- definition 139
- jack for external use 139
- location 8
- proper position 129

unauthorized use	135
assign a number type	31
assigning voice tags	53
audio settings	67
automate voicemail	45
automatic redial	52
B	
back cover, removing	10
battery	
charging	11
important information	12, 127
installing	11
operating range	128
operation times	143
prolonging battery life	12
prolonging life	15
removal	13
temperature range	128
voltage	143
battery charger, spare	124
birthday note	92
browser	
appearance settings	118
bookmarks	119
clear the cache	118
menu	117
on-line purchases	120
options on-line	117, 118
options, off-line	117
view security info	118
business cards	
creating	110
receiving	112
sending	110

C

calculator	
currency conversion	107
options	107
using	106
calendar	
4-way scrolling	91
birthday note	92
call note	92
date notes	92
jump to date	92
meeting note	92
memo note	92
monthly view	92
note options	93
note types	92
opening	91
saving notes	92
send note	111
uses	91
view notes	93
view received notes	96
call duration	43
viewing	43
call forwarding	50
activate	50
cancelling	52
definition	50
call log	
about	40
call duration	43
clear call lists	42
clear call timers	43
view call duration	43
view dialed calls	42

view missed calls	41	date format	104
view received calls	41	keypad tones	62
call note	92	memory in use	38
call timers, clearing	43	message alert tone	62
call waiting	49	number types	31
end both calls	49	phone book view	35
end the active call	49	PIN code	74
end the active call only	49	PIN2 code	75
incoming calls	49	primary numbers	35
reject a call	50	profile names	62
reject a waiting call	50	ringing options	62
switch between calls	49	ringing tone	62
with call on hold	50	ringing volume	62
caller groups		security codes	73
definition	36	security levels	71
options	36	time format	104
setup	36	voice tags	54
calls		charge the battery	11
ending	49	charger	
ending TTY calls	66	connecting	11, 12
forwarding	50	information	127
ignoring	3	charger jack	
making	19	location on phone	9
redial last	3	clear call lists	42
rejecting	50	clock	
using TTY	66	alarm	105
cancel call forwarding	52	set the date	104
car charger	124	show/hide	103
car kit	126	time format	104
care and maintenance	135	codes	
carrying case	125, 126	access	73
certification information	133	dialing	45
change		PIN	74
1-touch dialing numbers	58	PIN2	75
audio settings	68	PUK	75
		security	73

setup voicemail with	46	how to use	45
compose a picture message	85	setup voicemail with	46
connect to other devices	112	dictionary	
connect TTY hardware	65	add new words	78
connecting to a PC	112	in predictive text	78
connectivity	112	digital data	113
contacting Nokia	7	display language	60
content copier (PC suite)	112	dlr-3p	126
cover, removing	10	download	
currency		pictures	84
converting	107	ringing tones	69
exchange rate	108	software	113, 114
to foreign	107	user guide	5
to home	107	E	
currency conversion	107	ECML	
customer care		definition	140
Canada	7	e-mail	82
USA	7	receive and reply to	80
customize		emergency calls	
accessibility	63	placing	2, 132
audio settings	67	things to remember	132
display language	60	while browsing	115
download ringing tones	69	with keypad locked	70
options	60	end both calls	49
using profiles	61	end key	
D		location on phone	9
data cable	126	end the active call	49
data synchronization	113	e-newsletters	6
date, setting	104	entering	
deactivate automatic redial	52	addresses	31
definition of terms	139	business cards	110
desktop charging stand	124	names and numbers	30
dial international numbers	59	notes, to phonebook	31
dialed calls, viewing	42	number types	31
dialing codes		text	27

equalizer	67
choose a set	67
customize	68
settings	67
use in a call	68
erase	
1-touch dialing numbers	59
messages	90
names and numbers	34
phone book entries	29, 34
voice memos	57
voice tags	54
ESN	
definition of	140
location on the phone	7
F	
FAQ	137
fcc id for this phone	134
fixed dialing	
definition of	71
edit number list	72
emergency numbers	71
notes about	73
setup and activate	71
folders	88
adding	89
list of	88
organize messages with	88
removing	89
four-way scrolling	
in calendar	91
in special characters	79
frequency range	143
G	
games	
bumper	123
main menu	122
pairs II	123
pass 'n rush	122
settings	122
snake II	122
start a game	123
glossary of terms	139
H	
HDA-8 connector	
location on phone	9
headset	
connecting	66
headset connector	
location on phone	9
headset kit	125
hearing impaired solutions	22
hearing impaired	
audio settings	68
I	
icons	5
IMEI	
definition of	140
location on the phone	7
in-call options	47
Infrared connections	109
install	
the battery	11
the SIM card	10
international dialing	59
IR	
activating	109

check status	110	view available	38
connecting to a PC	112	menu shortcuts	23
receiving a business card ..	112	menus, phone	20
sending a business card ..	110	messages	
sending a reminder note ..	111	erasing	90
IR port		forwarding	81
location on phone	9	message center number	77
J		message icons	76
jump to a date	92	moving	89
K		organize with folders	88
keyguard	70	quick guide to sending	3
keypad lock	70	reading	80
keys, selection	18	replying to	81
L		save to folders	88
languages		using templates	86
available	60	view saved	88
setting	60	write and send	80
shortcut	25	microphone	
lithium ion battery	124	headset microphone	67
lock/unlock the keypad	70	location on phone	9
loopset		position for calls	19
description	125	missed calls	41
how it works	22	mobile holder	126
LPS-1	22	mobile inductive loopset	22
M		moving messages	89
Make	2	N	
meeting note	92	name and no. view	35
memo note	92	name list view	35
memory		navigation	
phone	38	of phone menus	20
phone and SIM	38	of WAP pages	116
select	38	using scroll method	20
SIM card	38	using shortcuts	21
		network services	
		about	6

Nokia Connections e-newsletter	6
Nokia PC suite	112
number types	31
O	
one-touch dialing	58
open phone book	29
options	<ul style="list-style-type: none"> calls active and on hold 48 while in a call 47 with a call on hold 48 with one call active 47
output power	143
P	
PC composer	112
PC connectivity	112
PC Suite	112
PC suite	112
instructions	113
PC composer	112
PC sync	113
PC sync	113
personal organizer	91
phone book	<ul style="list-style-type: none"> add entries 30 caller groups 36 customize view 35 display entries 32 menu 29 options 33 primary numbers 35 search 32
phone book view	35
name + number	35
name list	35
phone security	<ul style="list-style-type: none"> access codes 73 fixed dialing 71 lock the keypad 70 security code 73 security levels 70
phone size	143
phone weight	143
picture messages	<ul style="list-style-type: none"> compose and send 85 downloading pictures for . . . 84 modifying 86 phone behavior when received 84
PIN 2 code	75
PIN code	<ul style="list-style-type: none"> changing 74 definition of 74 PIN code request 74
playback a voice memo	56
power off your phone	15
power on your phone	15
power, transmit	143
predictive text	<ul style="list-style-type: none"> about 77 activate and deactivate 77 add new words 78 example of 78 using 78
primary number	<ul style="list-style-type: none"> assigning 35 copying 39 definition 35
profiles	

accessory	66	removing folders	89
customizing	61	restrict calls	
definition of	61	using fixed dialing	71
headset	64	ringing tones	
list of	61	discarding	69
loopset	64	download	69, 120
selecting	61	play, save, or erase	120
timed	62	receiving	69
tty/tdd	64	using PC Composer	120
PUK codes	75	S	
purchases		safety	
important information ...	120	aircraft	131
on-line	120	emergency calls	132
using browser	120	hearing aids	130
Q		important safety information 1,	
quick guide	3	129	
R		operating environment ...	129
rapid travel charger	125	other medical devices	130
read messages	80	pacemakers	129
receive a TTY call	66	potentially explosive atmospheres	
received calls	41	130	
record		traffic	129
phone conversations	57	SAR	
voice commands	54	definition	133
voice memos	56	limits	134
voice tags	53	values	133
record a voice memo	56	save	
recorded memos, viewing ...	56	addresses	31
reference information		calendar notes	92
batteries and chargers ...	127	notes, to phonebook	31
register your phone	6	numbers only	32
reject a call	50	phonebook entries	30
reminders	111	ringing tones	69
remove the battery	13	scroll keys	
		how to use	18

location on phone	9	installing	10
scroll method	20	non-owner	70
search phone book	32	PIN code	74
security		removing	14
fixed dialing	71	security levels	70
lock the keypad	70	selecting memory	38
security code	73	service numbers	39
security levels	70	size, phone	143
selection keys		software download	113
how to use	18	spare battery charger	124
sending		special characters	
business cards	110	four-way scrolling	79
calendar notes	95	speed dialing	58
e-mail	82	assign a key	58
messages	80	make a call	58
picture messages	84	standby time	143
template messages	86	start screen	
set the display language	60	description	16
setup		returning to	18
voicemail	44	switch between calls	49
your headset	66	switch off your phone	15
shortcuts	21, 23	switch on your phone	15
call log menu	23	switching letter case	28
games menu	26	T	
messages menu	23	talk time	143
organizer menu	26	templates	
profiles menu	23	creating custom	87
settings menu	24	inserting into messages	87
voice menu	26	sending	86
show/hide clock	103	terms	139
SIM card		text messages	
capacity	37	send calendar notes as	97
copying entries	38	sending	3, 80
emergency calls	132	writing with predictive text	78
if rejected	75	time format	104

timed profiles	62
transmit	
frequency	143
power	143
troubleshooting	136
TTY	
connect hardware	65
end a call	66
illustration	65
make a call	66
receive a call	66
tty connector	
location on phone	9
turn on your phone	15
U	
unlock the keypad	70
updates	
to this guide	5
updates, to user guide	5
user guides	
alternate formats	21
updates to	5
V	
vibrating alert	
turn on or off	62
view	
available memory	38
calendar notes	93
call duration	43
clock on the Start screen ..	103
dialed numbers	42
fixed dialing numbers	72
missed calls	41
monthly view, calendar	92
phone book	29
picture messages	84
received calendar notes	96
received calls	41
received messages	80
recorded memos	56
saved messages	88
special characters	79
Wallet notes	102
voice command	
adding tags	54
and the volume key	55
erase	55
replace command	55
shortcut	4
use with headset	55
voice dial	
change or erase a tag	54
notes about voice tags	52
using	53
using the headset	67
voice messages	44
voice recorder	56
erase memos	57
phone conversations	57
playback a memo	56
playback memos	56
record a memo	56
view memos	56
view recorded memos	56
voice tags	52
assign	53
assigning	53
change or erase	54
changing	54
displaying	54

erasing	54	options while browsing	117
for voice commands	54	pages, elements of	116
notes	52	settings	115
voicemail		wireless markup language	114
automate	45	warning tones	
automating	45	turn on or off	62
call and setup	44	warranty	
listen to voice messages	44	register your phone	6
save mailbox number	44	weight, phone	143
setup	44	wireless modem setup	113
using	44	wireless network services	6
using dialing codes	46	wireless networks	143
voicemail number	44	write and send a message	80
volume control			
location on phone	9		
volume, adjusting	19		
W			
Wallet			
code request	99		
create a card	100		
on-line purchases	120		
personal note options	101		
personal notes	101		
time-out	98		
Wallet code	98		
WAP			
active hyperlink	116		
and your wireless provider	115		
bookmarks	119		
data entry field	116		
header	116		
hyperlink	116		
introduction	114		
navigate wap pages	116		
options	116		