 
 
 




Nokia 6205 User Guide

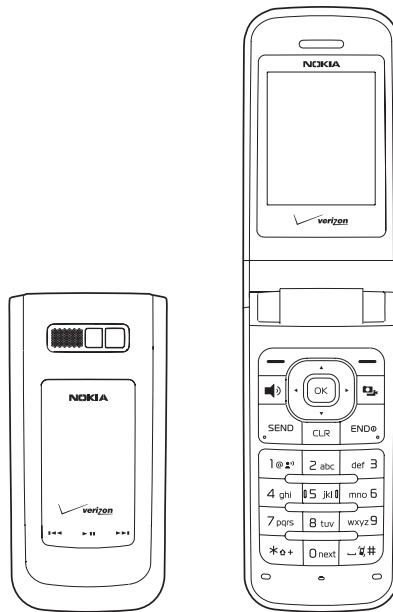



Copyright © 2008 Nokia. All rights reserved.

Nokia, Navi and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

 
 
cdma2000 is a registered certification mark of the Telecommunications Industry Association.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



microSD is a registered trademark of the SD Card Association, Inc.




This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

 The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options.








Export controls

This device may contain commodities, technology, or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

   9204913/Issue 3



Contents


Contents

SAFETY	6	News & Info	33
Welcome	8	Tools on the Go.....	33
Getting Help.....	8	Extras	33
Get the Most Out of This Guide... 9		Info	33
1. Phone at a Glance	11	Incoming Calls.....	33
Standby Mode.....	13	Security and Functionality.....	34
Indicators and Icons.....	13	5. MESSAGING	35
Phone Menus.....	15	Text Messages.....	35
Scroll Method.....	15	Picture and Video Messages....	35
Directional Key	16	New Message	36
2. Set Up Your Phone	17	Inbox	40
Antenna	17	Sent Messages.....	42
Change the Battery	18	Draft Messages	43
Charge the Battery	19	Message Settings	43
Wrist Strap.....	20	Message Options	44
Turn Your Phone On or Off.....	20	Voicemail Message	44
Connect the Headset	20	Mobile Instant Messaging	45
MicroSD Card	21	E-mail Messages.....	45
Make a Call.....	22	Chat.....	45
Answer Calls.....	23	6. CONTACTS	46
3. Text Entry	25	Create New Contacts	46
Word Mode	25	Contact List	49
Abc (Multi-tap) Mode.....	26	Groups	50
123 (number) Mode	26	Speed Dials.....	52
Symbols Mode.....	26	In Case of Emergency (ICE)....	53
4. GET IT NOW	27	7. RECENT CALLS	55
V CAST.....	27	View Calls	55
Music & Tones	28	View Call Timers	55
Picture & Video.....	31	8. SETTINGS & TOOLS	57
Games.....	32	My Account.....	57
		Tools.....	57



C o n t e n t s

Bluetooth	61	10. Enhancements	76
Sounds Settings.....	63	11. Battery and	
Display Settings.....	63	Charger Information.....	77
Phone Settings.....	65	Nokia Battery	
Call Settings.....	69	Authentication Guidelines.....	78
Calendar Preview	70	Care and Maintenance	80
Memory	71	9. Voice Commands	73
Phone Information	72	Activate and Use Voice	
		Commands.....	73
		Voice Commands Settings.....	74
		Additional Safety	
		Information.....	82
		Index.....	89

 

SAFETY
SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN RESTRICTED AREAS

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.

■ **About Your Device**

The wireless device (RM-347) described in this guide is approved for use on the following Verizon Wireless networks: CDMA 800 and 1900 MHz, and CDMA2000 1xRTT and EVDO. Contact Verizon Wireless for more information about networks.

SAFETY

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Your device may have preinstalled bookmarks and links for third-party internet sites. You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you choose to access such sites, you should take precautions for security or content.



Warning: To use any features in this device, the device must be turned on. Do not turn the device on when wireless device use may cause interference or danger.

Remember to make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

■ Network Services

To use the phone you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as *GET IT NOW* and e-mail messaging, require network support for these technologies.

W e l c o m e

Welcome

 
Congratulations on your purchase of this Nokia mobile device. Your device provides many practical functions for daily use, such as a hands-free speakerphone, alarm clock, calculator, calendar, camera, image and data downloads, and more. Your device can also connect to other devices using Bluetooth wireless technology. To personalize your device, you can set your favorite ringtones.

■ Getting Help

If you need help, the Nokia Care Contact Center is available for assistance. Before calling, we recommend that you write down the Mobile Equipment Identifier (MEID) and your zip code (only in the US), and have it available.

Find your device label

The MEID is found on the type label, which is located under the battery on the back of the device. See "Remove the back cover," p. 18.

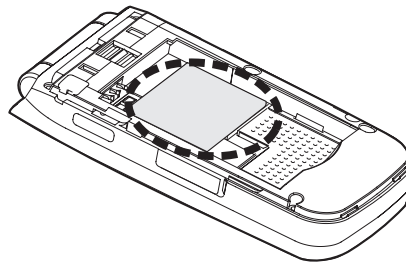



W e l c o m e



Accessibility solutions

 
Nokia is committed to making mobile devices easy to use for all individuals, including those with disabilities. For more information, visit the website at www.nokiaaccessibility.com.

Nokia support and contact information

Check www.nokiausa.com/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.


On the website, you can get information on the use of Nokia products and services. If you need to contact customer service, check the list of local Nokia Care Contact Centers at www.nokia.com/customerservice.

For maintenance services, check your nearest Nokia Care Contact Center location at www.nokia.com/repair.



Billing and customer service

 
To reach Verizon Wireless' billing and customer service support, dial 1-800-256-4646.



■ Get the Most Out of This Guide

The following sections illustrate the various components of your device. Familiarize yourself with these sections to help you understand the instructions that follow. This guide uses certain terms for the steps that you are asked to perform.

 - Press means to press and release a key quickly. For example, press 7 means press and release the key on the Alphanumeric keypad that is labeled with the number 7.
- Press and hold means to press and hold a key for 2–3 seconds, then release the key.


 







W e l c o m e

- Left and Right Soft keys and the OK key are indicated with bold font. For example:


MENU, Message, and Contacts.

   - Left and Right Soft keys and the OK key are used to select a menu option. To select an option, press the soft key below the menu item on the display screen, or press the OK key to accept or select options, if shown.
- The Directional key is used to move up, down, left, or right in the menus.
- Press the Send key  to place a call or to answer an incoming call.
- Press the End key  to discontinue a call, return to the start screen, or press and hold to power off the device.



1. Phone at a Glance

 1. Earpiece
2. Display screen
3. Directional key
4. Right Soft key
5. Camera key
 - press to enter camera mode
 - press and hold to enter video mode
6. End/Power key
7. Alphanumeric keypad
8. Vibration key – **press and hold** to enter Vibration Mode
9. Microphone
10. Voicemail speed dial key
11. Clear key
12. Send key
13. Speakerphone key
14. Left Soft key
15. OK key

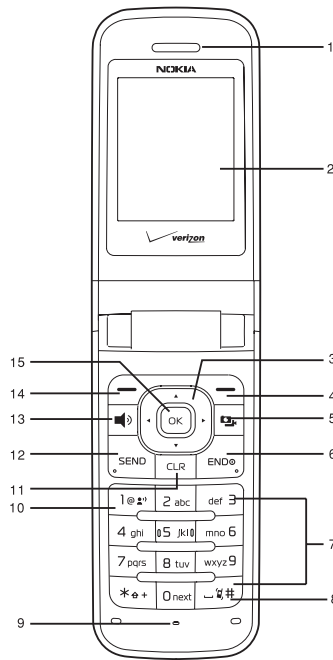

Phone at a Glance

To activate external Media Player keys, press the Volume keys when the flip is closed and in the Standby Mode.

1. Media Player Fast Forward key – press to skip to the next song in your playlist, or press and hold to fast forward through the song currently playing
2. Media Player Play/Pause key – press to play or pause a song in your playlist
3. Media Player Rewind key – press to play the previous song on your playlist, or press and hold to rewind through the song currently playing

4. Charging/
Data port

5. Front display

6. Volume keys

7. Headset jack

8. Speaker

 
9. Camera flash

10. Camera lens

11. Wrist Strap
eyelet

12. Voice
Command key

13. microSD card slot

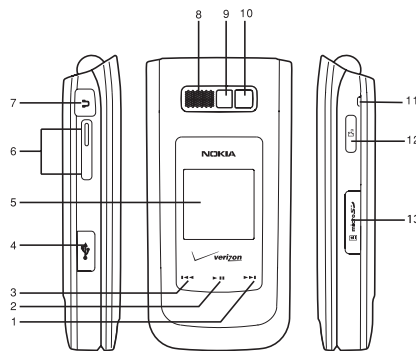


Phone at a Glance

 ■ Standby Mode



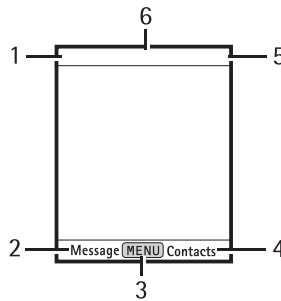

The start screen is home base and indicates that your phone is in Standby Mode.

1. Signal strength – the strength of the signal received by the phone is indicated by the number of bars displayed.
2. Message – press the Left Soft key to select this option.
3. MENU – press the OK key to select this option.
4. Contacts – press the Right Soft key to select this option.
5. Battery strength – four bars indicate a fully charged battery.
6. Location – location information sharing mode.






















■ Indicators and Icons

Depending on your phone settings and modes, some or all of the following indicators and icons may appear in the Standby Mode. To view how to access the complete glossary, see "Phone Information," p. 72.

- 
 Signal strength indicator. You are in a 1xRTT network. See "Network Services," p. 7.
- 
 Signal strength indicator. You are in a digital network. See "Network Services," p. 7.
- 
 Signal strength indicator. You are in an EV only network. See "Network Services," p. 7.
- 
 Signal strength indicator. You are in a 1x/EV network. See "Network Services," p. 7.

Phone at a Glance

-  Signal strength indicator. You are in an EV/D only network. See "Network Services," p. 7.
-  No service indicator.
-  Battery level indicator.
-  Voice call: a call is in progress. No icon indicates that the phone is in the Standby Mode.
-  Dormant mode: the phone is in a dormant state during a data call. Your connection is still active.
-  Data session: a wireless data communication is in progress.
-  You are roaming outside your home network.
-  SSL security feature is on.
-  TTY is enabled.
-  Location information sharing is set to *E911 Only*. See "Location," p. 67.
-  Location information sharing is set to *Location On*. See "Location," p. 67.
-  Voice privacy is activated.
-  All sounds off.
-  Alarm only is on.
-  Alarm clock is set to on.
-  Standalone Mode is on. See "Standalone Mode," p. 65.
-  Bluetooth wireless connectivity is on.
-  Speakerphone is set to on.
-  Vibrate mode is set to on.



Phone at a Glance



A calendar appointment is set.



There are new voicemails.



There are new messages in your inbox.



You have missed calls.

Phone Menu



In the default tab view mode, phone features are grouped into five main menus (*GET IT NOW*, *MESSAGING*, *CONTACTS*, *RECENT CALLS* and *SETTINGS & TOOLS*). Each main menu contains submenus and lists from which you can select or view items, and customize your phone features. Some features may not be available, depending on your network. For more information, contact Verizon Wireless.

 
 
You can also change the view mode of the Main Menu by selecting **MENU** > *SETTINGS & TOOLS* > *Display Settings* > *Menu Settings* > *Tab or List*. See "Menu Settings," p. 65.



Note: In this guide, all the operations are instructed in the default tab view mode unless specially indicated.

Scroll Method

1. In the Standby Mode, use the Left and Right Soft keys to select **Message** or **Contacts**. To access the main menus, select **MENU** with the OK key, then scroll left or right (or scroll up or down in the list view mode).
To provide a visual representation of your current position in the menu structure, a scroll bar may be displayed on the right side of the screen.
2. Press the Clear key  to return to the previous screen.
3. Press the End key  to return to the Standby Mode from any menu or submenu.



Phone at a Glance

■ Directional Key

You can use the Directional key to move up, down, left, and right through the menu options. Press the OK key to select an item.



Depending on how you configure your phone, some or all of the following menu shortcuts may be available in Standby Mode using the Directional key. See "Set Directional Keys," p. 66.

The default menu setting for the Directional key is as follows:

Press the Directional key Up – view *News & Info* menu.

Press the Directional key Right – view *My Shortcuts* menu.

See "My shortcuts," p. 16.

Press the Directional key Down – go to the *Calendar*.

Press the Directional key Left – view *My Account* menu.

Press the OK key – select highlighted menus and submenus.

My shortcuts

My Shortcuts is available from the Standby Mode menu screen by pressing the Directional key Right. It provides quick access to other shortcuts.

The default menu setting for *My Shortcuts* is as follows:

1. *New TXT Message*
2. *Get It Now*
3. *Picture & Video*
4. *Alarm Clock*

To change the order of the *My Shortcuts* menu, in the Standby Mode press the Directional key Right. Scroll to the menu item that is to be changed and select *Move*. Use the Directional key to reposition the menu item and select *SAVE*.

To change the settings for *My Shortcuts*, select *Settings*. For more information, see "Set Shortcuts," p. 66.

2. Set Up Your Phone

■ Antenna

Your device may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the

 
communication quality

and may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life.

An internal GPS antenna is activated when you place an emergency call or when you select *Location On* from the *Location* menu.

See "Location," p. 67.

Any GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

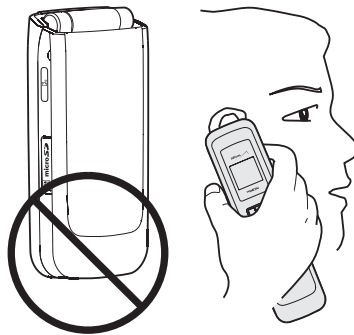


Set Up Your Phone

■ Change the Battery

Remove the back cover

 
Place the phone with the back of the phone facing you. Push down and slide the back cover toward the bottom of the phone to remove.

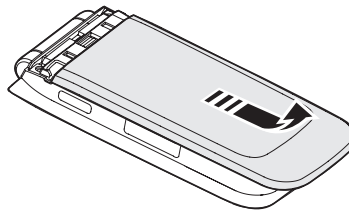

Note: Always turn off the power, and disconnect the charger and any other device, before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached.


Remove the battery

 After you have removed the back cover, insert your finger into the finger grip, and lift the battery from its compartment.

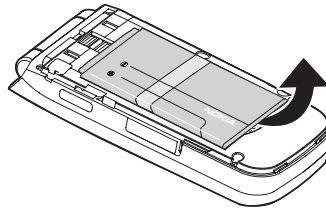

Replace the battery

 
1. Insert the gold-colored contact end of the battery into the battery slot.
2. Push down on the other end of the battery to snap it into place.

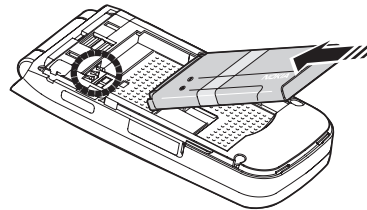

Set Up Your Phone

Replace the back cover


 
Set the back cover on the phone so that the cover tabs align with the slots in the phone. Slide the back cover toward the top of the phone until the back cover is securely in place.

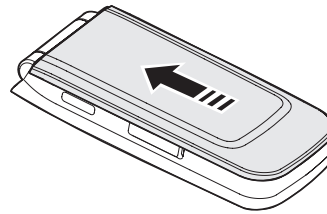

Important: Do not remove the front cover of this device. Attempts to remove the front cover may damage the phone. If your phone requires service, contact the Nokia Care Contact Center.

■ Charge the Battery

  
1. Plug the AC-6U charger transformer into a standard AC outlet.
2. Open the charger slot on the left side of the phone.
3. Insert the charger output plug into the slot. The battery strength indicator bars will cycle from empty to full, to show the battery is charging. The charge time varies depending on the battery level. The maximum charge time for a fully discharged battery is approximately 3 hours.

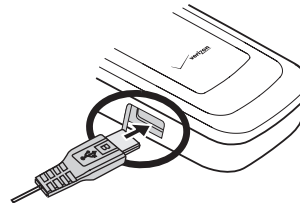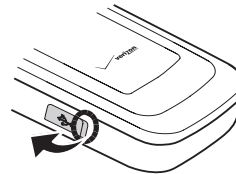


Note: The phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

Set Up Your Phone

■ Wrist Strap


 **Note:** The wrist strap does NOT come in the box.

 1. Remove the back cover.
2. Thread a wrist strap, as illustrated, and tighten it.
3. Replace the cover.

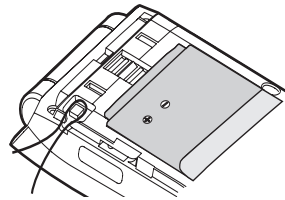


■ Turn Your Phone On or Off

 To turn your phone On or Off, press and hold the End/Power key for at least 3 seconds.

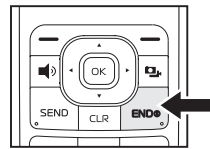


■ Connect the Headset

To allow hands-free operation, you can connect a compatible headset with a standard 2.5-mm plug into your phone.



  **Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

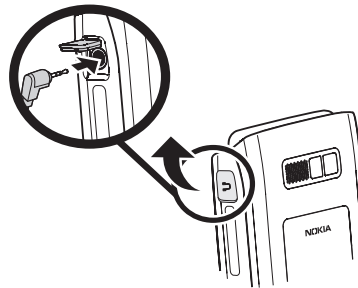1. Open the headset connector port.
2. Plug the headset connector into the 2.5-mm headset jack on the left side of the phone.
3. Position the headset in your ear.



Set Up Your Phone

 
With the headset connected, you can make, answer, and end calls as usual.

- Use the Alphanumeric keypad to enter numbers.
- Press the Send key  to place a call. See "Phone at a Glance," p. 11.
- Press the End key  to end a call.

MicroSD Card

Use only accessories approved by Verizon Wireless. Verizon Wireless uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

To insert the microSD memory card, complete the following steps:

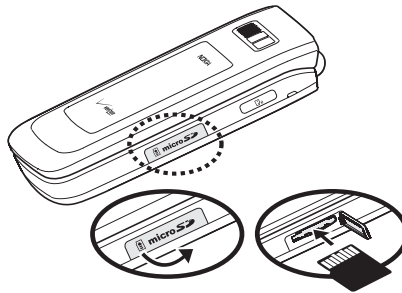

1. Lift open the microSD slot cover.
2. Insert the card firmly as shown in the illustration. The card clicks into place.

To remove the card, firmly press against the card until it releases from the card slot and then slide it out.




See "Memory," p. 71.

Set Up Your Phone


 



Important: Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.



■ Make a Call

To make a call, ensure the phone is powered on. Enter the phone number (including the area code, if necessary), and press the Send key . To delete a character to the left of the cursor, press the Clear key . Press the End key  to end the call. See "CONTACTS," p. 46, to use the Contacts Menu and to enter contact numbers. This is a network feature.

Recently dialed numbers

Press the Send key  once to display the latest numbers dialed, received, or missed. Press the Send key  again to dial the last number you dialed, or highlight the number (or name) you want to redial, and press the Send key . This is a network feature.

Speakerphone


To use the Speakerphone during a call, press the Speakerphone key . To turn the Speakerphone off, press the Speakerphone key  again.



Warning: Do not hold the device near your ear when the Speakerphone is in use, because the volume may be extremely loud.

Call a speed dial number

To dial a single-digit speed dial number (1–9), press and hold the number of the assigned key. To dial a multi-digit speed dial number (10–999), press the first number(s), and press and hold the last number. See "Speed Dials," p. 52.

You can also press the assigned speed dial number(s) and then the Send key .


■ Answer Calls

The following options are available to manage incoming calls. This is a network feature.



Answer or Silence an incoming call

There are three ways to answer an incoming call depending on the phone settings. For more information, see "Answer Options," p. 69.

- Open the flip (by default).
- Press any key.
- The call automatically connects when your phone is connected to a handsfree device.

Utilizing the Soft keys, select *Quiet* to silence an incoming call or select *Ignore* to forward it to voicemail. Or press the End key  to end a call.

Headset calls

To answer a call when the headset is connected, press the Send key  on your phone, or, if included, press the Send key  on the headset. If included, use the Volume keys on your headset to adjust the call volume.

Adjust the earpiece volume

The Volume keys are located on the left side of your phone. To adjust the volume during a call, and with the flip open, press the Volume keys Up or Down. When you adjust the volume, bars indicate volume level. The more bars, the higher the volume.

Caller ID

To display both the name and number of the person calling you, the caller's identity must be stored in the Contact List. If the caller is not in the Contact List, only the phone number is displayed, or the incoming caller number may be shown as *Restricted* or *Unavailable*.

Picture ID


You can assign a picture to a contact that will be displayed with incoming calls. See "Assign Picture ID," p. 48.

Set Up Your Phone

Silent Mode

Open the flip, and press the Volume keys Down until *All Sounds Off* is displayed. To turn sounds back on, press the Volume keys Up until the desired level is reached.

Vibrate Mode

To set your phone to vibrate and silence all other sounds, open the flip and press the Volume keys Down to reduce the volume until *Vibrate Only* is displayed. Or press and hold the Vibration key  (see "Phone at a Glance," p. 11).

To turn Vibrate Mode On with a ringtone, select MENU > *SETTINGS & TOOLS* > *Sounds Settings* > *Call Sounds* > *Call Vibrate* > On > OK.

Other options during a call

Select *Options* for one of the following when you are on a call:

Messaging – send or retrieve messages.

Contact List – search your Contact List.

Recent Calls – check recent calls.

Bluetooth Menu – utilizing a Bluetooth headset, select this option.

Audio to Phone or *Audio to Device* – this option is available if a Bluetooth headset is connected. Select *Audio to Phone* to hear the other party from the phone, or *Audio to Device* to hear the other party from a Bluetooth headset.

Main Menu – use Main Menu.

Voice Privacy On or *Voice Privacy Off* – protect or not protect privacy of the conversation.

Notepad – open the notepad.



 

Voice Record – record voice call.

Mute Function

When answering an incoming call, to prevent the other party from hearing your voice, while allowing you to hear the other party, utilize the Soft key to select *Mute*. Select *Unmute* to turn off this feature.

3. Text Entry

Your phone offers five methods for entering texts, numbers, and symbols: *Word*, *Abc*, *ABC*, *123*, and *Symbols*. The following rules apply in Text Entry Mode:

- Press the Clear key  to backspace the cursor and delete a character.
- Press and hold the Clear key  to delete an entire word.
- Press #  to enter a space, or to accept a completed word in Word Mode.
- Press *  to change the character case in Word, Abc, or ABC Mode.
- Press the Left Soft key to change the Text Entry Mode.

■ Word Mode

Word Mode is a predictive method of text entry that uses a built-in dictionary to quickly recognize the most commonly used word for a specific key sequence. You only need to press the corresponding key on your Alphanumeric keypad once for each letter.

Activate Word Mode

To activate Word Mode, press the Left Soft key, and select *Word*.


Word Mode Text Entry

The illustration below simulates your display each time a key is pressed in Word Mode. For example, to write "Verizon" with Word Mode on and the English dictionary selected, press each of the following keys once:

8 tuv	def 3	7 pqrs	4 ghi	wxyz 9
>	Te	Ter	Verge	Verizon



Text Entry

- If a displayed word is not correct, press 0 to view other word options.
- If your word does not appear, delete your entry, and press the Left Soft key to change the mode to *Abc*. Re-enter your word using the Multi-tap mode.
- When you have finished the word and it is correct, press #  to confirm it, insert a space and scroll forward to continue.

■ Abc (Multi-tap) Mode

In the *Abc* (or Multi-tap) Mode, to enter a letter, repeatedly press a key until the desired letter appears.

Activate Abc Mode

To activate *Abc* Mode, press the Left Soft key, and select *Abc*, or *ABC*.

Abc Mode Text Entry

 
Press a key once to insert the first letter on the key, twice for the second letter, and so on. If you pause briefly, the last letter in the display is accepted, and your phone awaits the next entry.

■ 123 (number) Mode

To enter a number in *Abc*, *ABC*, or *Word* Mode, press and hold the desired number key. To switch to 123 Mode, press the Left Soft key, and select *123*.

■ Symbols Mode

To insert special characters into your message, press the Left Soft key, and select *Symbols*. Depending on which screen you are viewing, the Directional key may need to be pressed either Left or Right. In *Abc* or *ABC* Mode, press 1 repeatedly to scroll through some common punctuation marks and special characters.



GET IT NOW

4. GET IT NOW

GET IT NOW allows you to download ringtones, music, sounds, pictures, videos, games, news, information, tools, and extras. You can also find information such as the location of restaurants or ATMs. With *GET IT NOW* you can personalize your phone to your own lifestyle and tastes. This is a network feature.

Download charges for *GET IT NOW* applications vary and airtime charges apply when browsing, downloading, and using certain applications. *GET IT NOW* can be used anywhere on the Verizon Wireless network, as long as your phone has a digital signal available. Most applications do not use a network connection while in use.

Visit www.verizonwireless.com/getitnow for additional information on *GET IT NOW* services.

Your phone must be powered on to use *GET IT NOW*. Do not turn the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Note: This feature shares memory space with other features.

■ V CAST

V CAST is a multimedia service available through *GET IT NOW*. It delivers a streaming mobile video experience with increased download speeds, high quality pictures, better sound, and longer clips. With V CAST you can stream video clips (up to 5 minutes long) of the hottest entertainment, sports highlights, news, and breaking weather to your phone. For fun and games, access V CAST to download a wide range of 3-D games with increased graphics, sound, and depth. Contact Verizon Wireless for the availability of these services, pricing, and fees. This is a network feature.

V CAST coverage and services are not available in all areas. A V CAST VPak subscription is required. For additional information, visit <http://products.vzw.com/index.aspx?id=video&tId=//global//features+and+downloads//videoclips>.



GET IT NOW

■ Music & Tones

You can personalize your phone with sounds and ringtones using *Music & Tones*. A large variety of music styles are available, such as current hits, pop, and hip-hop. This is a network feature.

Select **MENU** > *GET IT NOW* > *Music & Tones* and one of the following options:

VCAST Music — connect to the internet and access the V CAST music content catalog. You can purchase music from the V CAST music store, create playlists, and manage your music library. This is a network feature.

 
Get New Ringtones — select *Get New Applications* to download new ringtone applications or use one of the applications to download ringtones from the internet. A download can be set as a *Ringtone*, a *Contact ID* for a particular contact, or as *Alert Sounds* for calendar entries. New ringtones are stored in the *My Ringtones* folder. Subscription and purchase pricing are available.

My Ringtones — select *Get New Applications* to download a new ringtone or use one of the tones stored in this folder. To apply a ringtone, highlight the tone, and select **Set As** > *Ringtone*, *Contact ID*, or *Alert Sounds*. Select **PLAY** to listen to the highlighted ringtone. Select **Options** > *Erase* to delete the highlighted ringtone or *File Info* to view file information about the highlighted ringtone.

My Music — select music from your *My Music* folder to send, upload, lock, erase, modify, or view.

My Sounds — select *Record New* to record sounds, such as music or spoken words, or to access prerecorded sounds such as Happy Birthday or a Crowd Roar. Recorded sounds can be played back later or can be sent in a picture message. Select **PLAY** to listen to the highlighted sound. Select *Erase* to delete the highlighted sound, except the default sounds. Select **Options** and you may select one of the following:

- *Send* — to send the highlighted sound in a picture message.
- *To Online Album* — to upload the highlighted sound to *Online Album*.
- *Rename* — enter a new name and select **OK** to rename the highlighted sound.



GET IT NOW

- *Move* – move a sound between the phone and the card. This option is available if micro SD card is inserted.
- *Lock or Unlock* – protect or unprotect the sound from being erased.
- *Erase All* – select *From Card* to erase all the sounds stored in the memory card; or select *From Phone* to erase all the sounds stored in the phone.
- *File Info* – to view file information about the highlighted sound.

Sync Music – synchronize your *My Music* folder with your computer by using a compatible cable.

Purchase Songs

1. From the standby screen, press the Directional key to the right, then press down on the Directional key to highlight *Get It Now*, then press the OK key to select it.
2. Press the OK key to select *Music & Tones*.
3. Press the OK key to select *VCAST Music*.
4. Press down on the Directional key to highlight a category and press the OK key to select it.
5. Select the music that you want to purchase. Press the OK key to select *Buy*. Then press the OK key again to download the song. You can then play your new song from the *My Music* menu.



Note: Per-song charges apply.

Download music to your PC

1. Open Music Manager. Don't have music manager? Download it for free at www.verizonwireless.com/musicmanager.
2. Select the *Buy Music* tab.
3. Log in.
4. Go to *My Purchases*.