 


Nokia 1508 User Guide

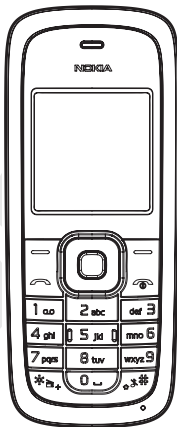

© 2008 Nokia. All rights reserved.

Navi and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options.

Export controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

xxxxxxx, Issue 1

Contents

SAFETY	6
General information	9
Access codes.....	9
Nokia support on the web	10
1. Get started	11
Install the UIM card and battery	11
Charge the battery.....	13
Switch your device on or off	14
Normal operating position	15
2. Your phone	16
Keys and parts (front)	16
Keys and parts (side).....	17
Standby mode and shortcuts.....	17
Keyguard.....	18
Data transfer	19
3. Call functions	20
Make and answer a call	20
Make a conference call	20
Loudspeaker	21
4. Text entry	22
Traditional text input.....	22
Predictive text input.....	22
5. Menu functions	24
Messaging	24

Contacts.....	30
Log.....	34
Settings.....	35
Gallery.....	43
Media.....	43
Organiser.....	47
Applications.....	50
Games.....	50
UIM services.....	50
6. Enhancements.....	52
7. Battery and charger information.....	53
Nokia battery authentication guidelines.....	56
Care and maintenance.....	59
Additional safety information.....	62
Index.....	71

SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN RESTRICTED AREAS

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.

■ About your device

The wireless device (RM-388) described in this guide is approved for use on the CDMA 800 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.



Warning: To use any features in this device, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

■ Network services

To use the device you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

General information

■ Access codes

The security code supplied with the device helps to protect your device against unauthorised use. The preset code is 12345.

You can change the code, and set the phone to request the code. Keep the code secret and in a safe place separate from your phone.

If you forget the code and your phone is locked, your phone will require service and additional charges may apply. For more information, contact a Nokia Care point or your device dealer.

The PIN code supplied with the UIM card helps to protect the card against unauthorised use. If you enter the PIN code incorrectly three times in succession, you are asked for the PUK code. If you do not have it, contact your service provider.

To set how your device uses the access codes and security settings, select **Menu** > *Settings* > *Security*.

■ Nokia support on the web

Check www.nokia.com/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

Draft

1. Get started

■ Install the UIM card and battery

Keep all UIM cards out of the reach of small children.

For availability and information on using UIM card services, contact your UIM card vendor. This may be the service provider or other vendor.

 


Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached.



1. To remove the back cover of the device, press the release button on the bottom, and lift the back cover.




2. Insert your finger into the finger grip and lift the battery from its compartment.

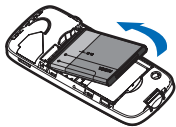

  
3. Keep the bevelled corner of the UIM card facing up and matching along the corresponding bevelled corner of the card holder.

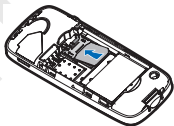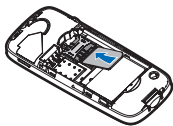

 4. Insert the UIM card into the holder with the gold-coloured contacts facing down, matching up with the gold-coloured contacts on the device.



 5. Position the battery so the gold-coloured contacts match up with those on the device, and insert the battery into the battery slot.

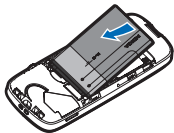

6. Push down on the other end of the battery to snap the battery into place.
7. Align the back cover with the back of the device. To lock it, press the bottom of the back cover.



■ Charge the battery



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an AC-6 charger. The battery intended for use with this device is the BL-4C.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Plug the charger transformer into a standard wall outlet.
2. Insert the charger output plug into the socket at the left side of the device.



If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

■ Switch your device on or off

To switch your device on or off, press and hold the power key for at least 2 seconds.



Warning: Do not switch on the device when wireless device use is prohibited or when it may cause interference or danger.

■ Normal operating position

Your device has an internal antenna. Hold the device with the antenna pointed up and over your shoulder.



Note: As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the communication quality and may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life.



2. Your phone

■ Keys and parts (front)

1 – Earpiece

2 – Display screen

3 – Left selection key

4 – Call key

5 – Keypad

6 – Power/End key

 
7 – Right selection key

8 – 4-way navigation key
(hereafter referred to as scroll key)

9 – Middle selection key


10 – Press and hold the * key to activate the radio function (if headset is connected)

11 – Press and hold the # key to toggle between silent and general profiles

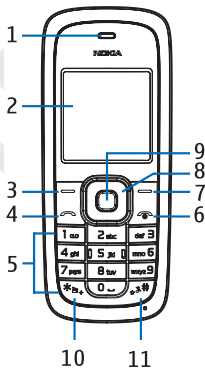

■ Keys and parts (side)

 - 1 – Charger/USB port
- 2 – Headset port
- 3 – Device strap eyelet
- 4 – Loudspeaker

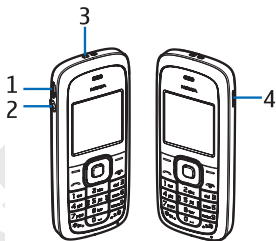


■ Standby mode and shortcuts

Depending on your wireless service provider and the model number of your device, some or all of the following selection keys may appear in the standby mode.

The start screen is home base and indicates your device is in the standby mode.

 - 1 – Name of the network or operator logo
- 2 – Signal strength of the wireless network
- 3 – Battery charge level

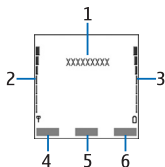

4 – Left selection key ([Go to](#))

5 – Middle selection key ([Menu](#))

6 – Right selection key ([Names](#))

In the standby mode, the scroll key functions as follows:

Scroll up: list contacts

Scroll down: list contacts

Scroll right: view calendar

Scroll left: quickly create a text message

To customise you scroll keys, see "My shortcuts," p. 38.

■ [Keyguard](#)

The keyguard locks the keypad to prevent keys from being pressed accidentally. If the keypad is locked, it unlocks when you receive a call. After the call, the keypad is automatically locked.

To set the keypad to lock automatically after a preset time delay when the device is in the standby mode and no function of the device has been used, select [Menu](#) > [Settings](#) > [Phone](#) > [Automatic keyguard](#) > [On](#). To deactivate the feature, select [Off](#).

When the keyguard is on, calls may be possible to the official emergency number programmed into your device.

To unlock the keypad, select **Unlock**, and press * within 2 seconds.

To lock the keypad, select **Menu**, and press * within 5 seconds.

■ Data transfer

To use the USB data cable to transfer data and files between your device and a compatible PC, install Nokia PC Suite software on the PC first. Connect your device to the PC with the USB data cable, and start the synchronization from the PC.

You may find PC Suite and related information on the Nokia web site at <http://www.nokia.com/pcsuite>.



Important: Do not make calls when the USB data cable is connected to the device.

3. Call functions

■ Make and answer a call

To make a call, enter the phone number, including the country code and area code if necessary. To call the number, press the call key. To increase or decrease the volume of the earpiece or headset during the phone call, use the scroll key.

To answer an incoming call, press the call key or the middle selection key. To reject the call without answering, press the end key.

■ Make a conference call

Conference calling (network service) allows you to talk to two other people at the same time.

1. Call the first participant.
2. Select **Options** > *New call*, and call the next participant.
3. When the call is answered, to set up the conference call, press the call key.

4. To end the conference call, select **Options** > *End all calls*, or press the end key.

■ Loudspeaker

To use your device handsfree during a call, select **Loudsp.**





Warning: Do not hold the device near your ear when the loudspeaker is in use because the volume may be extremely loud.

To deactivate the loudspeaker during a call, select **Normal**.

The loudspeaker is deactivated automatically when a call (or a call attempt) ends or when certain enhancements are connected.

4. Text entry

You can enter text using traditional text input , and predictive text input . To change the text input method and to switch between upper and lower case, press the # key. To set the writing language, select **Options** > *Writing language*.

■ Traditional text input

To use traditional text input, press a number key, 1 to 9, repeatedly until the desired character appears. To add a space, press 0. To add a number, press and hold the desired number key. To get a list of special characters, press *.

■ Predictive text input

Predictive text input is based on a built-in dictionary to which you can add new words. To activate predictive text input, select **Options** > *Prediction options* > *Prediction* > *On*. To set the prediction type, select *Prediction type* > *Normal* or *Word sugg*.

To get a list of special characters, when using predictive text input, press and hold *; if there is no active word, press *.

If the displayed word is the one you want, press O, and start writing the next word. To change the word, press * repeatedly until the word you want appears. If ? is displayed after the word, the word is not in the dictionary. To add the word to the dictionary, select **Spell**, enter the word (using traditional text input), and select **Save**.

5. Menu functions

The device functions are grouped into menus. Not all menu functions or option items are described here.

In the standby mode, select **Menu** and the desired menu and submenu. To exit the current level of menu, select **Exit** or **Back**. To return to the standby mode directly, press the end key.

■ Messaging



The message services can only be used when they are supported by your network or service provider.

Message settings

To edit your message settings, select **Menu** > **Messaging** > **Message settings** > **Sending options** and the setting you wish to change:

Priority – Select the priority of the message as **Normal** or **Urgent**

Delivery reports – A note is sent to you confirming delivery of the message. Select *On* or *Off*.

Send callback number – The callback number is sent to the recipient. Select *On* or *Off*.

Signature – Select whether you want to attach a signature to your messages. Select *On* or *Off*.

To change other settings, select *Menu* > *Messaging* > *Message settings* > *Other settings* and the relevant setting:

Save incoming text messages – Set where incoming messages are stored, select *Save to UIM then phone if mem. full*, *Phone only* or *UIM card only*

Message font size – Change the font size

Message overwriting – When the message memory is full, you cannot receive new messages. You can set your device to automatically replace old messages with new ones in certain folders. Select *Sent items only*, *Inbox only*, or *S. items & Inbox*. To deactivate this feature, select *Off*.

Save sent messages – You can set whether messages are saved automatically to the sent items folder when sent. Select *Always save*, *Always prompt* or *Off*.

Queue msgs. when digital unavailable – You can store in the outbox messages that can be sent later when digital service is available. Select *On*, *On prompt*, or *Off*.

Create message

1. Select **Menu** > *Messaging* > *Create message*, and compose a message using the keypad. To compose a picture message (network service), select **Options** > *Insert picture*. Scroll to a picture, and select **Use** or **View** > **Use**.

To go quickly to create message, in the standby mode, scroll left.

2. Enter the recipient's phone number. To retrieve a phone number from your contacts or the recently used recipients list, select **Add** > *Recently used* or *Contacts*, and the recipients. To send to a distribution list, select **Add** > *Distribution lists*, and then choose a distribution list created in your device.
3. To send the message, in the message editor screen, select *Send*.



Note: Your device may not indicate whether the message is received at the intended destination. For more details about messaging services, contact your service provider. The picture message function can be used only if it is supported by your network operator or service provider. Only compatible devices that offer picture message features can receive and display picture messages.

Voice messages

Voice mail is a network service. If you subscribe to voice mail, your service provider will activate the service and give you a voice mailbox number to save to your device. For more details about voice messages, contact your service provider. To listen to the voice messages received in your voice mail box, select [Menu](#) > [Messaging](#) > [Voice messages](#) > [Listen to voice messages](#).

Send numeric page

You can send a callback number to the recipient as a message so they can call you back directly. Select **Menu** > *Messaging* > *Send numeric page*.

Read and reply

Messages are automatically stored in the inbox after they have been read or if you select **Exit** when a notification appears in the standby mode.

Messages that are unsent, or that failed to be sent, are automatically stored in the outbox folder.

When you receive a message, a note and the unopened letter icon (✉) are displayed.

1. To read the message, select **Show**, or, to dismiss the notification, select **Exit**.

Scroll to view the whole message, if necessary.

2. Select **Reply** > *Empty screen*, *Original text*, *Template*, or other preset reply.
3. Enter your reply, select *Send*.


Distribution lists

You can create lists of up to ten recipients. These lists can be used to quickly address a text message to a group.

To create a new distribution list, in the standby mode, select **Menu** > *Messaging* > *Distribution lists* > **New list** (if the list is empty) or **Options** > *Create new list* to create additional lists. To populate your list, select **Add new** and a contact from your contacts list.

To use, rename, or modify a distribution list, highlight the distribution list, and select **Options** > *Send message*, *Rename list*, *Clear list*, or *Delete list*.

Delete messages

If your message memory is full and you have more messages waiting,  blinks in the standby mode.

To delete a single message, select **Menu** > *Messaging*, and the folder containing the message. Select the message and **Options** > *Delete* > **Yes**. The messages that are locked cannot be deleted. To delete locked messages, unlock them first. Select the locked message, and **Options** > *Unlock*.

To delete all messages in a folder, select **Menu** > *Messaging* > *Delete messages* and one of the following:
All – Select *Inbox*, *Sent items*, *Outbox*, *Drafts*, *Saved text msgs.*, or the user defined folder and **Done**. To confirm the deletion when prompted, select **Yes**.

All read – Select *Inbox*, *Sent items*, *Outbox*, *Drafts*, *Saved text msgs.*, or the user defined folder and **Done**. To confirm the deletion when prompted, select **Yes**.


All unread – Select *Inbox*, *Saved text msgs.*, or the user defined folder and **Done**. To confirm the deletion when prompted, select **Yes**.

■ **Contacts**



You can save names and phone numbers (contacts) in the phone memory and the UIM card memory.

The phone memory can save up to 500 contacts with multiple numbers and text items for each contact. You can also save an image or a tone for a limited number of contacts.

The UIM card memory can save names with one phone number attached to them. The contacts saved in the UIM card memory are indicated by .

To add a new contact, select **Menu** > *Contacts* > *Names* > **Add** (if the contact list is empty) or **Options** > *Add new contact*, and enter the name and the phone number.

Names and numbers are saved in the used memory.

To search for a contact, select **Menu** > *Contacts* > *Names*, and scroll through the list of contacts; or select **Options** > *Search*, enter the first letter of the name for which you are searching.

Settings

Settings allows you to determine which memory is in use, how your phone numbers are viewed, and the memory status of contacts in your phone and UIM card.

Select **Menu** > *Contacts* > *Settings* and from the following:

Memory in use – to determine which memory is in use, the phone, the UIM card, or both

Contacts view – to select how names and numbers are viewed in the contacts list

Name display – to select whether the contact's first or last name is displayed first

Font size – to set the font size

Memory status – to view the amount of space available in the phone or UIM card

Groups

To arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images, select **Menu** > *Contacts* > *Groups*.

Delete contacts

To delete all the contacts from the phone or UIM card memory, select **Menu** > *Contacts* > *Delete all contacts* > *From phone mem.* or *From UIM card*. Confirm with the security code.

To delete a contact, search for the desired contact, and select **Menu** > *Contacts* > *Names* > **Options** > *Delete contact*.

Move or copy contacts

To move or copy a contact between the UIM card memory and the phone memory, select **Menu** > *Contacts* > *Names*. Select the contact to move or copy and **Options** > *Move contact* or *Copy contact*.

To move or copy several contacts, select the contacts and **Options** > *Mark*. When you have marked the selected contacts, select **Options** > *Move marked* or *Copy marked*.

To move or copy all contacts between the UIM card memory and the phone memory, select **Menu** > *Contacts* > *Move contacts* or *Copy contacts*.

Speed dials

Your device can dial a phone number with one keypress. You can assign phone numbers to the number keys, 2 to 9. To assign a phone number to a number key, select **Menu** > *Contacts* > *Speed dials*, and scroll to the number to assign as the shortcut.

Select **Assign**, or if a number has already been assigned to the key, select **Options** > *Change*.

Business card

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact, and select **Details** > **Options** > *Send bus. card*.

When you receive a business card, to save the business card in the phone memory, select **Show** > **Save**. To discard the business card, select **Exit** > **Yes**.

■ Log



Log stores information about the last 50 missed, received, or dialed calls (network service). It also adds the total duration of all calls. When the number of calls exceeds 50, the most recent call replaces the oldest. To access the log, your device must be switched on and inside the network service area.

Select **Menu** > **Log** > *Call log*, *Missed calls*, *Received calls*, or *Dialled numbers*. From here you can view the date and time of a call; edit, view, or call the registered

phone number; save it to contacts; or delete it from the phone memory. You can also send a text message.

To view the contacts to whom you most recently sent messages, select **Menu** > *Log* > *Message recipients*.

To delete the missed, dialled, or received calls from the phone memory, select **Menu** > *Log* > *Clear log lists* and the item you would like to clear.

To view the approximate duration of the last call, all received calls, all dialled calls, or all calls, select **Menu** > *Log* > *Call duration*. To reset the timers, select *Clear timers*, enter your security code, and select **OK**.



Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding off for billing, and so forth.

■ Settings



In this menu, you can adjust various phone settings. To reset menu settings to their default values, select **Menu** > *Settings* > *Restore factory sett.*

Profiles

Profiles define, for example, how your device reacts when you receive a call or message, or how your keypad sounds when you press a key. Ringing options, keypad tones, and other settings for each of the available profiles can be personalised to suit your needs.

To activate or personalise a profile, or set a timed expiration for a profile, select **Menu** > *Settings* > *Profiles*, a profile and *Activate*, *Personalise* or *Timed*.

Display settings

Select **Menu** > *Settings* > *Display* and from the following:

Wallpaper – to set a background image that is displayed when the device is in the standby mode

Standby mode font colour – to select the colour for the texts on the display in the standby mode

Screen saver – to choose a screen saver for the device display

Power saver – to save battery power, a digital clock is displayed when no function of the device is used for a certain time

Sleep mode – to select whether the display is switched off to save battery power during inactivity

Colour schemes – to personalise the colours on the device display

Backlight time-out – to control the backlight time-out of your device display

Tones settings

To set the tone of the device, select **Menu** > *Settings* > *Tones* and from the available options.

Date and time settings

Select **Menu** > *Settings* > *Date and time* and from the following:

Clock – to hide or show the clock, set the time, change the time zone and format

Date – to hide or show the date, set the date, change the date format and date separator

Auto-update of date & time – to activate or deactivate the automatic-update of the date and time

When the automatic-update of the date and time is activated, network time will replace the time and date of your device. This feature supports alarm clock, calendar, and time stamping of the call lists.

My shortcuts

Shortcuts give you quick access to frequently use phone functions.

To allocate functions to the shortcut keys, select **Menu** > **Settings** > **My shortcuts**, the relevant function and **Left selection key**, **Right selection key**, or **Navigation key**.

Call settings

Select **Menu** > **Settings** > **Call** and from the following:

Anykey answer – to answer an incoming call by briefly pressing any key, except the end key or right selection key

Automatic redial – to set your device to redial a number after an unsuccessful call attempt

Speed dialling – to select whether the number keys (2-9) can be used for one-touch dialling (calling a number by pressing and holding a key)

Calling card – to save up to four calling cards in your device to use for long distance calls

Abbreviated dialling – to save a 5 or 6-digit dialling prefix that will allow you to dial a 10-digit number by entering the last 4 or 5 digits

International prefix – to make international calls using the + sign as the international prefix. The device replaces the international access code with the + sign in a saved phone number when creating a call.

Data/fax calls – to set the device to send or receive data or fax calls when a terminal, such as a PDA or PC, is connected (network service)

Call summary – to display the time spent on a call at the end of the call

Show call time on display – to select whether the call timer is displayed and running when you have a call in progress

Ringtone for no caller ID – to set a tone for incoming calls that do not have a caller ID

Phone settings

Select **Menu** > *Settings* > *Phone* and from the following:
Phone language – to select the language for the display text

Memory status – to view the size of memory available on your device

Automatic keyguard – to set the keypad to lock automatically after a preset time delays

DTMF tones – to set the tone duration when you press the keys on your keypad

Start-up tone – to select whether the device sounds a start-up tone when it is switched on

Switch off tone – to select whether the device sounds a switch-off tone when switched off

Welcome note – to write a welcome note that briefly appears when you switch your device on

Flight query > *On* – the device asks every time when it is switched on whether the flight profile shall be used. With flight profile, all radio connections are switched off. The

flight profile should be used in areas sensitive to radio emissions.

Confirm UIM service actions – to request notification, when your service provider makes changes to UIM-related services

Help text activation – to display brief descriptions for most menu items

Enhancements settings

The enhancements settings menu is shown only if the device is or has been connected to a compatible enhancement.

Select **Menu** > *Settings* > *Enhancements* > *Headset* or *Charger*.

Network

The network menu allows you to customise the roam call ringing tone, and the way your device chooses a network in which to operate while you are within or outside of your primary or home system. Your device is set to search for the most effective network. If your device cannot find

a preferred network, it selects a network automatically based on the option you choose in the network menu.

The menu options you see in your device are based on your service provider's network. The network determines which options actually appear in the device menu. For more information, check with your service provider.

Select **Menu** > *Settings* > *Network* > *Single band phones* or *Roam call ringing tone*.

Network services

The following features are network services. To check the availability of the services, please contact your service provider.

Select **Menu** > *Settings* > *Network services* and from the following:

Call divert – to divert incoming calls to other phone numbers

Call waiting – to request the network to send a beep during a call, when another call is coming

Send my caller ID – to send or block the display of your number when you make a call

Network feature setting – to activate network services in your device by using feature codes received from your service provider

Phone details

You can view device-related details. In the standby mode, select **Menu** > *Settings* > *Phone details* > *User details*, *Version details*, *System details* or *Icon details*.

■ **Gallery**



To manage graphics, tones, recordings, and received files, select **Menu** > *Gallery* > *Graphics*, *Tones*, *Recordings*, or *Receiv. files*.

■ **Media**



Radio

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset needs to

be attached to the device for the FM radio to function properly.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Listen to the radio

1. Connect a headset to the device.
2. Select **Menu** > **Media** > **Radio**, or press and hold the * key in the standby mode. The channel location number, the name of the radio channel (if you have saved the channel), and the frequency of the radio channel are displayed.
3. If you have already saved radio channels, scroll up or down to the channel you would like to listen to. You can also select a radio channel location by briefly pressing the corresponding number keys.

Set radio frequencies

1. You can save up to 20 radio channels. When the radio is on, to change the radio frequency in 0.10

MHz steps, select ◀ or ▶. To start the channel search, select and hold ◀ or ▶, searching stops when a channel is found.

2. To set the frequency, press the * key, or press and hold the numeric key, 1, 8 or 9, and then enter the frequency and confirm the entry.

To save the channel to a memory location, select **Options** > *Save station*. Then enter the name of the channel, select **OK**.

Basic radio functions

When the radio is on, select **Options** and one of the following:

Switch off – to turn off the radio

Volume – to adjust the radio volume

Mute/Unmute – to turn the radio sound on or off

Save station – to save a new station and is displayed only when the selected frequency is not saved

Stations – to select the list of saved stations. To delete, rename or organise a station, scroll to the desired station, and select **Options** > *Delete station*, *Rename* or *Organise*.

Search all stations – to search for new radio stations




Set frequency – to enter the frequency of the desired radio station

Settings – to set the radio using loudspeaker or headset, and the radio in monophonic sound or in stereo

You can normally make a call or answer an incoming call while listening to the radio. During the call, the volume of the radio is muted.

Recorder

This feature allows you to record speech or sound with your device. The maximum length of each recording is 3 minutes, depending on the available memory spaces.

To record speech or sound, select **Menu** > *Media* > *Recorder*. To start the recording, select . To pause the recording, select . To end the recording, select . The recording is saved in **Menu** > *Gallery* > *Recordings*. To listen to the latest recording, select **Options** > *Play last recorded*. To list the recordings, select **Options** > *Recordings list*.

■ Organiser



Your device contains features to help organise your everyday life, including an alarm clock, calendar, calculator, timer, world clock, and stopwatch.

Alarm clock

The alarm clock works with the device clock. Select **Menu** > *Organiser* > *Alarm clock* > *Alarm time*. Enter the time in hh:mm format, and select **OK**. 📴 is displayed in the standby mode.

To set the device to alert you on selected days of the week, select *Repeat alarm* > *Repetition days*.

To select the alarm tone or to set a radio station to play when the alarm expires, select *Alarm tone*. If you select the radio as an alarm tone, connect the headset to the device. The device uses the last station you listened to as the alarm, and alarm plays through the loudspeaker.

To set a snooze time-out, select *Snooze time-out* and the time.

To stop the alarm, select **Stop**. If you select **Snooze**, the alarm stops for the selected snooze time-out and then resumes.

Calendar

To open the calendar, scroll right or select **Menu** > **Organiser** > **Calendar**.

To view a specific date from the calendar view, select **Options** > **Go to date**, enter the date, and press **OK**.

To add a note to a specific date from the month view (with the go to date highlighted), select the date and **Options** > **Make a note** > **Meeting**, **Call**, **Birthday**, **Memo**, or **Reminder**. Your device asks for further information depending on which note you select. Any days or dates that appear in bold font contain calendar notes, such as a meeting or reminder.

You can send a calendar note from your calendar to another compatible device as a calendar note or as a text message. To send a note, select **View** > **Options** > **Send note**. When you receive a note, to save the calendar note in the phone memory, select **Show** > **Save**. To discard the calendar note, select **Exit** > **Yes**.

Select [Settings](#) to view more options.

Calculator

The calculator in your device adds, subtracts, multiplies, divides, calculates the square and the square root, and converts currency values.



Note: This calculator has a limited accuracy and is designed for simple calculations.

Select [Menu](#) > [Organiser](#) > [Calculator](#). Enter the first number in the calculation. Select # for a decimal point if necessary. Select [Options](#) > [Add](#), [Subtract](#), [Multiply](#), [Divide](#), [Square](#), [Square root](#), or [Change sign](#). Enter the second number if needed, and select [Equals](#). To start a new calculation, select and hold [Clear](#).

You can convert foreign currency to domestic currency, or vice versa. To save the exchange rate, select [Options](#) > [Exchange rate](#) > [Foreign unit in domestic units](#) or [Domestic unit in foreign units](#). Enter the exchange rate, press the # key for a decimal point, and select [OK](#). The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion,

enter the amount to be converted, and select **Options** > *In foreign* or *In domestic*.

■ Applications



Applications allows you to download, manage and use applications, tones, and images.

Some functions under the Applications menu are network services. See "Network services," p. 8 for more information.

■ Games



Your device software may include some games specially designed for this Nokia device. To display the games, in the standby mode, select **Menu** > *Games*.

■ UIM services



Your UIM card may provide additional services. You can access this menu only if it is supported by your UIM card.

The name and contents of the menu depend on the available services. For information, contact your service provider.

Draft

6. Enhancements



Warning: Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Power

- Standard 860 mAh Li-Ion Battery (BL-4C)
- Travel Charger (AC-6)

Audio

- Headset (HS-9)



Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

7. Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-4C 860 mAh Li-Ion battery. This device is intended for use when supplied with power from the following chargers: Nokia AC-6. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be

necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Always switch the device off and disconnect the charger before removing the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like

metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, deform, puncture, or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorised Nokia dealer, and inspect the hologram label using the following steps:

Successful completion of the steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic, original Nokia battery, you should refrain from using it, and take it to the nearest authorised Nokia service point or dealer for assistance. Your authorised Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram



1. When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



2. When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorised Nokia service point or dealer for assistance.

The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokia.com/battery.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.

Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. Do not dispose of these products as unsorted municipal waste.

By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local Nokia representative. For the product Eco-Declaration or instructions for returning your obsolete product, go to countryspecific information at www.nokia.com.

Draft

Additional safety information

■ Small children

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least *2.2 centimeters (7/8 inches)* away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or

the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimeters (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimise the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the

air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles

using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

■ Emergency calls



Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the device. The device will attempt to make emergency calls over both the wireless networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you must complete the following:
 - Insert a UIM card if your device uses one.
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline or flight profile mode to an active profile.

2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is *2.0 watts/kilogram (W/kg)* averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested

frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.94 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.32W/kg and when properly worn on the body is 0.52 W/kg.

Information about this device model can be found at <http://www.fcc.gov/oet/ea> by searching the equipment authorization system using FCC ID QMNRM-388.

■ Technical information

Feature	Specification
Dimensions	Width 43 mm Length 103.8 mm Depth 14.8 mm
Weight	50 g without BL-4C Li-Ion battery
Wireless networks	800 MHz CDMA
Volume	56 cc
Frequency range (Tx)	824.70–848.37 MHz
Frequency range (Rx)	869.70–893.37 MHz

■ Battery information

This section provides information about battery charging times with the Travel Charger (AC-6), and talk and standby times. Please note that the information in this section is subject to change. For more information, contact your service provider.



Important: Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition, temperatures to which battery is exposed, use in digital mode, and many other factors. The amount of time a device is used for calls will affect its standby time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

Charging times

The following charging times are approximate:

Charger options	AC-6
BL-4C 860 mAh Li-Ion battery	Up to 3 hours

Talk and standby times

Function	Digital
Talk time	Up to 3.2 hours
Standby time	Up to 8.3 days

Index

A

access codes 9
alarm clock 47

B

battery information 69
 charging times 70
 talk and standby times
 70
business card 34

C

calculator 49
calendar 48
call 20
 conference call 20
certification information
(SAR) 67
contacts 30
 delete 32
 groups 32
 settings 31

D

data transfer 19
distribution lists 29

E

emergency calls 66

G

gallery 43
games 50

K

keyguard 18

L

log 34
loudspeaker 21

M

media 43
messaging 24
 delete 29
 settings 24

voice 27

O

organiser 47

P

predictive text input 22

R

radio 43

recorder 46

S

settings 35

call 38

date and time 37

display 36

enhancements 41

network 41

network services 42

phone 40

phone details 43

profiles 36

tones 37

shortcuts 17

speed dials 33

T

technical information 69

text entry 22

traditional text input 22

U

UIM services 50